

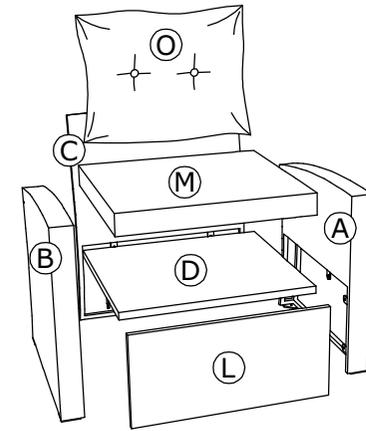
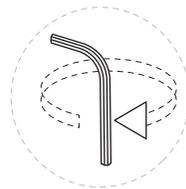


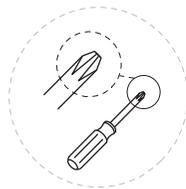


## Before You Start


- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

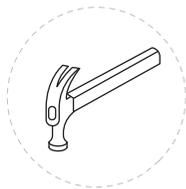















**x2**

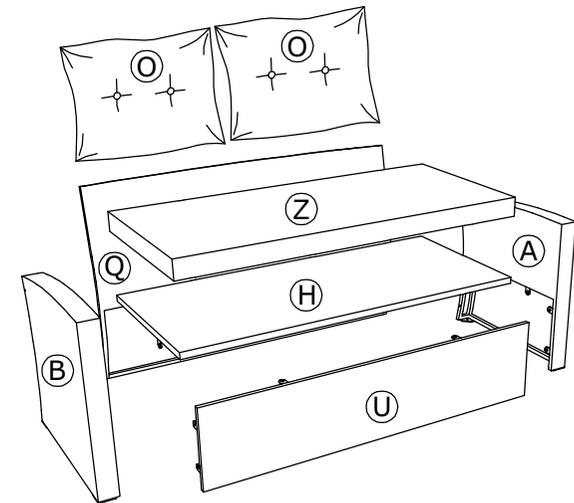

**x1**

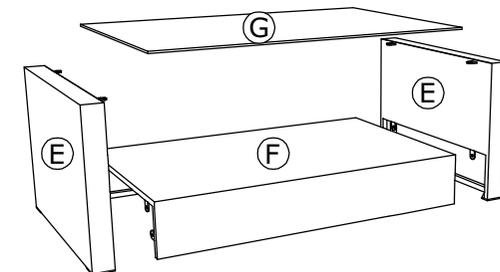


**x1**

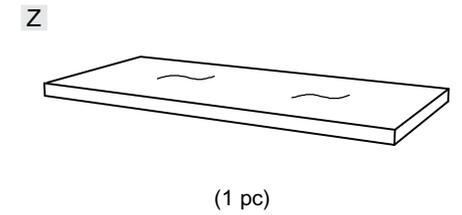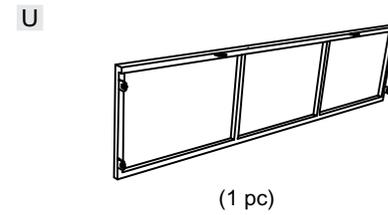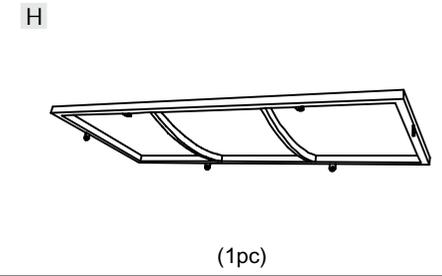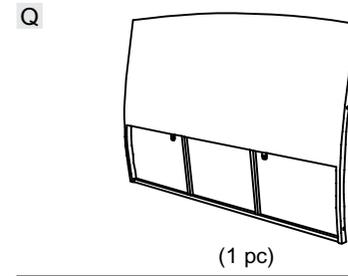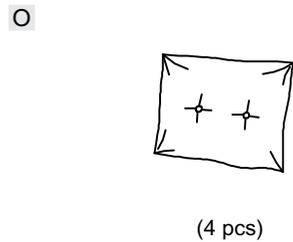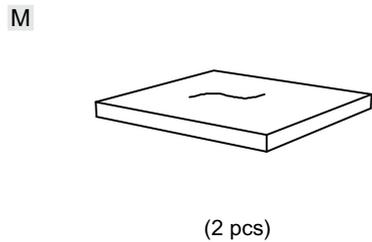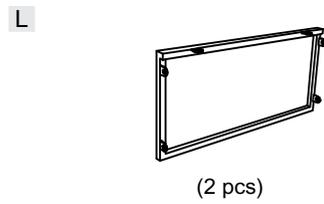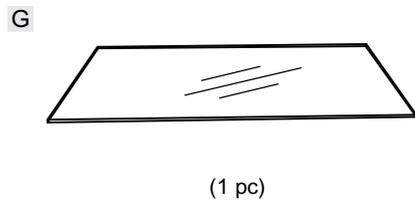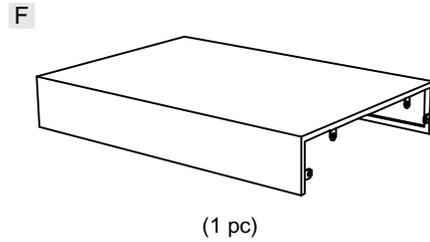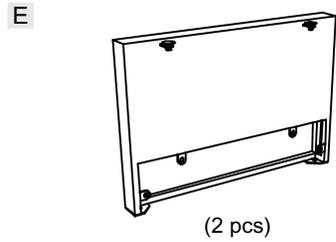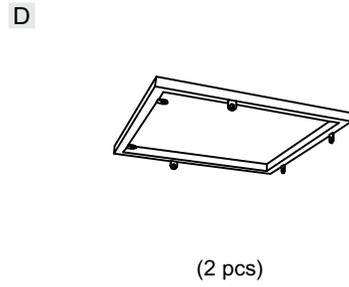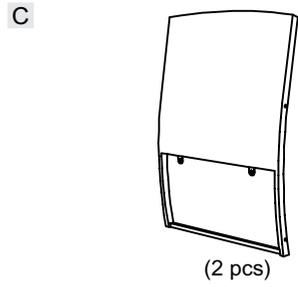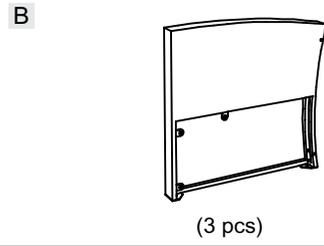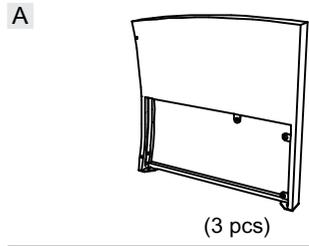

**1** M6x70 mm

**2** M6x25 mm

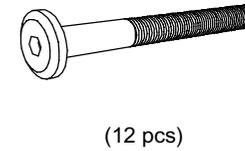

(12 pcs)




(38 pcs)

**3** Ø6x14x1 mm

**4** M6x55 mm




(50 pcs)




(16 pcs)

**5**

**6** Allen Key 4x98 mm




(16 pcs)




(3 pcs)


STEP 1

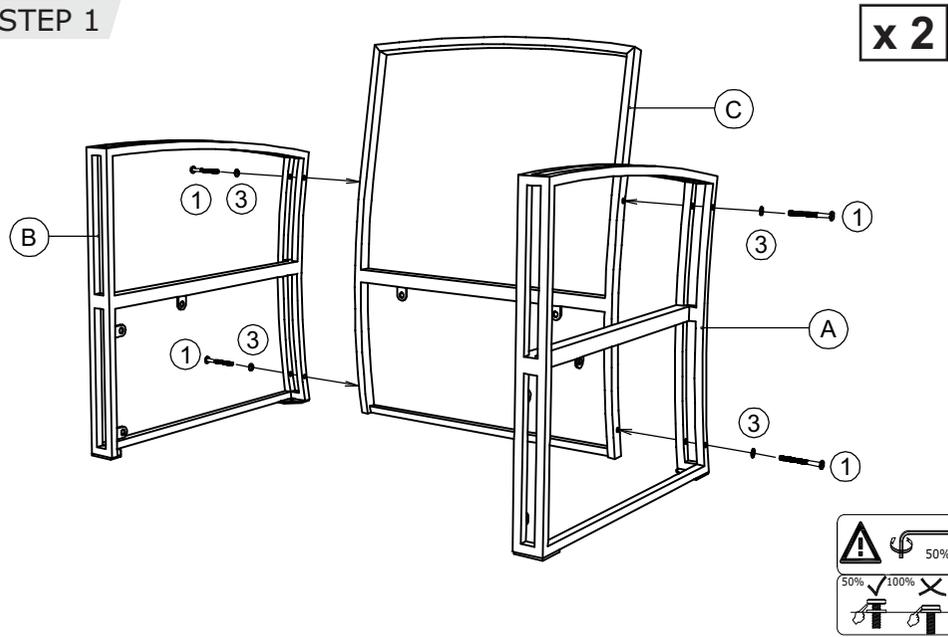


STEP 2

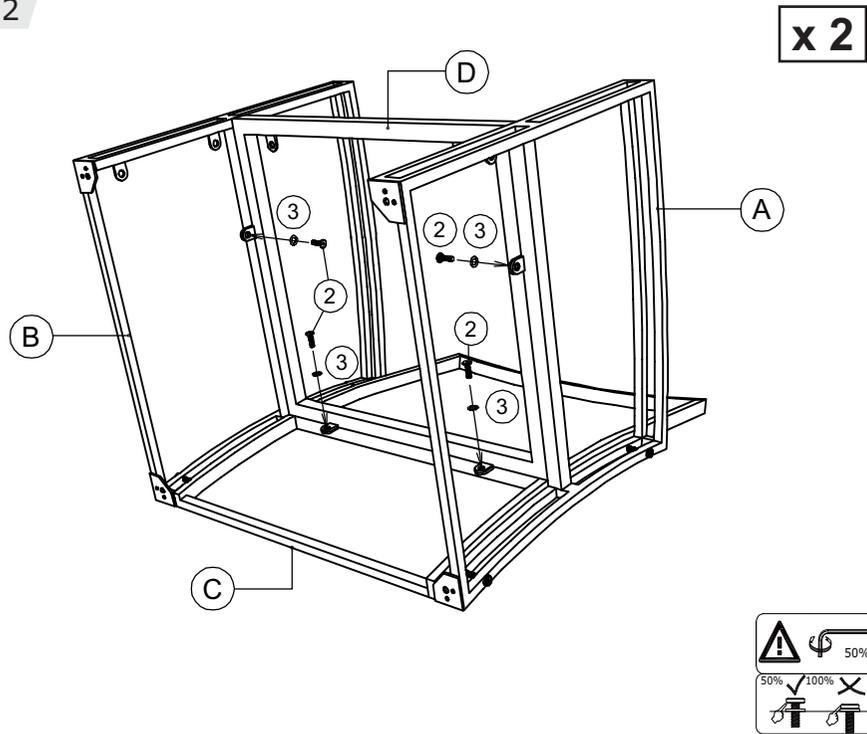


STEP 3

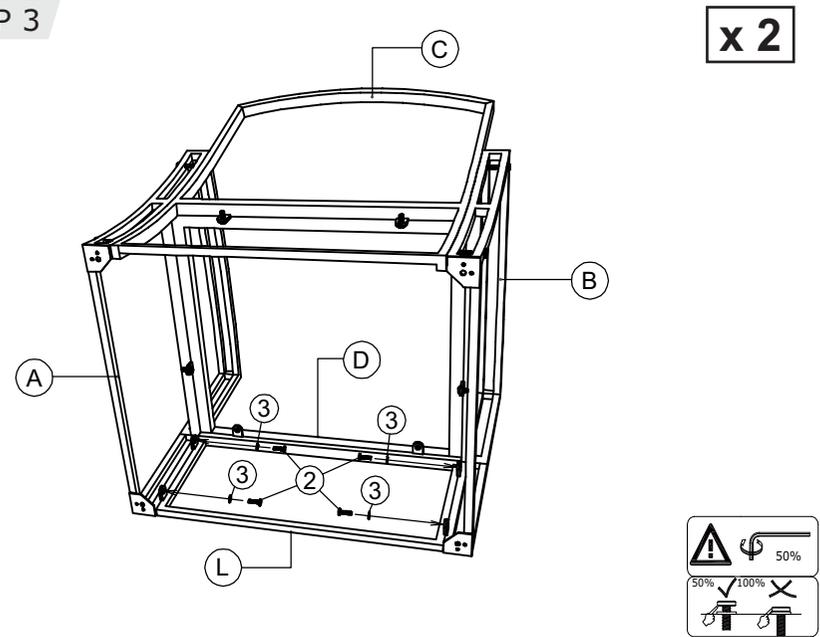


STEP 4

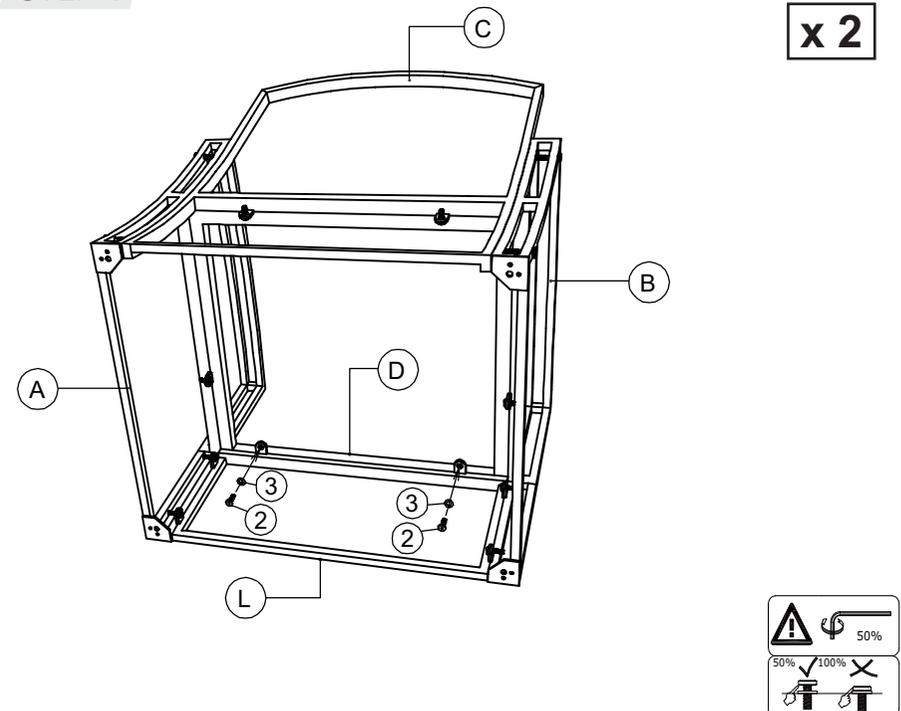


STEP 5

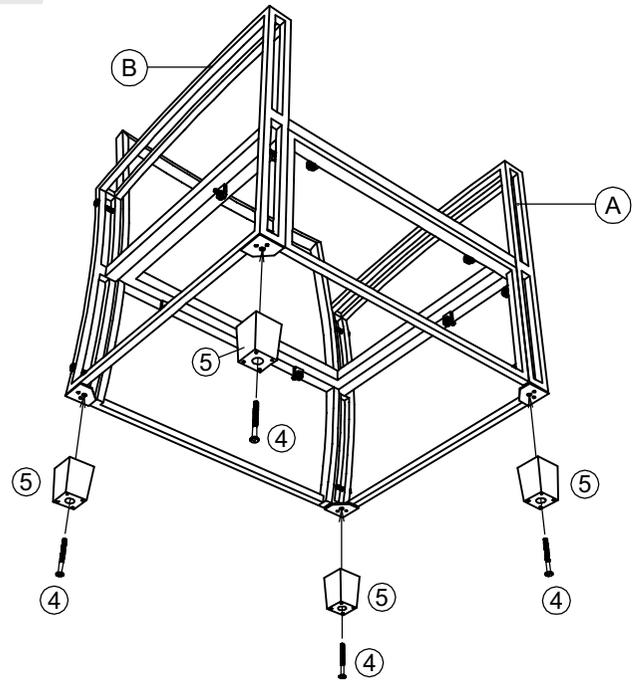

x 2

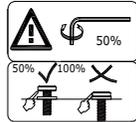


STEP 7

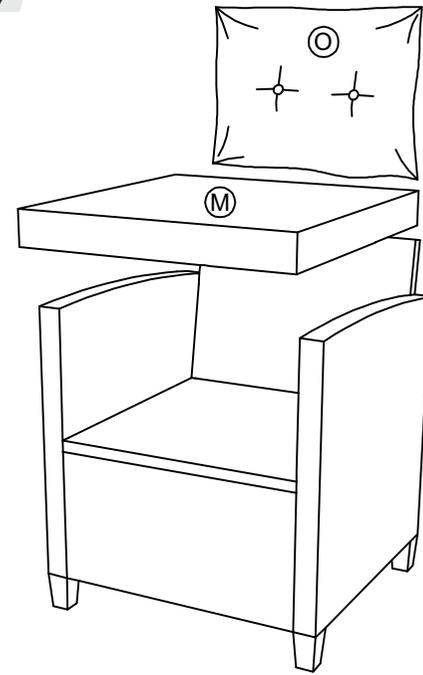


x 2



STEP 8

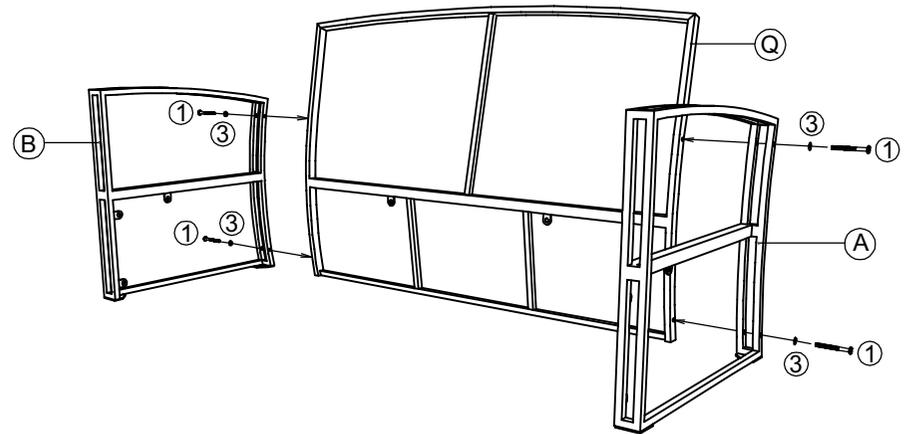



STEP 6

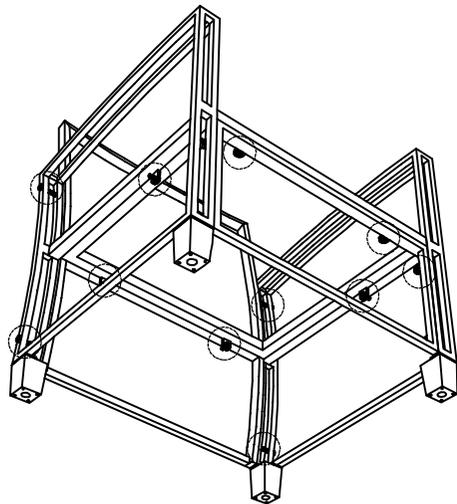



x 2

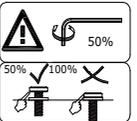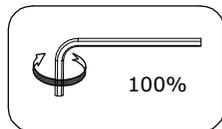



STEP 9

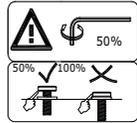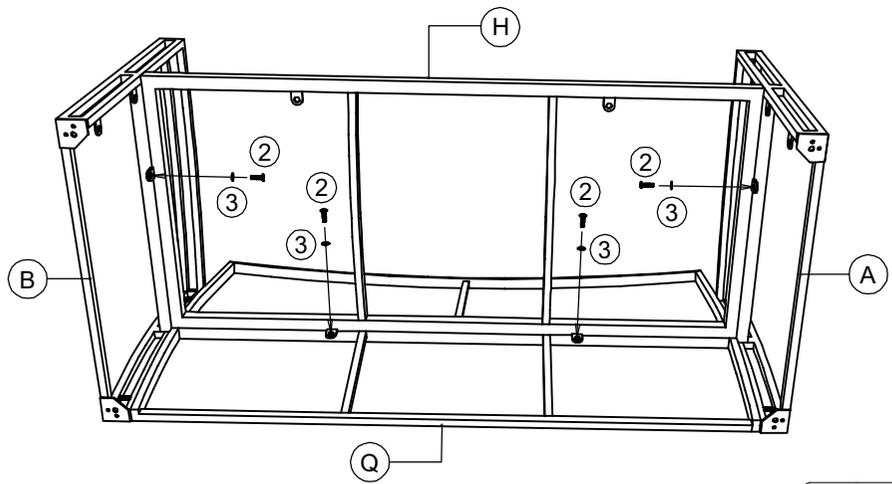



STEP 10

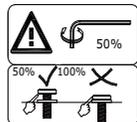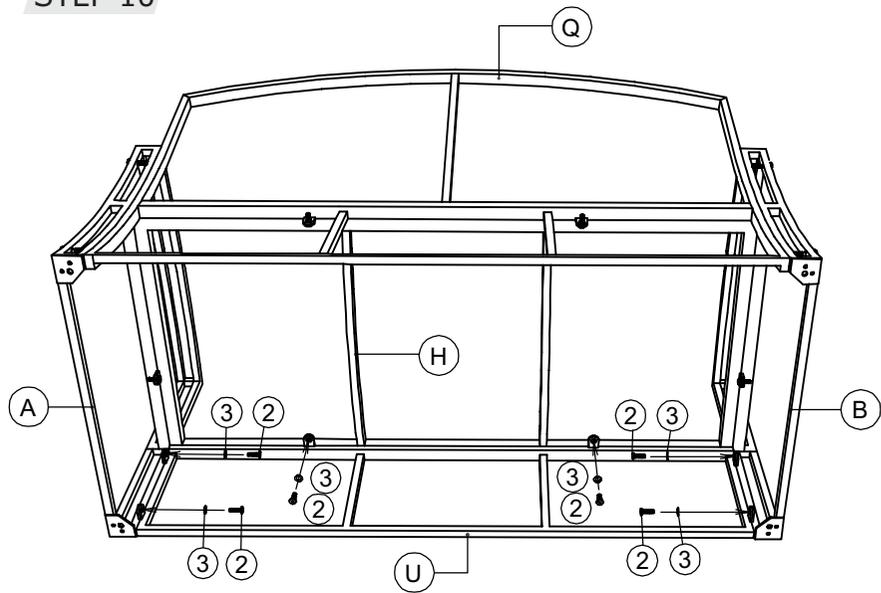


STEP 11

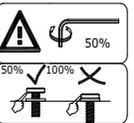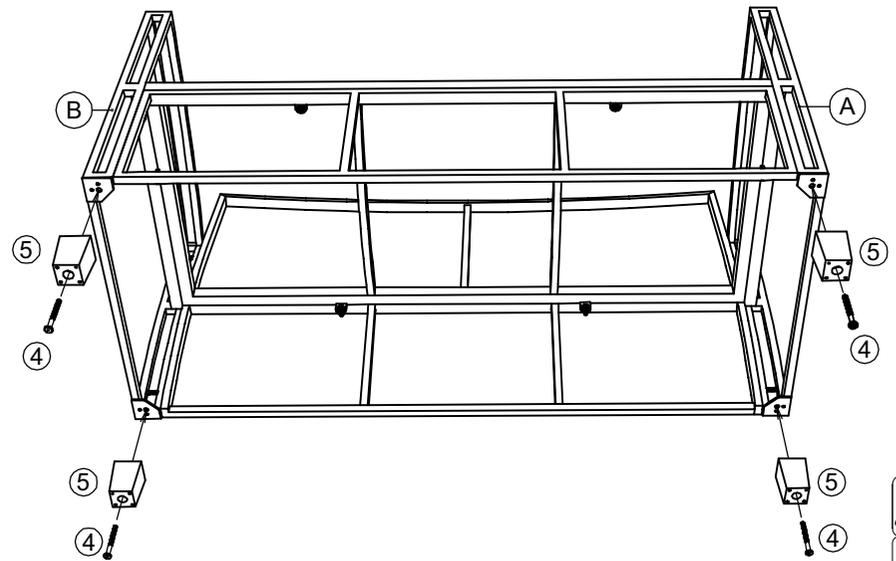


STEP 12

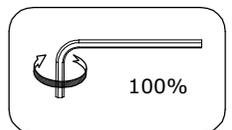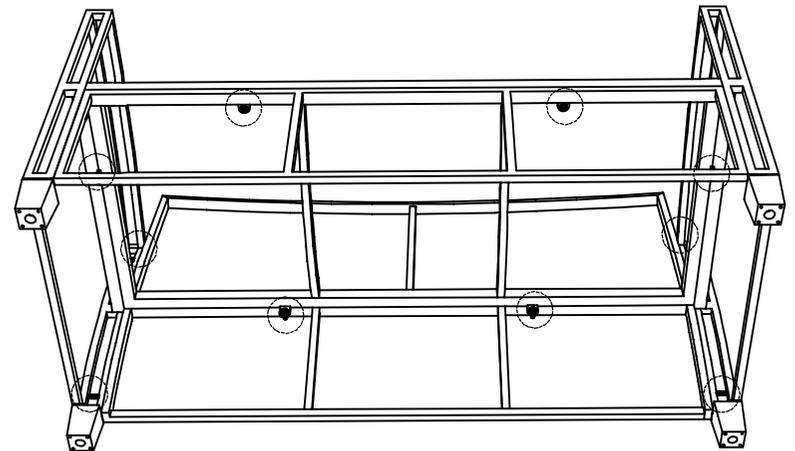



STEP 13

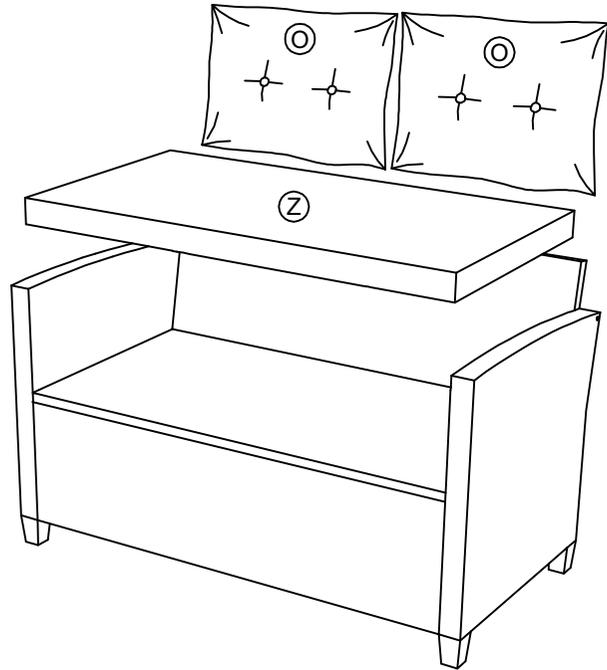



STEP 14

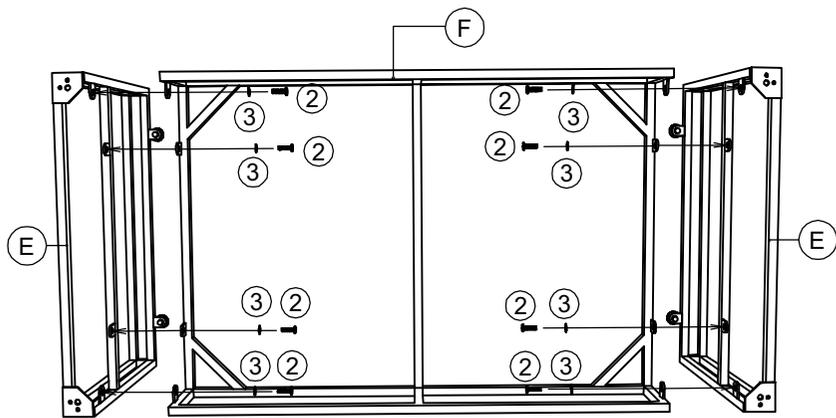

STEP 15

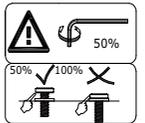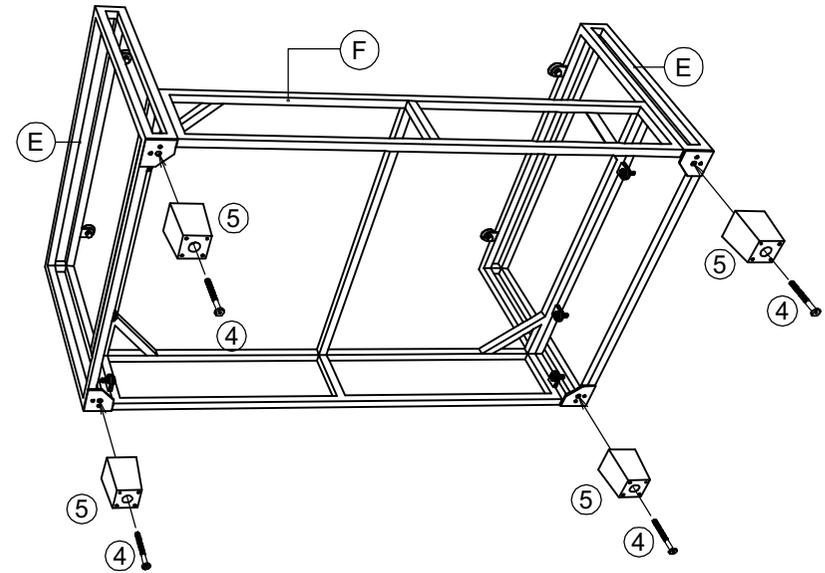

STEP 16

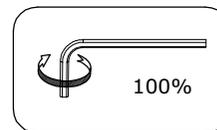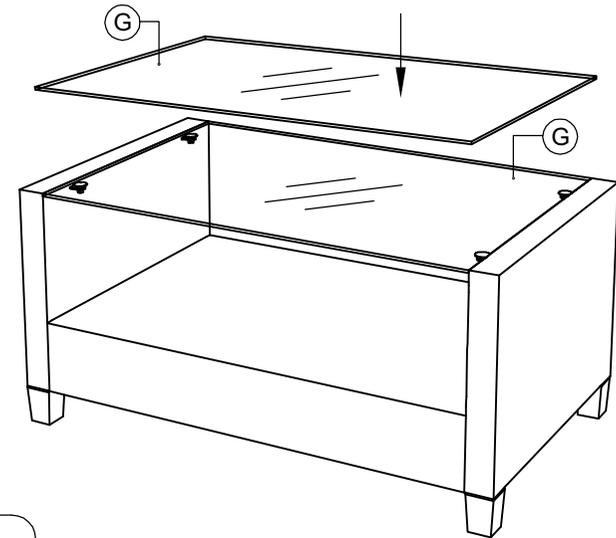

**FINISH**