


6640-5038 Easy-Lift™ Triple Sorter Laundry Center

©2014 Whitmor, Inc.

Assembly Time:
Less than 45 minutes.

This product's intended use is for hanging garments and storing laundry

Tools Needed:
No additional tools required. Hex wrench provided.

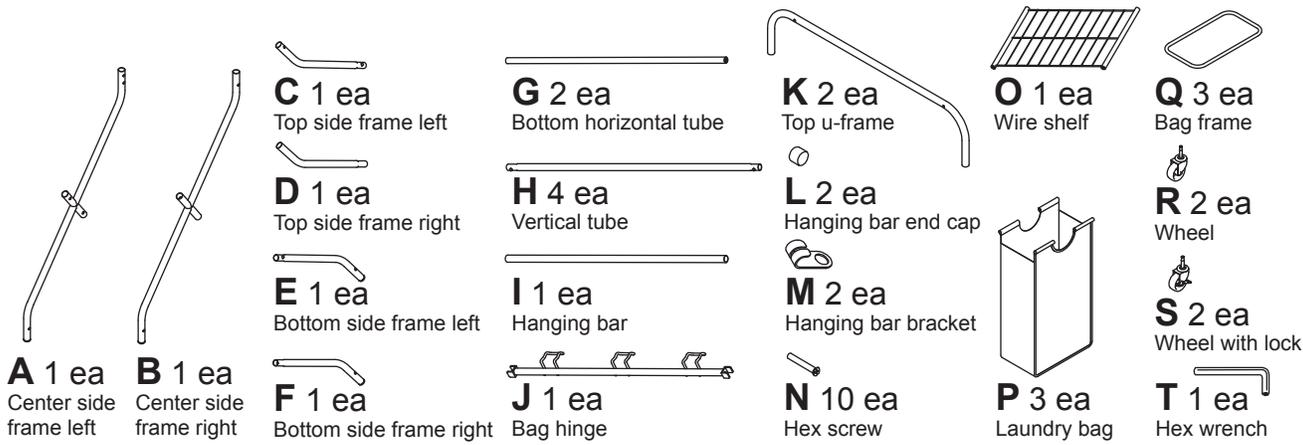

NOTE. Metal frame parts have holes in them for hex screws to be inserted. Notice the indented side of the hole is the side that the screw head fits into.

STEP 1. Assemble the left and right center side frames (A&B), top side frames (C&D) and bottom side frames (E&F).


STEP 2. Assemble the bottom horizontal tubes (G) and bag hinge (J) to the assembled side frames from step 1 using six hex screws (N). Tighten with hex wrench (T).

STEP 3. Insert four vertical tubes (H), then top u-frame (K). Attach wire shelf (O) to u-frame using four remaining hex screws (N). Tighten with hex wrench (T).

STEP 4. Hang two hanging bar brackets (M) onto wire shelf (O). Insert hanging bar (I) into hole in (M). Slide past locking tab. Insert one hanging bar end cap (L) onto each end.

STEP 5. Press wheels (R&S) into bottom of side frames.

STEP 6. Open laundry bags (P). The handles have velcro closures. Open the handles, then insert the bag frames (Q) wrapping the handles around the long sides of the frames. Close the velcro. Insert the bag frames under the wire hinges on the bag hinge (J)

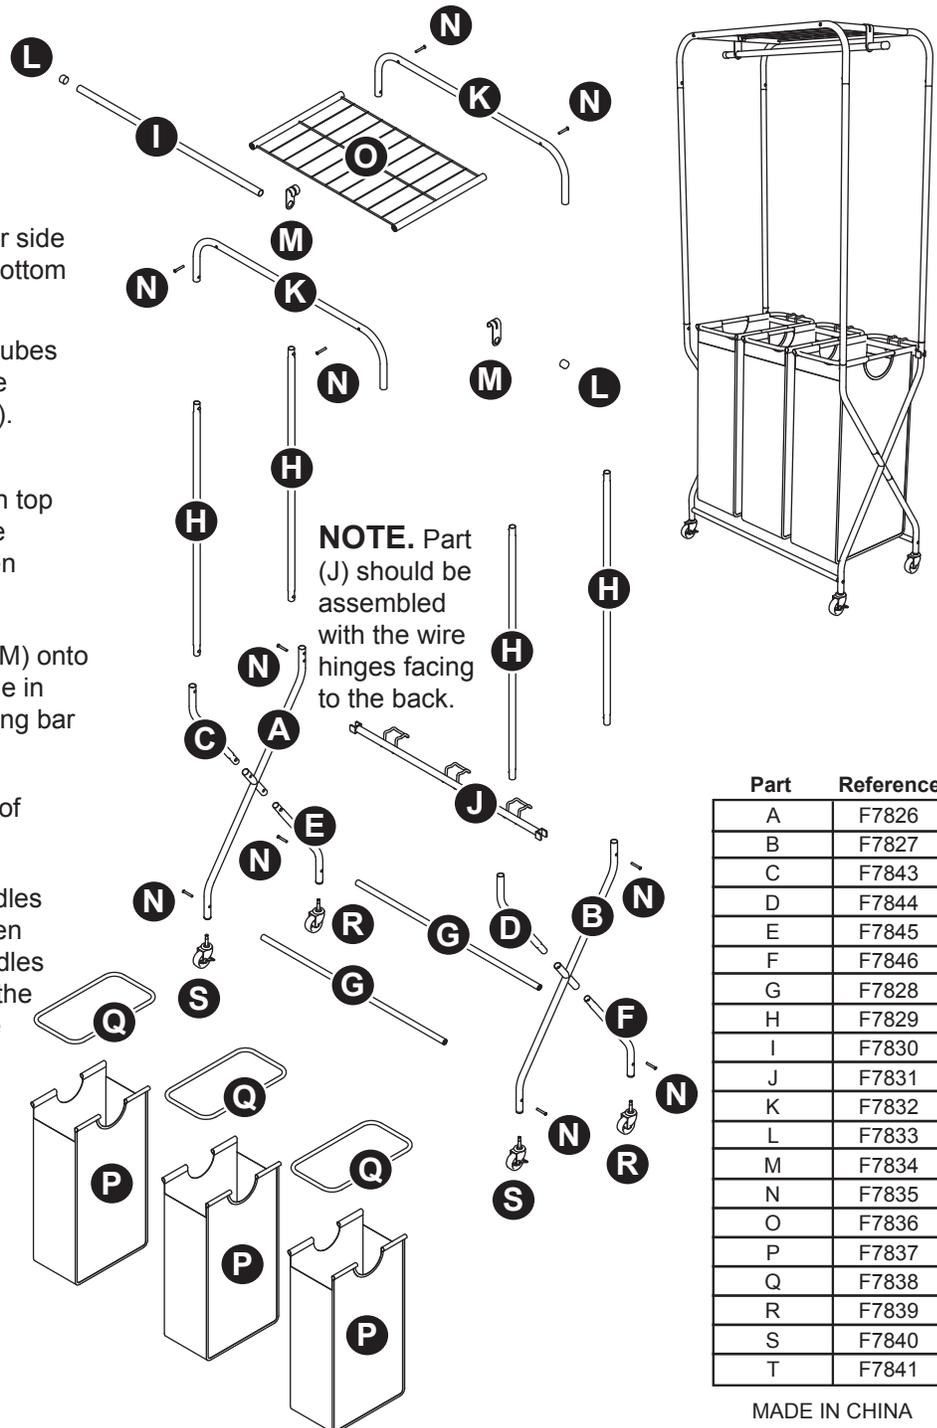

NOTE. Part (J) should be assembled with the wire hinges facing to the back.

Part	Reference
A	F7826
B	F7827
C	F7843
D	F7844
E	F7845
F	F7846
G	F7828
H	F7829
I	F7830
J	F7831
K	F7832
L	F7833
M	F7834
N	F7835
O	F7836
P	F7837
Q	F7838
R	F7839
S	F7840
T	F7841



8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Customer Service Department, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: help@whitmor.com. Visit us online at www.whitmor.com