




INSTRUCTIONS D'INSTALLATION DE LA RAMPE

IMPORTANT: POUR VOTRE SÉCURITÉ, ASSUREZ-VOUS QUE LE COURANT SOIT COUPÉ AVANT D'INSTALLER CETTE UNITÉ.

1. ENLEVER L'AVANT DE L'APPLIQUE EN ENLEVANT TOUS LES COUVERCLES DES DOUILLES (PROCÉDURE NÉCESSITE À DÉPLACER DES DOUILLES PAR LE CÔTÉ LÉGÈREMENT).
2. ENLEVER LA PARTIE PROTECTRICE DE L'AVANT DE L'APPLIQUE. (MODELES EN LAITON OU EN CHROME SEULEMENT).
3. DÉTERMINER LES POSITIONS DES TROUS DE MONTAGE POUR CONVENIR A LA BÔÎTE DE SORTIE ET ENLEVER LES KNOCKOUTS SI C'EST NÉCESSAIRE.
4. ENFILER LES FILS NOIRS ET BLANCS A TRAVERS LES TROUS DU DOS DE L'APPLIQUE ET CONNECTER LE FIL NOIR DE LA RAMPE AU FIL NOIR DE LA BÔÎTE DE SORTIE, LE FIL BLANC DE LA RAMPE AU FIL BLANC DE LA BÔÎTE. UTILISER LES FIL-CONNECTEURS. SERRER LE FIL DE TERRE DE LA RAMPE AU FIL DE FERRE DE LA BÔÎTE DE SORTIE.
5. PLACER LES PLOMBS DECRITS DANS L'OBJET 4 DANS LA BÔÎTE DE SORTIE, INSERER LES PANNEAUX ANTERIEURS ET POSITIONNER LA RAMPE AU-DESSUS DE LA BÔÎTE DE SORTIE. SERRER EN POSITION AVEC LES VIS DE LA BÔÎTE DE SORTIE.
6. METTRE L'AVANT DE L'APPLIQUE AU-DESSUS DU DOS DE L'APPLIQUE ET SERRER AVEC LES COUVERCLES DE DOUILLE.

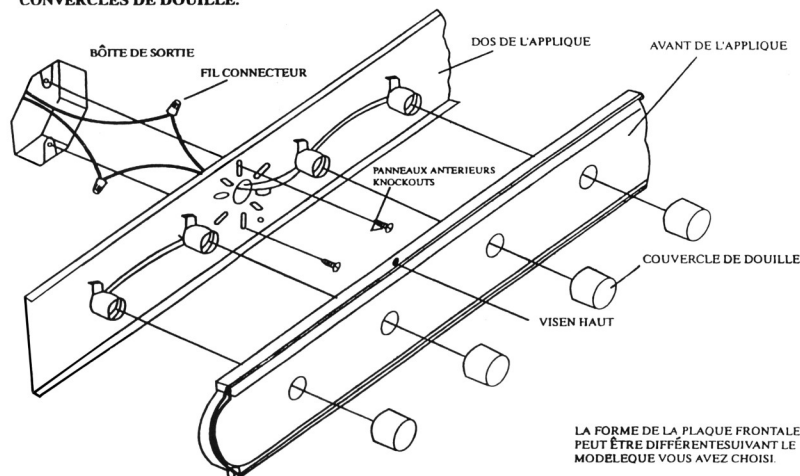

DHI Corporation.Today's Design House Mequon,WI 53092 800.558.8700



VANITY STRIP INSTALLATION INSTRUCTIONS

IMPORTANT: FOR YOUR OWN SAFETY, ENSURE POWER IS DISCONNECTED BEFORE INSTALLING THIS UNIT.

1. REMOVE FRONT PANEL BY REMOVING ALL CUPS FROM SOCKETS. (PROCESS MAY REQUIRE MOVING SOCKETS SLIGHTLY SIDWAYS WHILE LIFTING PANEL).
2. REMOVE PROTECTIVE COVERING FROM FRONT PANEL (BRASS OR CHROME MODEL ONLY).
3. DETERMINE POSITION OF REQUIRED MOUNTING HOLES TO FIT ON OUTLET BOX AND REMOVE KNOCKOUTS AS NECESSARY. (SEE FIG. 1)
4. FEED BLACK AND WHITE LEAD THROUGH HOLE IN BACK PLATE AND CONNECT BLACK FIXTURE LEAD TO BLACK SUPPLY LEAD. CONNECT WHITE FIXTURE LEAD TO WHITE SUPPLY LEAD. USE WIRE CONNECTORS SECURE GROUND WIRE FROM FIXTURE TO OUTLET BOX GROUND SCREW.
5. PLACE LEADS DESCRIBED IN ITEM 4 INTO OUTLET BOX, INSERT PANEL SCREWS AND POSITION FIXTURE OVER OUTLET BOX. SECURE INTO POSITION WITH OUTLET BOX SCREWS.
6. POSITION FRONT PANEL OVER BACK FLATE AND SECURE WITH SOCKET CUPS.

