





Heritage


No Dig Fencing System

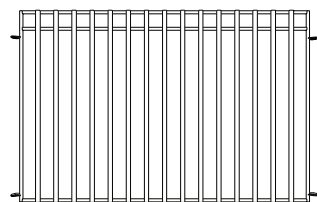

Panels
#1013289766

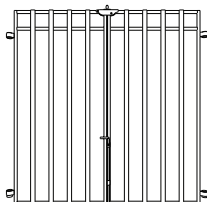

Gate
#1013289765

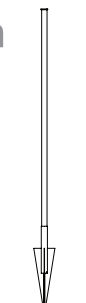

Posts
#1013677355

Tools Required:


- ✓ Block of wood
- ✓ Mason string and stakes
- ✓ 5 lb. sledgehammer
- ✓ Drill with Phillips drive bit
- ✓ 1/16" drill bit

No Dig Fencing System - Install


Measure out gate width centering on walk way.

Gate Unit Width
46.4"

Use a wood block and hammer to tap both stakes into ground.

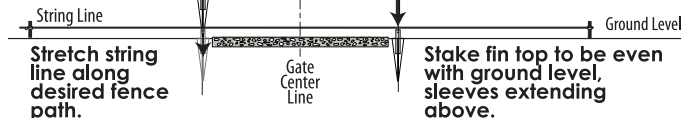


Drop post through rings & hinges then into stake sleeve.


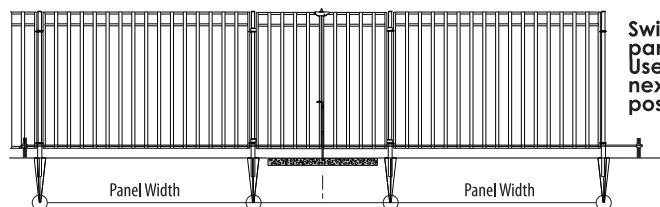


Swing attached panel into place. Use Post to mark next stake position.

Continue adding panels, using the panel to mark the position of the next stake.

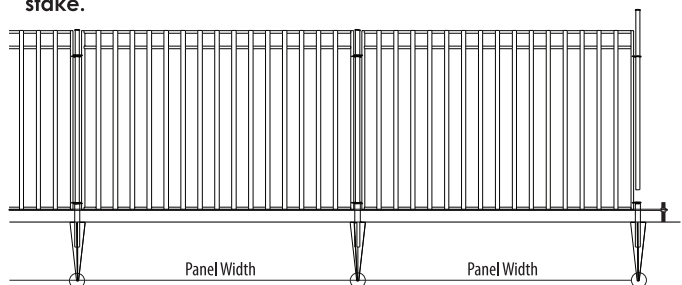


Panel ring rests on top of stake sleeve.
Bottom gate hinge rests on top of base panel ring.

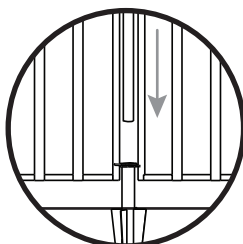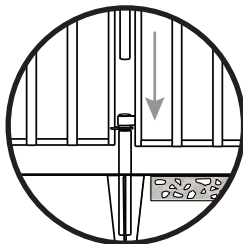


Left panel (lower) rings rest on top of stake sleeve.
Right panel (raised) rings rest on top of left panel rings.
Push post through all rings and into stake sleeve.

No Dig Fencing System - Gate Latch Installation

CAUTION:
Latch may pinch hand or finger. Use caution when installing or operating latch. Injury may occur if care is not used.

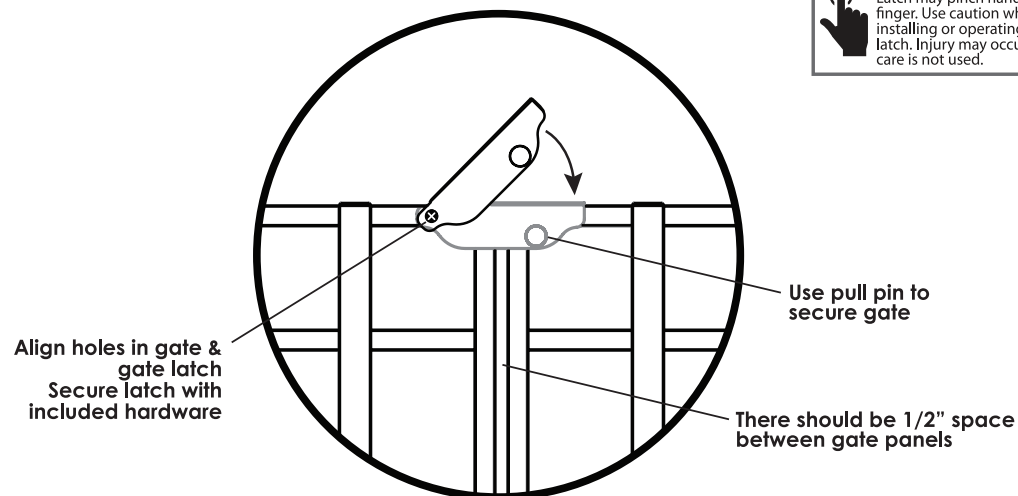

No Dig Fencing System - Gate Adjustment

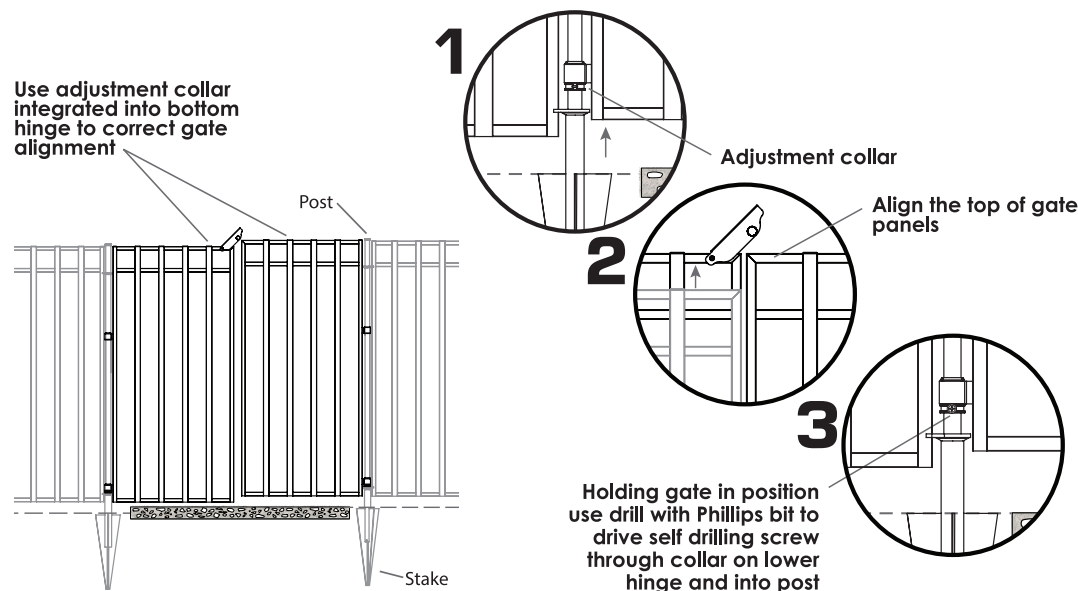

ForgeRightFence.com



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 800.607.6409, 8:00 am – 5:00 pm EST Monday – Friday.
Or eMail us at CustomerService@OPBglobal.com