


Simple Slide

No Tools Roller Shade Brackets


How to install with optional Level Template

1 Cut template above, then remove shaded area if the shade roll is less than 1" in diameter (when lowered)

2 Hold template touching top of window casing at needed depth and adhere bracket with inner curve of template

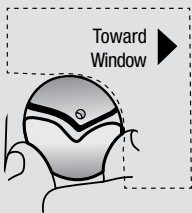

3 Rotate template and repeat on the other side of window casing

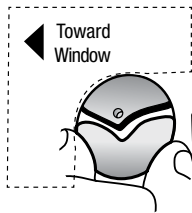

SMALL ROLL
(LESS than 1" in diameter)

Toward Window 

LARGE ROLL
(1" or MORE in diameter)


Redi Shade

www.redishade.com

