


INSTALLATION MANUAL

METAL FRAME MIRROR


CONTACT US

After opening the package, please inspect the product immediately and see if there is any damage or missing parts. If there is, please feel free to contact us by BMCRM@zritechservice.com, and we will reply within 24 hours.

ACCESSORIES LIST



Bracket x 2




Wall Anchor-A x 6



Wall Anchor-B x 6




Short Screw x 6



Long Screw x 6

TOOLS REQUIRED




Level Ruler




Marker




Hammer



Tape Measure



Electric Drill




Phillips Screwdriver




Safety Goggles

INSTRUCTIONS

1. Confirm the locations of four drill holes with the positioning ruler provided in the package, and mark the spots on the wall with a marker.

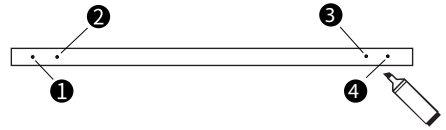

2. Use an electric drill to punch holes at the marked spots, and then apply wall anchors with a hammer.

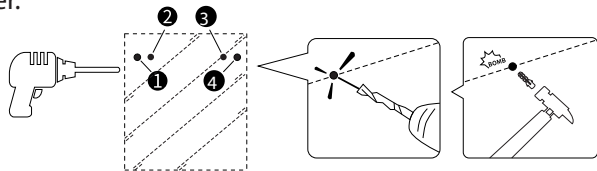

Thickness of Wall

Recommended Drill Bit

> 16mm



1/4" (6mm) drill bit, drilling depth in 1 31/32"(50mm)

8 ~ 16mm




25/64" (10mm) drill bit

< 8mm

Unapplicable

Note: Please wear goggles and pay attention to safety.

3. Screw the two brackets to the wall.

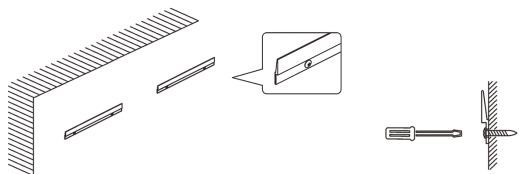

4. Place the mirror against the wall, align the hook with the mounted bracket, slowly lower the mirror down, and make sure that it slots into the right position and hangs securely.

