



SWING ARM ROD INSTALLATION GUIDE

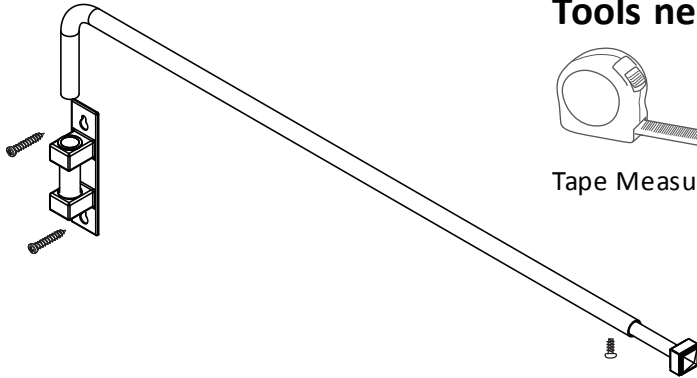

Tools needed:

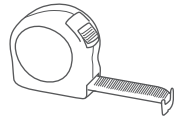


Tape Measure




Pencil



Drill & Bit Set

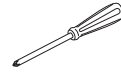

Philipshead
Screwdriver

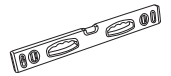

Level

STEP 1.

Remove swing rod from bracket by lifting rod upward.

STEP 2.

Place bracket against wall at desired location and mark screw holes.

STEP 3.





If mounting to drywall or paneling, pre-drill two pilot holes (3/16" drill bit) and insert anchors into wall and insert screws into wall anchors. If mounting directly into wood or studs, pre-drill two pilot holes (3/16" drill bit) and install bracket on the wall with screws provided.

STEP 4.


Re-install the swing rod in the bracket. Loosen the set screw to extend rod to desired length.

STEP 5.

Complete installation by retightening the set screw.

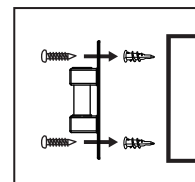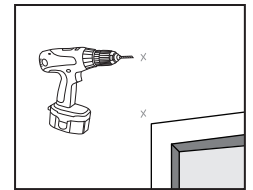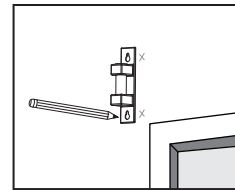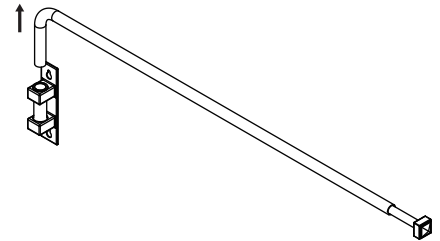

drywall or panelling

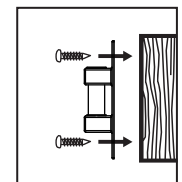

wood or studs

