

HOW TO ASSEMBLE THE DOUBLE BAGGER ON AN ULTIMA™ ZT ZERO-TURN MOWER

- 1** START BY LAYING OUT THE PARTS. ALWAYS READ YOUR OWNER'S MANUAL.




- 2** ASSEMBLE MOUNTING BRACKETS
a. Install the 12 rubber pads into the adapter bracket



- b. Remove the hitch bracket (1/2" wrench required)



- c. Install the hitch bracket adapter (For ZT1 models place two washers between the adapter and the hitch bracket)
d. You will need two wrenches: 1/2" and 9/16"
e. Hang the adapter bracket, connect to the adapter, tighten both sides

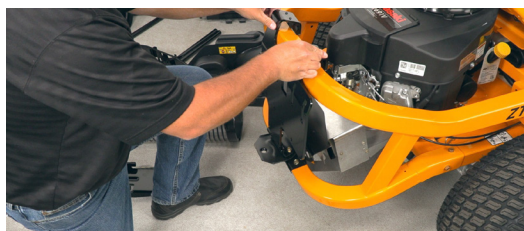

- 3** VERTICAL SUPPORT
a. Slide Vertical Support on the mounting bracket
b. Secure with carriage bolt, washer and lock nut (you will need two wrenches: 1/2" and 9/16")



- 4** HANGER ASSEMBLY
a. Secure hanger assembly with two carriage bolts, washers and lock nuts (you will need two wrenches: 1/2" and 9/16")



(CONTINUED ON NEXT PAGE)

5 TOP BAGGER COMPONENTS

- a. Snap plastic upper chute support in place



- b. Snap plastic top cover support in place (make sure the tab is locked in place)



- c. Align the cover tabs and use the mounting pin to secure (use a screwdriver to ease the pin into place)



- d. Add the bags



6 CHUTE

- a. Install the boot rod mount using the 7/16" nuts (2 wrenches are used)

7 BOOT

- a. For 50 in. / 54 in. fabricated decks: install the boot, secure the boot with a wing knob
b. For 42 in. / 46 in. decks: install the boot, secure the boot with a wing knob



- c. Thread tube into bagger counterclockwise



8 COUNTER WEIGHT

- a. Place protective decals on the inside of the weight hangers
b. Attach weight, 3 weight plates and brackets with hex bolts and nuts, tighten with two wrenches: 1/2" and 9/16"
c. Align and attach using hex bolts and nuts, tighten with two wrenches: 1/2" and 9/16"

