


EVERBILT

TM

Item # 1002 782 613
Model # 9236061

INSTALLATION INSTRUCTION

21 IN. UNDERMOUNT RUNNER

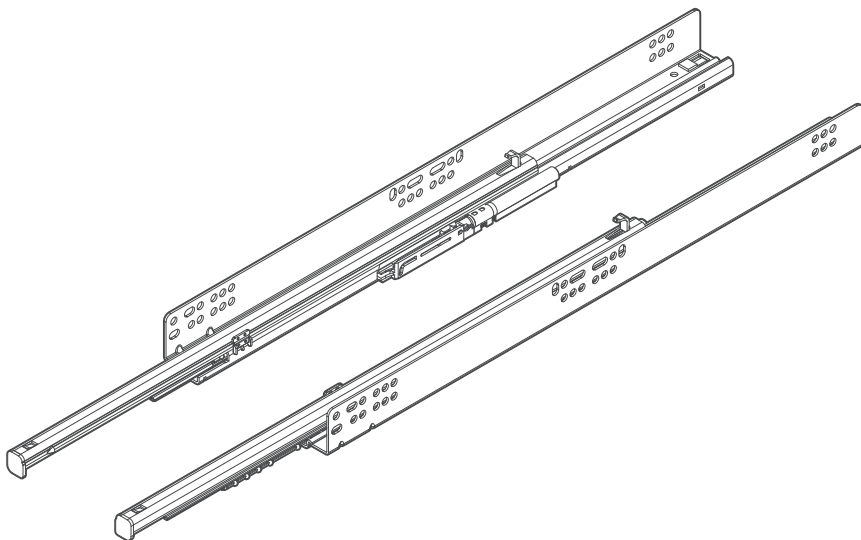

Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST,
Saturday

1-800-305-1726

or refer to **HOMEDEPOT.COM**
for the most current information

THANK YOU

We appreciate the trust and confidence you have placed in Everbilt through the purchase of this Undermount Runner. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Everbilt!

Table of Contents

Safety Information	2	Face Frame Installation	6
Warranty	2	Preparing the slides	6
Installation Options	3	Face frame application	6
Is this the right drawer for my project?.....	3	Metal rear attachment set (screw-on)	7
Pre-Installation	4	Frameless Installation	8
Planning Installation	4	Frameless application	8
Tools Required	4	Installing the drawer slides	8
Package Contents	4	Drawer Installation and Removal	9
Dimensions	5		
Cabinetry Dimensions	5		
Drawer Dimensions	5		

Safety Information

Please read and understand this manual before installing this product.



CAUTION: Always be cautious when using power tools.

Warranty

Subject to the terms of this warranty, the Manufacturer warrants to the original consumer purchaser that the product will be free from defects in material and workmanship. If the product does not comply with this warranty, the Manufacturer will repair or replace the product or, at the Manufacturer's option, refund the purchase price. Repair, replacement, or refund of the original purchase price is your sole remedy under this or any other warranty on the product, whether expressed or implied.

For additional details and questions, please contact Everbilt Customer Service at 1-800-305-1726.


Installation Options

1 Is this the right slide for my project?

Please check the following points


- ☐ Drawer dimensions need to be met to fit slides
- ☐ Fits 21 in. deep drawers
- ☐ These slides can be installed in frameless and face frame cabinetry. Instructions for both options are provided in this manual.
- ☐ The drawer side thickness can be 1/2 in. (13 mm) or 5/8 in. (16 mm), but no thicker.

Face Frame

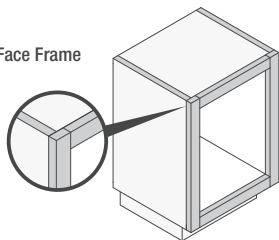

			
Drawer box length		Minimum / maximum inside cabinet depth with metal rear attachment bracket	
inch	mm	inch	mm
21"	(533 mm)	21 7/8" - 23 3/4"	(555 - 605 mm)

Frameless

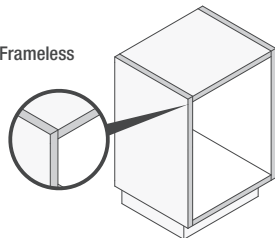

			
Drawer box length		Minimum inside cabinet depth	
inch	mm	inch	mm
21"	(533 mm)	21 5/8"	(550 mm)

Pre-Installation


PLANNING INSTALLATION

Ensure all parts listed in the Package Contents section are included and that you have the listed Tools Required on hand. If any part is missing or damaged, contact customer service.


TOOLS REQUIRED



Pencil



Drill with
3/32" Drill bit for screws
1/4" Drill bit for rear hole




Measuring Tape





Phillips
Screwdriver

PACKAGE CONTENTS

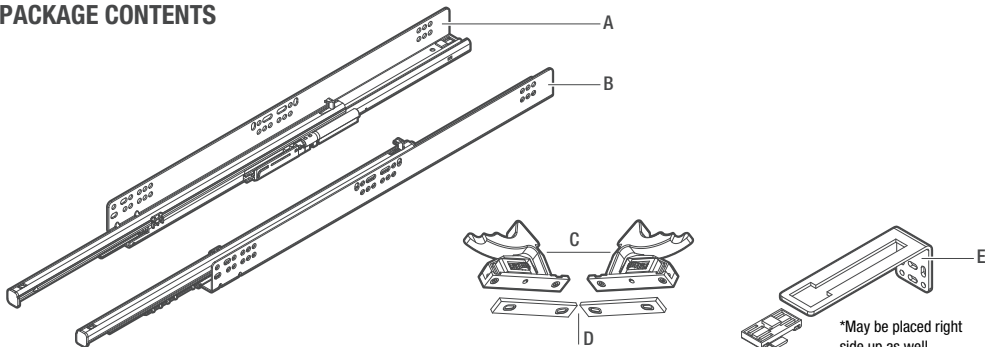


Part	Description	Quantity
A	Left Drawer Slide	1
B	Right Drawer Slide	1
C	Front fixing clips left/right for 5/8" (16 mm) drawer subfront thickness	2
D	Optional spacers for 1/2" (13 mm) drawer subfront thickness	2
E	Face Frame Rear Bracket	2
F	Panhead #6 x 1/2 in. (3.5 x 13 mm)	8
G	Countersunk #6 x 5/8 in. (3.5 x 16 mm)	16
H	Countersunk #6 x 3/4 in. (3.5 x 20 mm)	4
I	Countersunk #6 x 1 in. (3.5 x 25 mm)	4




Dimensions

Please review these diagrams and measure and mark your installation location before you begin the installation procedures.

CABINETRY DIMENSIONS


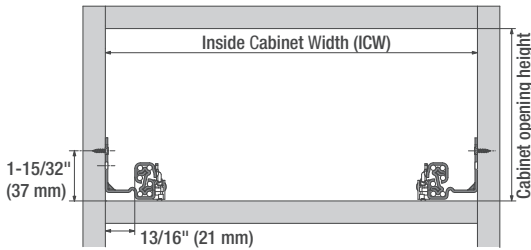


DRAWER DIMENSIONS

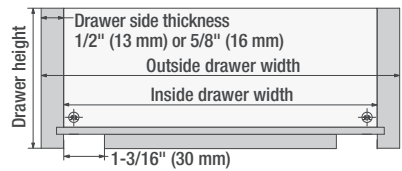

- Drawer depth: 21 in. (533 mm) outside length of drawer sides, without decorative front, for a four sided box
- Drawer slides will not work with 3/4 in. (19 mm) drawer sides. Max. drawer side thickness = 5/8 in. (16 mm)
- Drawer side thickness must be no thicker than 1/2 in. (13 mm) or 5/8 in. (16 mm)
- Outside drawer width = Inside cabinet width minus 5/8 in. (16 mm) or 3/8 in. (10 mm)
- Inside drawer width = Inside cabinet width minus 1-21/32 in. (42 mm)
- Maximum drawer height = cabinet opening height minus 13/16 in. (20 mm)
- Minimum cabinet opening height = drawer height plus 13/16 in. (20 mm)
- Dimensions in millimeters (inch approximations as noted)


MOUNTING DIMENSIONS

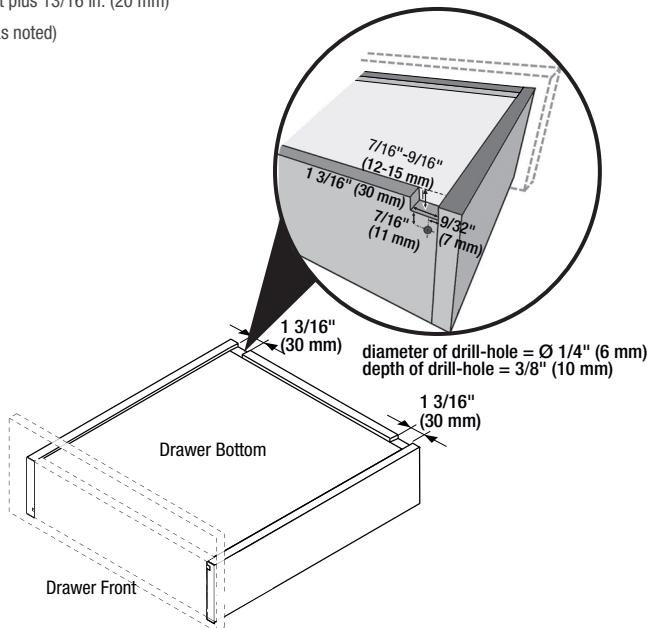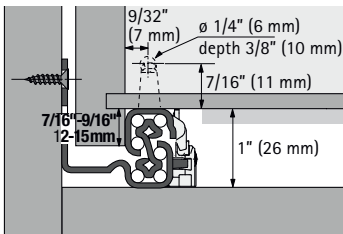


Face Frame Installation

1 Preparing the slides

- Slide plastic connector from rear metal bracket into the notch on the left and right drawer slides (A and B) forward, as shown.

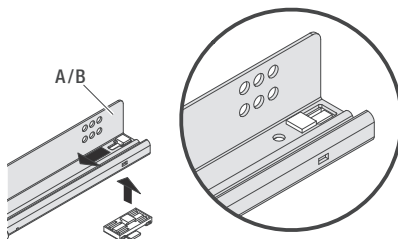

2 Face frame application



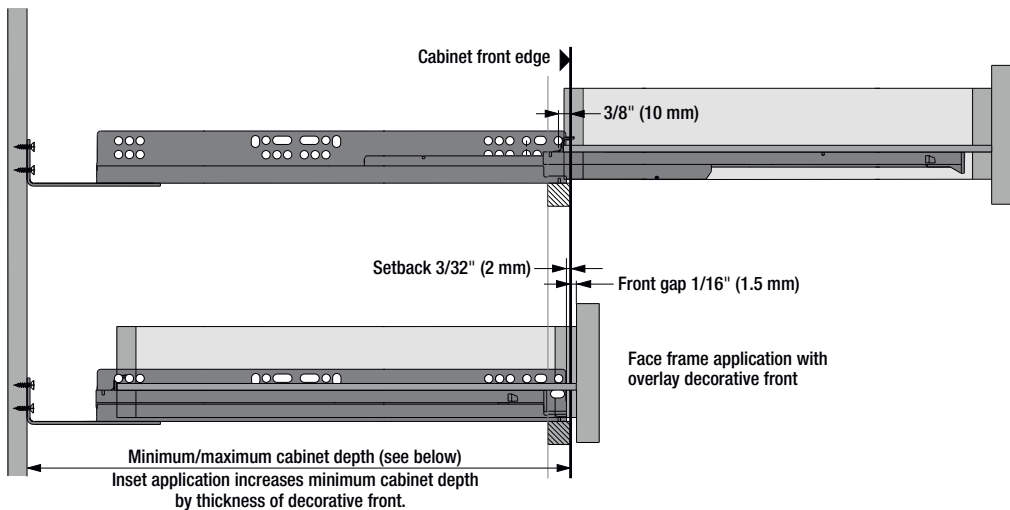


Drawer box length		Minimum / maximum inside cabinet depth with metal rear attachment bracket	
inch	mm	inch	mm
21"	(533 mm)	21 7/8" - 23 3/4"	(555 - 605 mm)




Face Frame Installation

3 Metal rear attachment set (screw-on)

- Set contains 2 metal rear mount brackets and 2 plastic connectors
- Non-handed, two-piece design
- For up to 50 mm (1 15/16") depth adjustment
- and ± 1.5 mm (1/16") side adjustment
- Additional adjustment via oblong holes
- Installation recommended with minimum of four panhead screws (F)

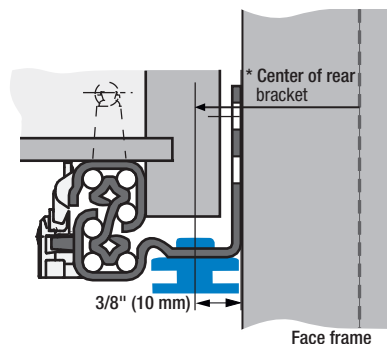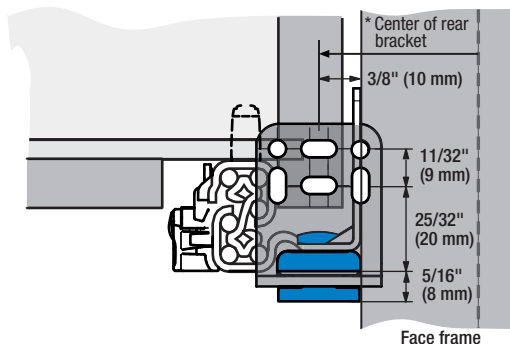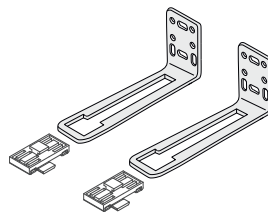


* Center of the metal rear bracket = Width of the face frame - Thickness of the cabinet side panel + 3/8" (10 mm)

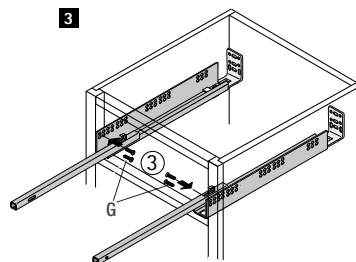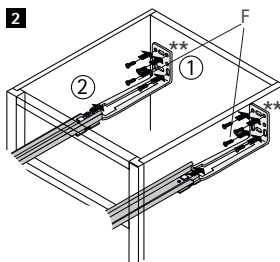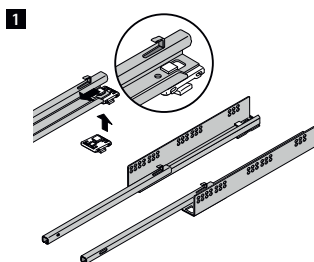

** The Face Frame Bracket
can also be placed upside down

Frameless Installation


1 Frameless application

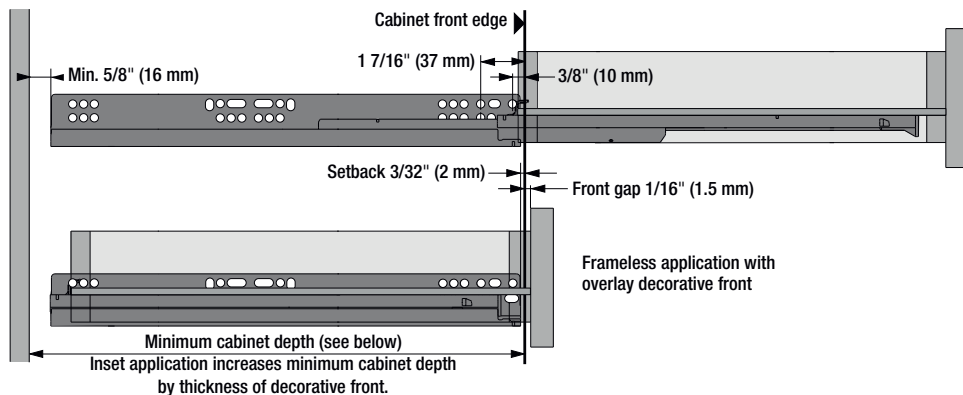

Drawer box length		Minimum inside cabinet depth	
inch	mm	inch	mm
21"	(533 mm)	21 5/8"	(550 mm)

2 Installing the drawer slides


- Attach the left and right drawer slides (A and B) to the inside of the cabinet using #6 x 5/8 in. screws (G). Ensure you leave a 1/16 in. (2 mm) space between the face of the cabinet and the start of the drawer slides.
- Proceed to Drawer Installation and Removal when finished.

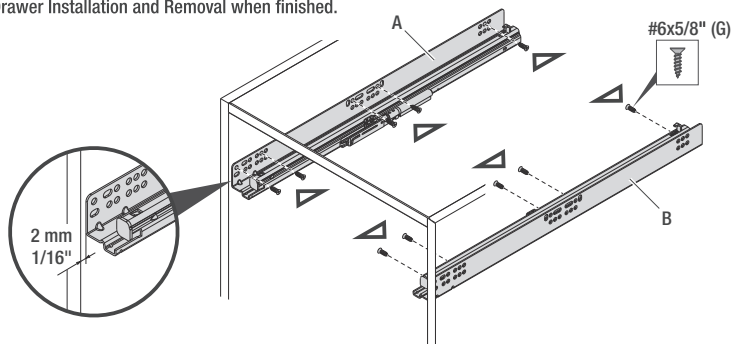


Drawer Installation and Removal

1 Installing the drawer catches

- Install each drawer catch (C) into the two front corners of the drawer using #6 x 3/4 in. screws (H) or #6 x 1 in. screws (I). If you need to install the screws at an angle, do not angle the screws more than 30°. If your door subfront is 1/2 in. (13 mm) use the optional spacers (D).


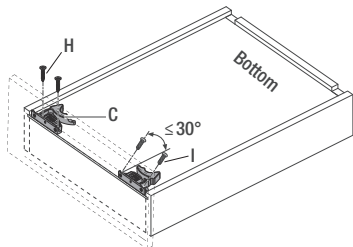


DRAWER CATCH DIMENSIONS

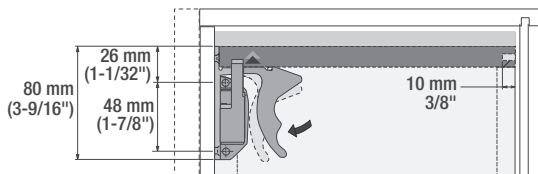


2 Installing the drawer

- Insert the drawer onto the glides inside the cabinet and push inside until the drawer catches click.

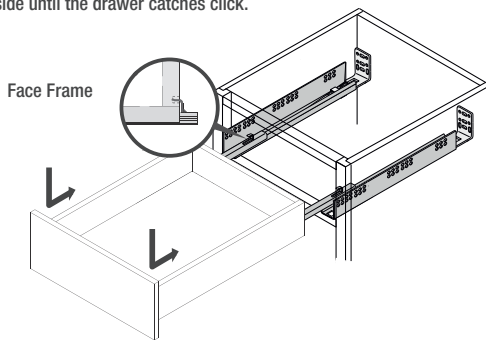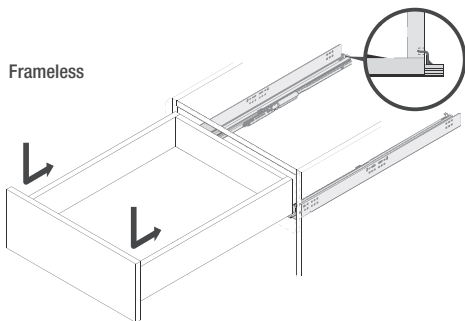

3 Removing the drawer

- Gently pull each drawer catch lever and slide the drawer out to remove.

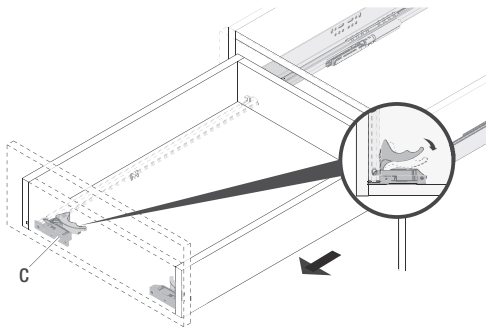



Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-305-1726

HOMEDEPOT.COM

For the most up to date instructions - please visit HomeDepot.com.
Retain this manual for future use.