


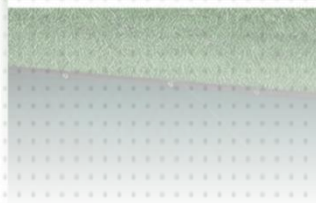

ColourTree Privacy Fence Screen Installation



Measure

Measure your fence from top to bottom to determine what height you require. Our privacy fence screens are 3" shorter than your fence to fit perfectly, nice and taut. Measure your width as well to find a standard size fit for your needs.

	Material	Grommets	Blockage	Features
Standard	170 GSM 100% non-recycled high-density polyethylene	4 each corner , 1 each 1 ft. vertically and 2 ft. horizontally; brass	90% visibility blockage 95% UV blockage	Commercial UV stabilization , resistant to fading, tearing, stains, molding, mildew
Heavy Duty PLUS	220 GSM 100% non-recycled high-density polyethylene	4 each corner , 1 each 1 ft. vertically and 2 ft. horizontally; extra heavy-duty brass	95% visibility blockage 98% UV blockage	Commercial UV stabilization , resistant to fading, tearing, stains, molding, mildew



Install

Installation is as easy as 1, 2, 3! (But don't try installing on a windy day)

1. Start at one of the ends of your fence and loop zip ties on the vertical edge using through the corner grommets and fence
2. Work your way along the length of your fence horizontally until you reach the other end of the fence and finish linking
3. Inspect for any loose areas and to check that zip ties are secure

Pro tip: Zip ties are included are all "x 50 ft." sizes