



SmartShade Installation

STEP-BY-STEP INSTRUCTIONS



Table of Contents

Installing SmartShade

3-26

Installing SmartShade Inside Mount

3

Pulling Mechanism: Beaded Chain (Plastic or Metal)

4-5

Pulling Mechanism: Cord Loop

6-9

Installing SmartShade Middle Mount

10

Pulling Mechanism: Beaded Chain (Plastic or Metal)

11-13

Pulling Mechanism: Cord Loop

14-17

Installing SmartShade Outside Mount

18

Pulling Mechanism: Beaded Chain (Plastic or Metal)

19-21

Pulling Mechanism: Cord Loop

22-25

Configuring the Top and Bottom Shade Positions

26-28

Configuring the Top and Bottom Shade Positions

27-28

Pairing SmartShade & Devices

29-50

Pairing SmartShade to the App via Bluetooth

29-36

Pairing SmartBridge to the App

37-43

Pairing SmartShade to the App via SmartBridge

44-50

Groups & Routines

51-66

Create a Group of Shades

51-57

Creating a Routine

58-66

Integrations

67-94

Connecting SmartShade to Home App (HomeKit)

67-75

Connecting SmartShade to Amazon Alexa

76-84

Alexa Supported Voice Commands

85

Connecting SmartShade to Google Home

86-93

Google Home Supported Voice Commands

94



Installing SmartShade: Inside Mount

Drywall, Plaster, Wood, Metal

Pulling Mechanism:
BEADED CHAIN (PLASTIC OR METAL)


What you will need:

SmartShade, Power Adapter, Battery Pack, Screws, Anchors, Inside Bracket, Screwdriver, Pencil

Steps:



1. Take SmartShade's back cover off by holding the cover by the opening at the top and pulling it out. Push down the guide rail under the sprocket wheel and wrap the beaded chain around the sprocket wheel and close the cover.

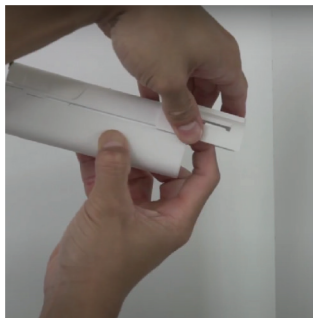

2. Insert SmartShade onto the bracket and slide the bracket up until you hear a couple of clicks.

TIP: Use the Release Button located at the bottom of SmartShade to readjust the bracket if necessary.



3. Let's mark where you will be screwing in the bracket. If you're planning on using the BatteryPack to power SmartShade, put the BatteryPack on. Place SmartShade onto where the chain or cord becomes taut, making sure your window shade wouldn't collide with it.

Take a pencil and lightly outline the side of the bracket.



4. Take SmartShade off the bracket by pressing on the release button on the bottom of SmartShade and sliding the SmartShade up.

Use the outline you made to place the bracket and make a mark where the two holes are.



5. Use the marks you've made to screw in the anchors. After that, screw in the bracket. Make sure the bracket is facing the right orientation.



6. Place SmartShade onto the bracket and push it down until fully taut.



OR



7. Connect the power adapter to SmartShade from the bottom and plug it in OR Connect the BatteryPack to the bottom of SmartShade.



8. Now you're ready to add this SmartShade to the RYSE app!

Pulling Mechanism: CORD LOOP

What you will need:

SmartShade, Power Adapter, Battery Pack, Screws, Anchors, Inside Bracket, Cord Wheel, Cord Guide Rail, Tape for Cord, Screwdriver, Screwdriver 2mm hex (5/64"), Pencil



Steps:



1. Take SmartShade's back cover off by holding the cover by the opening at the top and pulling it out. Unscrew the three screws - 1 on the sprocket wheel, and 2 on the top guide rail above the sprocket wheel.

TIP: If the sprocket wheel is too tough to pull off, use a tool that fits underneath the sprocket wheel to pry it off. For example, a screwdriver.



2. Replace the bottom guide rail with the provided cord guide rail. When you pull out the guide rail, make sure the springs inside each hole remain inside.


Once that's out, put the cord guide rail in by tilting it towards you, preventing the

pins on the guide rail from rubbing against the circle dent on SmartShade - this could bend and damage the pins. Make sure the holes and the lines on the guide rail face the inside of SmartShade. Push it in until you hear a click on both sides. The guide rail should bounce when it's pushed down.

TIP: If at any time the guide rail gets stuck on the bottom and doesn't bounce up, you can manually push it up.




3. Screw in the cord wheel. Make sure the bumpy side is facing SmartShade.

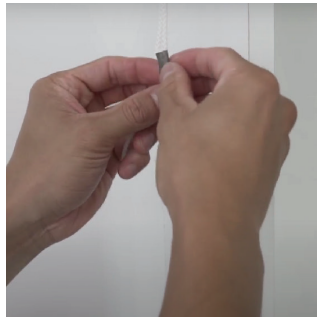


4. Take 3 out of the 4 tapes provided and wrap each tape onto your window shade's cord, ideally leaving 3ft distance apart between each tape. If your cord is too short, then 1ft apart will do. The last tape will be your back-up tape.

Most importantly, make sure you put your tape on the cord where it will be passing through your SmartShade. This is to prevent any drifting in the future.

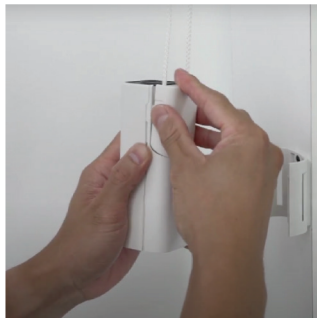

5. Wrap the cord loop around the cord wheel and close the cover. Make sure the cord is not twisted!

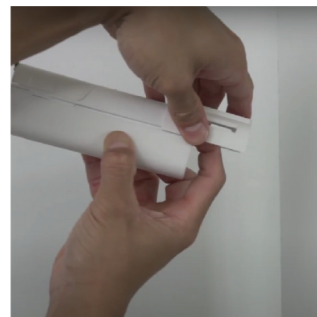

6. Insert SmartShade onto the bracket and slide the bracket up until you hear a couple of clicks.

TIP: Use the Release Button located at the bottom of SmartShade to readjust the bracket if necessary.



- 7.** Let's mark where you will be screwing in the bracket. If you're planning on using the BatteryPack to power SmartShade, put the BatteryPack on. Place SmartShade onto where the chain or cord becomes taut, making sure your window shade wouldn't collide with it.

Take a pencil and lightly outline the side of the bracket.



- 8.** Take SmartShade off the bracket by pressing on the release button on the bottom of SmartShade and sliding the SmartShade up.

Use the outline you made to place the bracket and make a mark where the two holes are.



- 9.** Use the marks you've made to screw in the anchors. After that, screw in the bracket. Make sure the bracket is facing the right orientation.




- 10.** Place SmartShade onto the bracket and push it down until fully taut.



OR



- 11.** Connect the power adapter to SmartShade from the bottom and plug it in OR Connect the BatteryPack to the bottom of SmartShade.
-

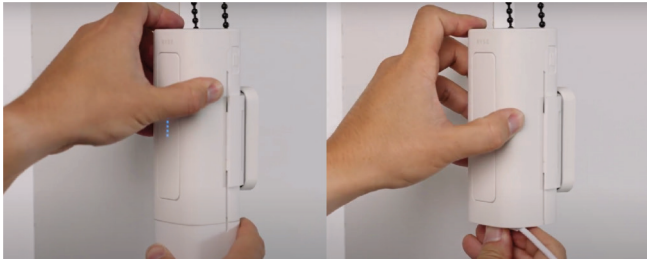

- 12.** Now you're ready to add this SmartShade to the RYSE app!



Installing SmartShade: Middle Mount


Drywall, Plaster, Wood, Metal

Pulling Mechanism:
BEADED CHAIN (PLASTIC OR METAL)

What you will need:

SmartShade, Power Adapter, Battery Pack, Screws, Small Screws, Anchors, Inside Bracket, Outside Bracket, Screwdriver, Pencil

Steps:

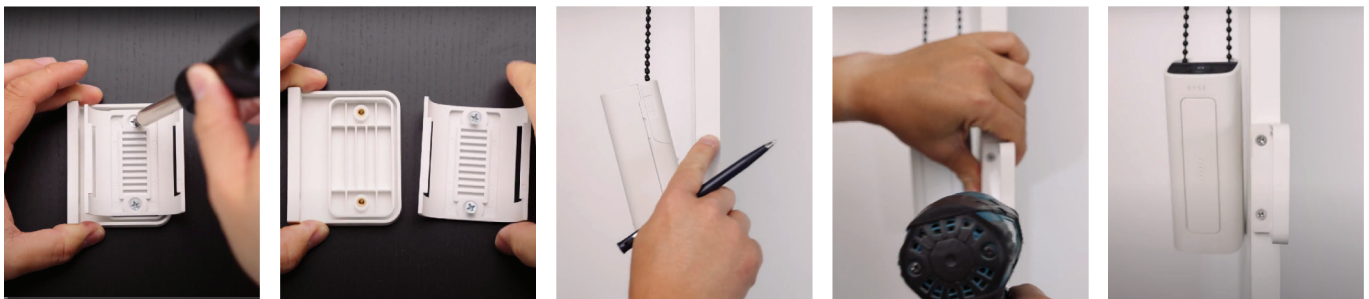


1. Use the small screws to screw on the inside bracket onto the outside bracket.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.



2. Take SmartShade's back cover off by holding the cover by the opening at the top and pulling it out. Push down the guide rail under the sprocket wheel and wrap the beaded chain around the sprocket wheel and close the cover.

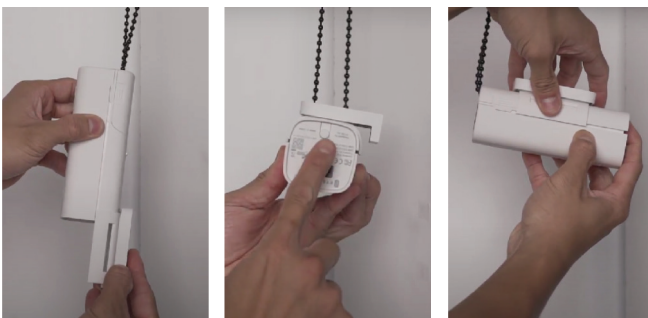

3. Insert SmartShade onto the bracket and slide the bracket up until you hear a couple of clicks.

TIP: Use the Release Button located at the bottom of SmartShade to readjust the bracket if necessary.




4. Let's mark where you will be screwing in the bracket. Place SmartShade onto where the chain or cord becomes taut, making sure your window shade wouldn't collide with it. Take a pencil and lightly outline the top of the bracket. Keep in mind, if you are planning on using the BatteryPack to power SmartShade, it will need extra space on the bottom for it.



5. Take SmartShade off the bracket by pressing on the release button on the bottom of SmartShade and sliding the SmartShade up.




6. Unscrew the inside bracket from the outside bracket. Use the guide you made to position the outside bracket and make a mark where the two holes are. Use these marks to screw in the anchors.

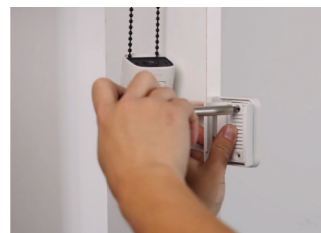

7. Screw the outside bracket on the wall. Reattach the inside bracket by screwing it onto the outside bracket, making sure it's facing the right orientation.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.

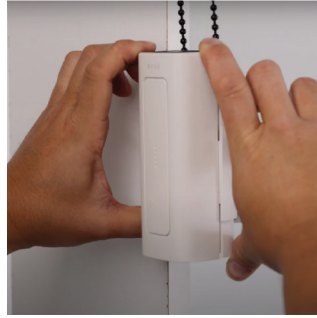


8. Place SmartShade onto the bracket and push it down until fully taut.



OR



9. Connect the power adapter to SmartShade from the bottom and plug it in OR Connect the BatteryPack to the bottom of SmartShade.

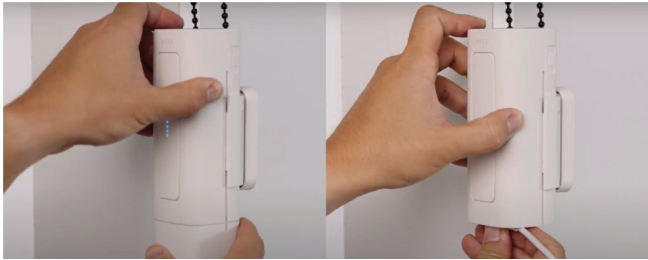

10. Now you're ready to add this SmartShade to the RYSE app!


Pulling Mechanism: CORD LOOP

What you will need:

SmartShade, Power Adapter, Battery Pack, Screws, Small Screws, Anchors, Inside Bracket, Outside Bracket, Cord Wheel, Cord Guide Rail, Tape for Cord, Screwdriver, Screwdriver 2mm hex (5/64"), Pencil.




Steps:

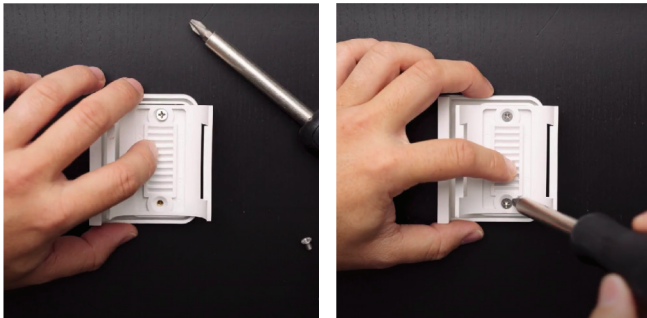

1. Use the small screws to screw on the inside bracket onto the outside bracket.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.

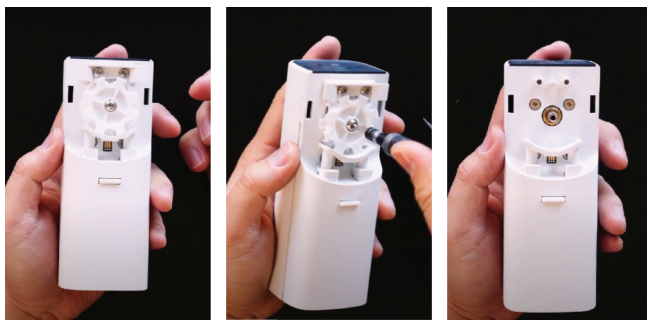

2. Take SmartShade's back cover off by holding the cover by the opening at the top and pulling it out. Unscrew the three screws - 1 on the sprocket wheel, and 2 on the top guide rail above the sprocket wheel.

TIP: If the sprocket wheel is too tough to pull off, use a tool that fits underneath the sprocket wheel to pry it off. For example, a screwdriver.




3. Replace the bottom guide rail with the provided cord guide rail. When you pull out the guide rail, make sure the springs inside each hole remain inside.


Once that's out, put the cord guide rail in by tilting it towards you, preventing the

pins on the guide rail from rubbing against the circle dent on SmartShade - this could bend and damage the pins. Make sure the holes and the lines on the guide rail face the inside of SmartShade. Push it in until you hear a click on both sides. The guide rail should bounce when it's pushed down.

TIP: If at any time the guide rail gets stuck on the bottom and doesn't bounce up, you can manually push it up.

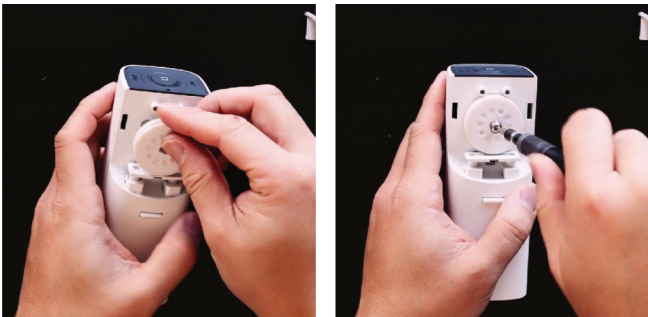


4. Screw in the cord wheel. Make sure the bumpy side is facing SmartShade.

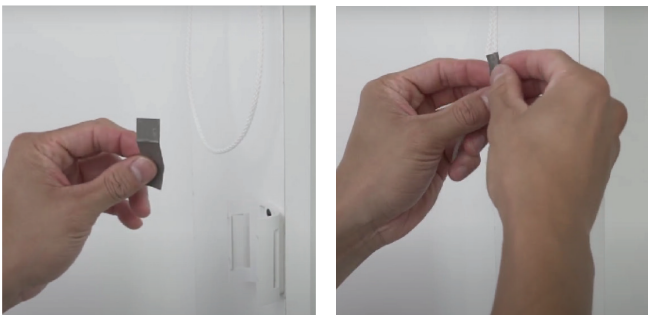


- 5 Take 3 out of the 4 tapes provided and wrap each tape onto your window shade's cord, ideally leaving 3ft distance apart between each tape. If your cord is too short, then 1ft apart will do. The last tape will be your back-up tape.

Most importantly, make sure you put your tape on the cord where it will be passing through your SmartShade. This is to prevent any drifting in the future.

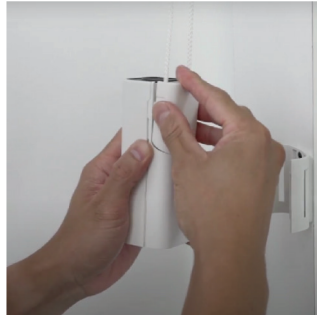

6. Wrap the cord loop around the cord wheel and close the cover. Make sure the cord is not twisted!

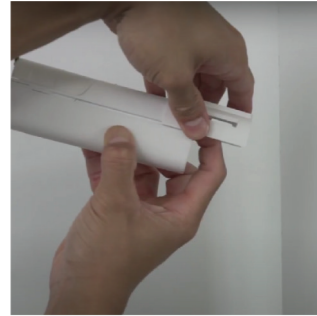

7. Insert SmartShade onto the bracket and slide the bracket up until you hear a couple of clicks.

TIP: Use the Release Button located at the bottom of SmartShade to readjust the bracket if necessary.




8. Let's mark where you will be screwing in the bracket. If you're planning on using the BatteryPack to power SmartShade, put the BatteryPack on. Place SmartShade onto where the chain or cord becomes taut, making sure your window shade wouldn't collide with it.


Take a pencil and lightly outline the top of the bracket. Keep in mind, if you are planning on using the BatteryPack to power SmartShade, it will need extra space on the bottom for it.



9. Take SmartShade off the bracket by pressing on the release button on the bottom of SmartShade and sliding the SmartShade up.

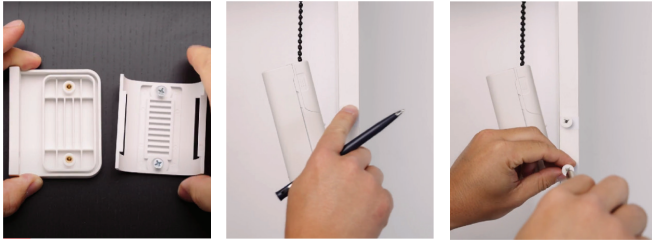


- 10.** Unscrew the inside bracket from the outside bracket. Use the guide you made to position the outside bracket and make a mark where the two holes are. Use these marks to screw in the anchors.

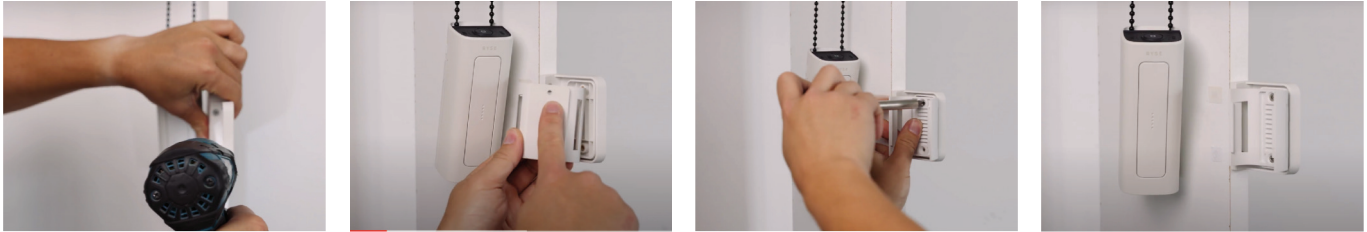

- 11.** Screw the outside bracket on the wall. Reattach the inside bracket by screwing it onto the outside bracket, making sure it's facing the right orientation.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.

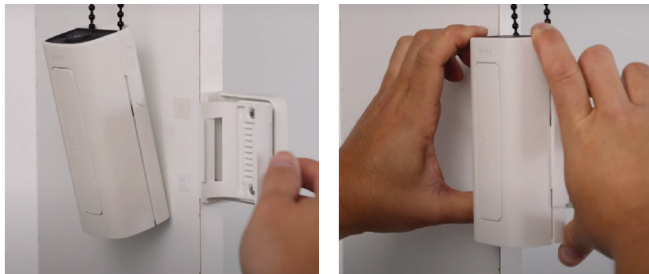


- 12.** Place SmartShade onto the bracket and push it down until fully taut.



OR

- 13.** Connect the power adapter to SmartShade from the bottom and plug it in OR Connect the BatteryPack to the bottom of SmartShade.

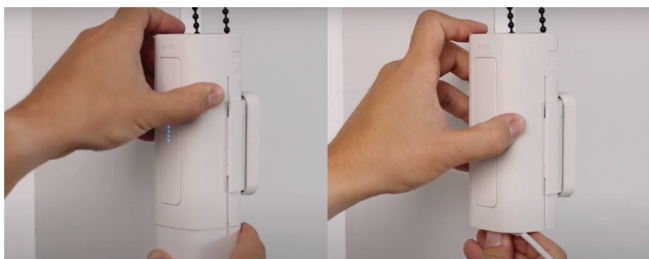

- 14.** Now you're ready to add this SmartShade to the RYSE app!



Installing SmartShade: Outside Mount


Drywall, Plaster, Wood, Metal

Pulling Mechanism:
BEADED CHAIN (PLASTIC OR METAL)

What you will need:

SmartShade, Power Adapter, Battery Pack, Screws, Small Screws, Anchors, Inside Bracket, Outside Bracket, Screwdriver, Pencil

Steps:

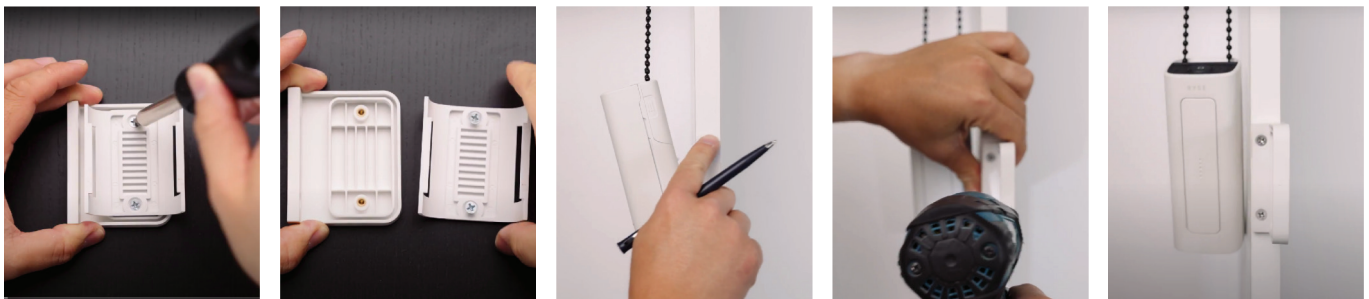


1. Use the small screws to screw on the inside bracket onto the outside bracket.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.



2. Take SmartShade's back cover off by holding the cover by the opening at the top and pulling it out. Push down the guide rail under the sprocket wheel and wrap the beaded chain around the sprocket wheel and close the cover.

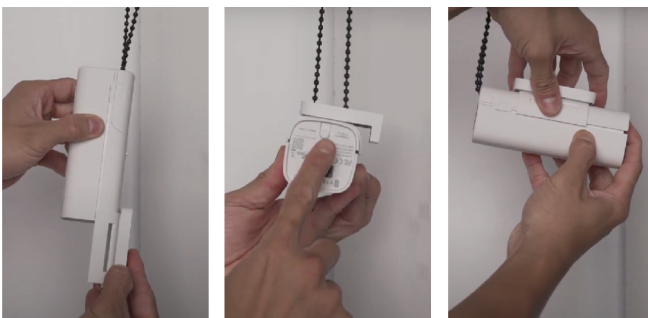

3. Insert SmartShade onto the bracket and slide the bracket up until you hear a couple of clicks.

TIP: Use the Release Button located at the bottom of SmartShade to readjust the bracket if necessary.





4. Let's mark where you will be screwing in the bracket. Place SmartShade onto where the chain or cord becomes taut, making sure your window shade wouldn't collide with it. Take a pencil and lightly outline the top of the bracket. Keep in mind, if you are planning on using the BatteryPack to power SmartShade, it will need extra space on the bottom for it.



5. Take SmartShade off the bracket by pressing on the release button on the bottom of SmartShade and sliding the SmartShade up.




6. Unscrew the inside bracket from the outside bracket. Use the guide you made to position the outside bracket and make a mark where the two holes are. Use these marks to screw in the anchors.

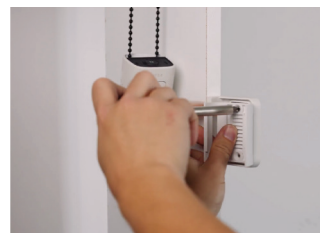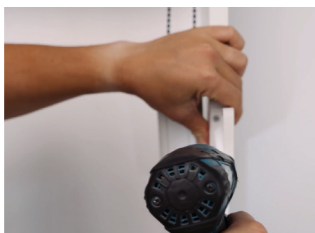

7. Screw the outside bracket on the wall. Reattach the inside bracket by screwing it onto the outside bracket, making sure it's facing the right orientation.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.

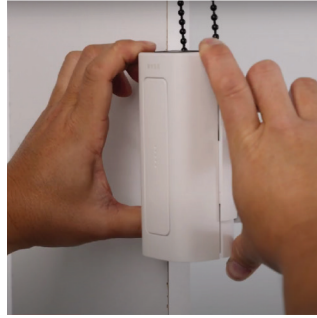


- 8.** Place SmartShade onto the bracket and push it down until fully taut.



OR



- 9.** Connect the power adapter to SmartShade from the bottom and plug it in OR Connect the BatteryPack to the bottom of SmartShade.

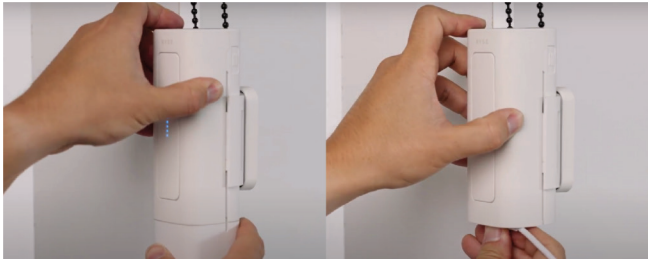

- 10.** Now you're ready to add this SmartShade to the RYSE app!


Pulling Mechanism: CORD LOOP

What you will need:

SmartShade, Power Adapter, Battery Pack, Screws, Small Screws, Anchors, Inside Bracket, Outside Bracket, Cord Wheel, Cord Guide Rail, Tape for Cord, Screwdriver, Screwdriver 2mm hex (5/64"), Pencil.




Steps:

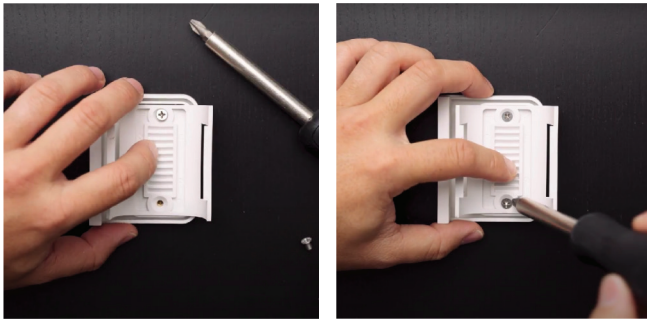

1. Use the small screws to screw on the inside bracket onto the outside bracket.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.

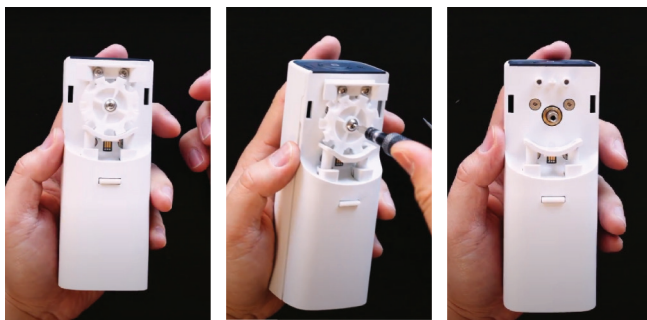

2. Take SmartShade's back cover off by holding the cover by the opening at the top and pulling it out. Unscrew the three screws - 1 on the sprocket wheel, and 2 on the top guide rail above the sprocket wheel.

TIP: If the sprocket wheel is too tough to pull off, use a tool that fits underneath the sprocket wheel to pry it off. For example, a screwdriver.




3. Replace the bottom guide rail with the provided cord guide rail. When you pull out the guide rail, make sure the springs inside each hole remain inside.


Once that's out, put the cord guide rail in by tilting it towards you, preventing the

pins on the guide rail from rubbing against the circle dent on SmartShade - this could bend and damage the pins. Make sure the holes and the lines on the guide rail face the inside of SmartShade. Push it in until you hear a click on both sides. The guide rail should bounce when it's pushed down.

TIP: If at any time the guide rail gets stuck on the bottom and doesn't bounce up, you can manually push it up.

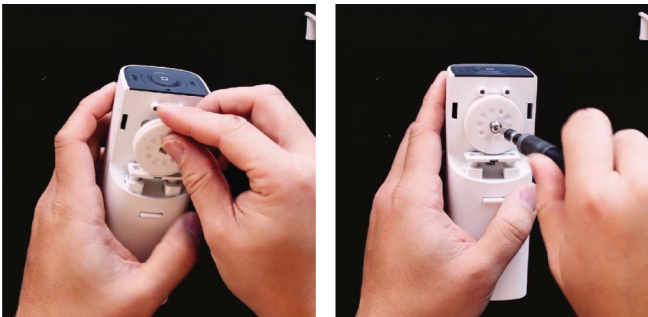


4. Screw in the cord wheel. Make sure the bumpy side is facing SmartShade.

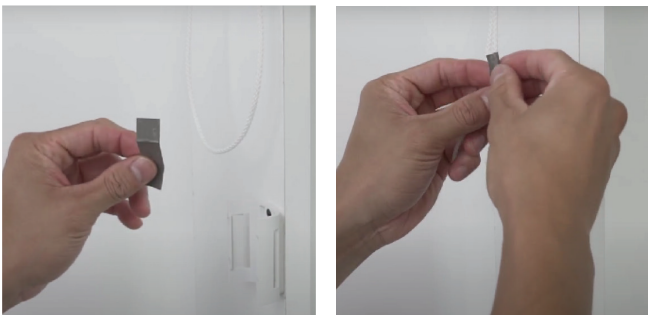


- 5 Take 3 out of the 4 tapes provided and wrap each tape onto your window shade's cord, ideally leaving 3ft distance apart between each tape. If your cord is too short, then 1ft apart will do. The last tape will be your back-up tape.

Most importantly, make sure you put your tape on the cord where it will be passing through your SmartShade. This is to prevent any drifting in the future.

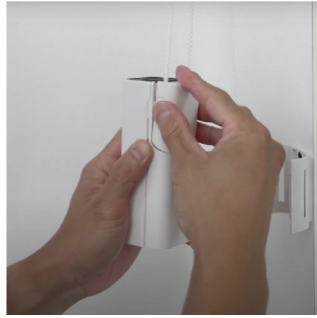

6. Wrap the cord loop around the cord wheel and close the cover. Make sure the cord is not twisted!

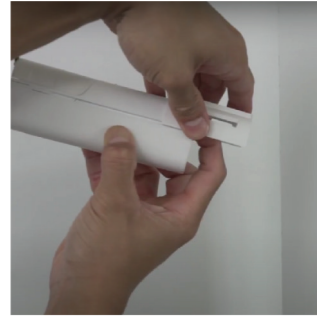

7. Insert SmartShade onto the bracket and slide the bracket up until you hear a couple of clicks.

TIP: Use the Release Button located at the bottom of SmartShade to readjust the bracket if necessary.




8. Let's mark where you will be screwing in the bracket. If you're planning on using the BatteryPack to power SmartShade, put the BatteryPack on. Place SmartShade onto where the chain or cord becomes taut, making sure your window shade wouldn't collide with it.


Take a pencil and lightly outline the top of the bracket. Keep in mind, if you are planning on using the BatteryPack to power SmartShade, it will need extra space on the bottom for it.



9. Take SmartShade off the bracket by pressing on the release button on the bottom of SmartShade and sliding the SmartShade up.

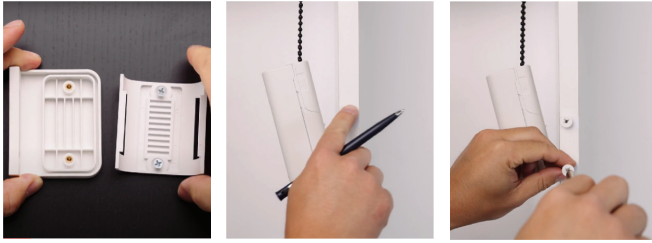


- 10.** Unscrew the inside bracket from the outside bracket. Use the guide you made to position the outside bracket and make a mark where the two holes are. Use these marks to screw in the anchors.

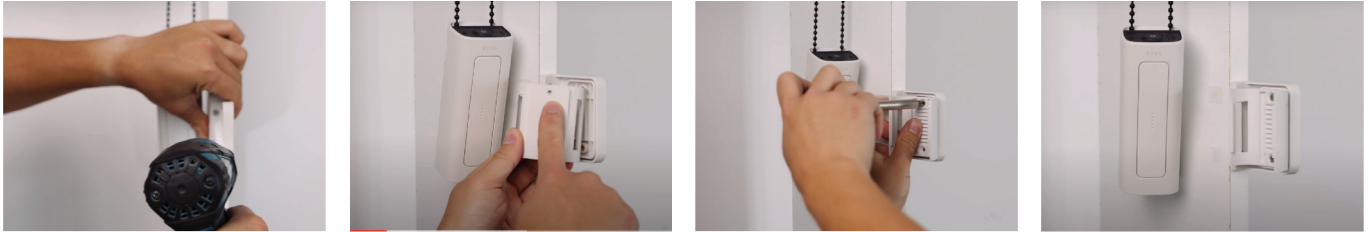

- 11.** Screw the outside bracket on the wall. Reattach the inside bracket by screwing it onto the outside bracket, making sure it's facing the right orientation.

TIP: There is a "FACE UP" indicator on the back of the inside bracket.

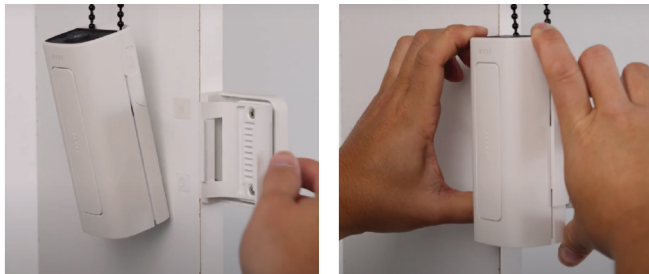


- 12.** Place SmartShade onto the bracket and push it down until fully taut.



OR

- 13.** Connect the power adapter to SmartShade from the bottom and plug it in OR Connect the BatteryPack to the bottom of SmartShade.

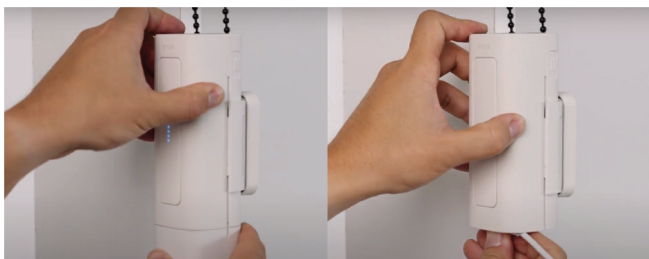


- 14.** Now you're ready to add this SmartShade to the RYSE app!



Configuring the Top and Bottom Shade Positions

Please ensure the SmartShade is properly mounted and attached to your window shade's beaded chain/cord loop.

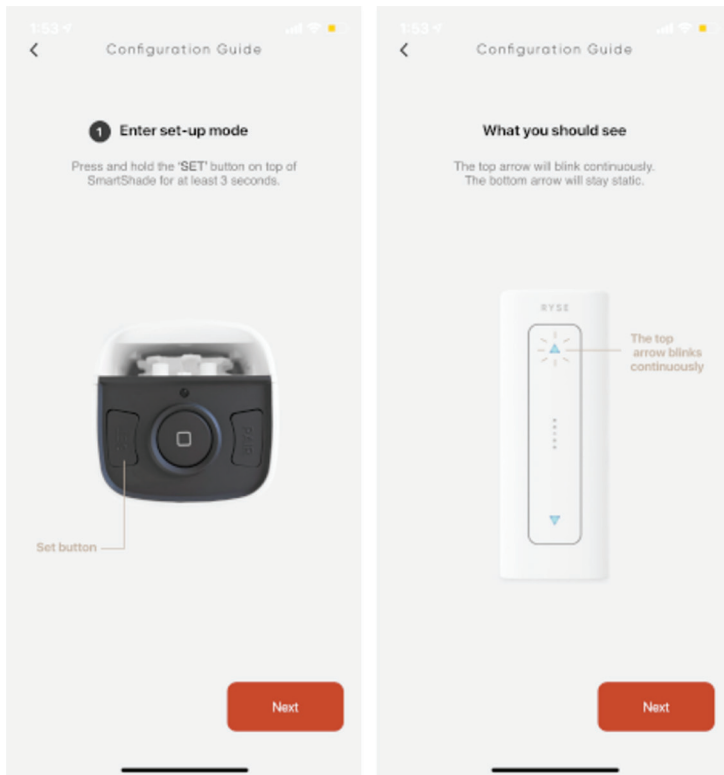


1. Press and hold the **"SET"** button on top of the SmartShade for at least 3 seconds. The top arrow on your SmartShade will blink continuously while the bottom arrow will stay solid blue.



2. Press the top arrow to move your shade a little. If the shade is **opening**, then go to Step 3.

If your window shade is **closing**, press and hold **"PAIR"** on top of the SmartShade for 3 seconds. This will reverse directions. Try pressing the top arrow again on the SmartShade and this time your window shade will open.

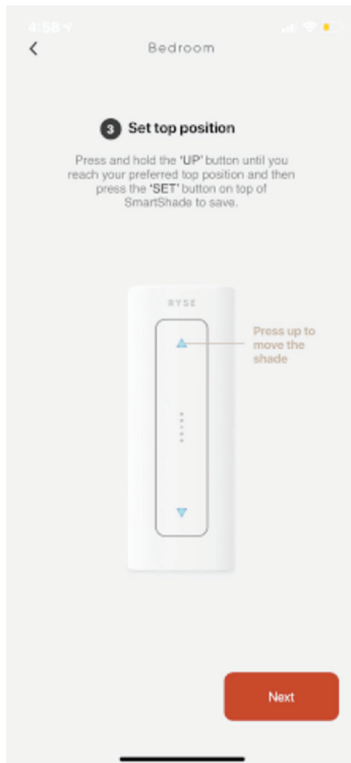

3. **Set Top Position:** Press and hold the **"Top Arrow"** button until you reach your preferred top position and then press the **"SET"** button on top of the SmartShade to save. The bottom arrow will blink continuously while the top arrow will now become a solid blue.




4. **Set Bottom Position:** Press and hold the **"Bottom Arrow"** button until you reach your preferred bottom position and then press the **"SET"** button on top of the SmartShade to save. Both the top and bottom arrows will now be a solid blue.




Pairing SmartShade to the App via Bluetooth


Bluetooth and Location Services must be turned on, as the app requires access to these features in order to operate. The SmartShade should already be installed onto your window frame/shade. If you have a SmartBridge, please follow instructions on page 37 instead.

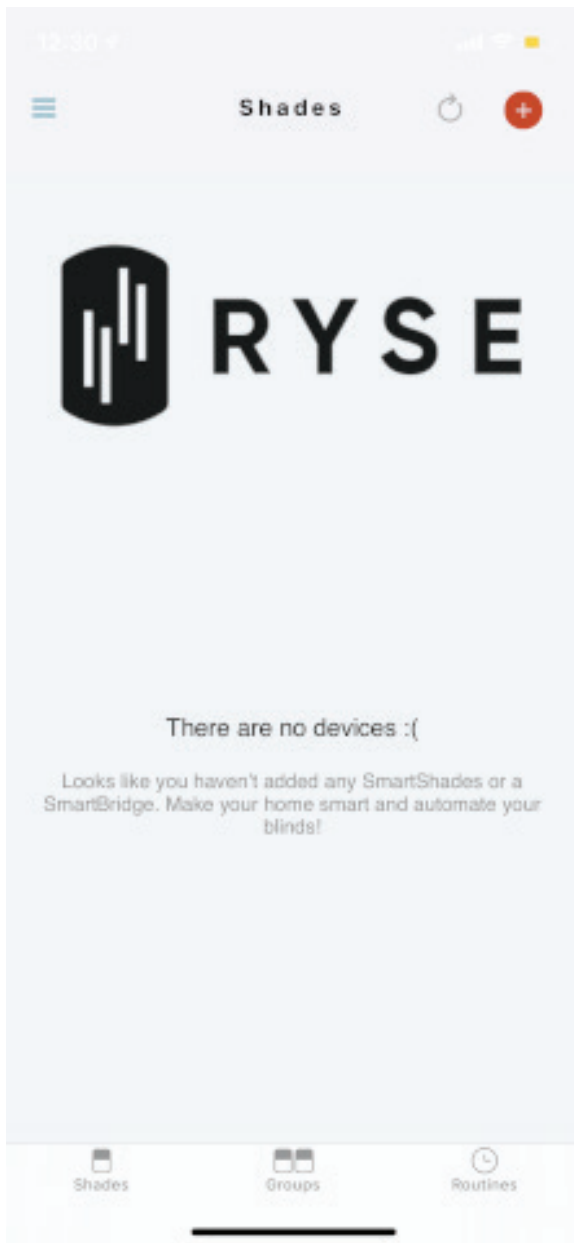


1. Tap the red plus icon the on the top right of the screen.

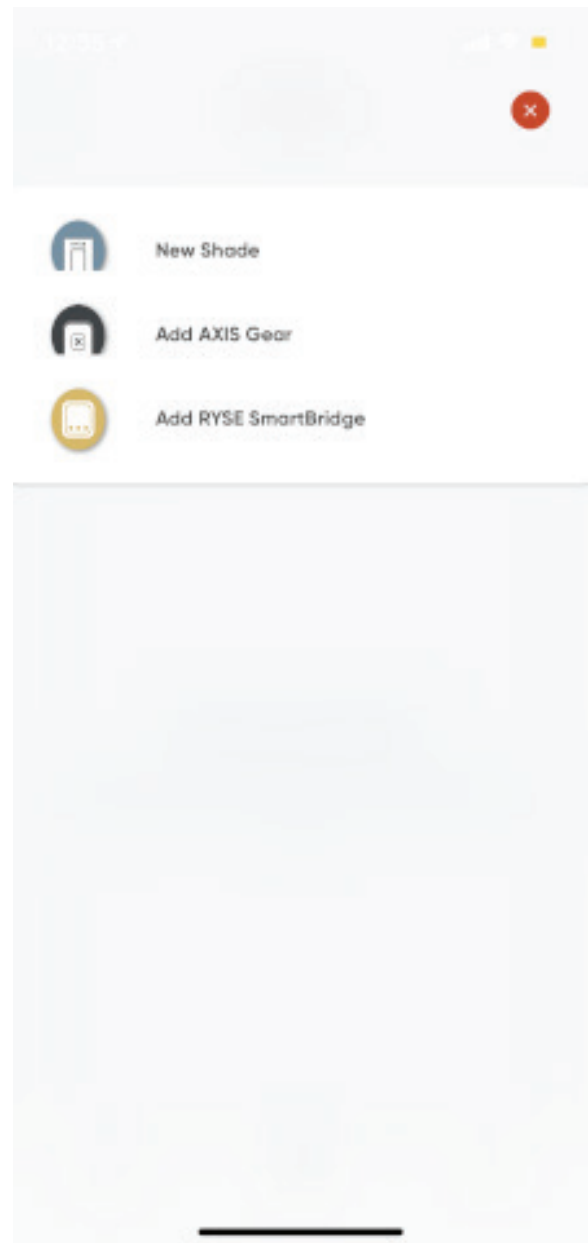

2. Select "New Shade" from the list.

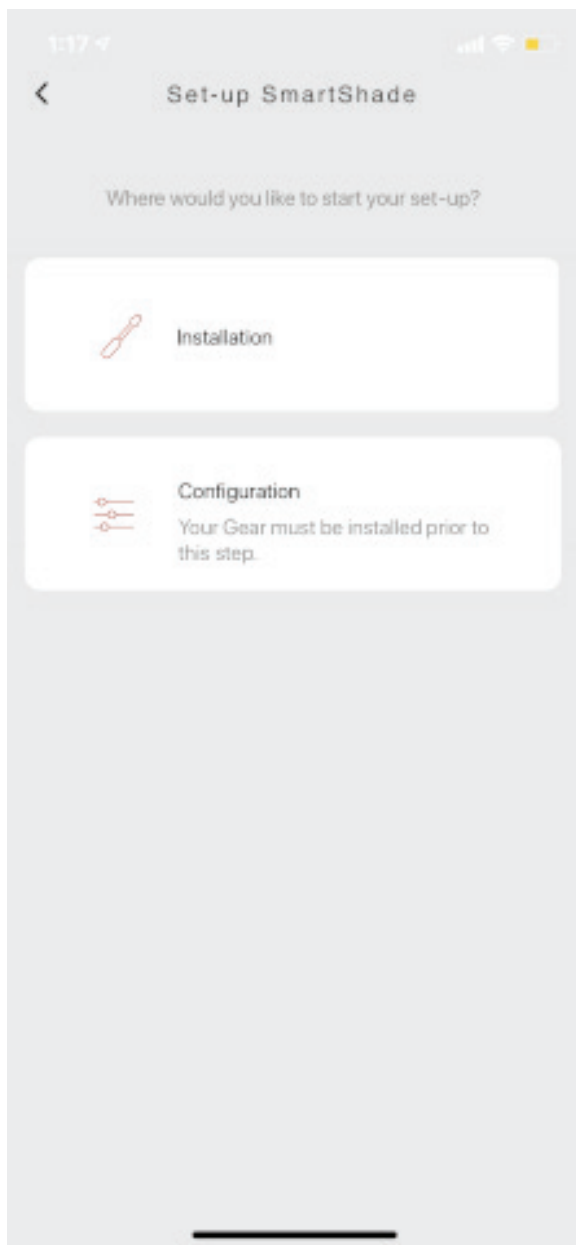


3. Select "Configuration".

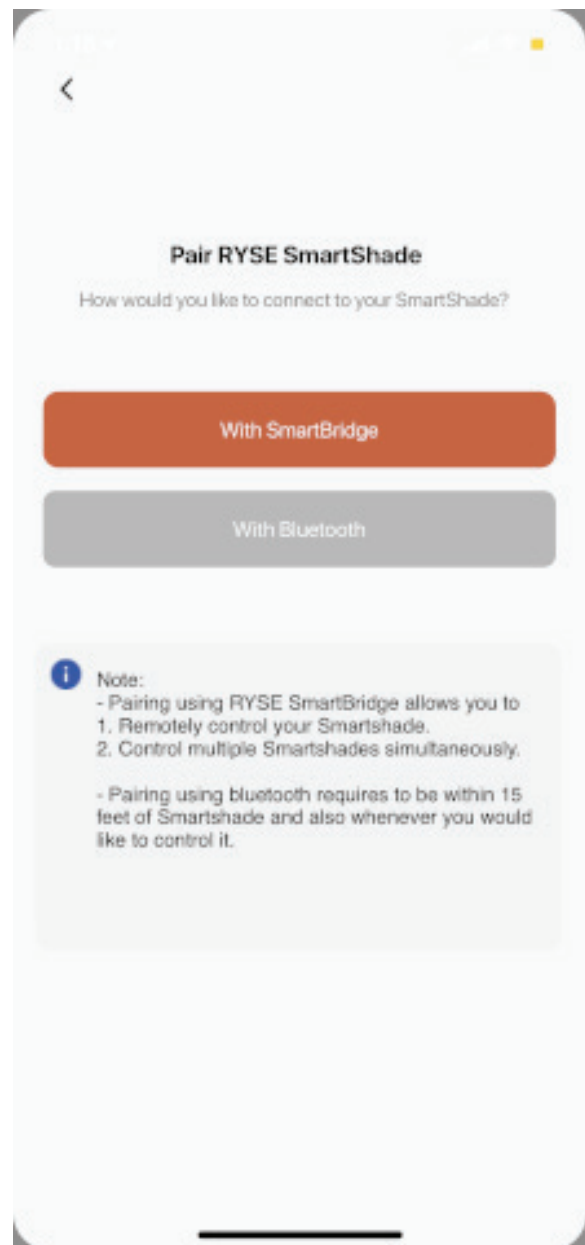


4. Select "With Bluetooth".




5. Press the Pair button on the SmartShade. Your phone will begin scanning for available SmartShades. Then, tap "Next".

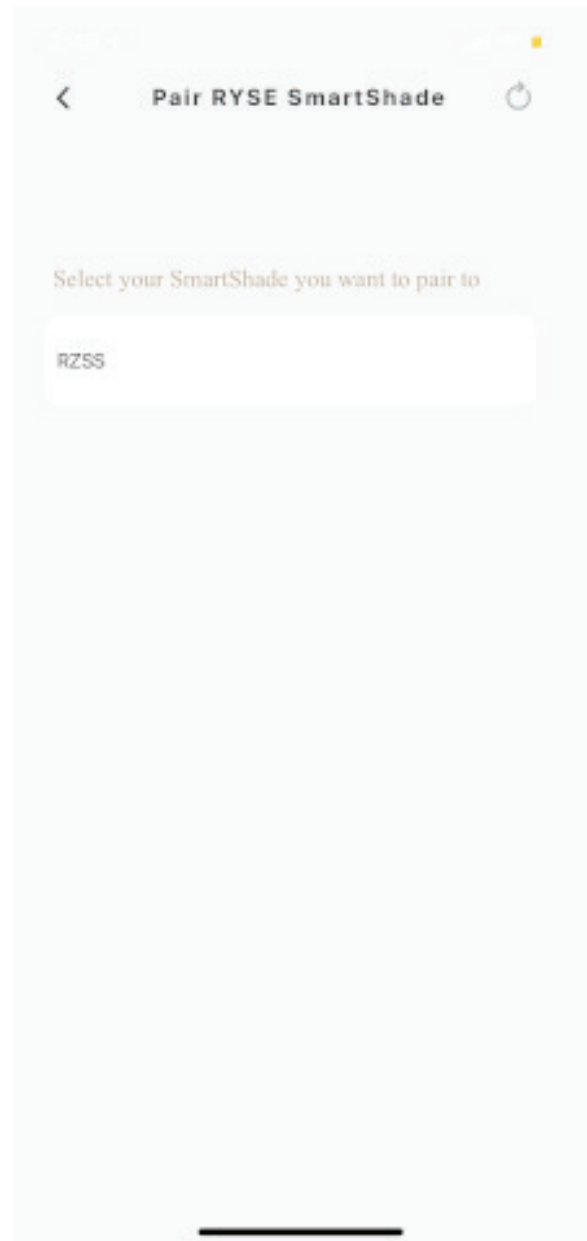

6. Select the SmartShade from the list you would like to pair with. If you do not see any SmartShades, please tap the Refresh button on the top right of the screen.

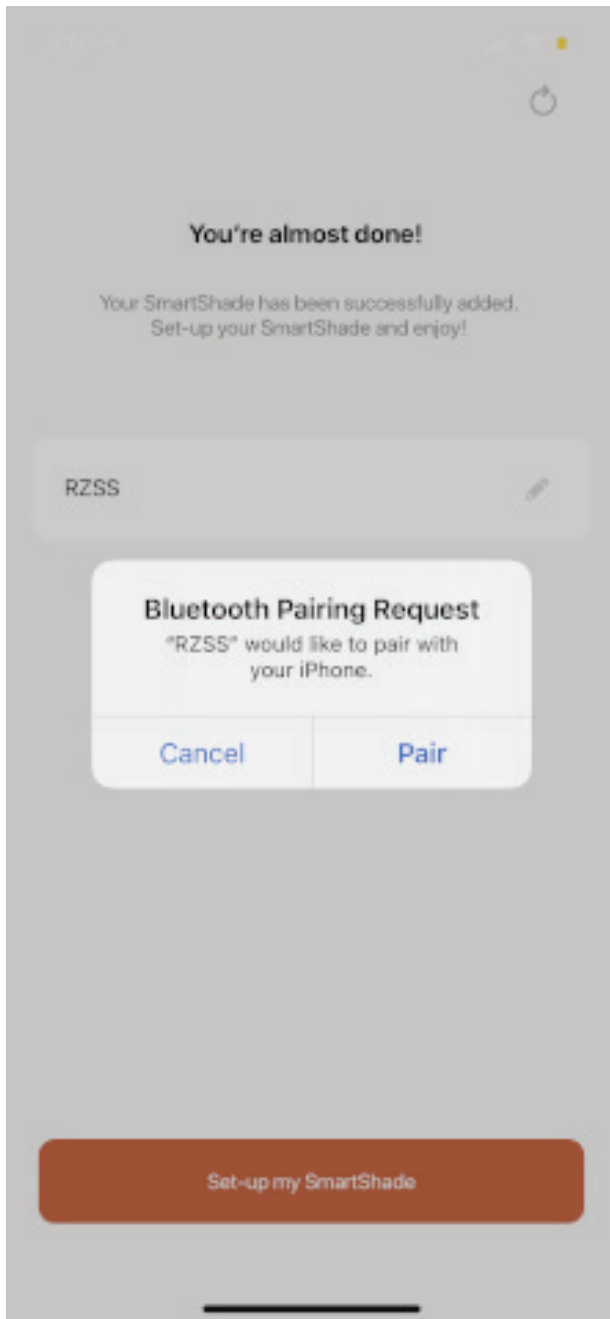

7. For iOS users, you will see a pairing request pop-up. Tap "Pair".

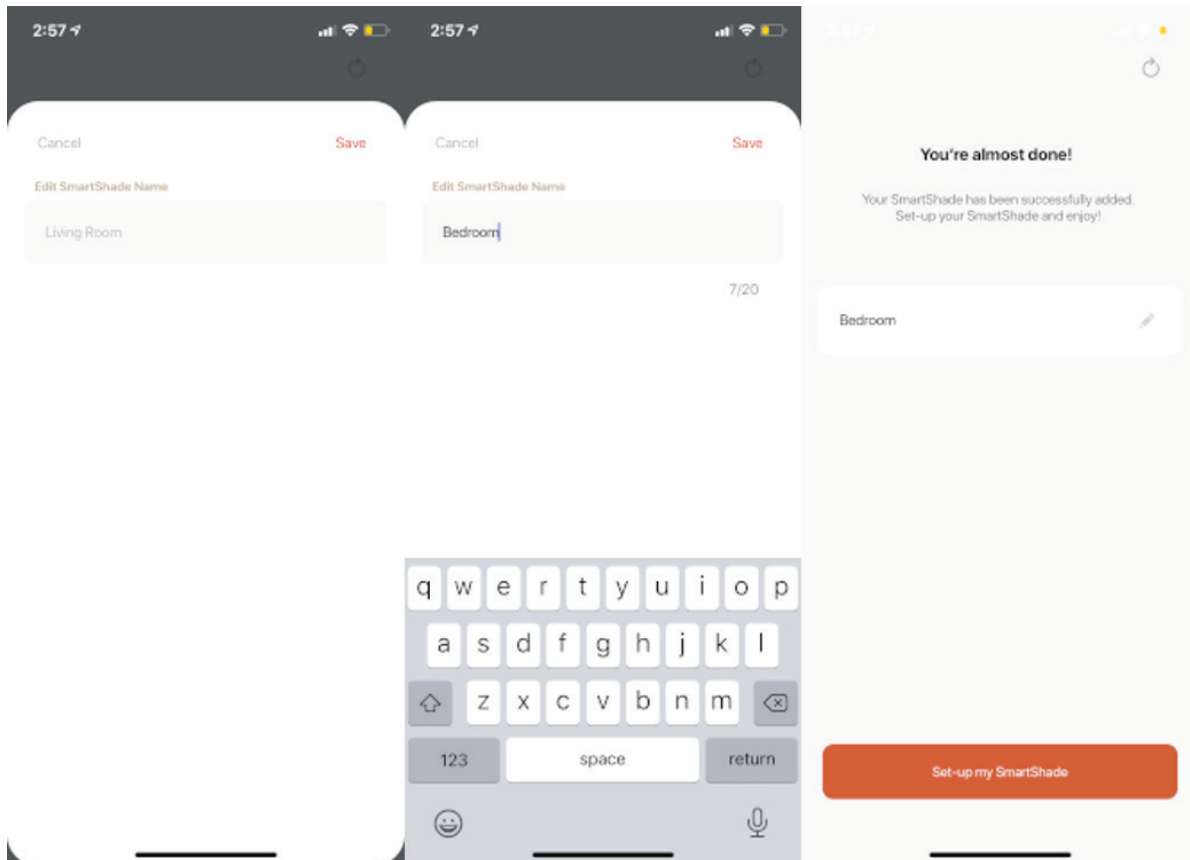

8. Tap the pencil icon if you would like to change the name of your SmartShade, then tap Save.

Tap "Set-up my Smartshade".



9. The next few screens will walk you through how to set the top and bottom positions for your SmartShade. See instructions [here](#).



10. Tap "Done" when you have successfully configured your shade positions.




11. You should now see the newly added SmartShade on your dashboard. You have successfully paired SmartShade to the app!


Pairing SmartBridge to the App




The SmartBridge must be connected via Ethernet to your router/modem and should be powered on. Please ensure all three (3) lights on the SmartBridge must be solid blue prior to proceeding. The WiFi must be toggled on your phone.

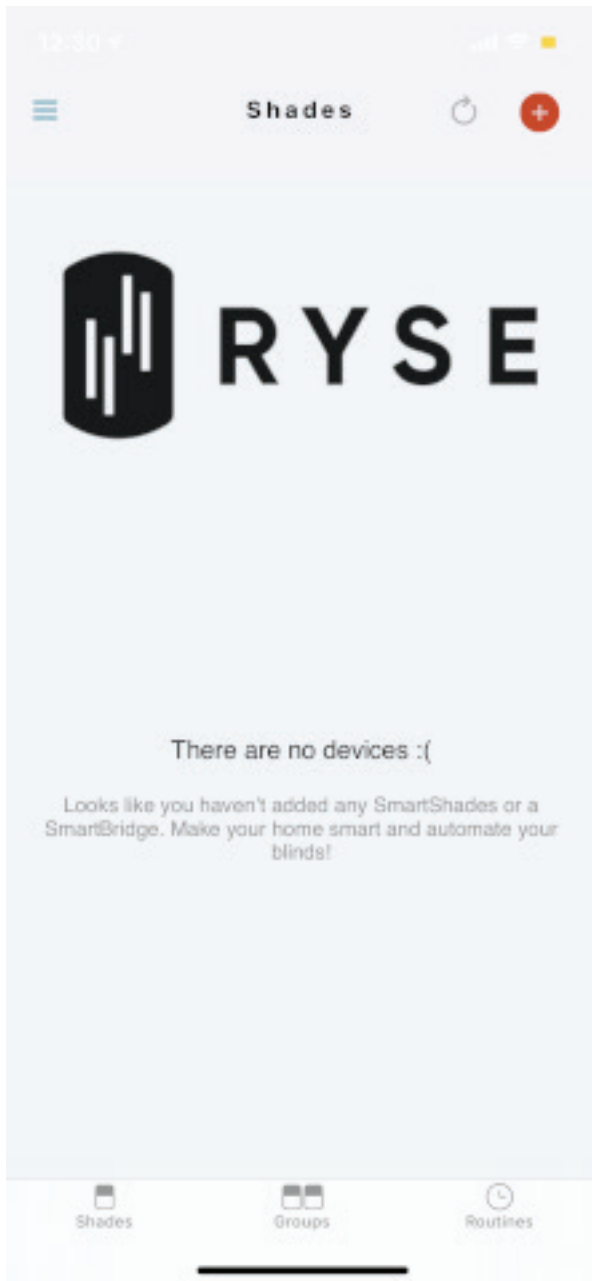


1. Tap the red plus icon on the top right of the screen.

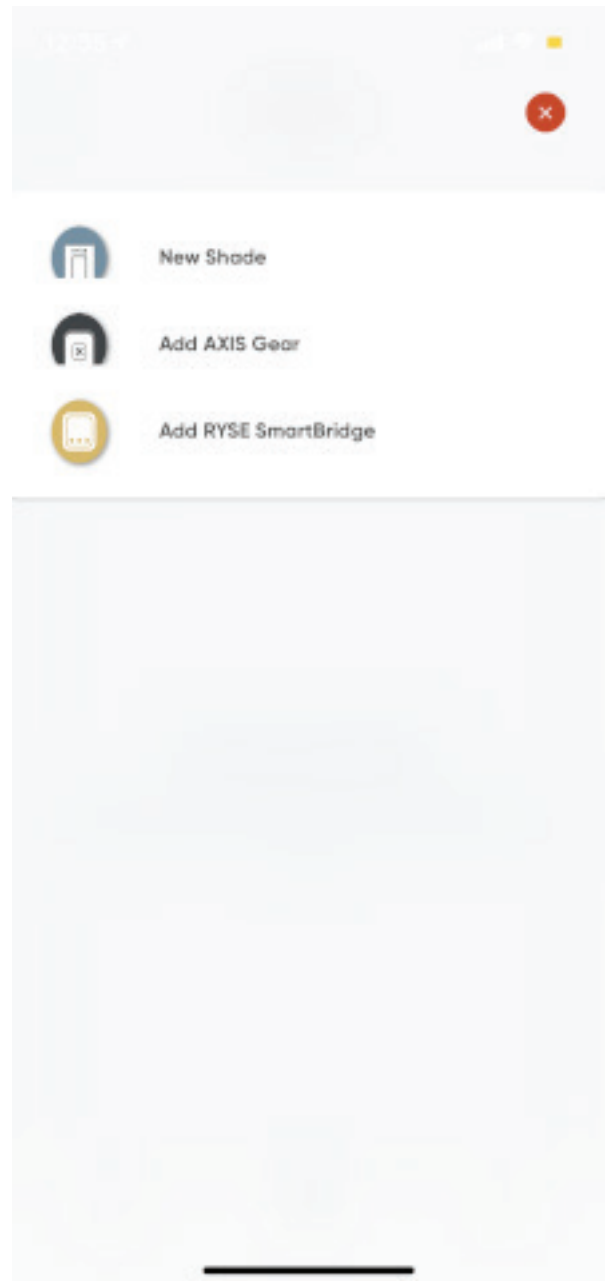


2. Select "Add RYSE SmartBridge" from the list.

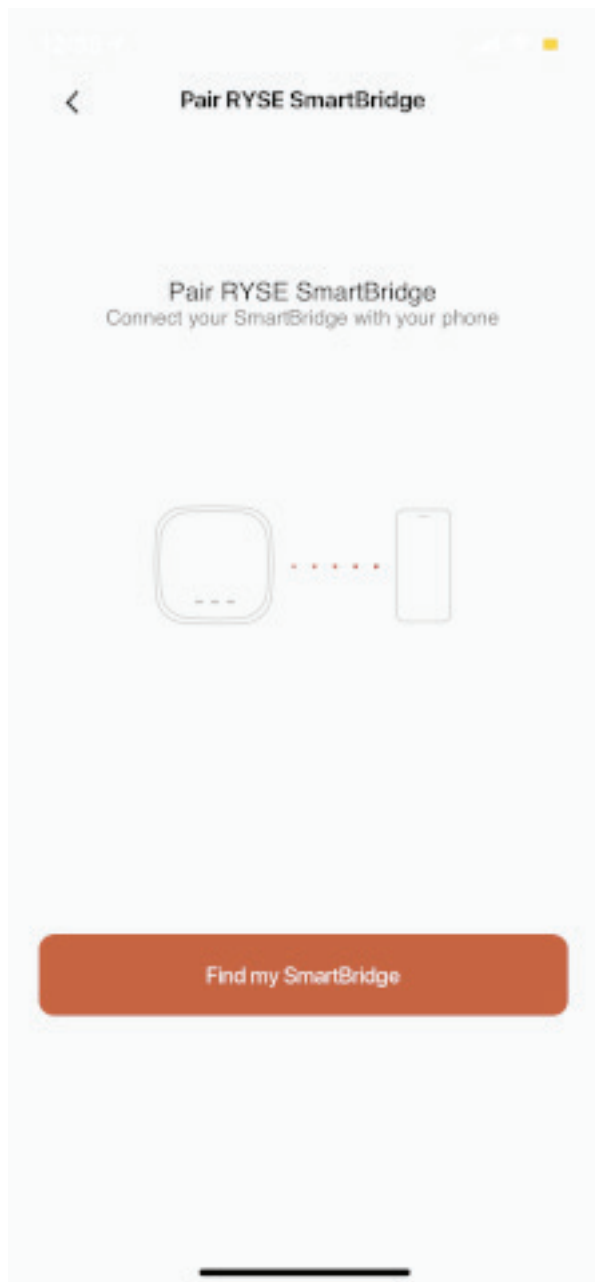


3. Tap "Find my SmartBridge" from this screen.

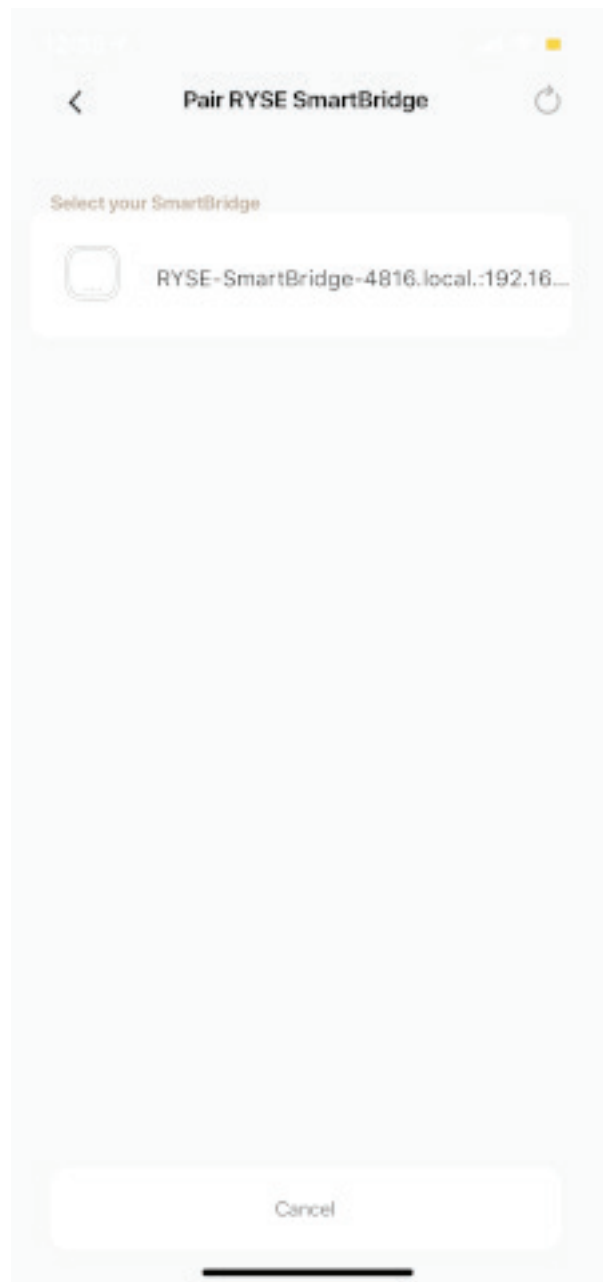


4. Select the SmartBridge you would like to add from the list by tapping it.

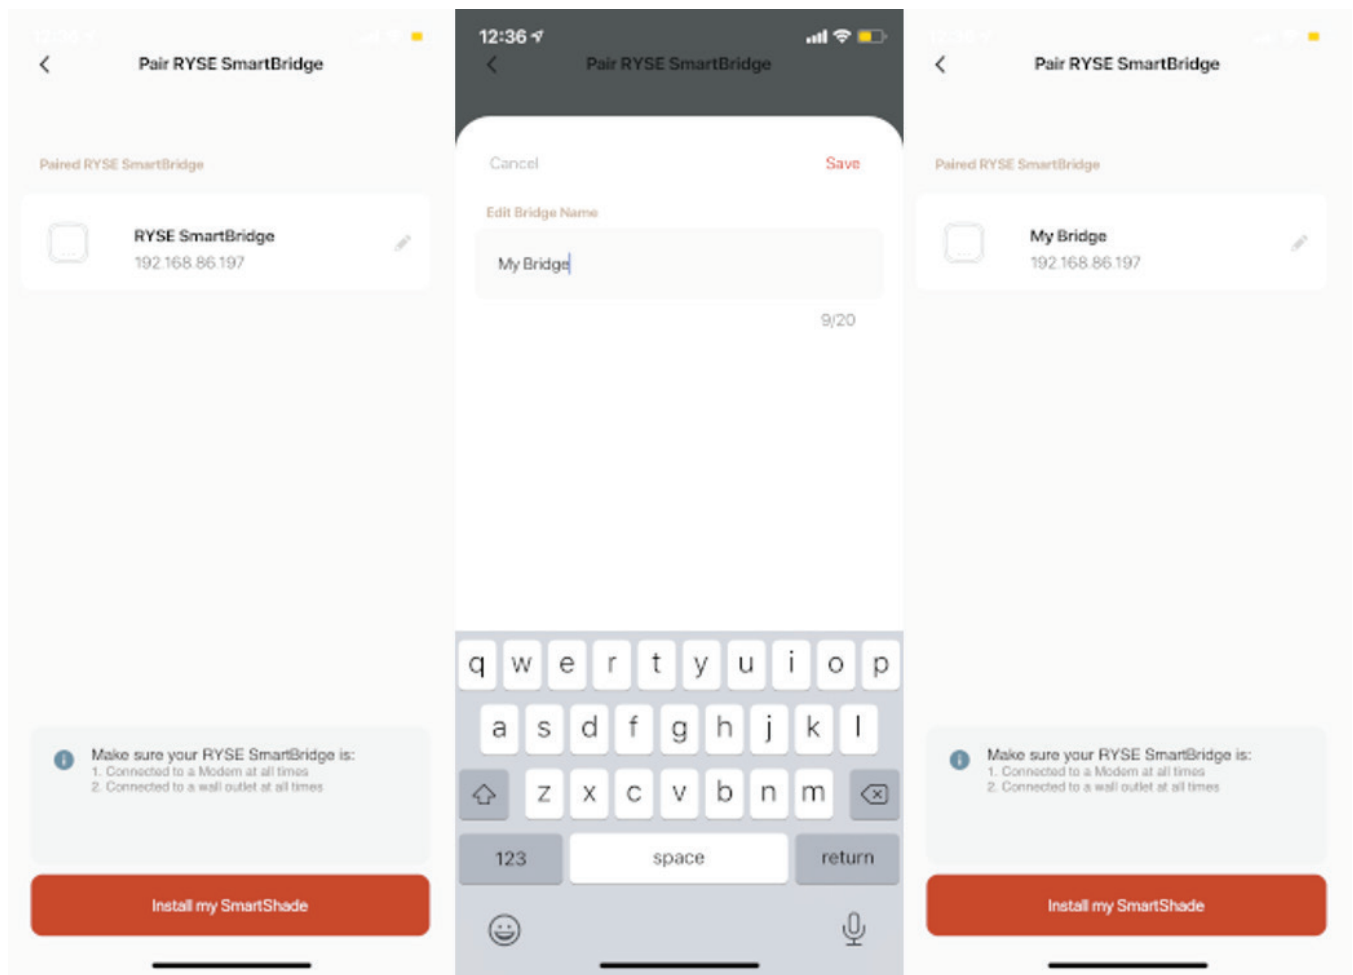


5. Rename your SmartBridge if you would like by tapping the pencil icon.

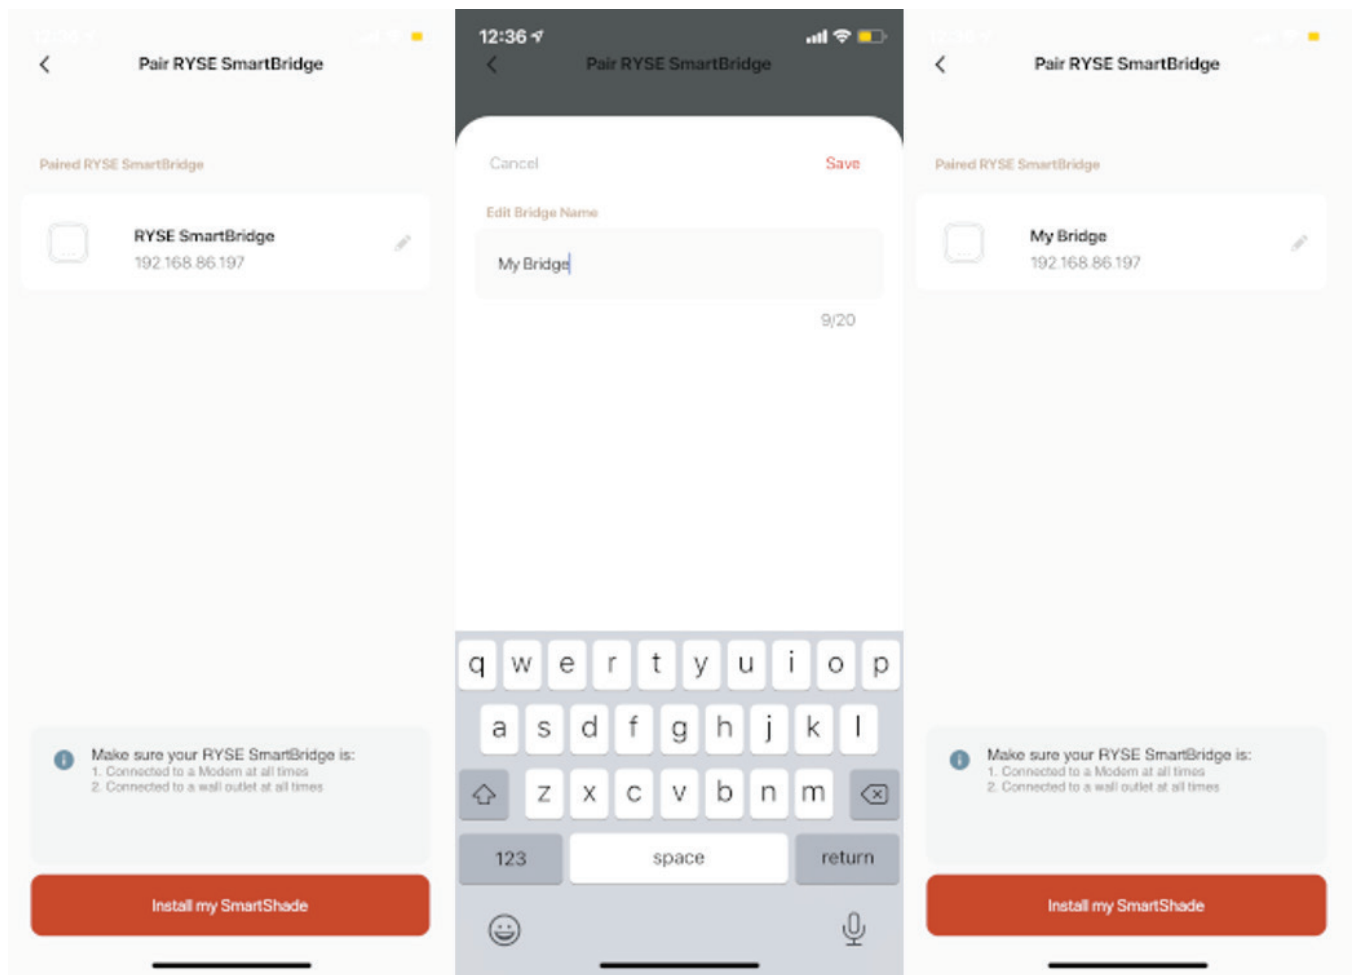


6. Tap "Set Bridge Time Zone". Select your time zone from the list. Then tape "Save".

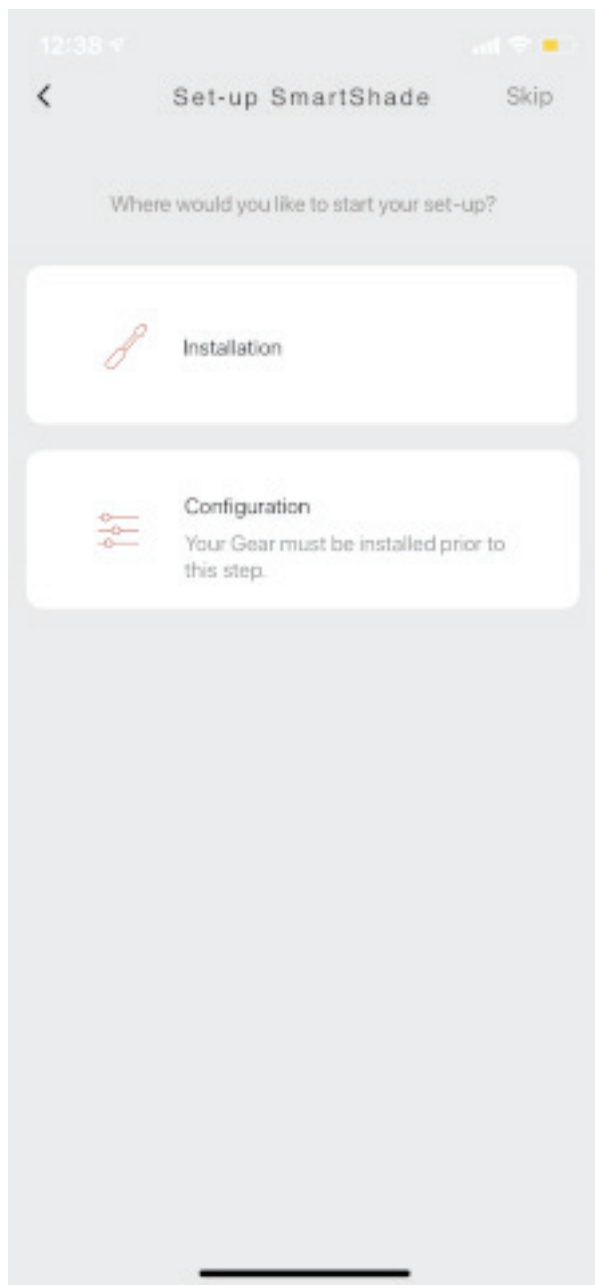

7. Tap "Install my SmartShade". This will register the bridge to your account.
8. You can proceed to setting up your SmartShades or tap Skip.

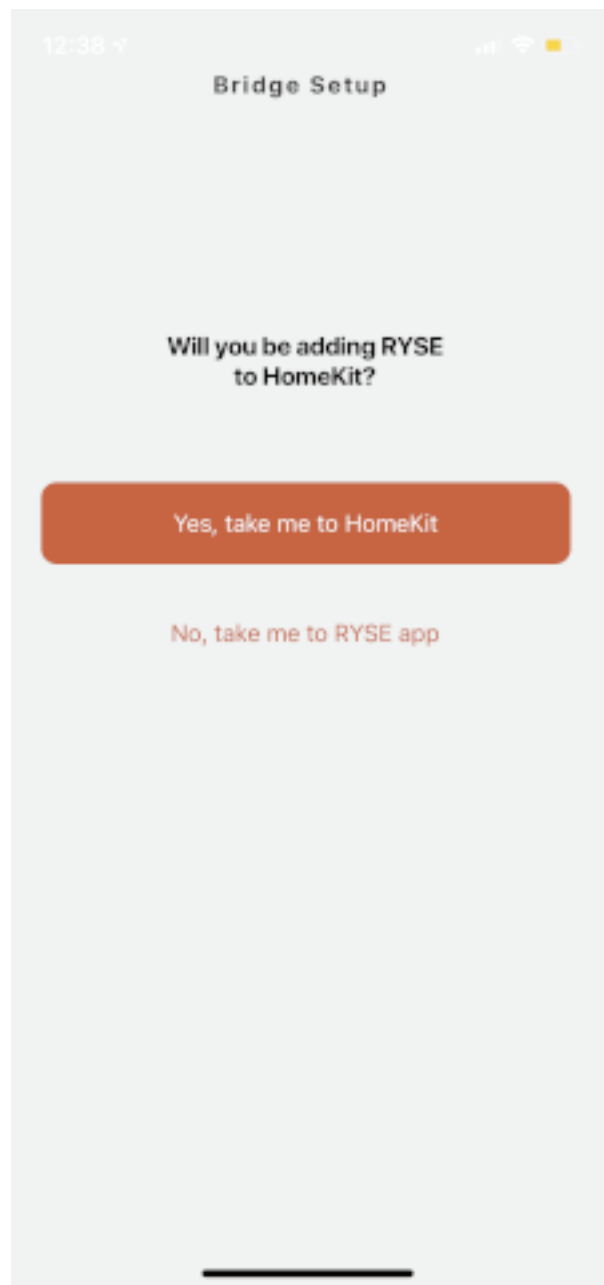

9. You also have an option to add this SmartBridge to HomeKit at this point (iOS only), or tap "No, take me to RYSE app" to go back to your dashboard.

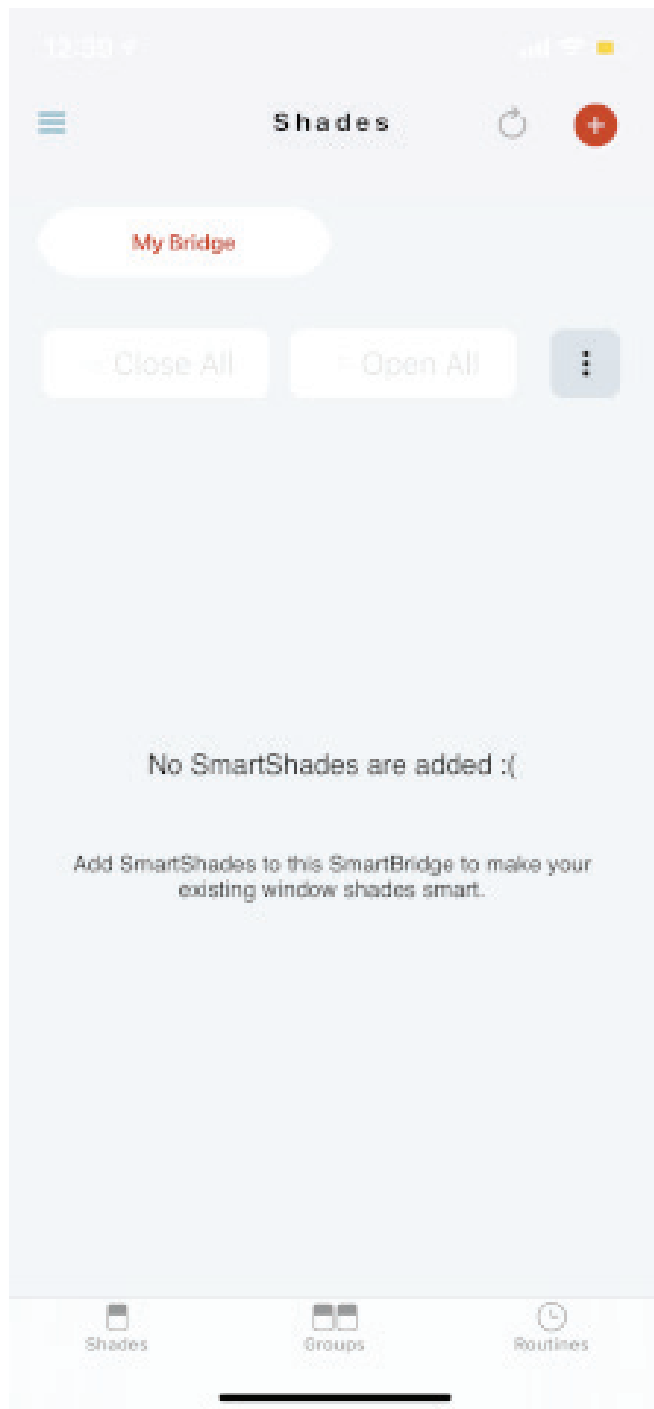


10. You will now see the SmartBridge added to your dashboard.




Pairing SmartShade to the App with SmartBridge


The SmartBridge must be already paired to the app. See Page 88 for instructions. The SmartShade should already be installed onto your window frame/shade.

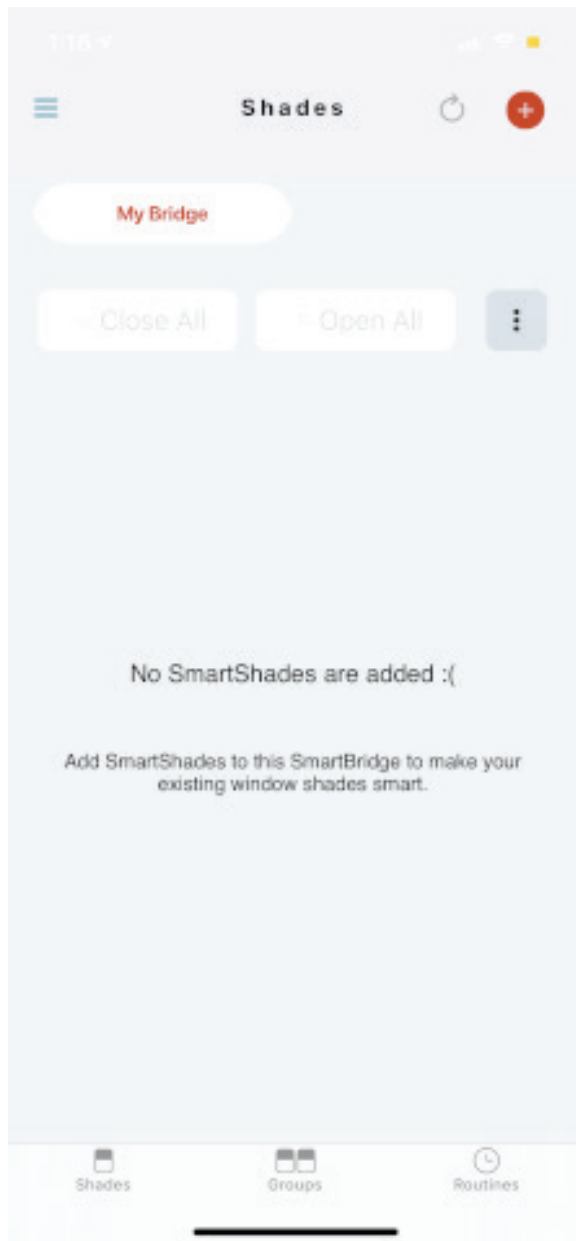


1. Tap the red plus icon the on the top right of the screen.

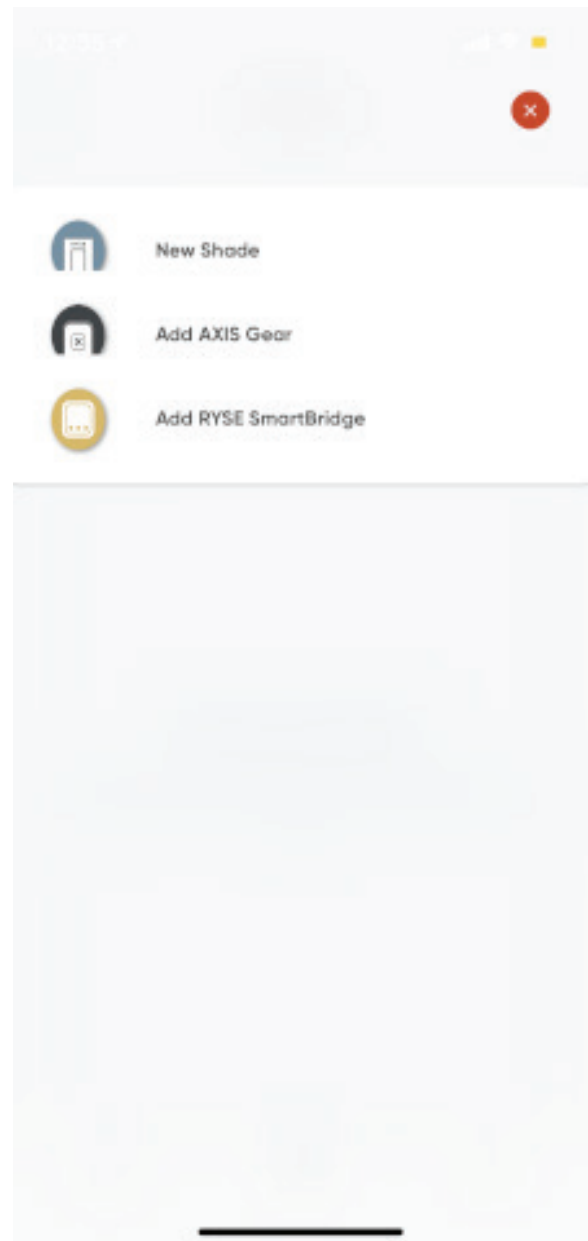


2. Select "New Shade" from the list.

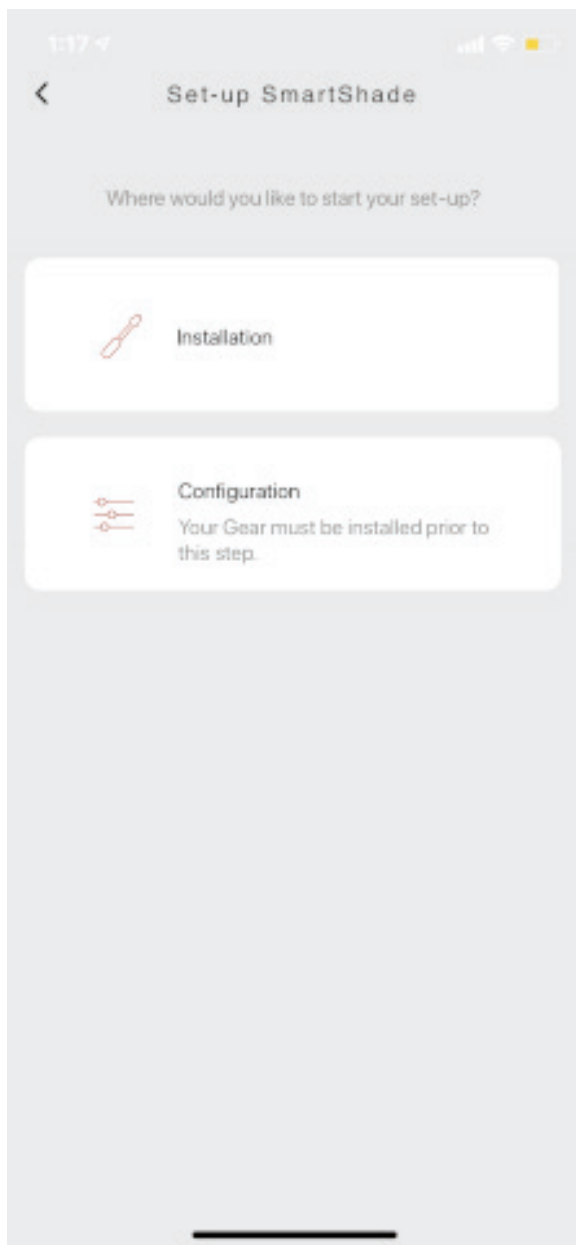

3. Select "Configuration".

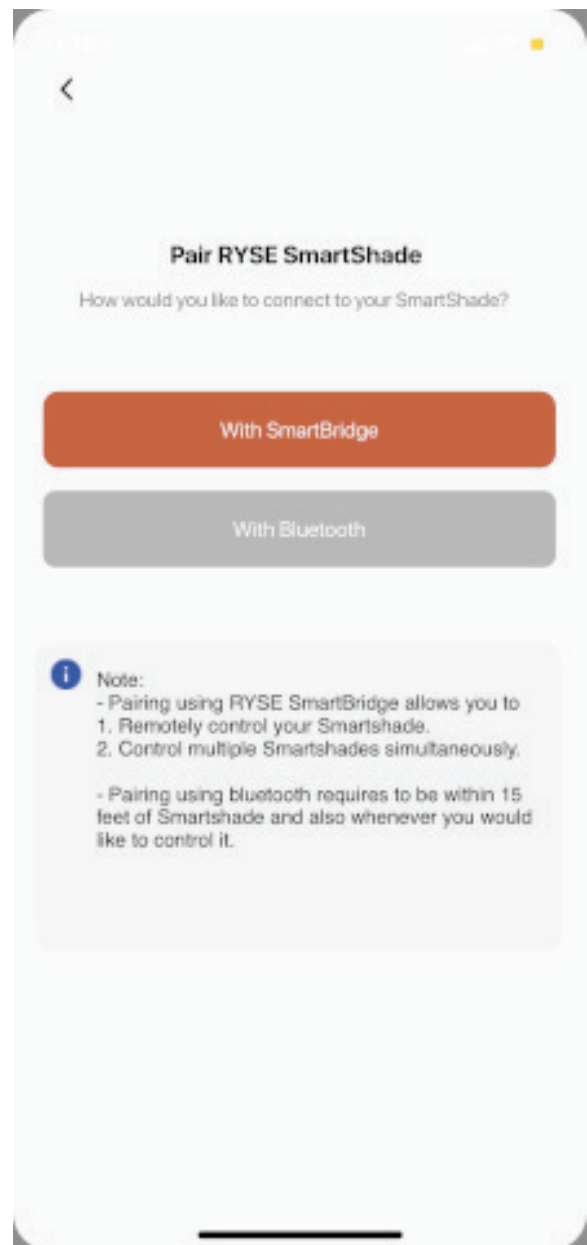


4. Select "With SmartBridge".

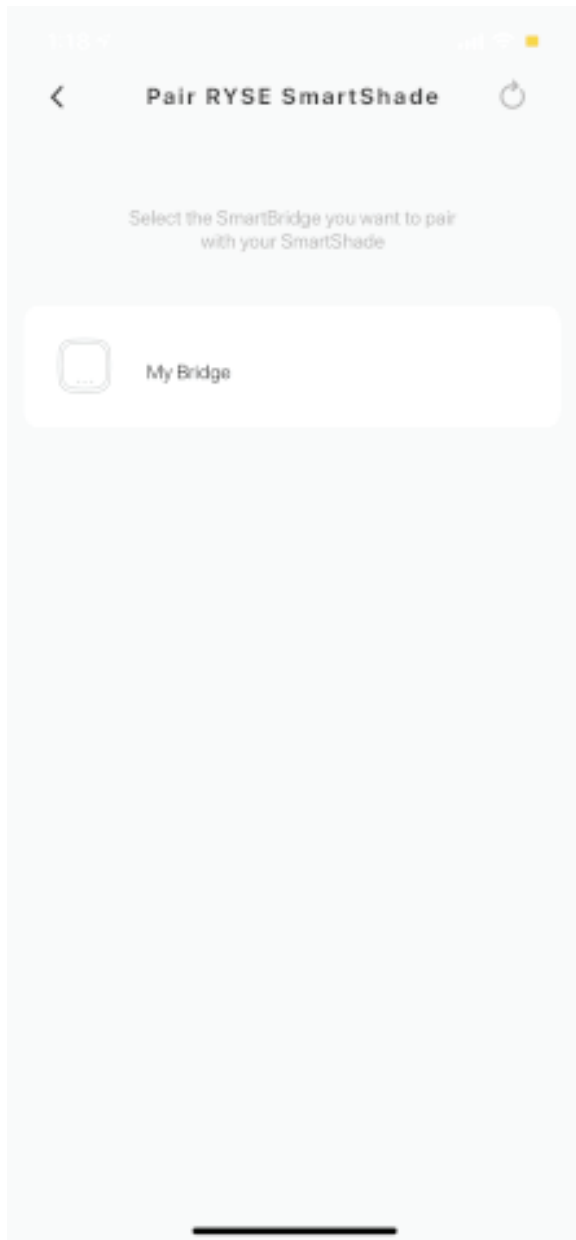

5. Select the SmartBridge you would like to pair the SmartShade with.



6. Press the **Pair** button on the SmartShade. The SmartBridge will begin scanning for SmartShades and then automatically connect.

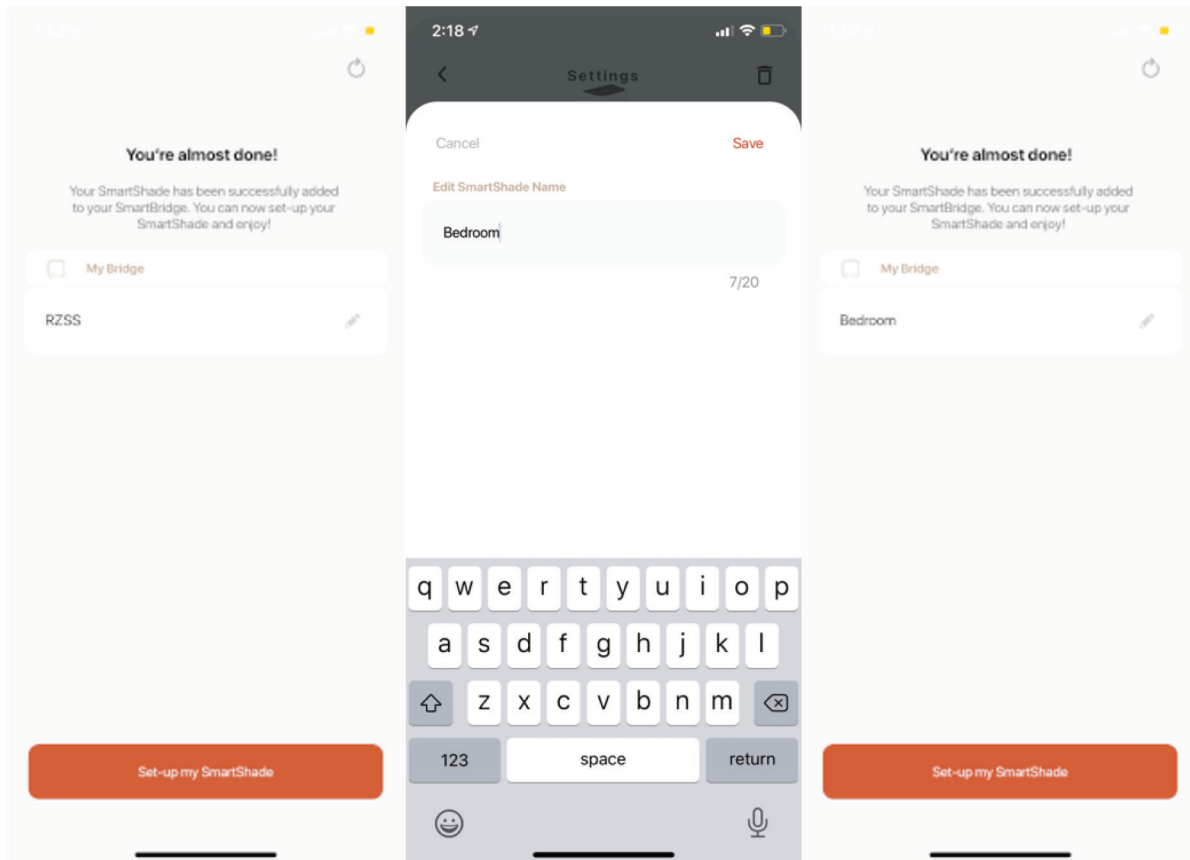

7. This screen indicates that your SmartBridge has successfully connected with this SmartShade. You now have the opportunity to rename this shade. You can do so by tapping the Pencil icon, entering the desired name, and tapping Save.


Tap "Set-up my SmartShade".



8. The next few screens will walk you through how to set the top and bottom positions for your SmartShade. See instructions [here](#).




9. Tap "Done" when you have successfully configured your shade positions.

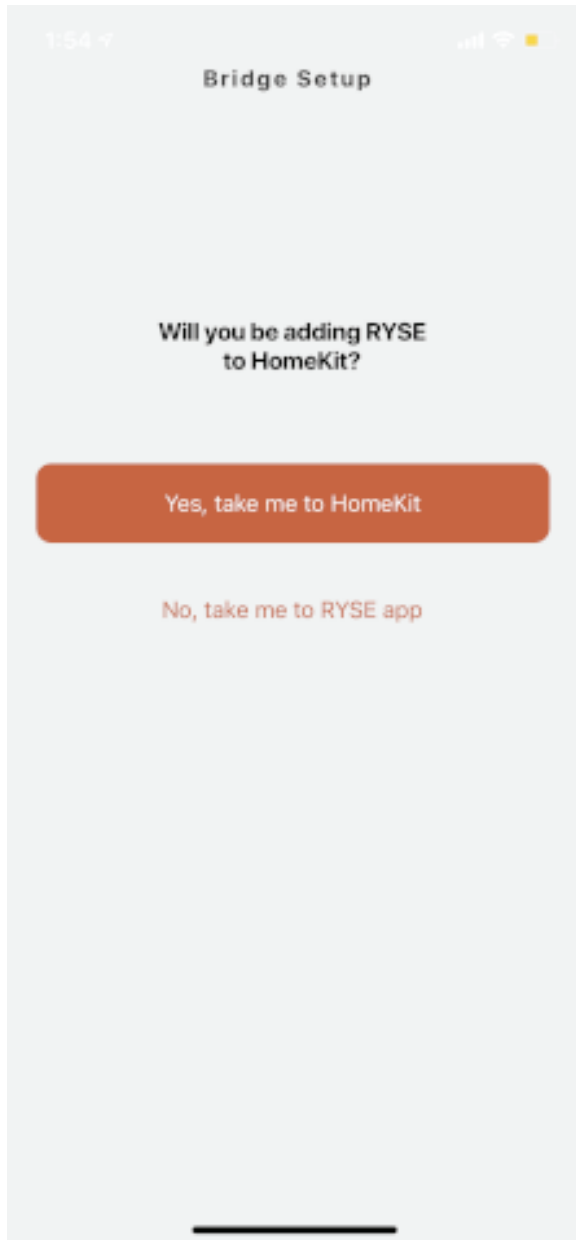

- 10.** If you haven't already added your SmartBridge to HomeKit (iOS only), you will be presented with the below screen.

Select "No, take me to RYSE app" if you would like to skip this.

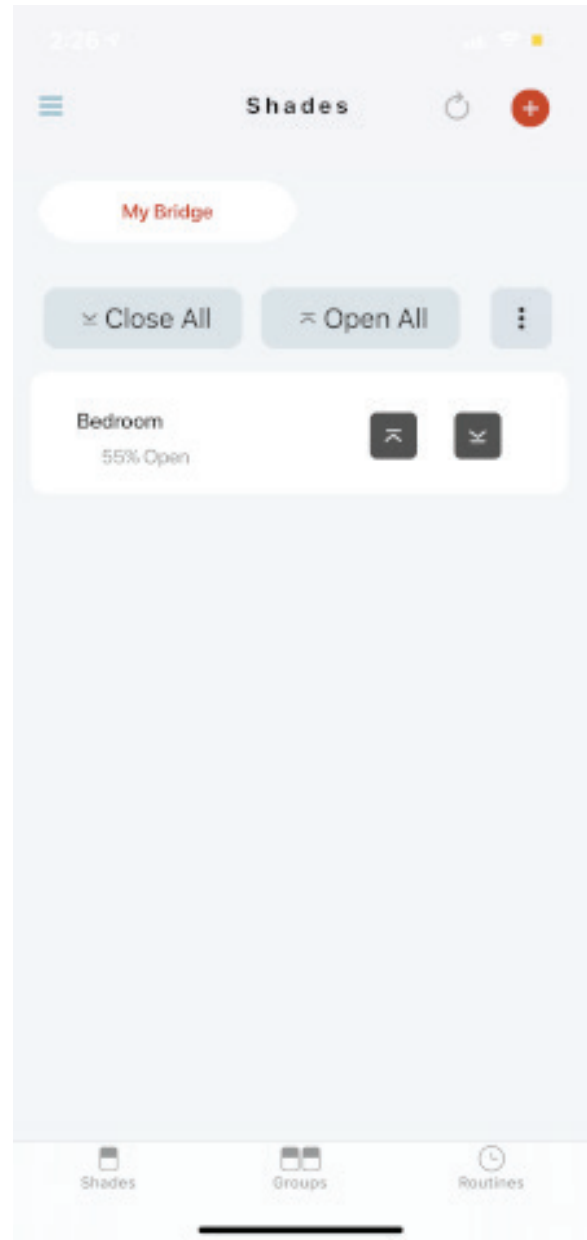

- 11.** You should now see the newly added SmartShade on your dashboard. You have successfully paired SmartShade to the app!



Create a Group of Shades


You can group together up to 10 SmartShades and control them all simultaneously. Please note that you can only group together SmartShades that are on the same SmartBridge.

Note: Group creation requires a SmartBridge.


To group multiple SmartShades together, follow these steps:




1. From the main dashboard, tap Groups icon at the bottom of the screen.

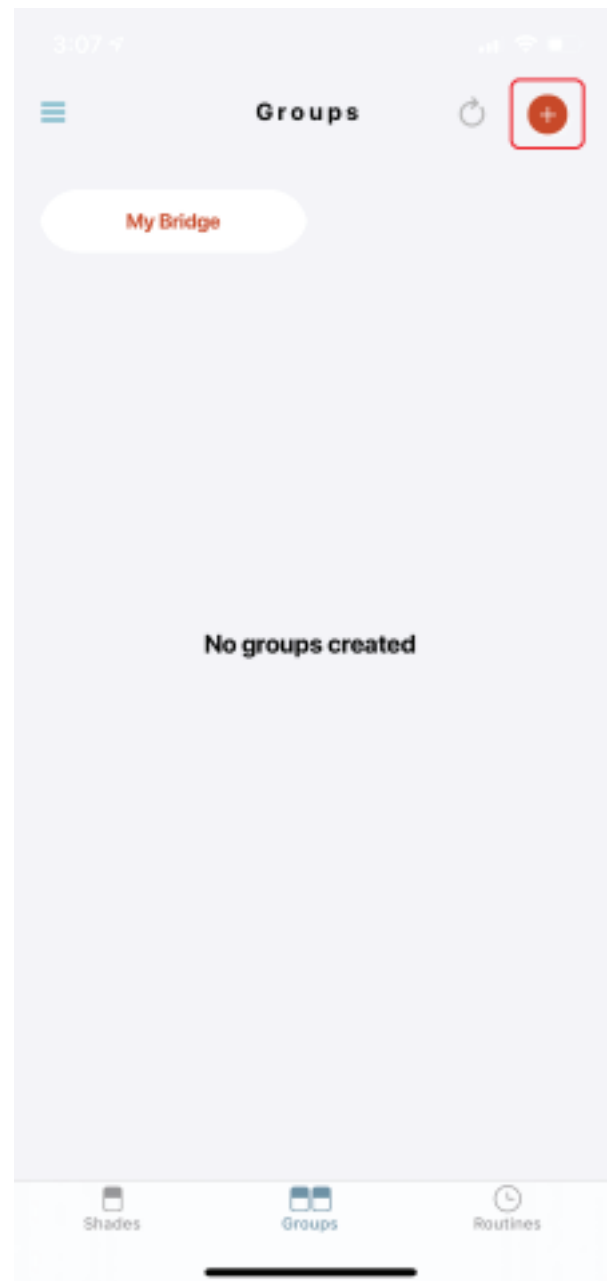


2. Tap the plus icon on the top right of the screen.

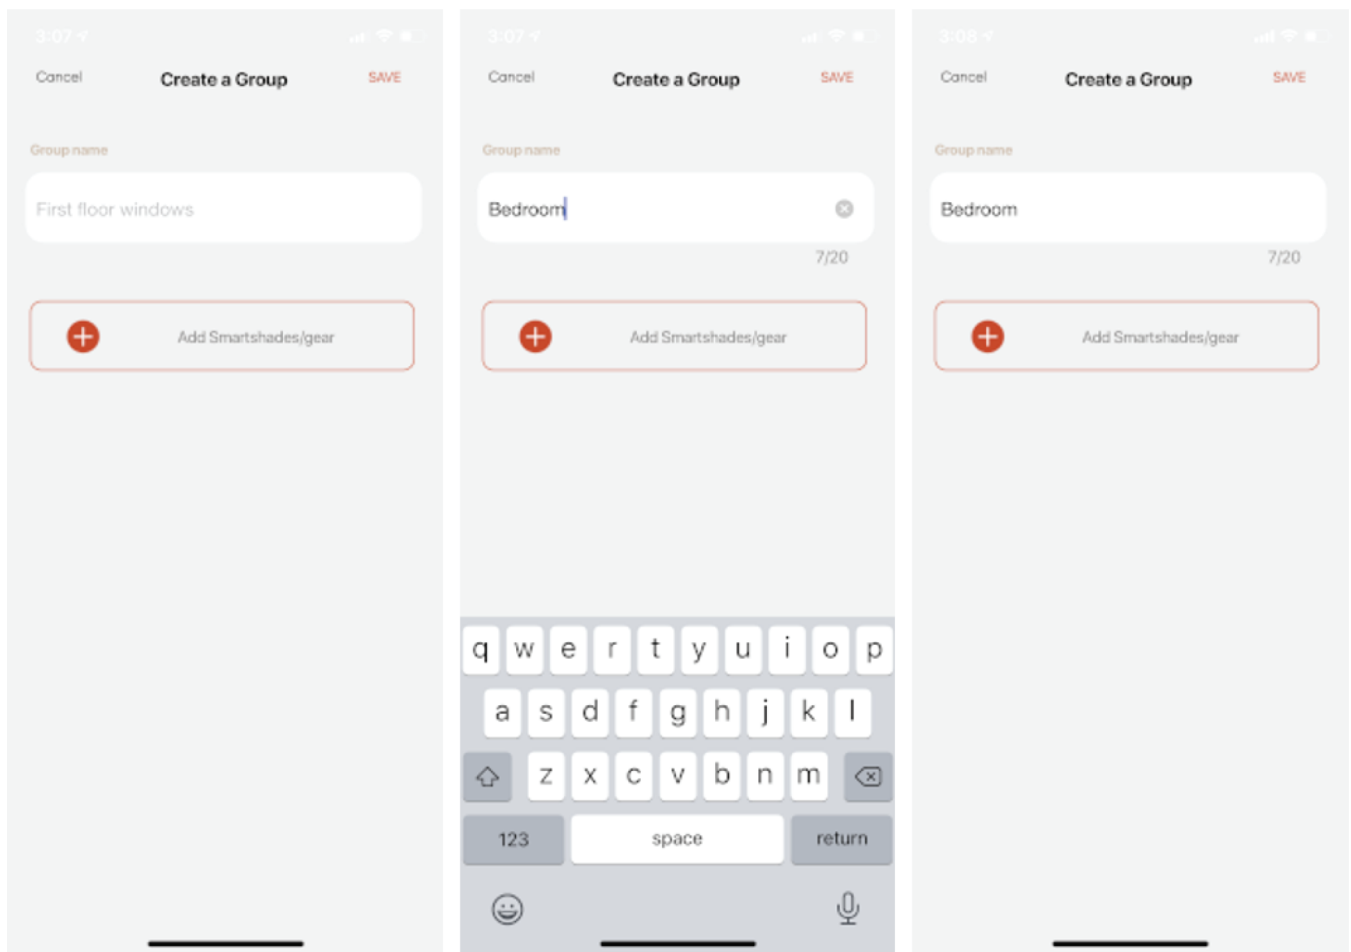


3. Start with naming the Group.

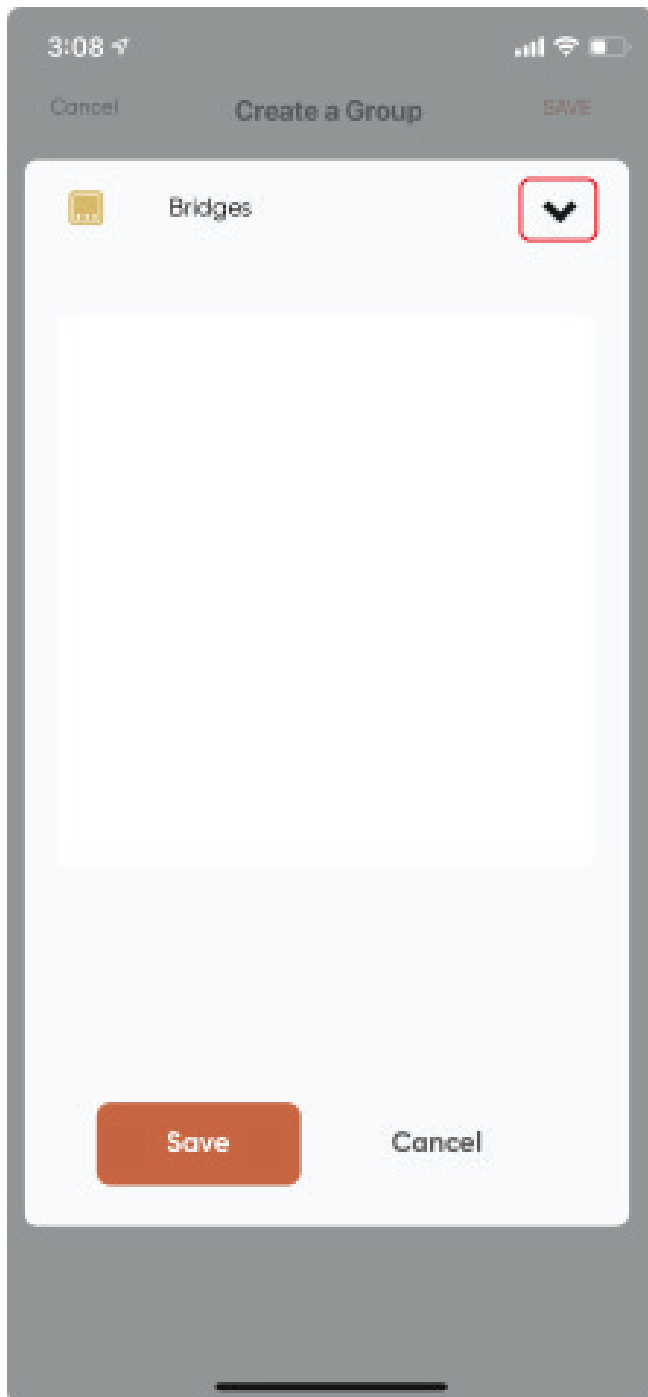


4. Tap the Plus icon next to "Add Smartshades / gear".
5. Tap the down arrow to select the SmartBridge under which the SmartShades that you are looking to group are assigned. In most cases, there's only 1 SmartBridge per household.

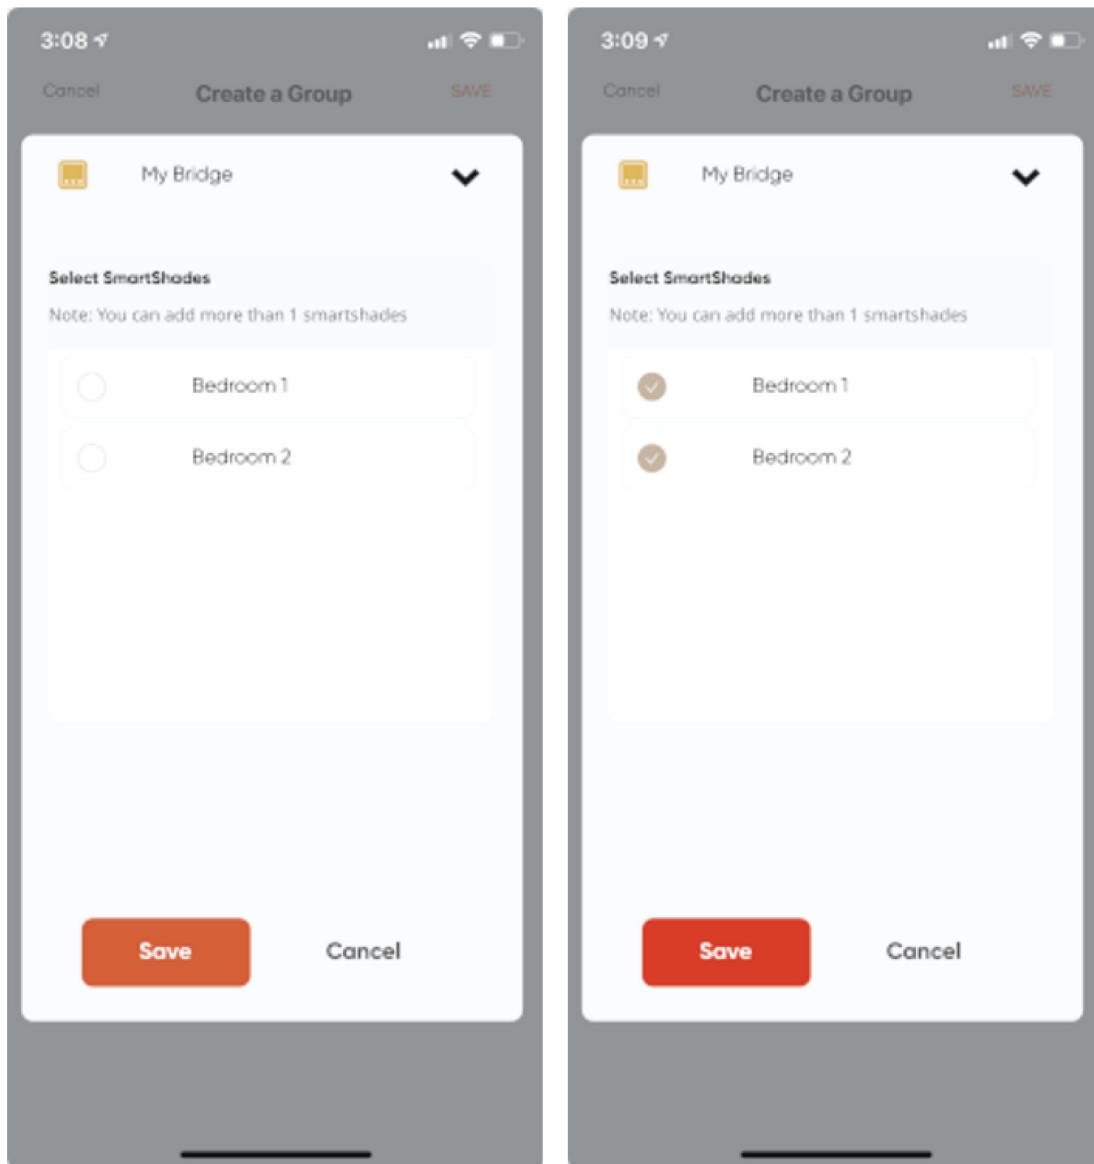

6. Select the SmartShades that you would like to assign to this group. Tap "Save".

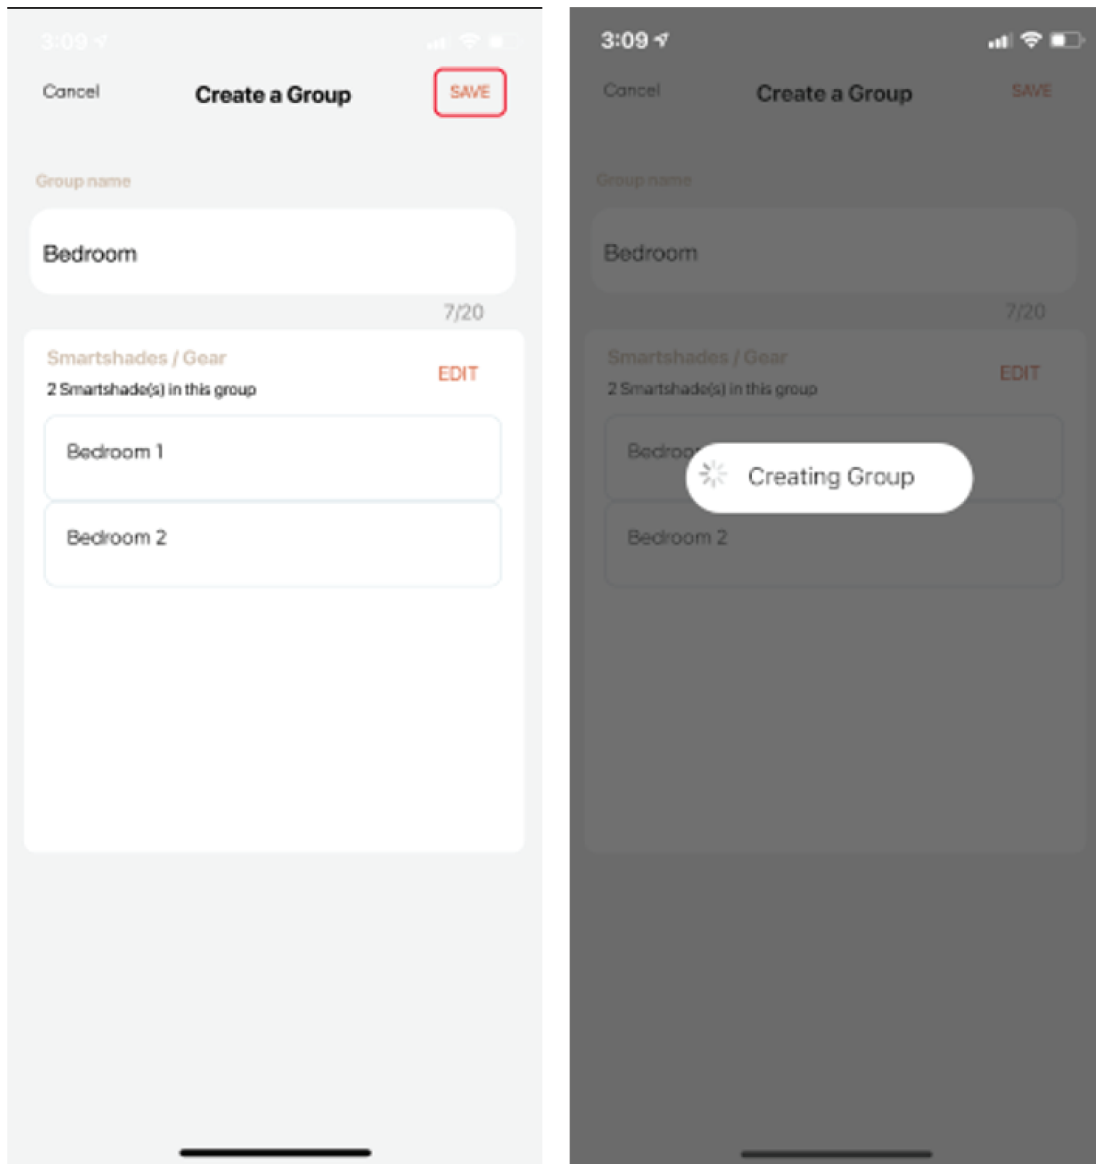

7. Tap "Save" at the top right of the screen. This will now create a Group consisting of the SmartShades you selected.

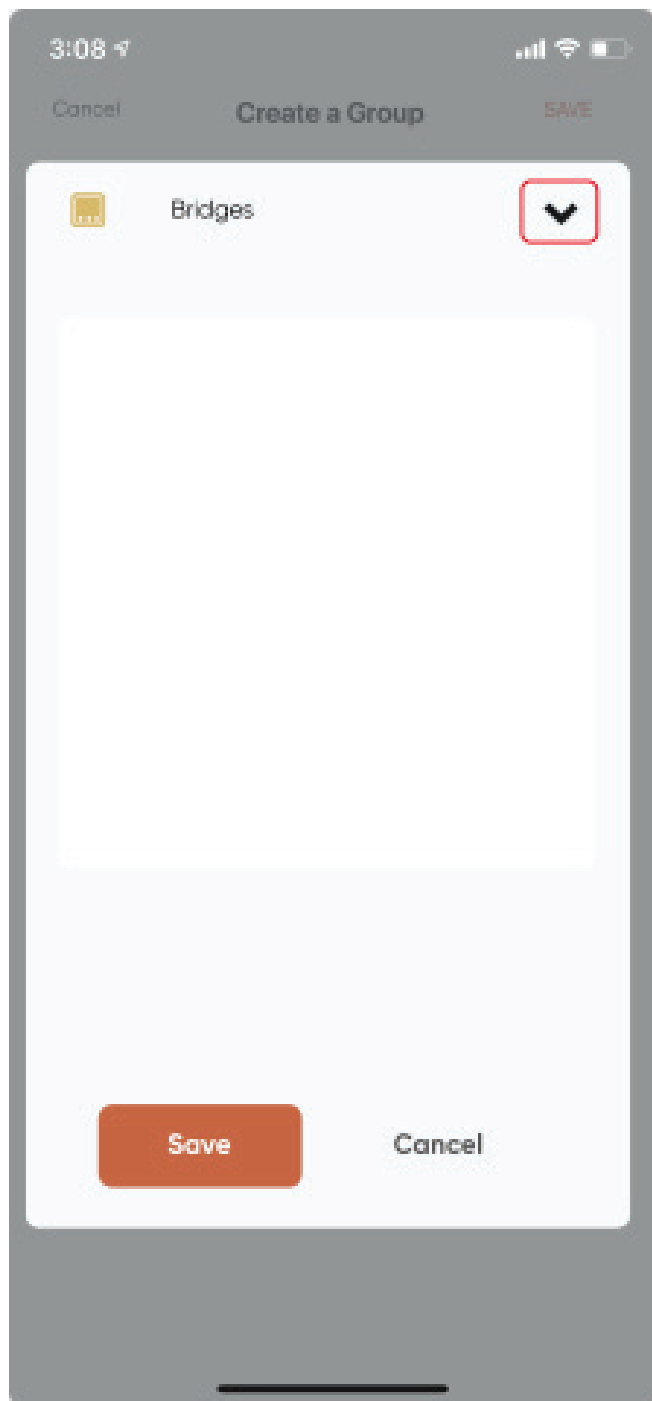

8. You will now see this new Group listed in the Groups dashboard.

Creating a Routine




Follow these steps to create a routine (schedule) so that your window shades automatically operate based on your preference. Please note that if you have additional users with access to the same SmartShades, they will automatically see this newly created Routine in their app.


Note: Routine creation requires a SmartBridge.




1. From the main dashboard, tap Routines icon at the bottom right of the screen.

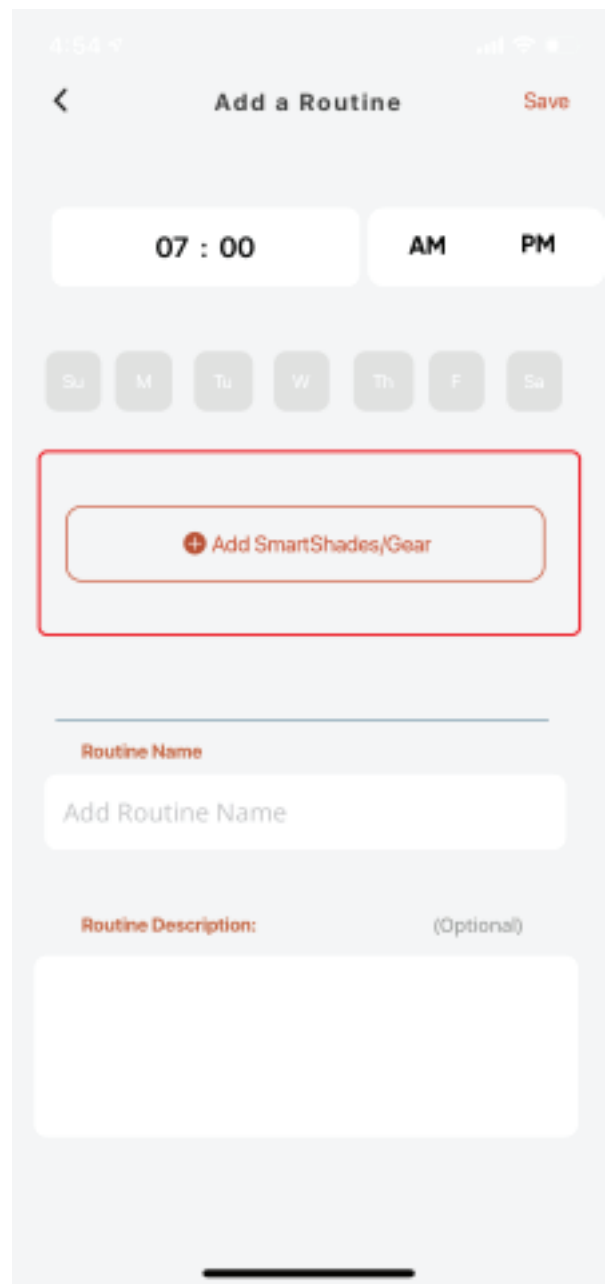


2. Tap "+Add SmartShades/Gear".

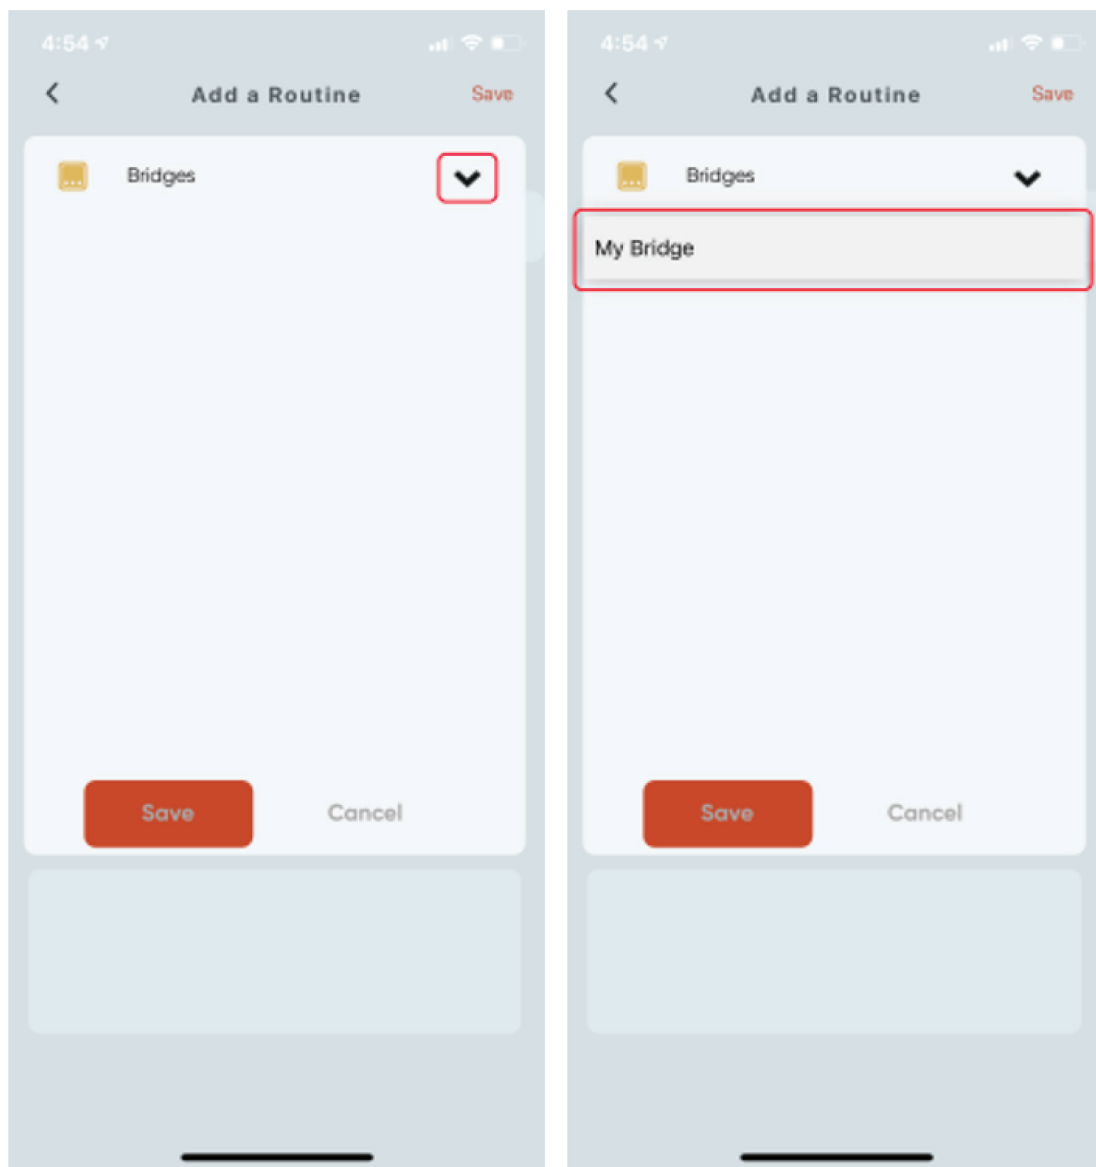


3. Tap the down arrow to select the SmartBridge under which the SmartShades that you are looking to assign Routines are assigned. In most cases, there's only 1 SmartBridge per household.

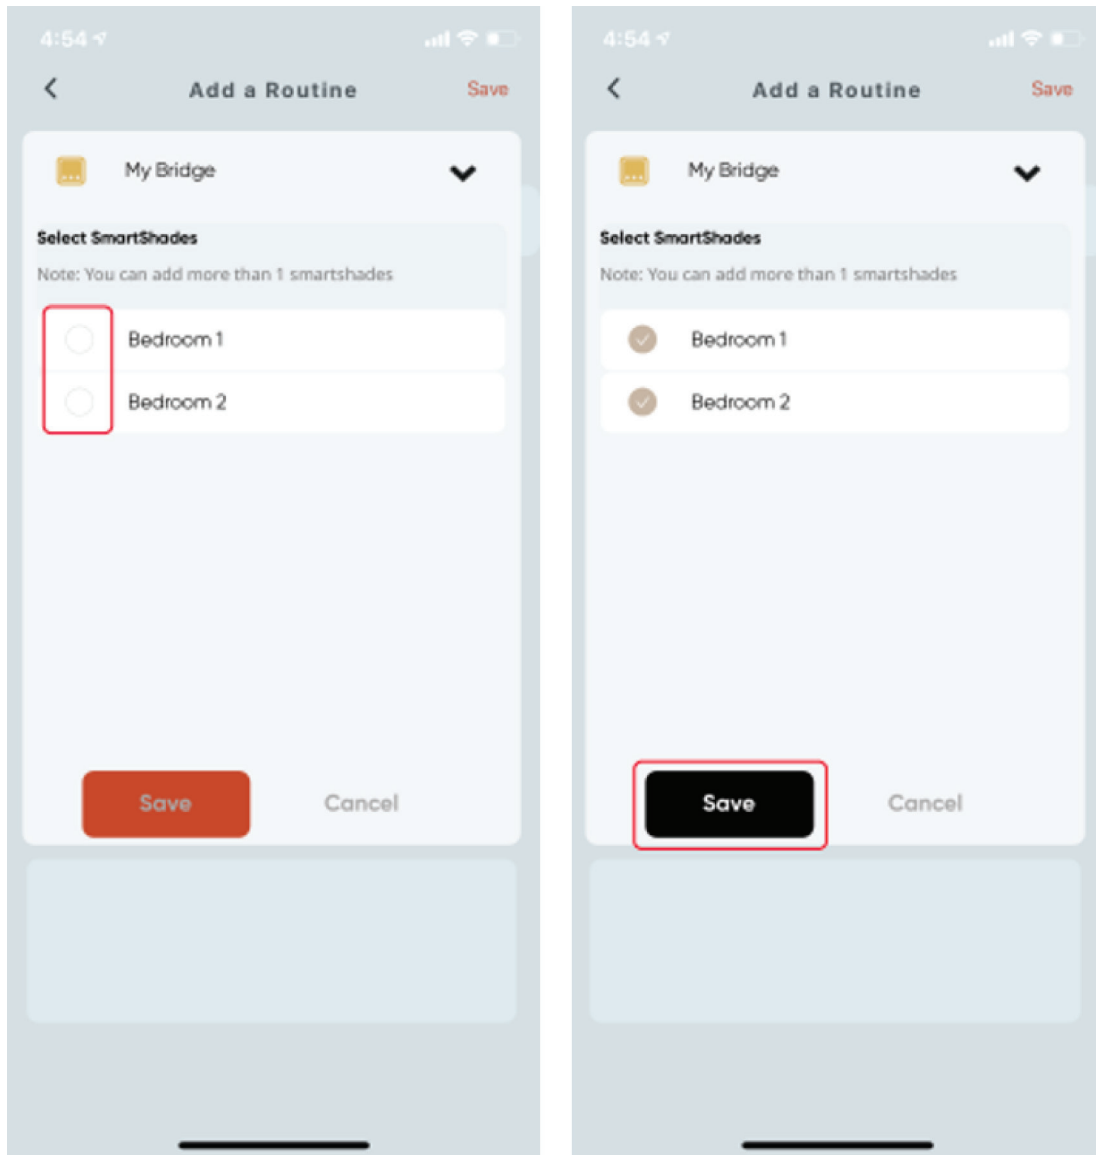


4. Select the SmartShades that you would like to assign to this Routine to. You can select one or more SmartShades. Tap "Save".

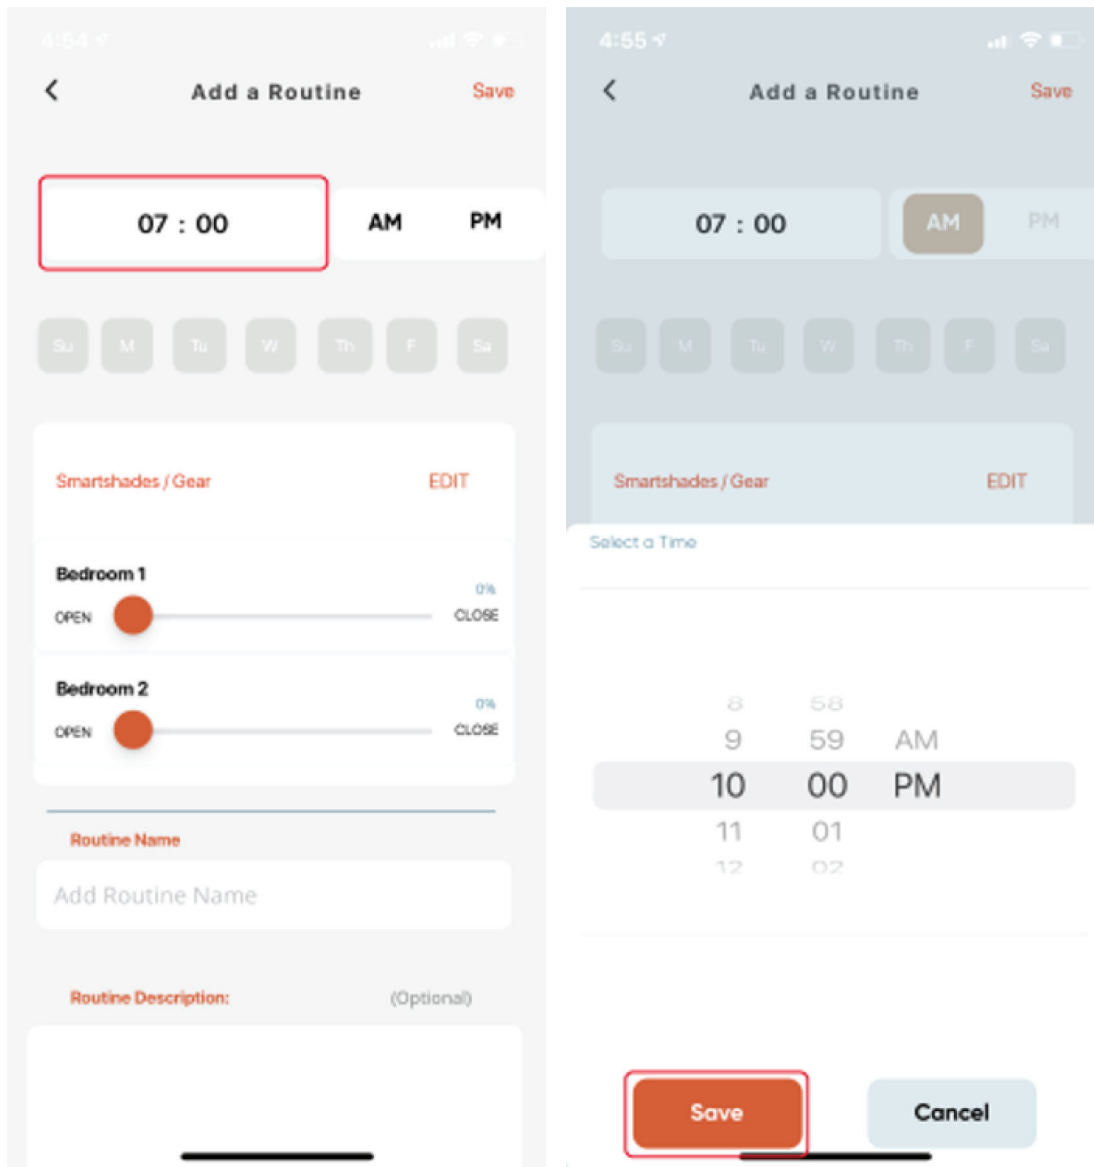


5. Tap the clock to set the time for this routine. Then tap "Save".

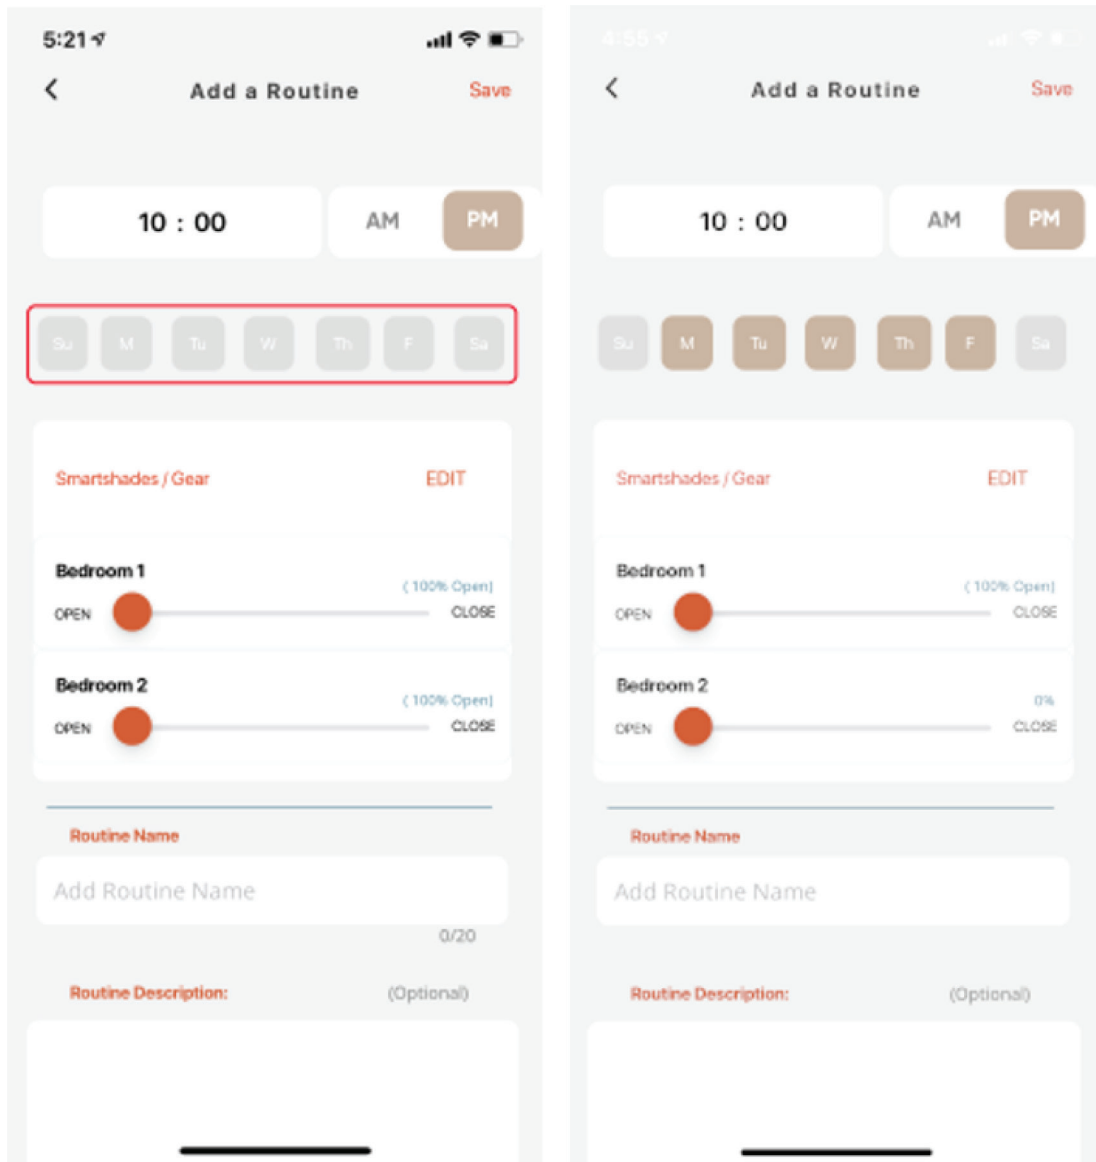


6. Select the days for which you would like this Routine to be triggered on.

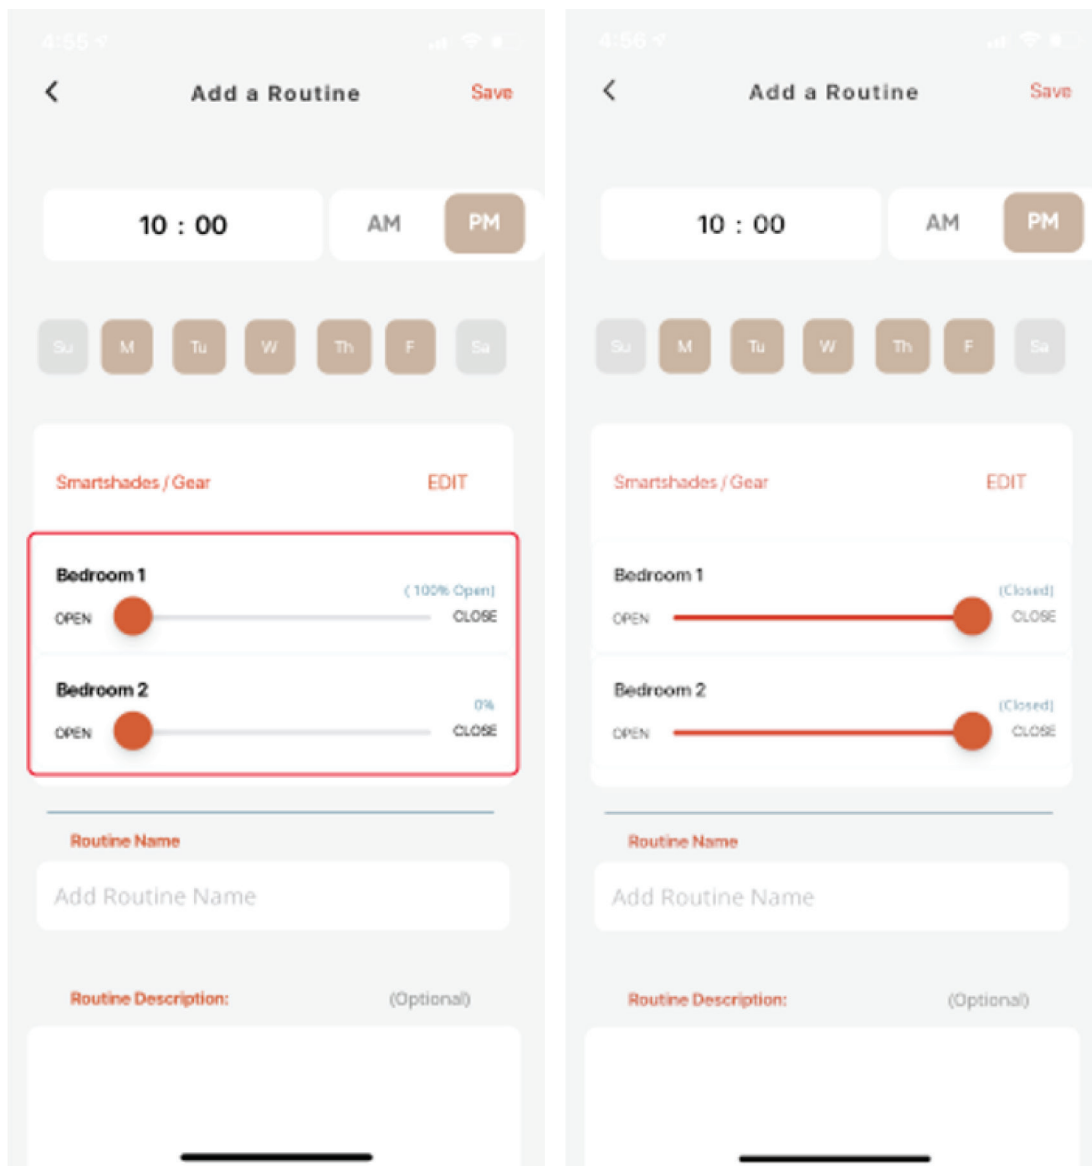


7. Set the shade positions that you would like to be triggered at this point. You can set either the same or different positions for each SmartShade in this Routine.

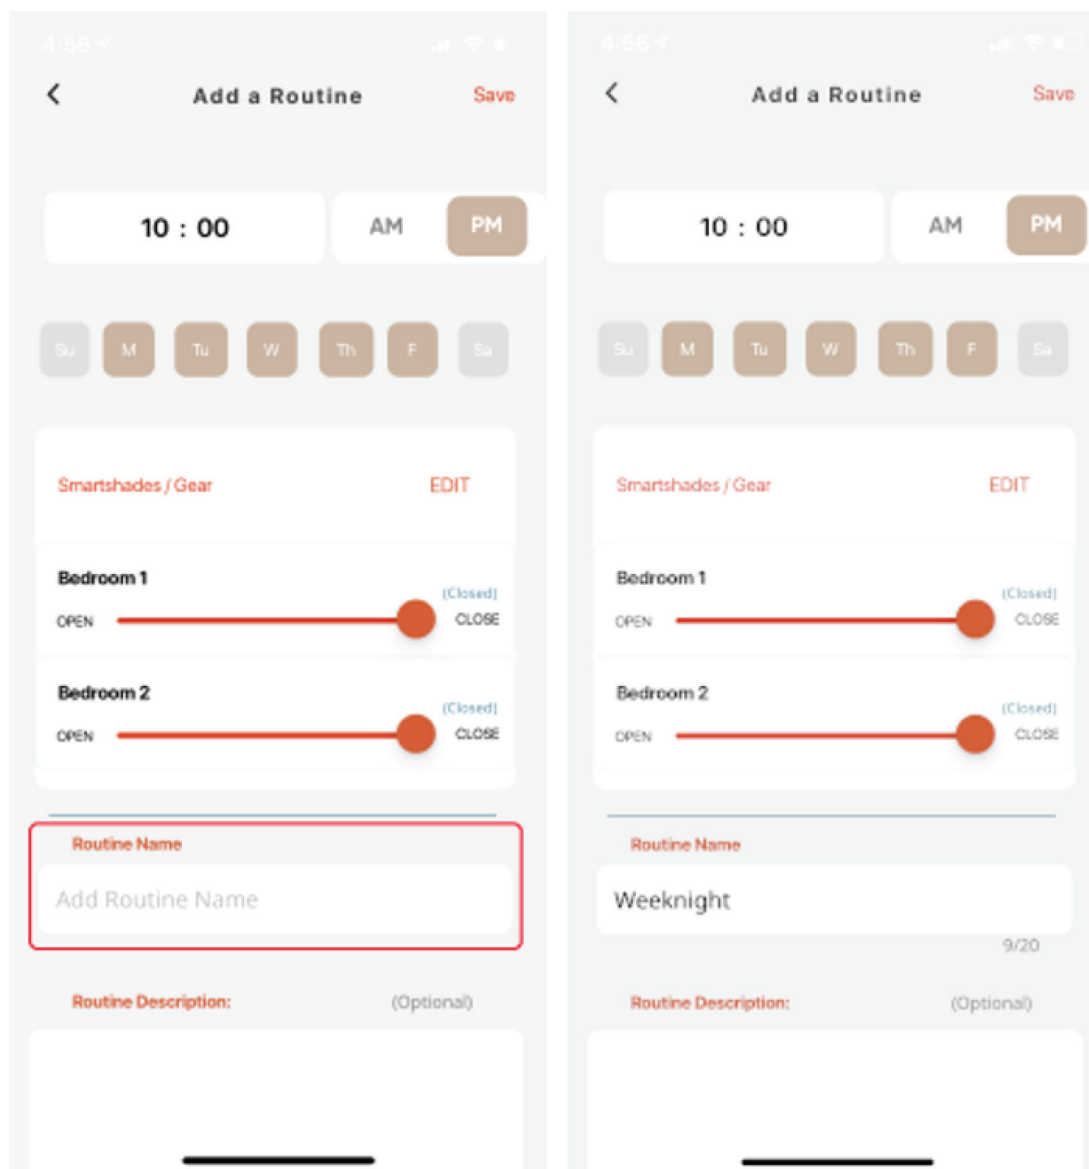

8. Assign a desired Routine name.

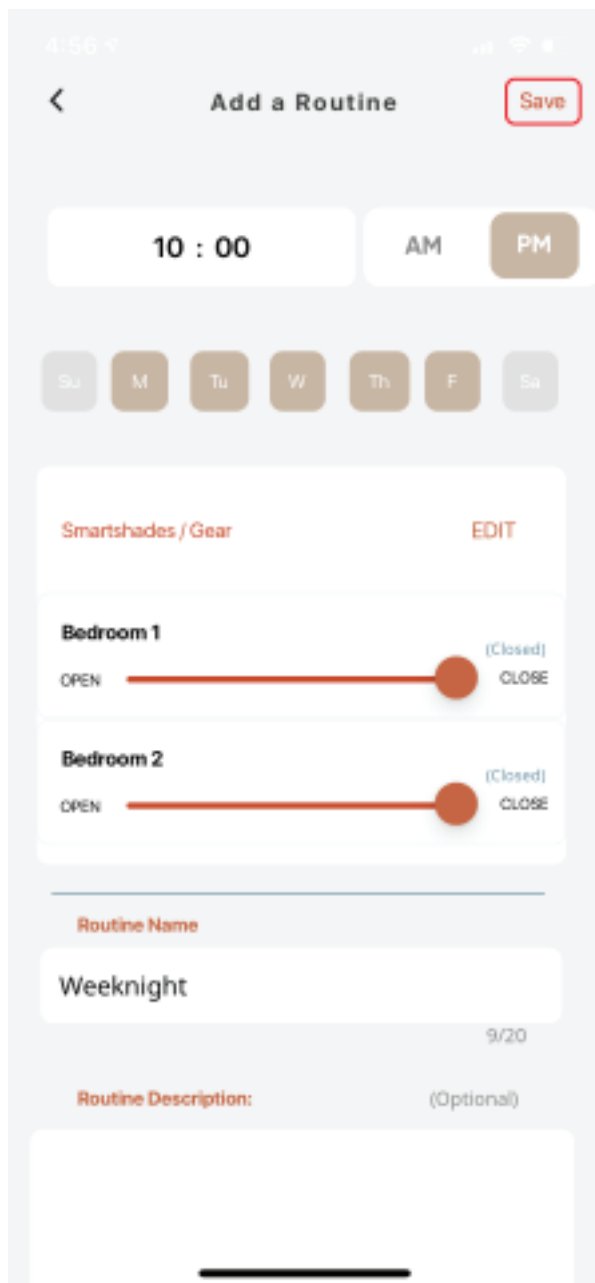

9. Tap "Save" at the top right of the screen.

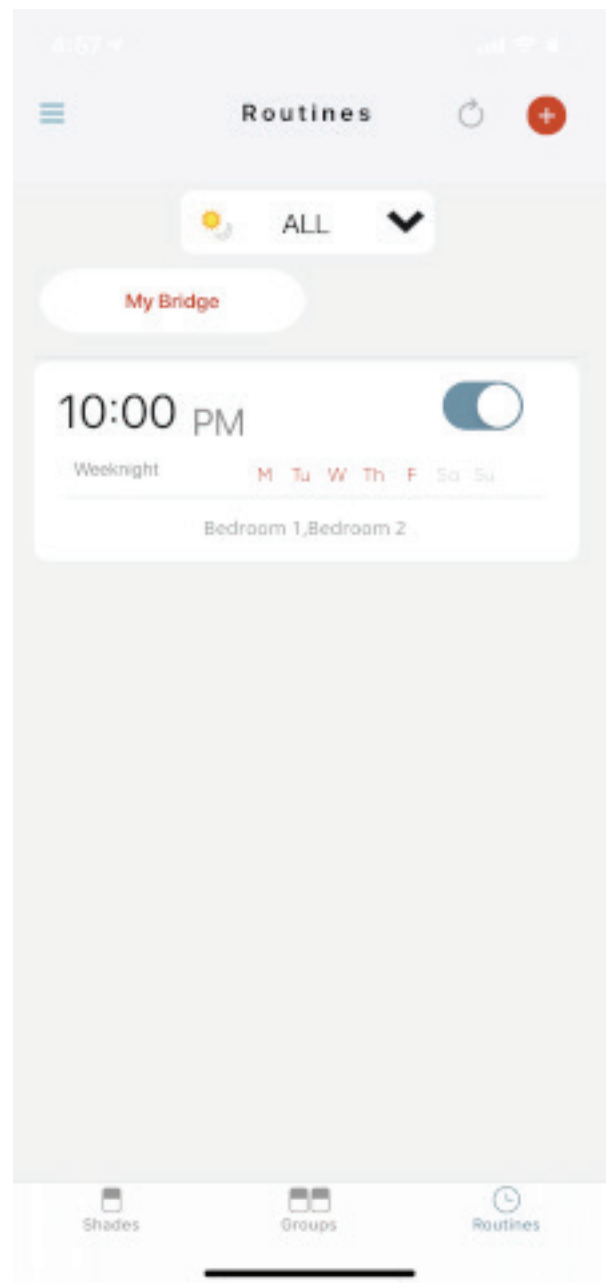

10. You will now see this newly created routine in the Routine dashboard.

Repeat these steps for each Routine you would like to create.




Connecting SmartShade to Home App (HomeKit)


Prior to connecting to the Home app, ensure you have downloaded the RYSE app and added your SmartBridge as well as all of your SmartShades to the RYSE app.

Note: Integration with the Home app via HomeKit requires the SmartBridge.


Follow these steps to connect your SmartShades to the Home app:

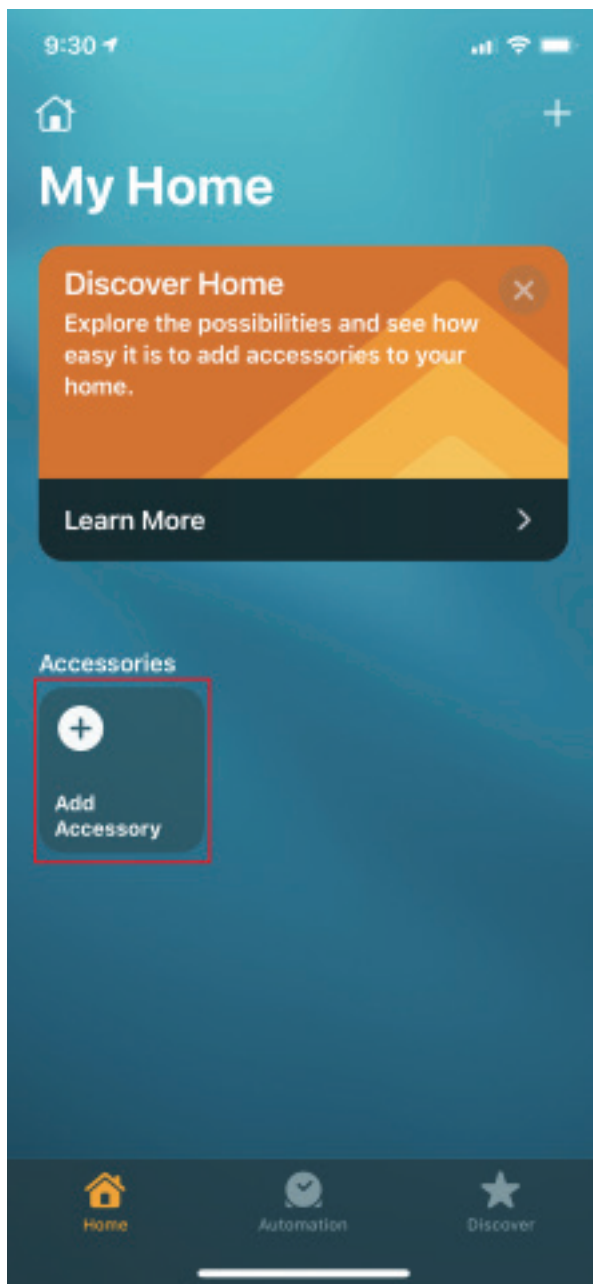


1. Open the Home app.
2. Tap the "Add Accessory" tile.

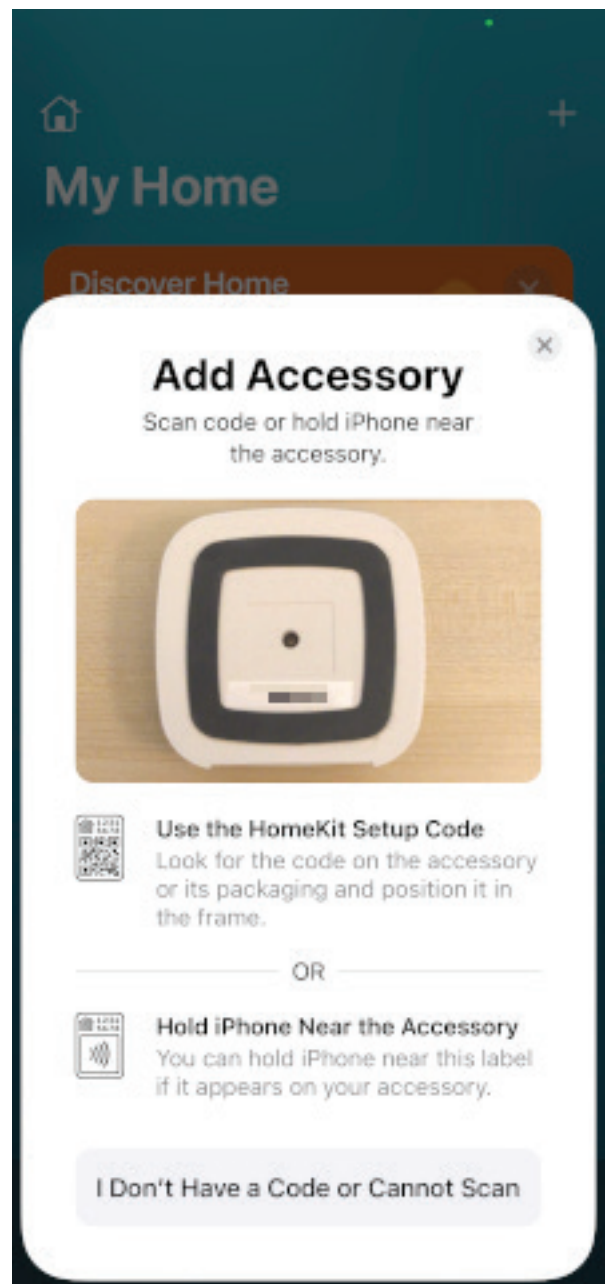


3. Scan the QR code of your SmartBridge. This can be found on the bottom of the SmartBridge.

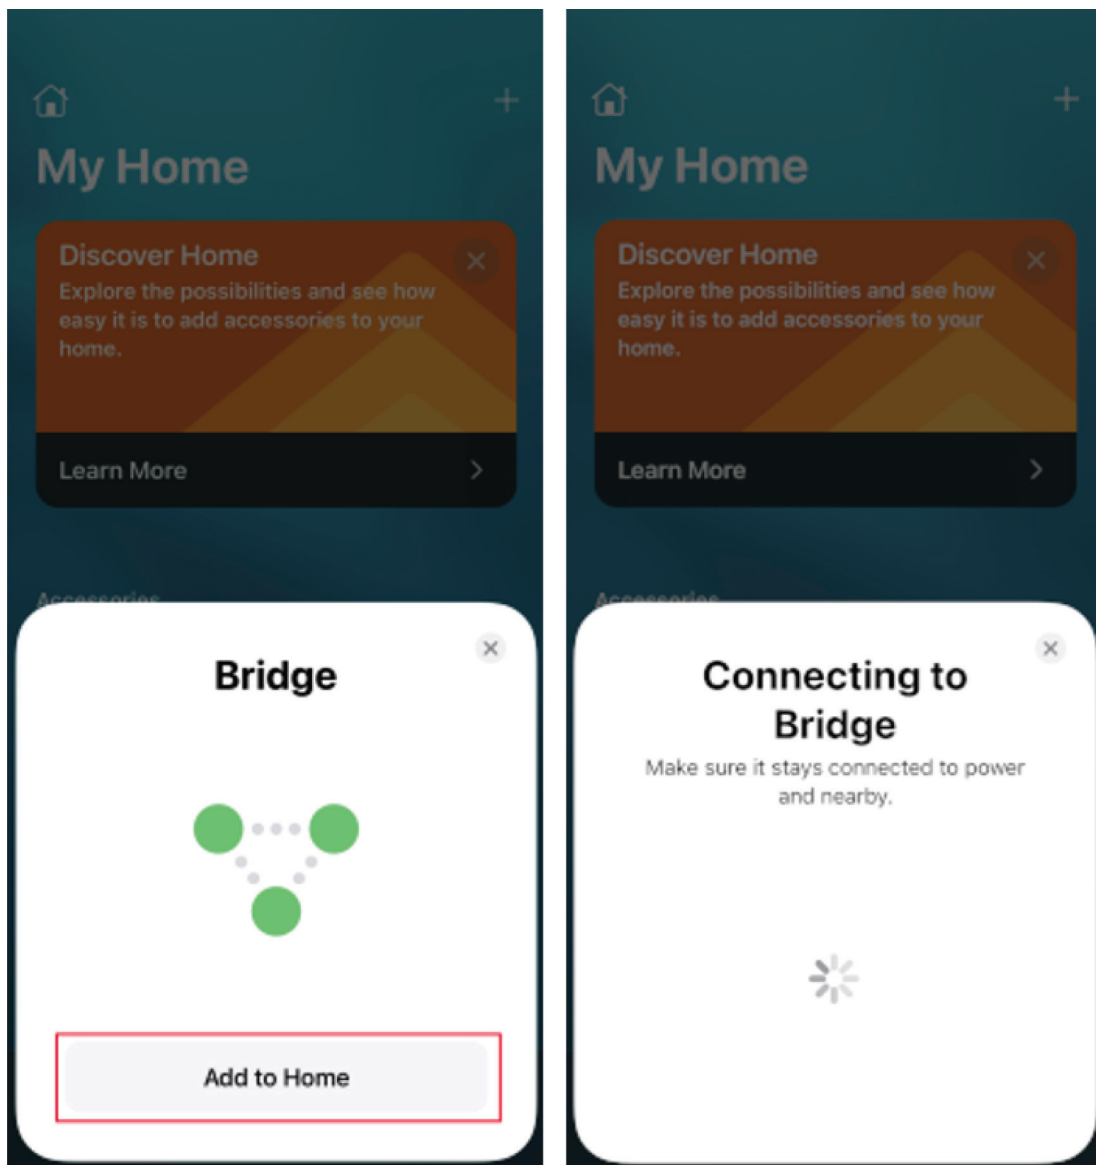


4. Tap "Add to Home". You will then see a screen indicating that the Home app is "Connecting to Bridge".

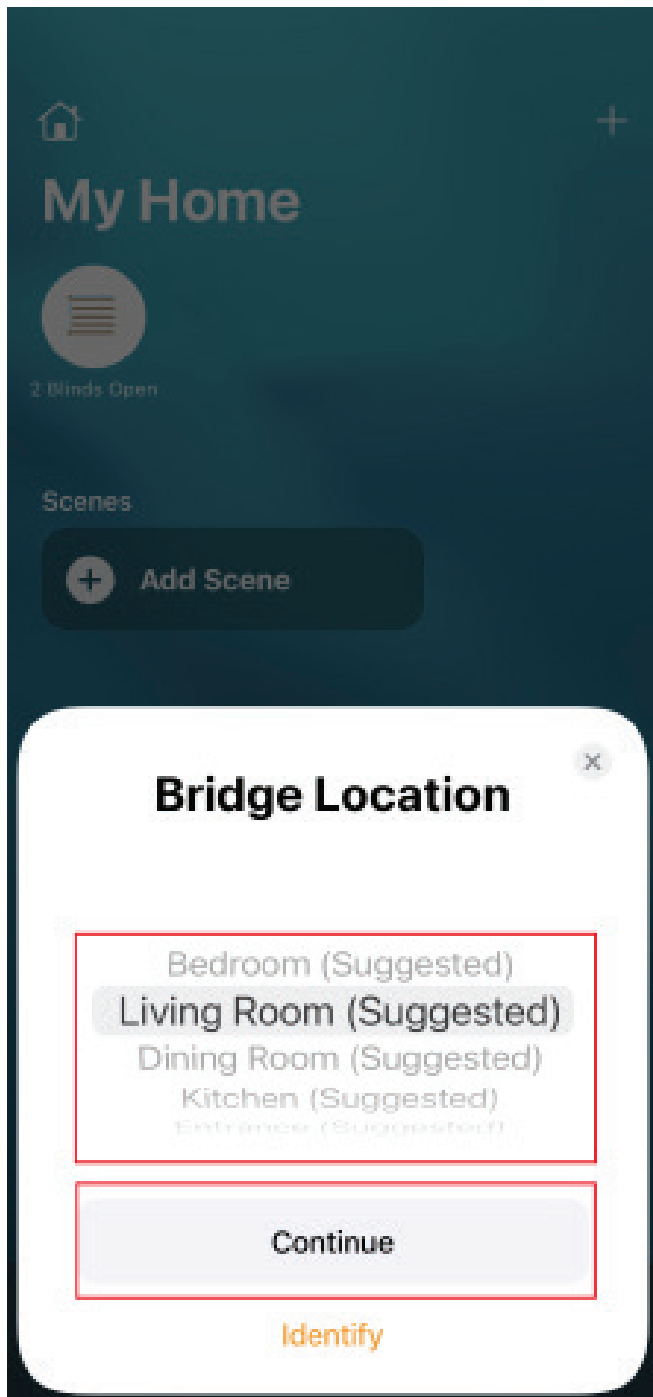


5. Assign a room location for your SmartBridge and tap "Continue".

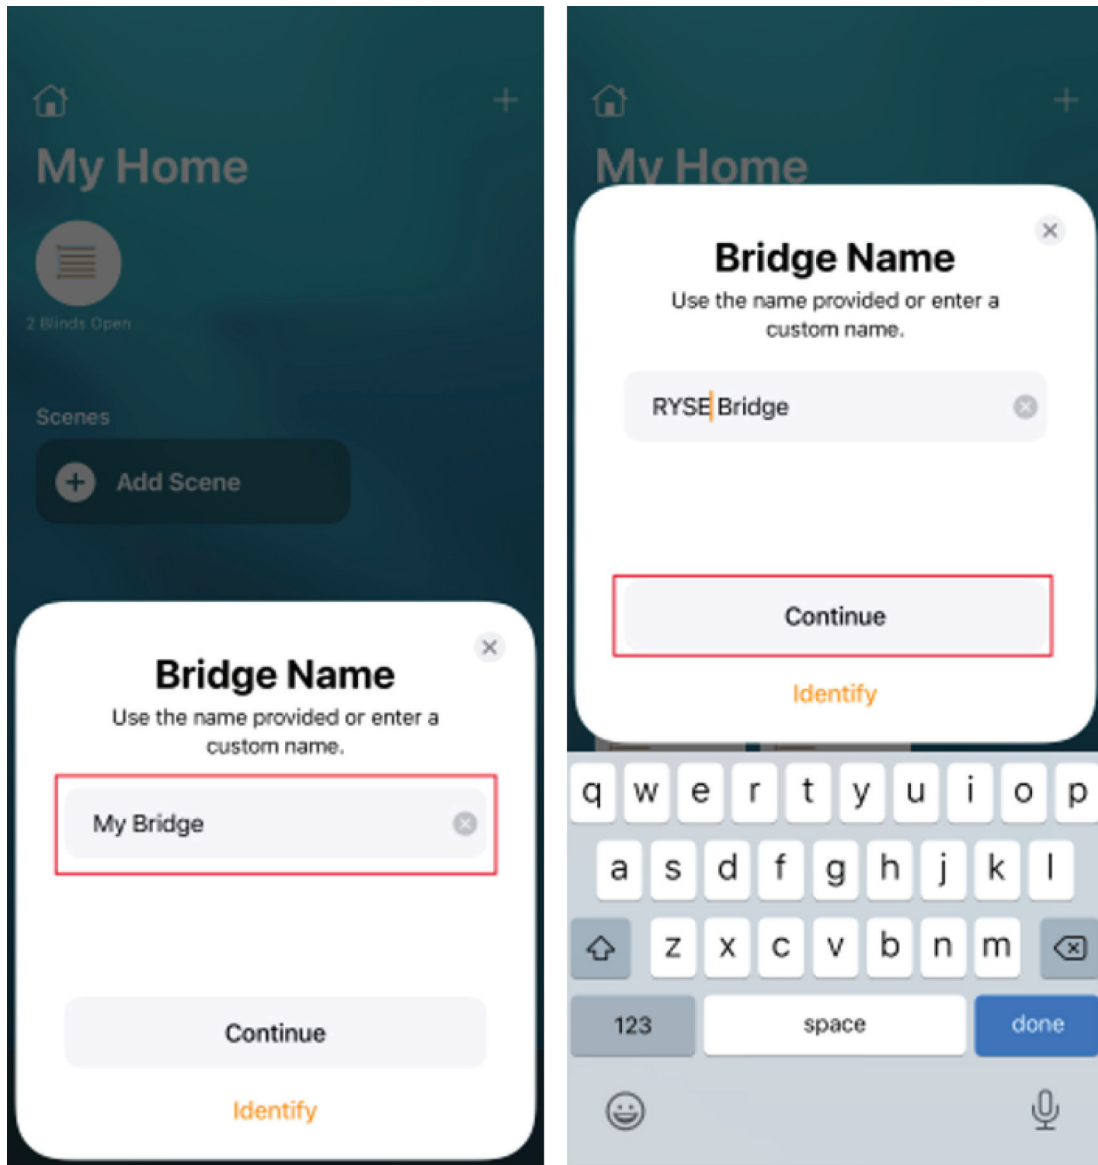


6. Rename the SmartBridge if needed and then tap "Continue".

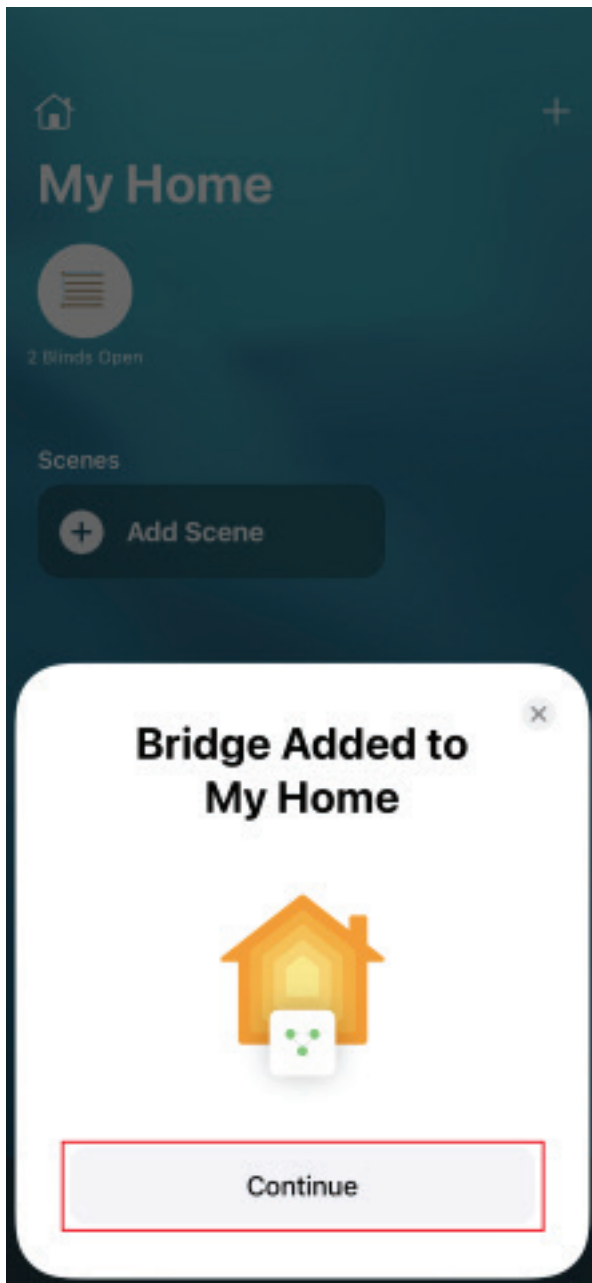


7. Your SmartBridge is now successfully added to the Home app. The next step is to add the individual SmartShades connected to the SmartBridge. Tap "Continue".

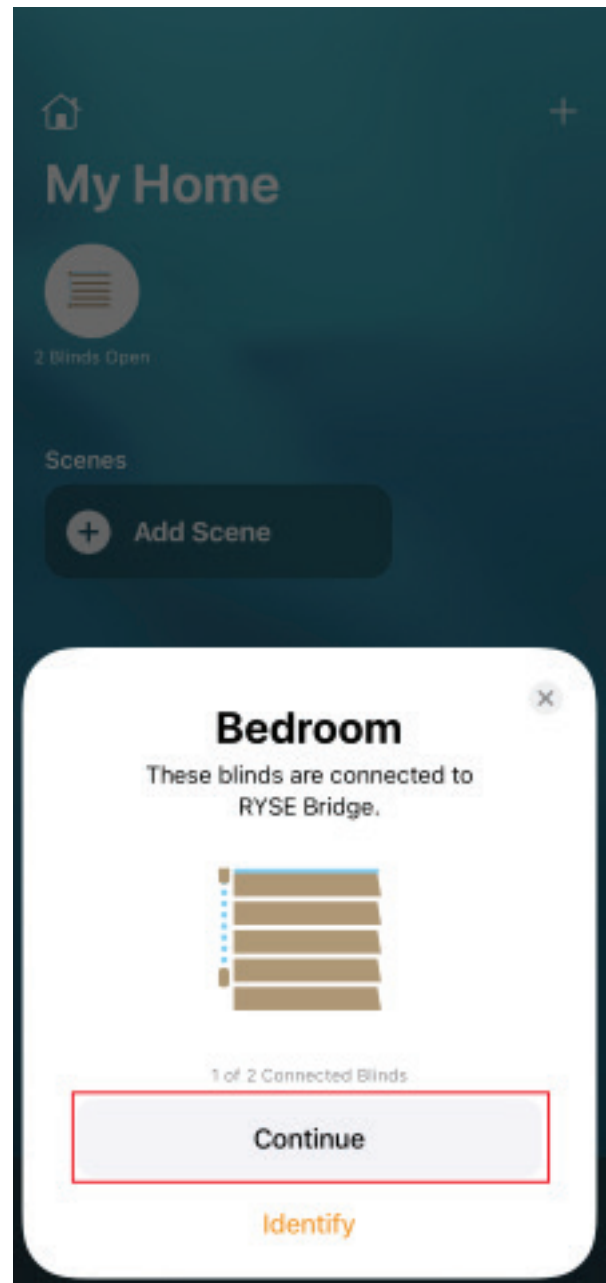


8. You will now connect the first SmartShade.

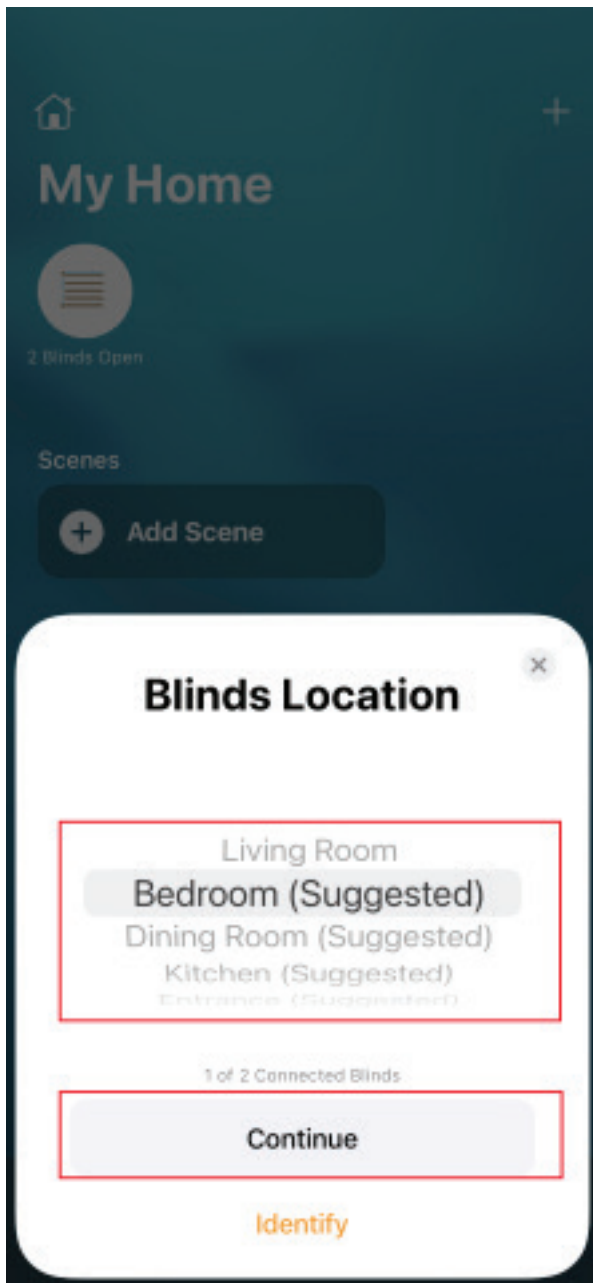


9. Assign a room location for the first SmartShade and tap "Continue". Note that the SmartShade name assigned in the RYSE app is the default name within the Home app.

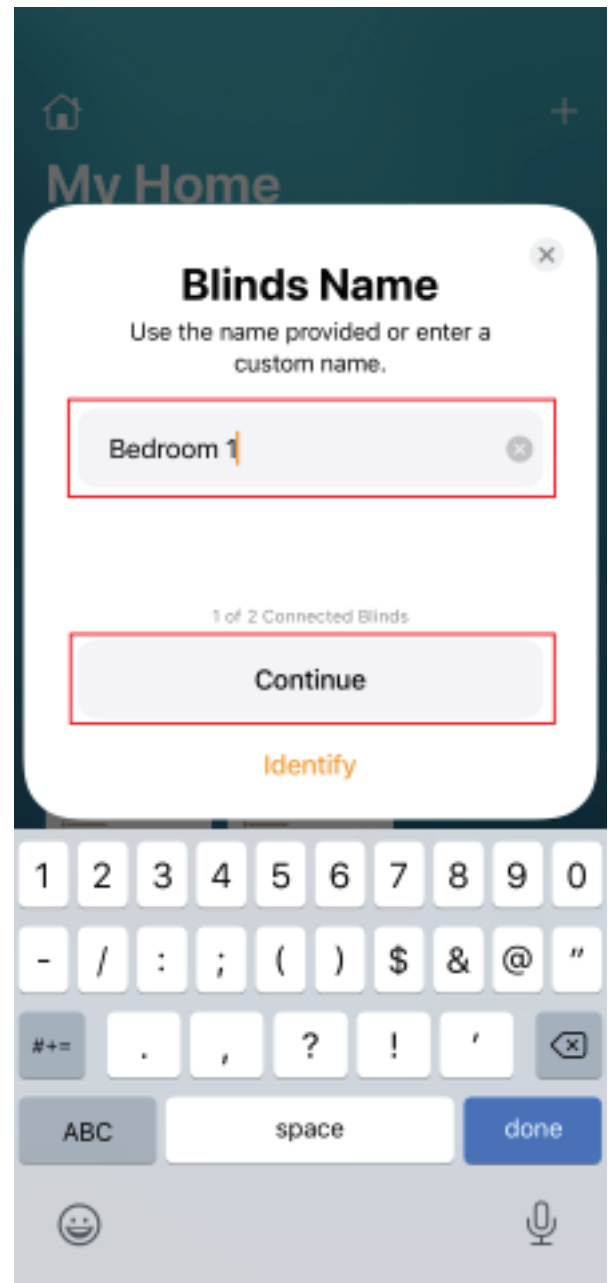


10. You can rename the SmartShade if you would like and then tap "Continue".

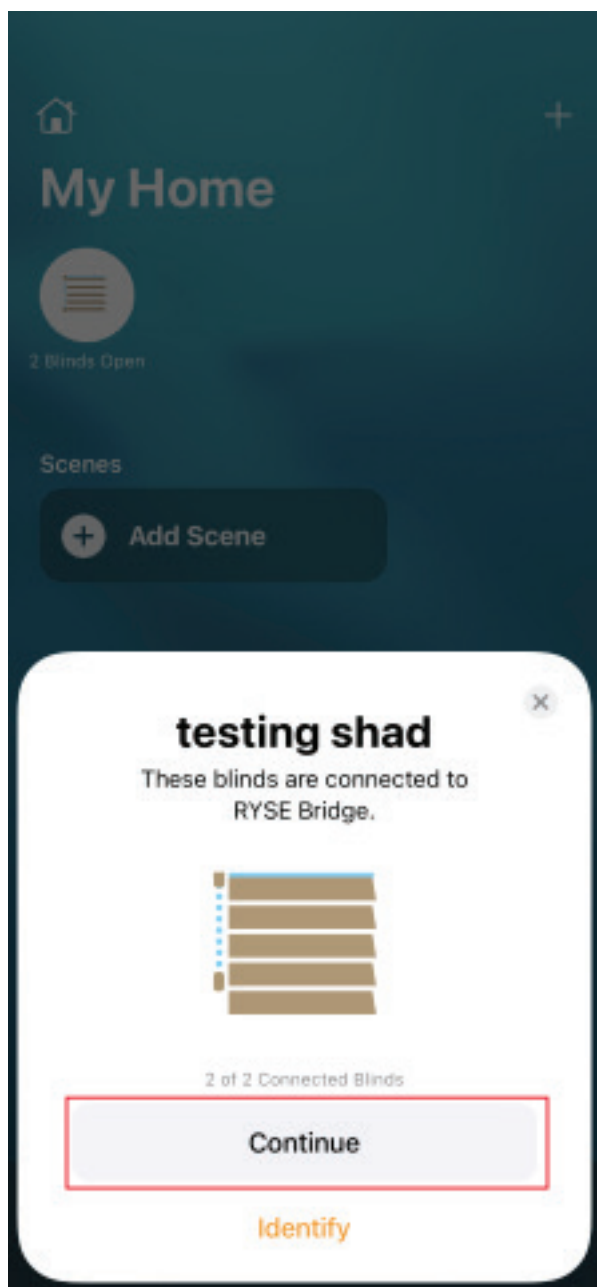

- 11.** Repeat steps 8-10 to add any additional SmartShades you have connected to the SmartBridge.

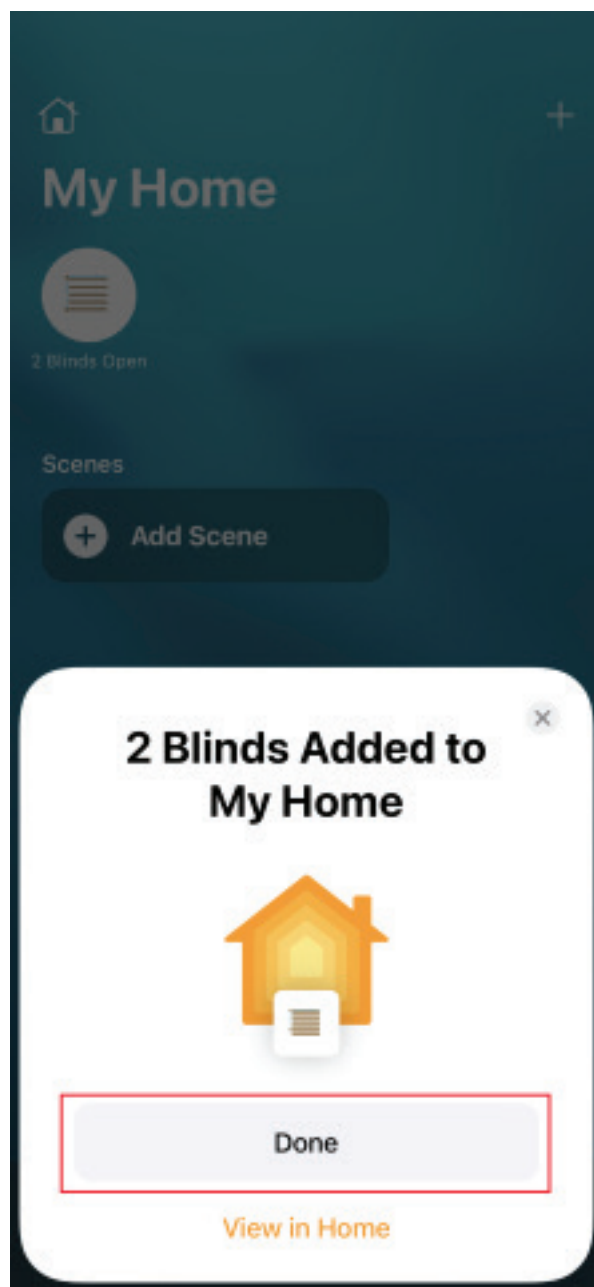

- 12.** Tap "Done" to complete the integration process.

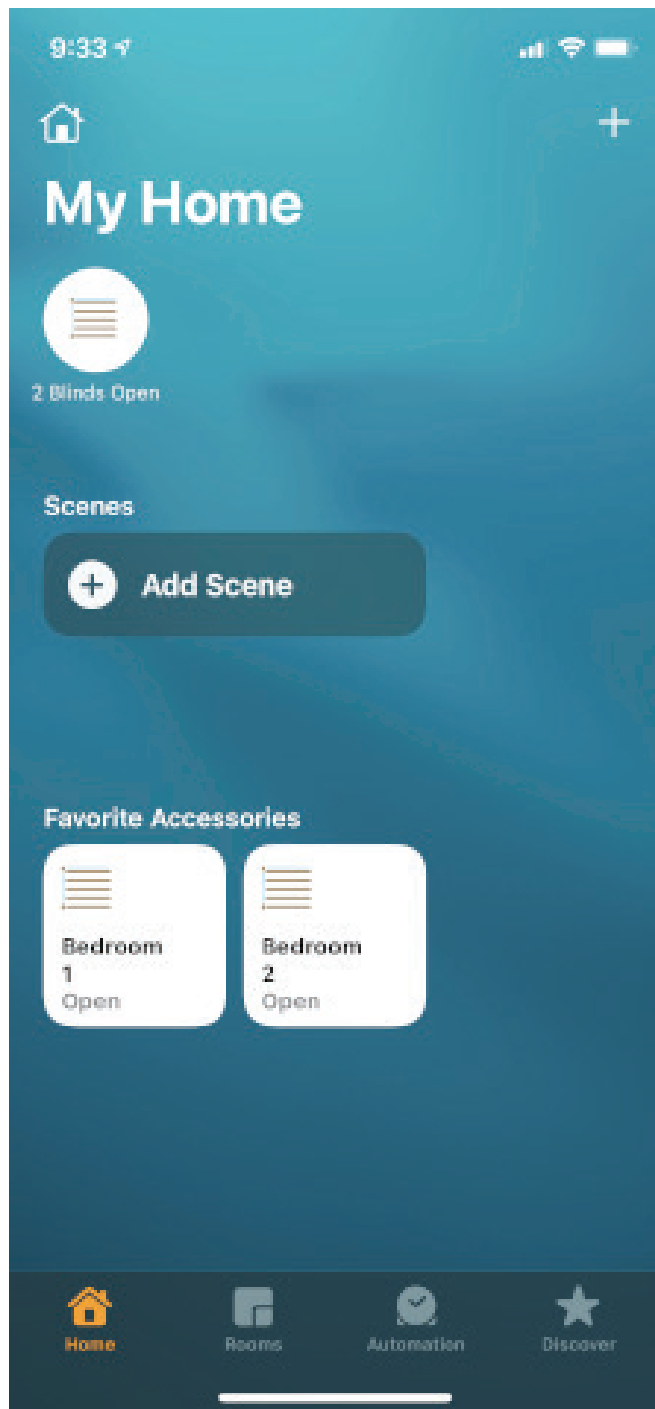

13. All of your SmartShades should be visible within the Home app. Navigate to the "Rooms" dashboard if you do not see them under Favorite Accessories.


Connecting SmartShade to Amazon Alexa




Prior to connecting to Amazon Alexa, ensure you have downloaded the RYSE app and added your SmartBridge as well as all of your SmartShades to the RYSE app.

Note: Integration with Alexa requires the SmartBridge.



Follow these steps to connect your SmartShades to Alexa:

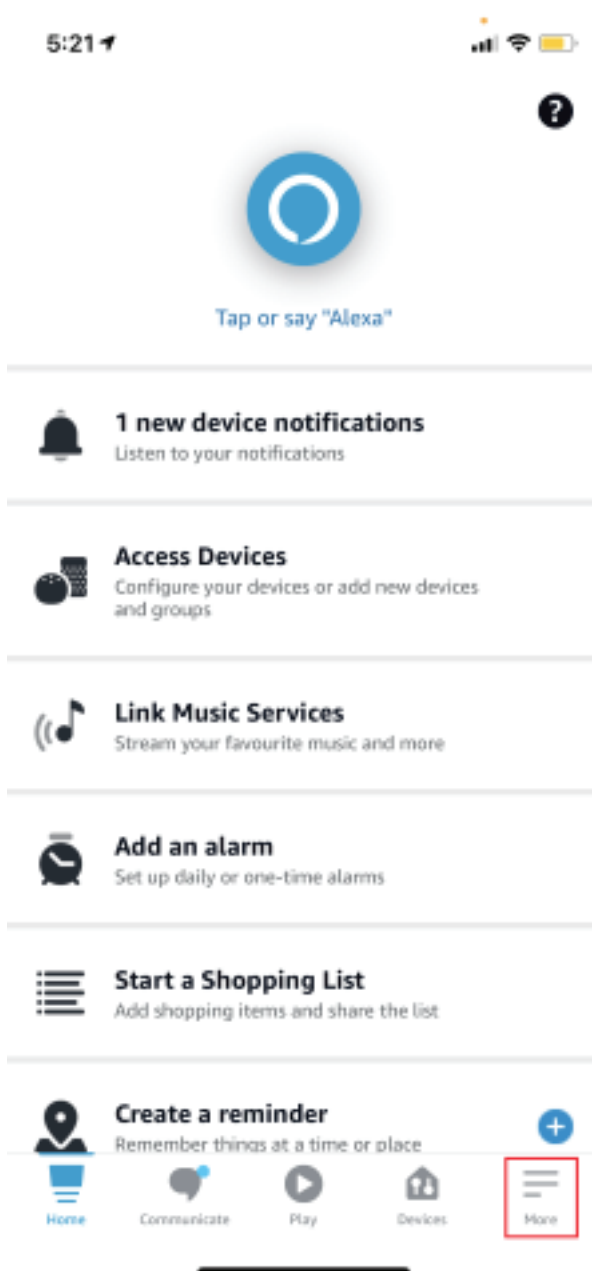


1. Open the Amazon Alexa app.
2. Tap the More icon on the bottom right of the screen.

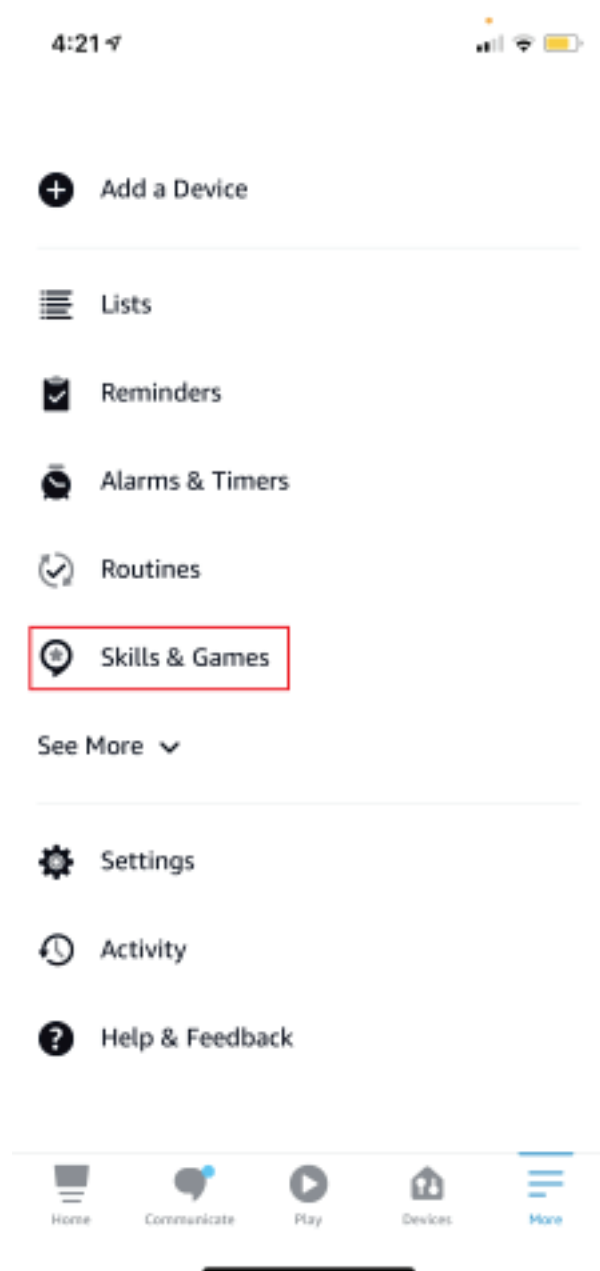


3. Tap "Skills & Games".

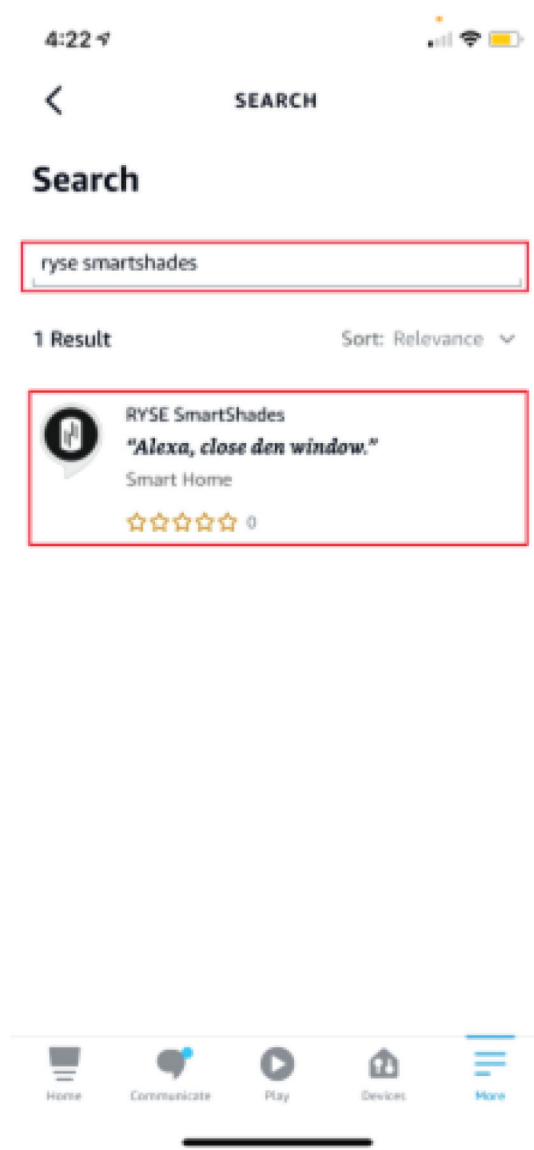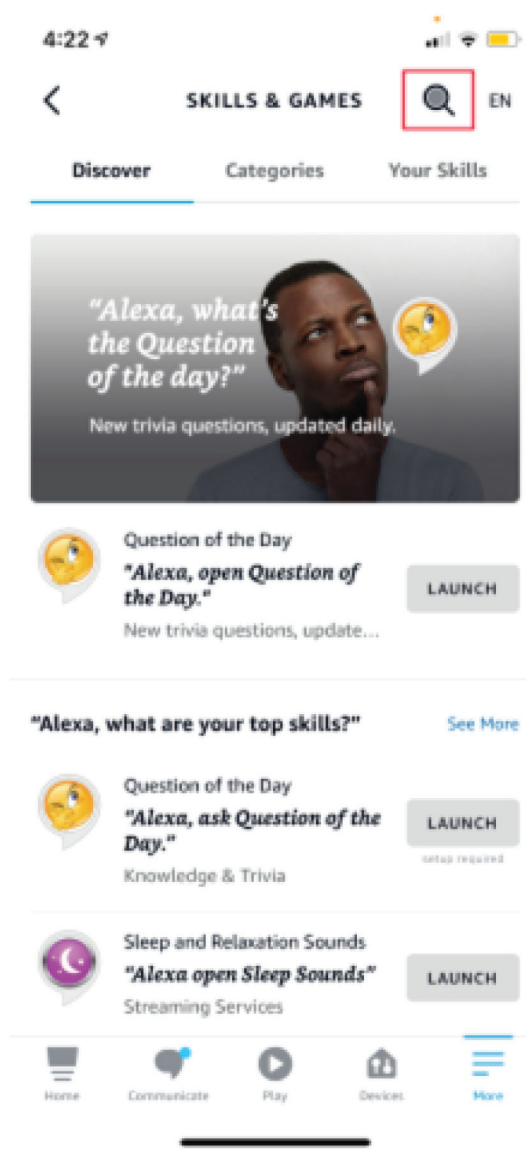


4. Tap Search icon on the top right. Search for "RYSE SmartShades". You will then see the "RYSE SmartShades" skill in results - tap it.

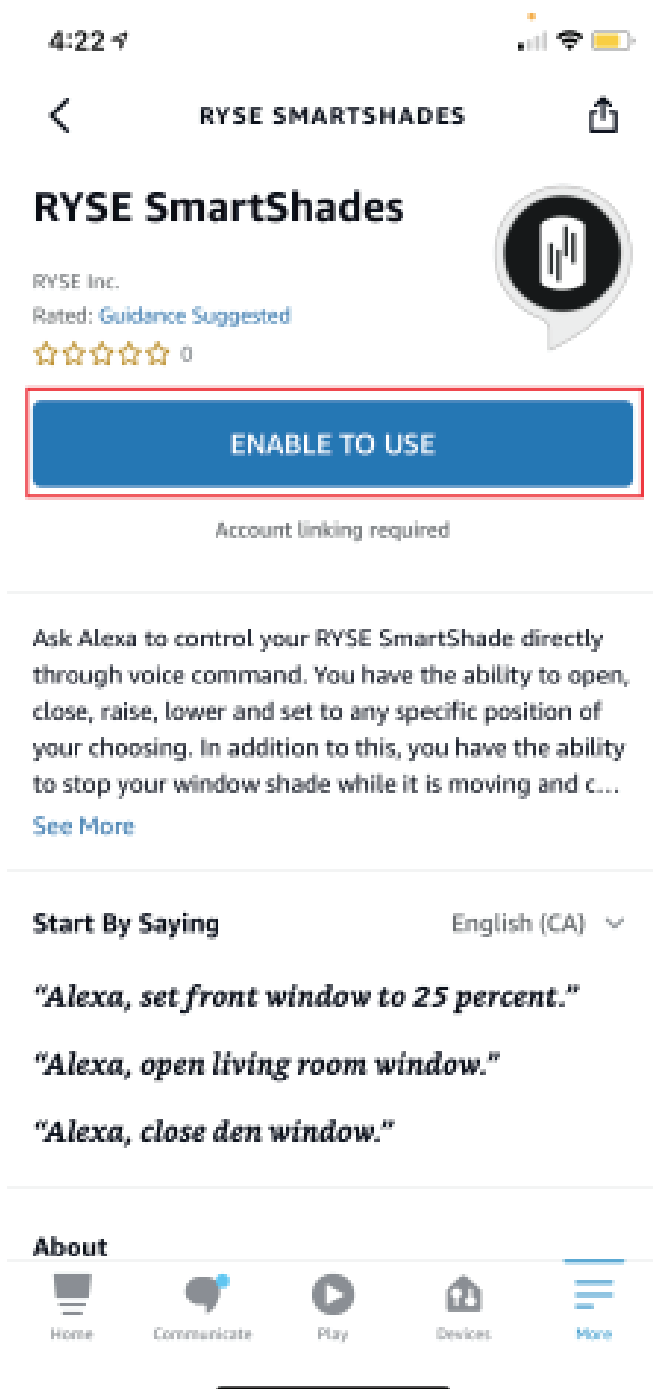


5. Tap "ENABLE TO USE".

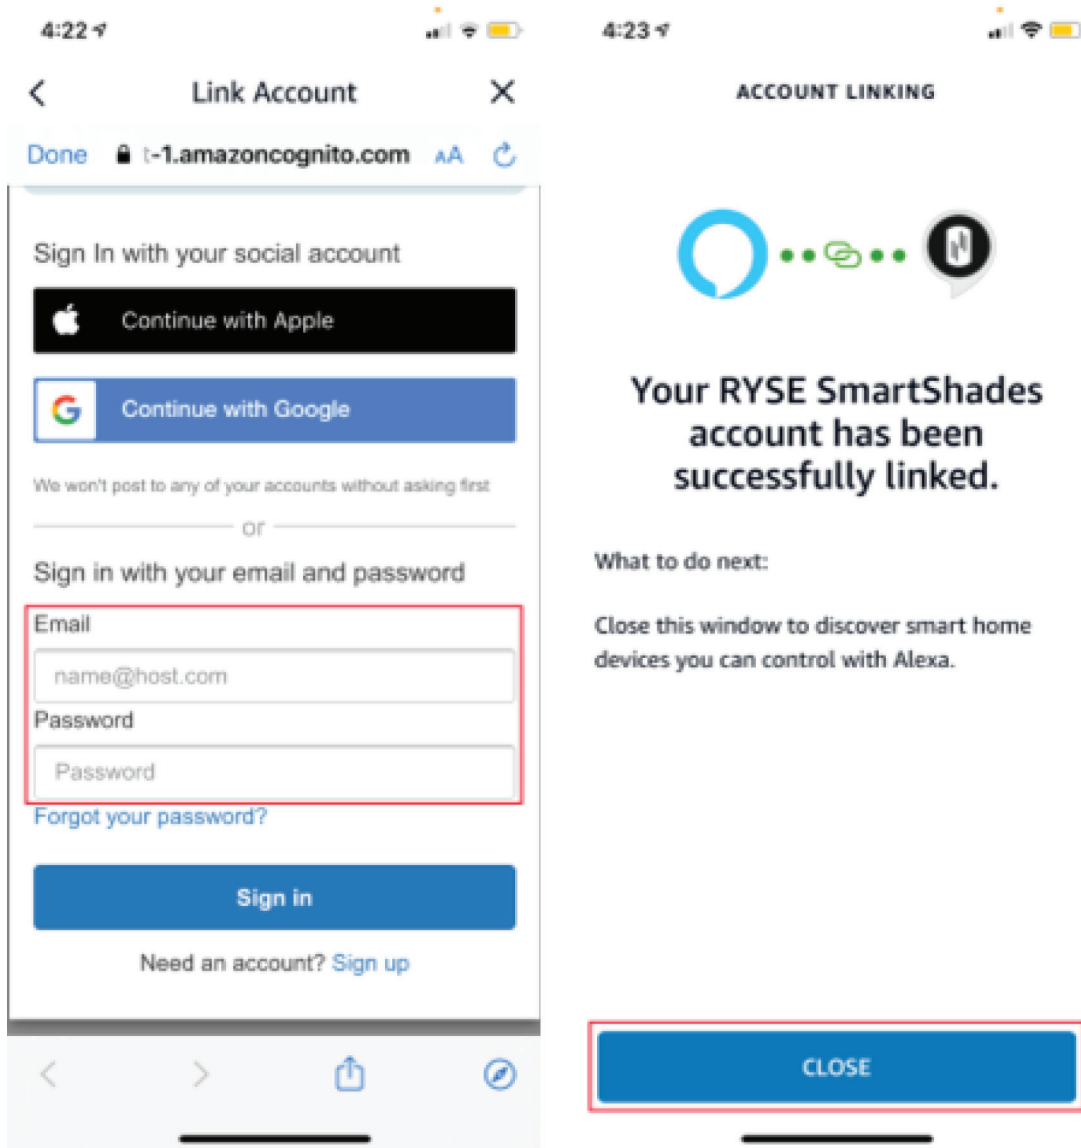

6. Enter the same email and password that you used to create an account in the RYSE app. Tap "Sign in". You will then see the next screen with the message "Your RYSE SmartShades has been successfully linked".

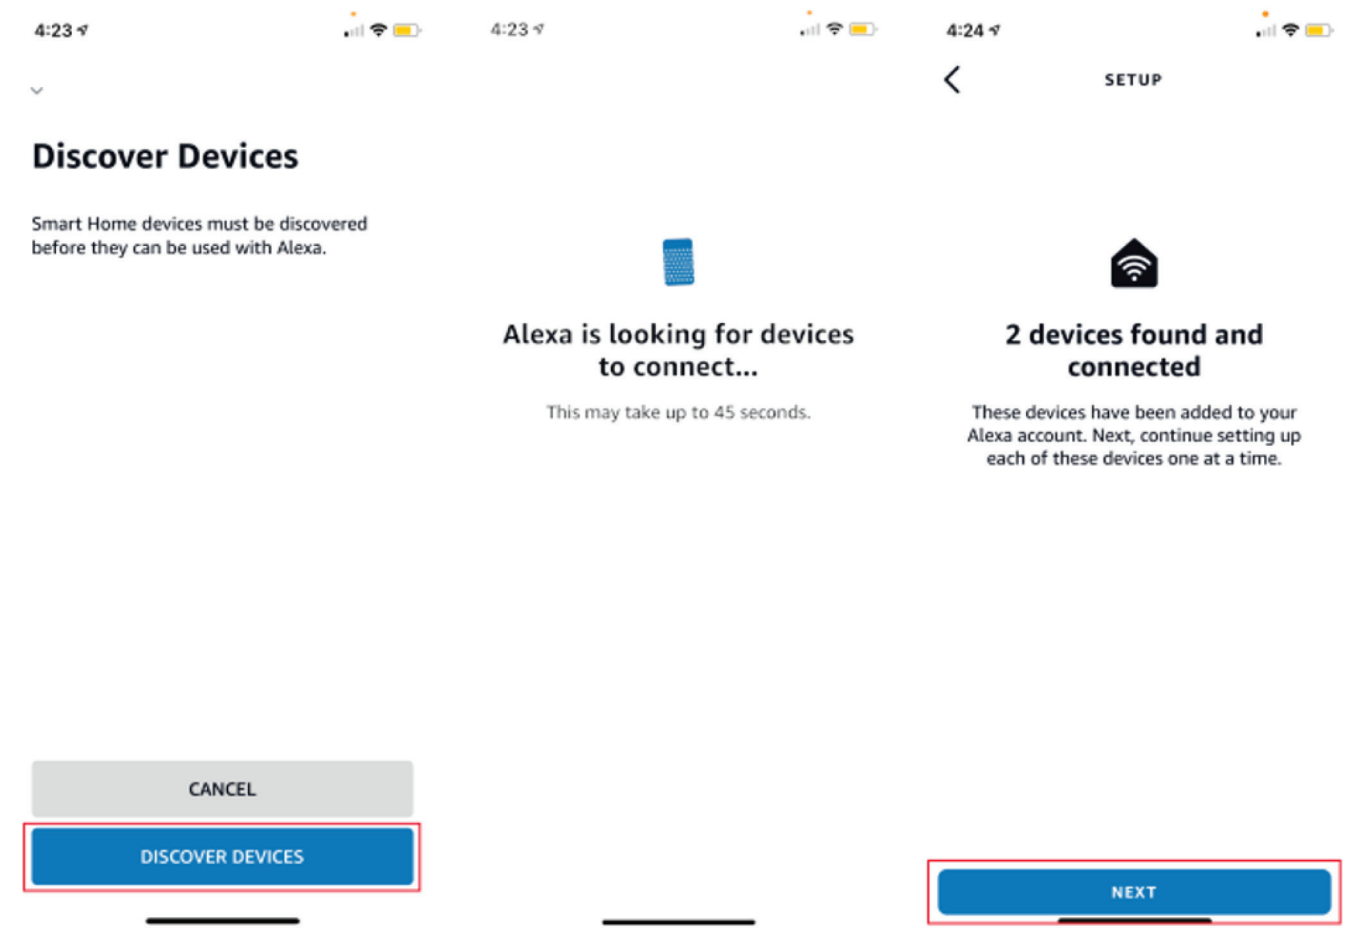

7. Tap "Discover Devices". Alexa will then begin scanning for all RYSE SmartShades connected to your SmartBridge - this can take up to 45 seconds. Once this is finished, tap "Next".

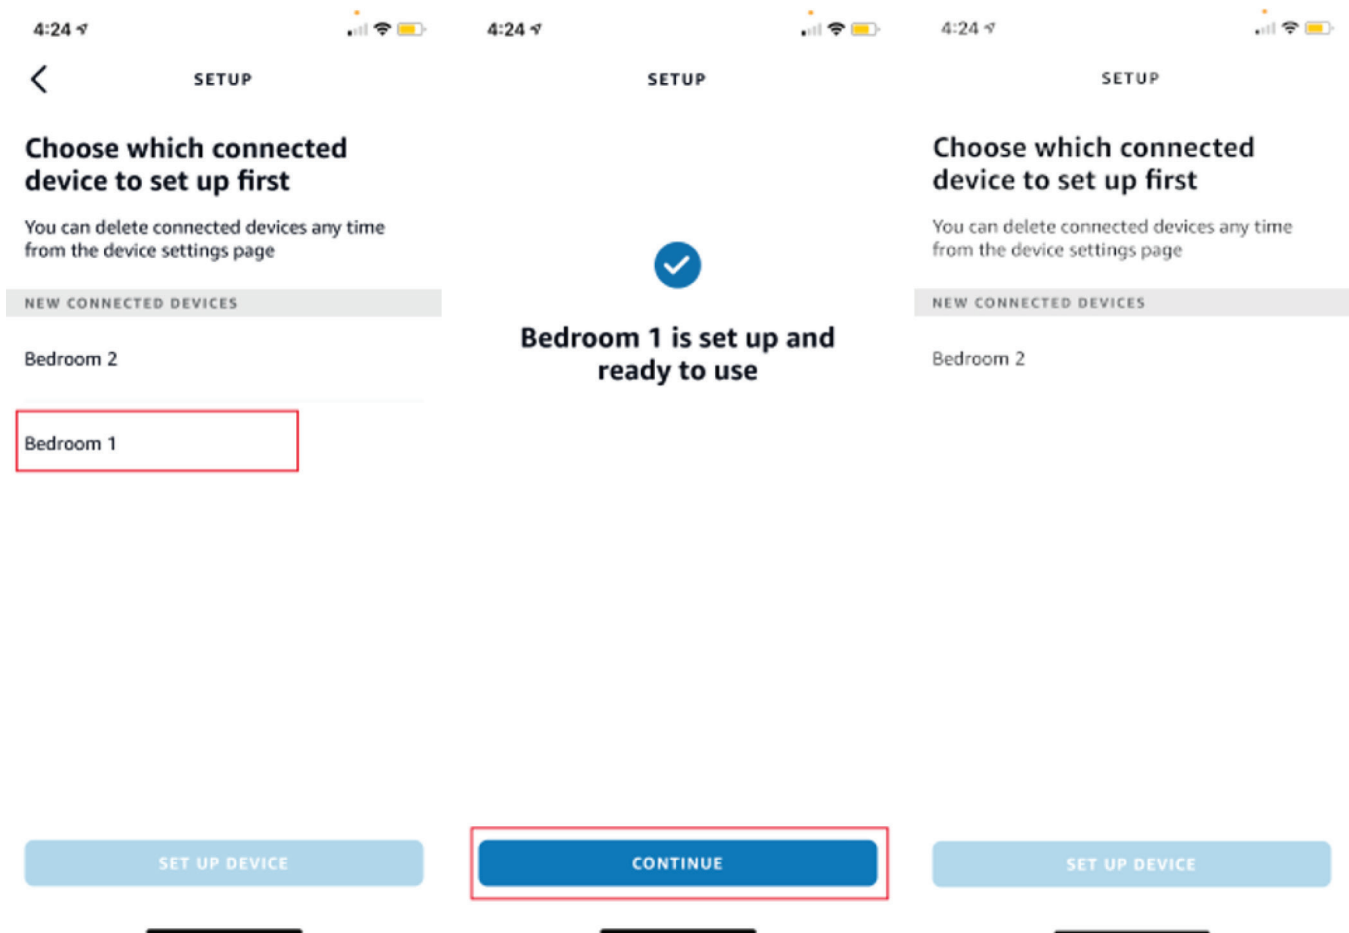

8. You will then see all of the SmartShades you added to the RYSE app. Select one of the SmartShades to begin adding it to the Amazon Alexa app. Note that you cannot add multiple SmartShades to the Alexa app at the same time. Tap "Continue" on the next screen. Repeat this step for every SmartShade on the list.

6:35



SETUP




All your devices are set up

You can now use Alexa to control your home.

9. Tap "Done".

DONE



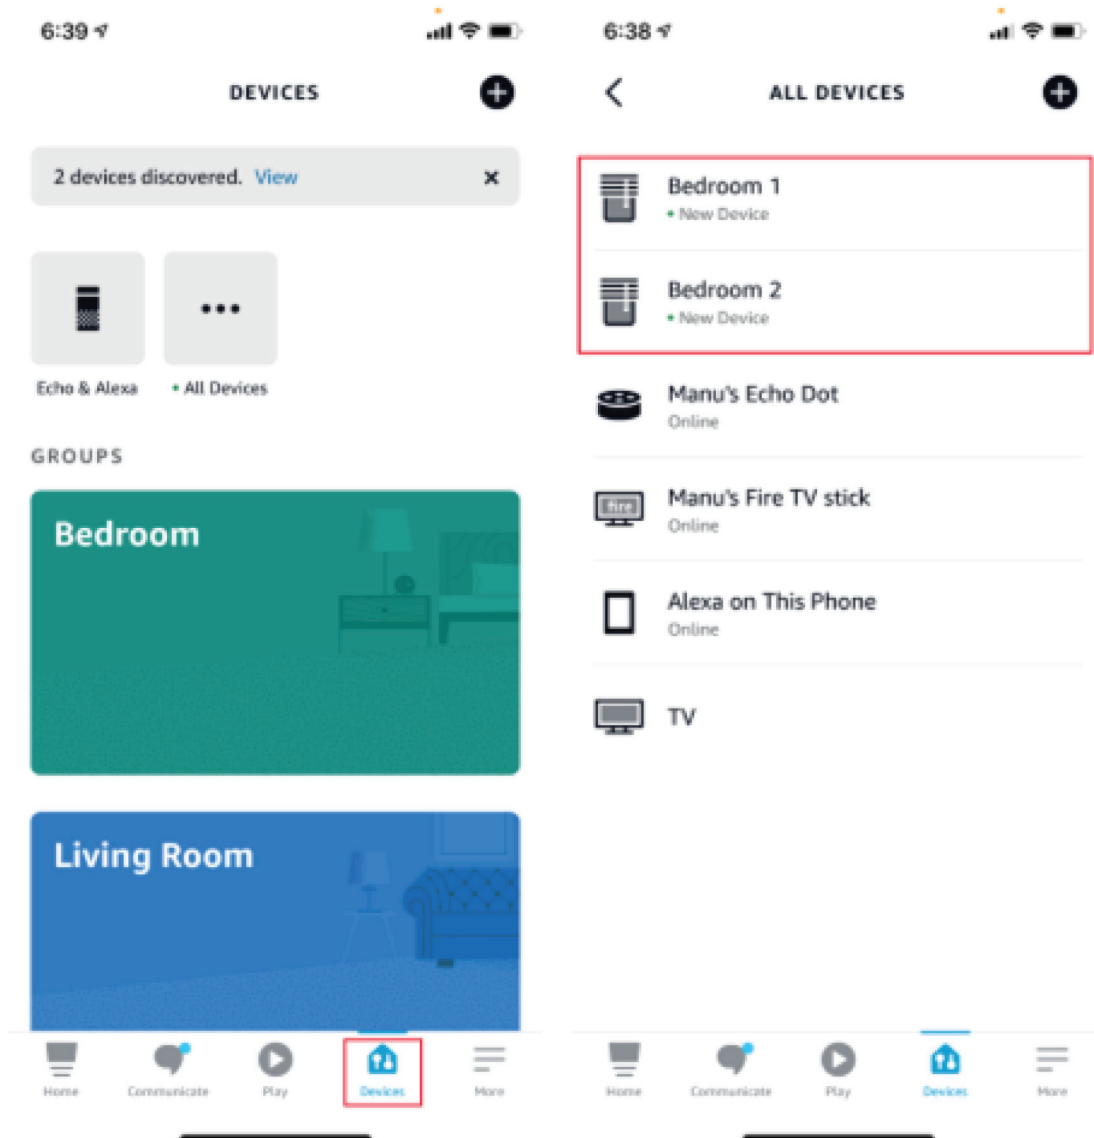

10. You can now find all of your SmartShades under the "Devices" screen, which can be assigned to Groups within Alexa.

Notes:

- Renaming SmartShades in the RYSE app will be reflected in the Alexa app, but may require exiting the Alexa app and relaunching it.
- Renaming SmartShades in the Alexa app will NOT be reflected in the RYSE app.
- Any Groups created in the RYSE app will NOT be carried over to the Alexa app.



Alexa Supported Voice Commands

The following voice commands are available for SmartShade:

Command	Description
"Open <i>SmartShade Name</i> "	Fully opens the window shade (e.g. 0%)
"Close <i>SmartShade Name</i> "	Fully closes the window shade (e.g. 100%)
"Set <i>SmartShade Name</i> to ___ percent"	Moves the window shade to the specified position
"Raise <i>SmartShade Name</i> "	Raises the window shade to next preset position (i.e. from 50% to 25%)
"Lower <i>SmartShade Name</i> "	Lowers the window shade to next preset position (i.e. from 25% to 50%)
"Raise <i>SmartShade Name</i> by ___ percent"	Raises the window shade by a set percentage
"Lower <i>SmartShade Name</i> by ___ percent"	Lowers the window shade by a set percentage
"Open <i>Group Name</i> "*	Fully opens all of the window shades within the group
"Close <i>Group Name</i> "*	Fully closes all of the window shades within the group

*Please note that any Groups created in the RYSE app will not sync over to the Alexa app. You would need to create separate Groups within Alexa and assign SmartShades to them in order to utilize the Group commands.


Connecting SmartShade to Google Home




Prior to connecting to Google Home, ensure you have downloaded the RYSE app and added your SmartBridge as well as all of your SmartShades to the RYSE app.

Note: Integration with Google Home requires the SmartBridge.


Follow these steps to connect your SmartShades to Google Home:

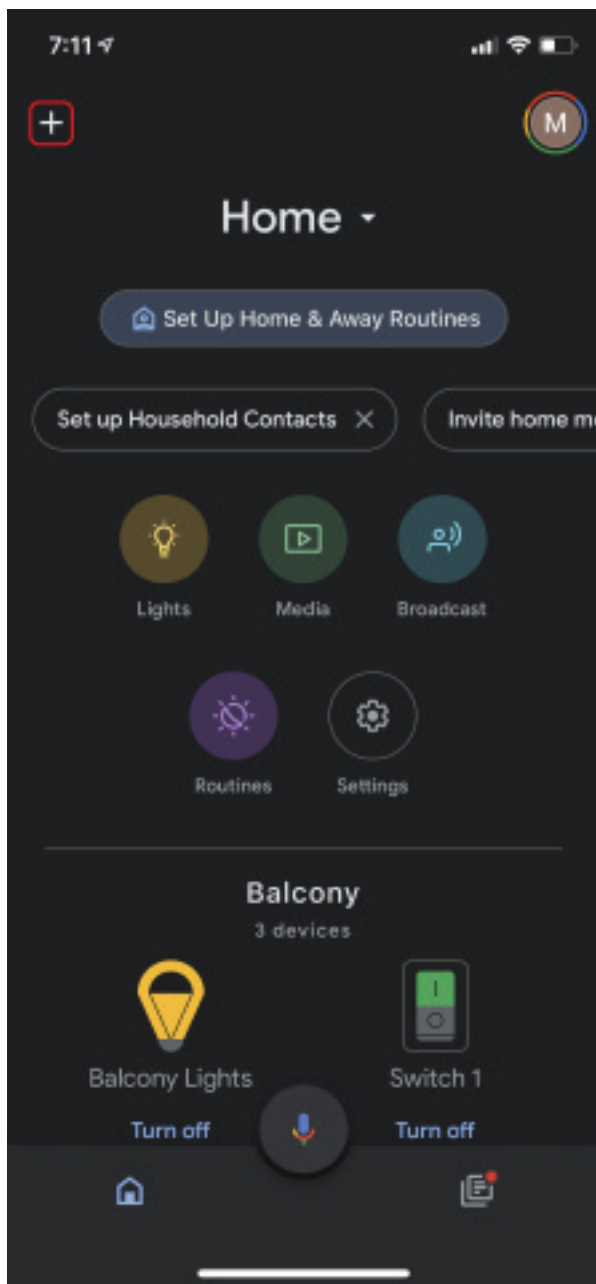


1. Open the Google Home app.
2. Tap the Plus icon on the top left of the screen.

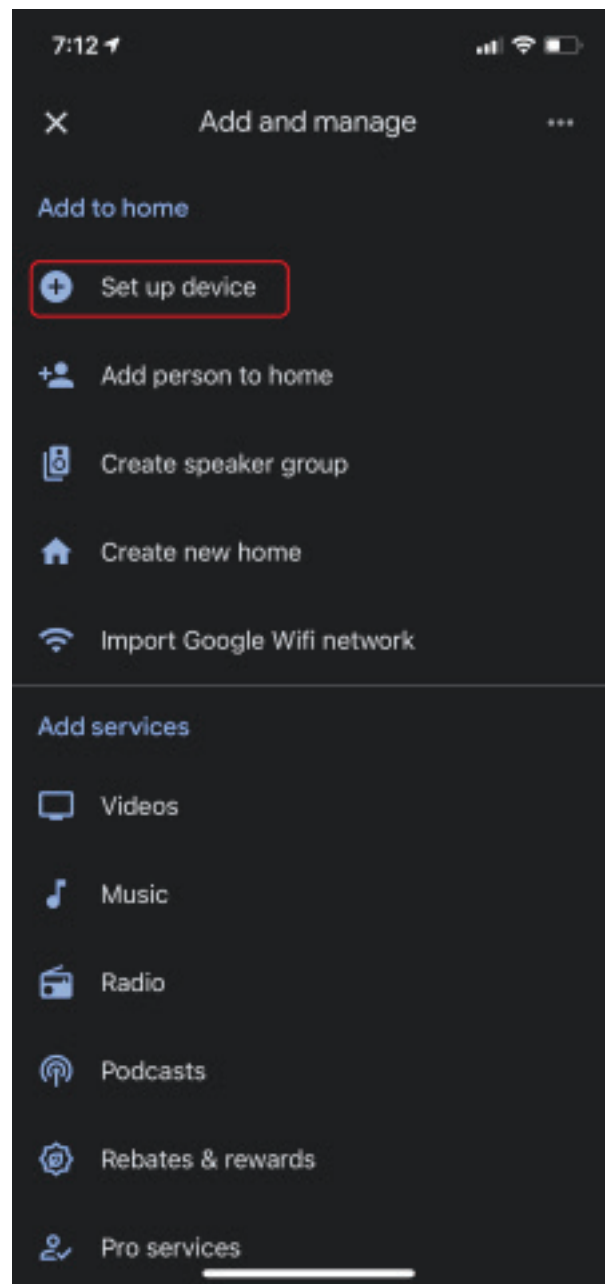


3. Select "Set up device".

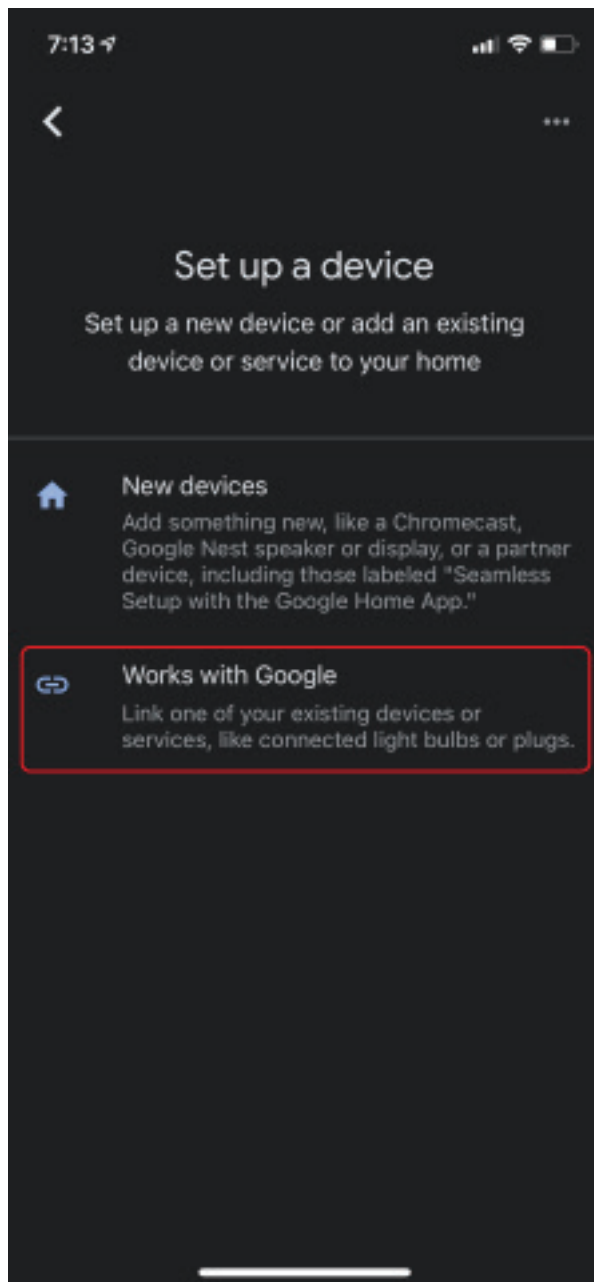


4. Tap "Works with Google".

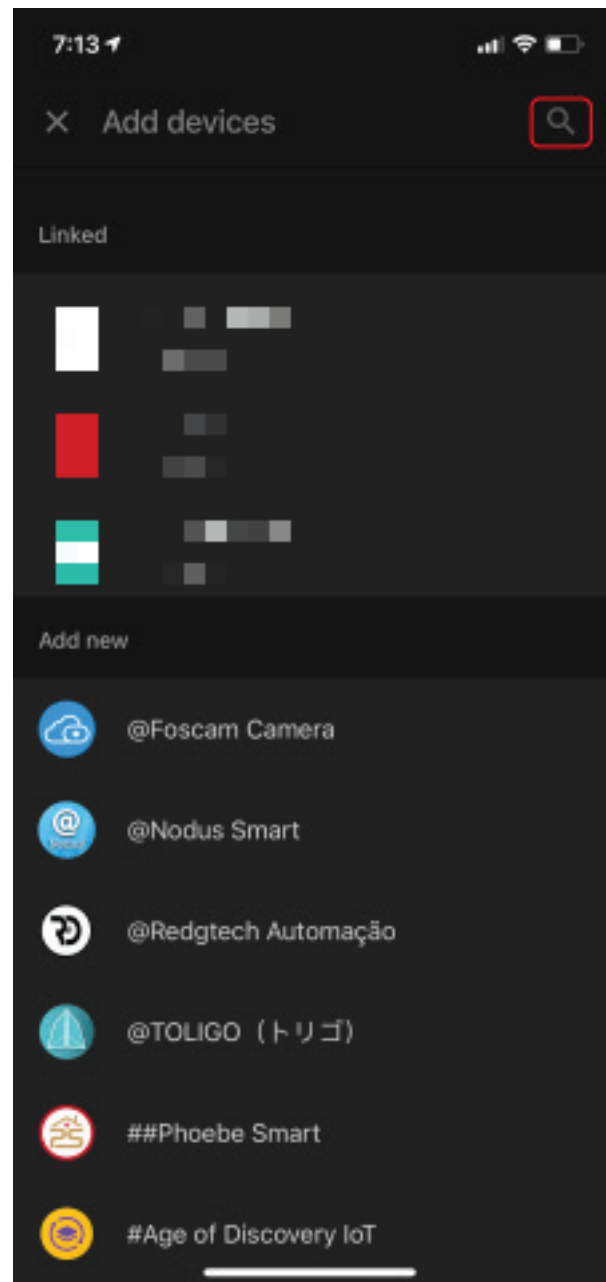


5. Tap the Search icon on the top right.

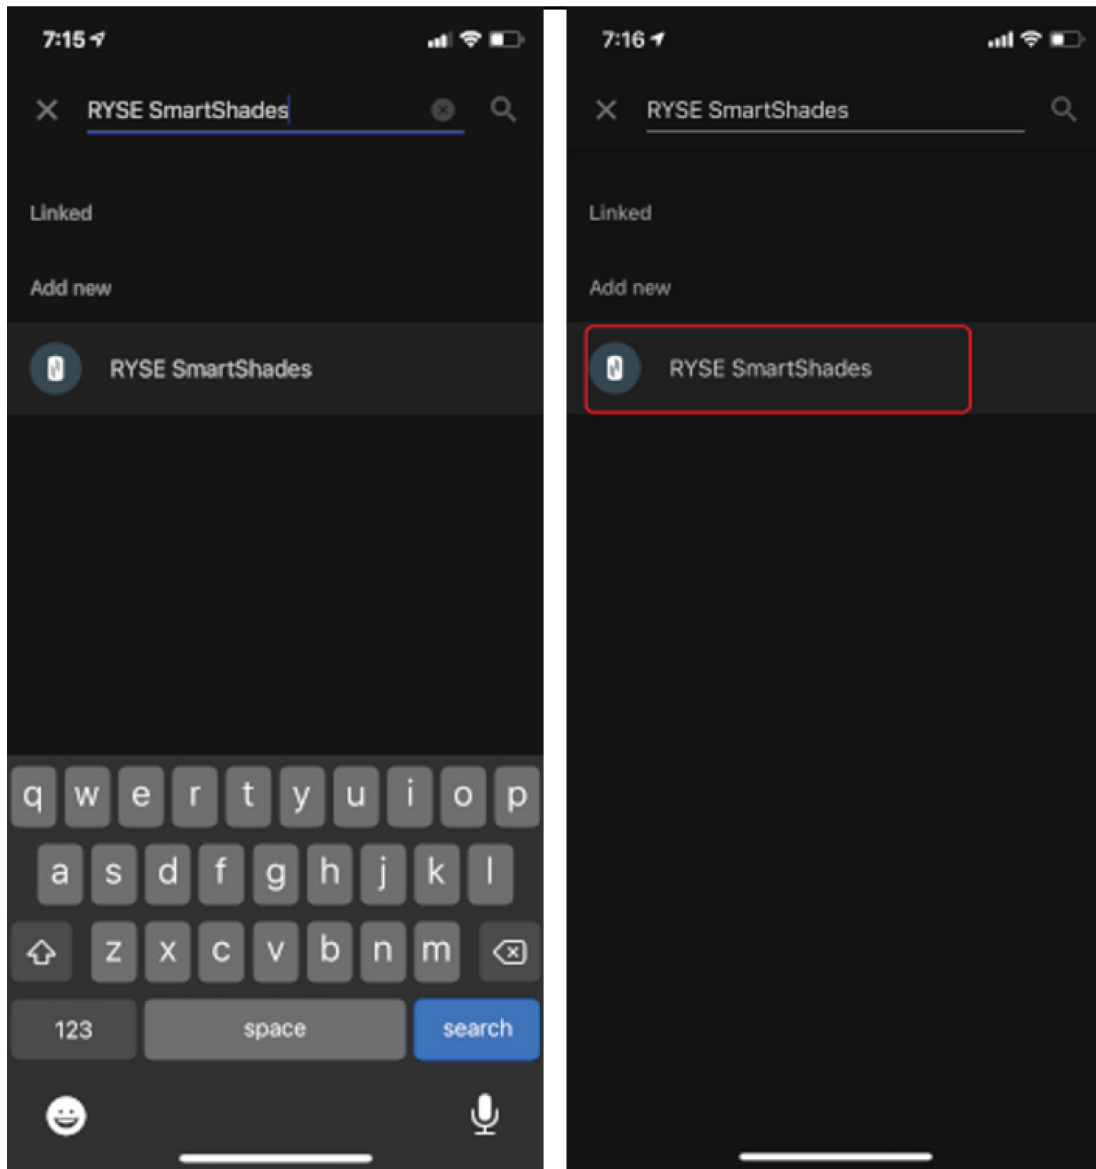


6. Search for "RYSE SmartShades". Tap "RYSE SmartShades" from the search results.

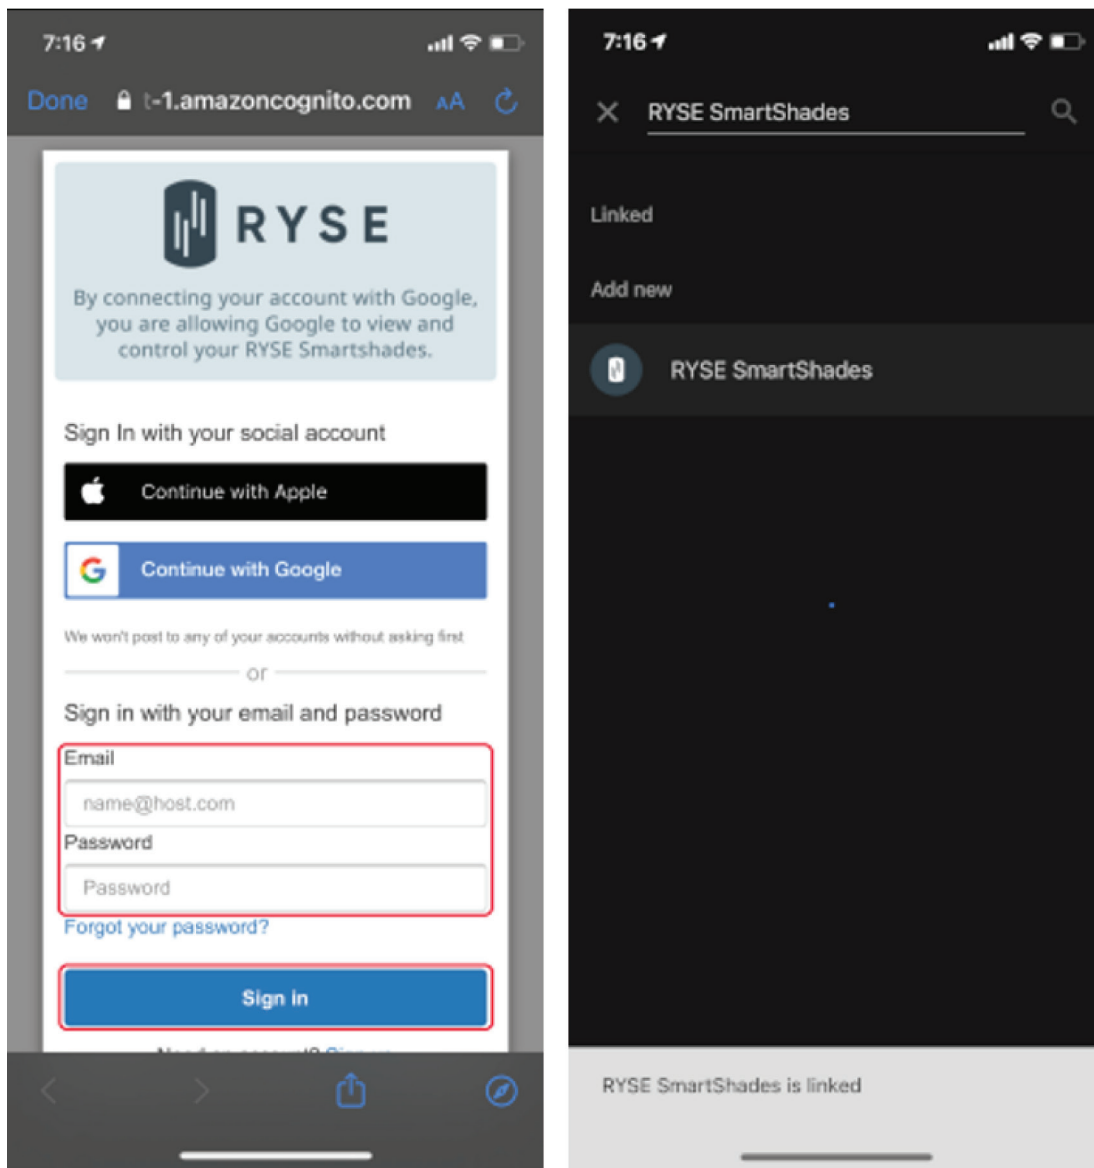


7. Enter the same email and password that you used to create an account in the RYSE app. Tap "Sign in". You will then see the next screen with the message "RYSE SmartShades is linked".

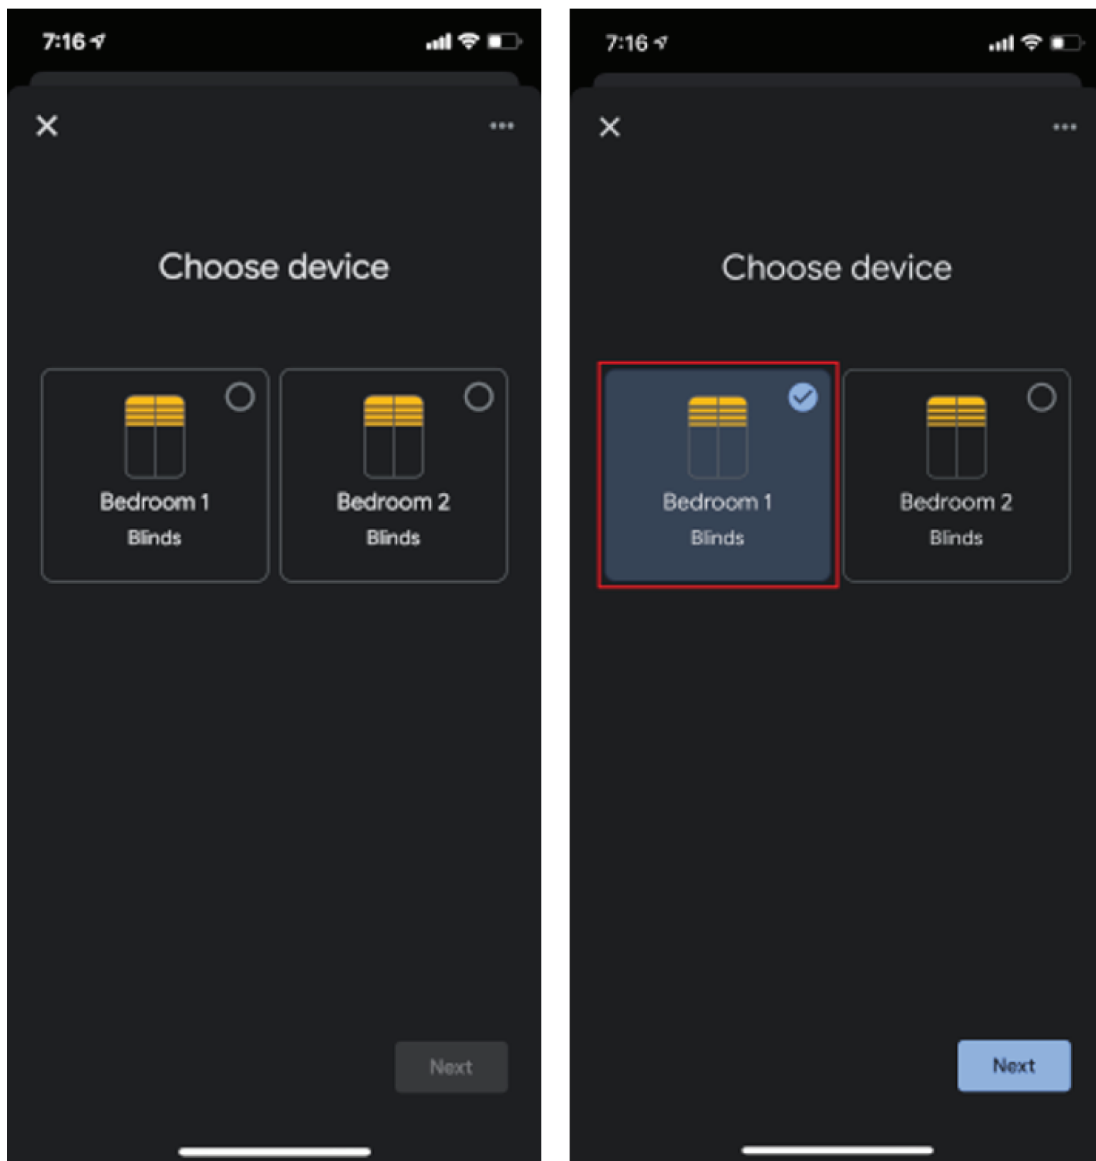


8. You will then see all of the SmartShades you added to the RYSE app. Select one of the SmartShades to begin adding it to the Google Home app. Note that you cannot add multiple SmartShades to the Google Home app at the same time.

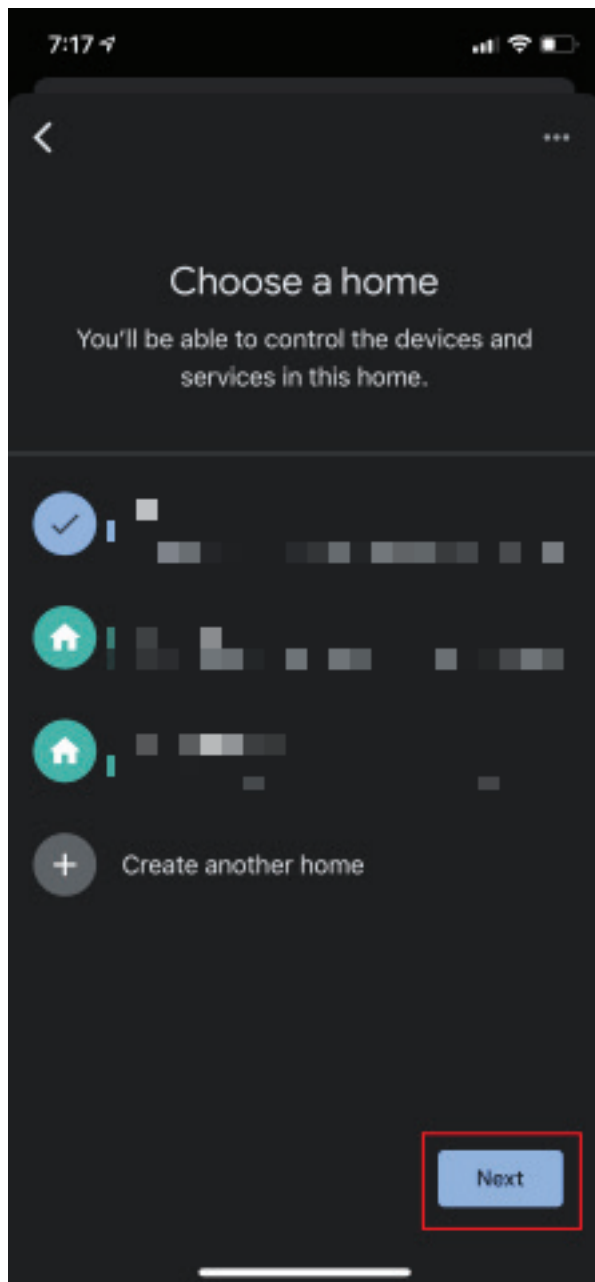


9. Choose a home to assign this SmartShade to and then tap "Next".

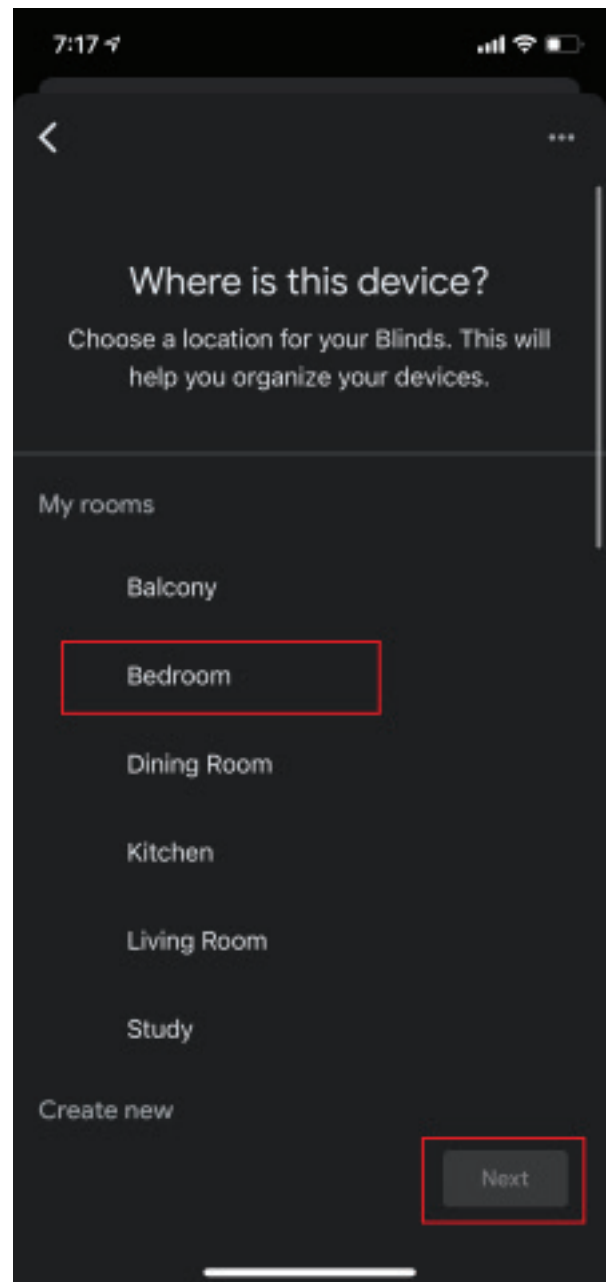

10. Assign the SmartShade to a room and then tap "Next".

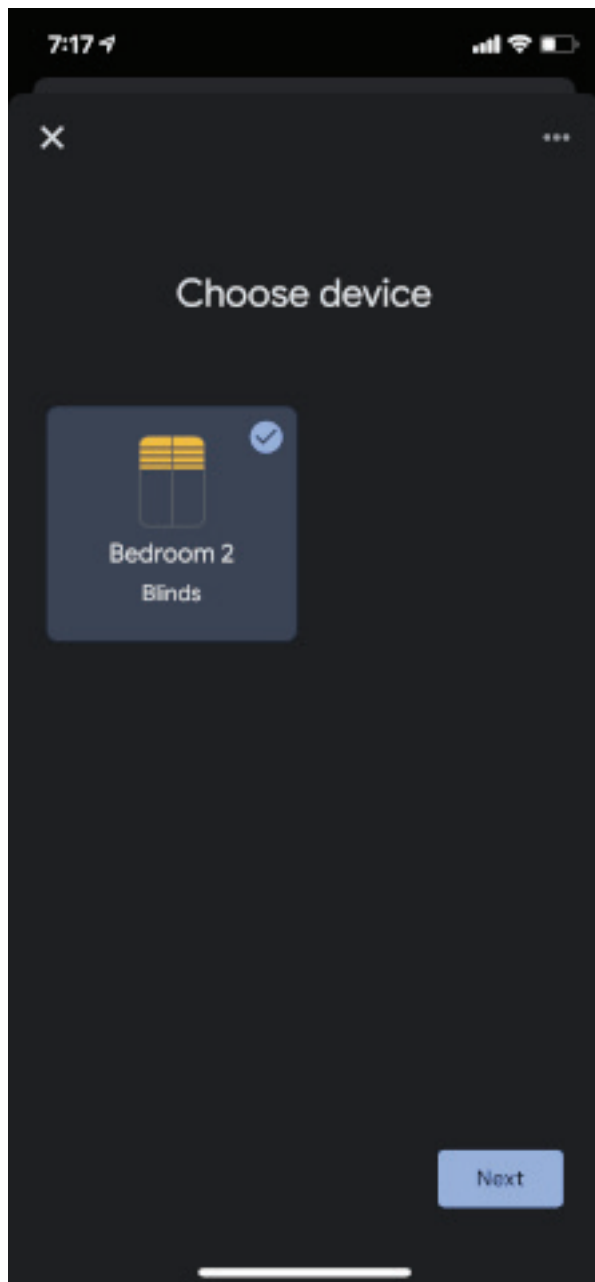

- 11.** You have to repeat steps 8-10 for all of the other SmartShades you would like to connect to Google Home.

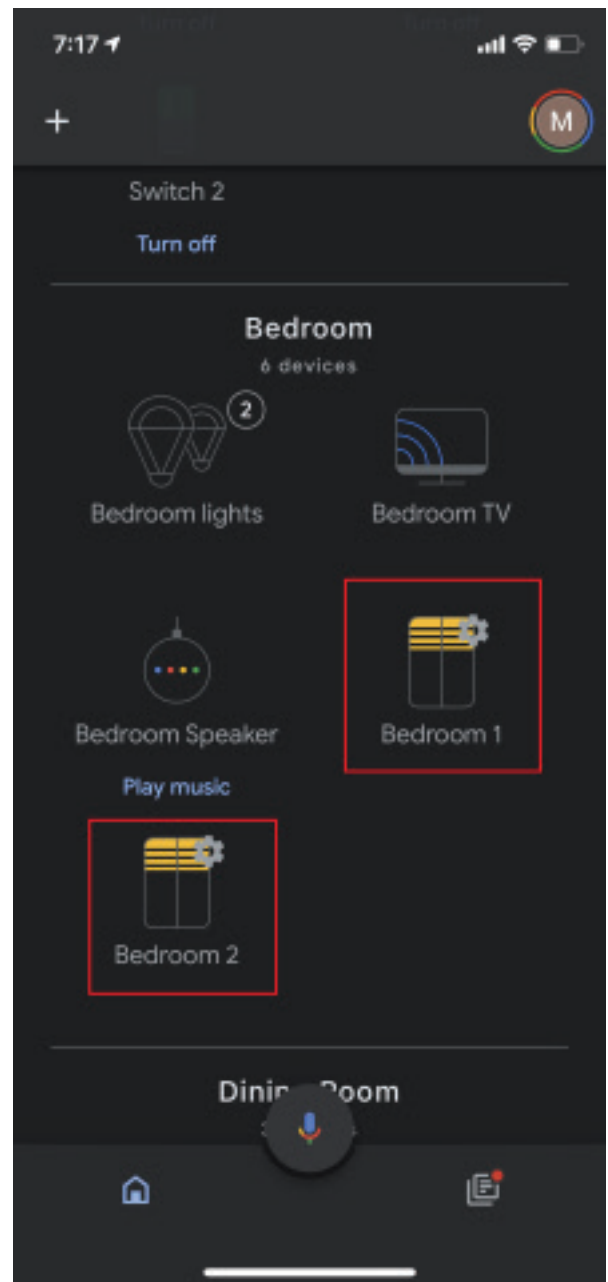

- 12.** The newly added SmartShades will appear under the homes/rooms you assigned them to. You can recognize them by the yellow window shade symbol.

You are now ready to open your shades by saying "Hey Google, open my shade!"



Google Home Supported Voice Commands

The following voice commands are available for SmartShade:aaa

Command	Description
"Open <i>SmartShade Name</i> "	Fully opens the window shade (e.g. 0%)
"Close <i>SmartShade Name</i> "	Fully closes the window shade (e.g. 100%)
"Set <i>SmartShade Name</i> to __ percent"	Moves the window shade to the specified position
"Raise <i>SmartShade Name</i> "	Raises the window shade to next preset position (i.e. from 50% to 25%)
"Lower <i>SmartShade Name</i> "	Lowers the window shade to next preset position (i.e. from 25% to 50%)
"Raise <i>SmartShade Name</i> by __ percent"	Raises the window shade by a set percentage
"Lower <i>SmartShade Name</i> by __ percent"	Lowers the window shade by a set percentage

Notes: Group commands are currently not available for Google Home.



If you have any questions or
experience issues with your RYSE
products, please visit our help center
at **support.helloryse.com**