



BATHROOM VANITY INSTALLATION GUIDE


GETTING STARTED

Ensure that you have gathered all the required materials that are needed for the installation.

Ensure that your bathroom door is adequately supported, and the finished door is level.

Ensure that there is adequate support behind the bathroom wall before installation.



TOOLS AND MATERIALS:

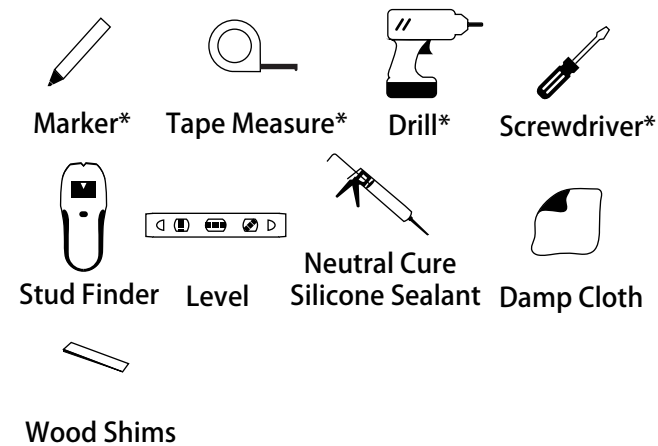

NEVER LIFT THE VANITY TOP FLAT




NEVER CARRY THE VANITY TOP FLAT

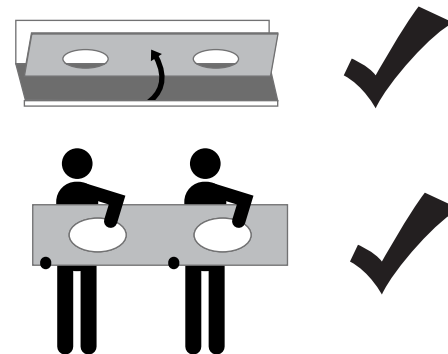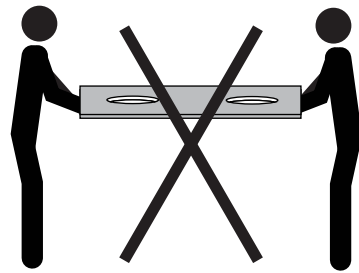

BATHROOM VANITY INSTALLATION GUIDE


Step 1: Cabinet Installation

1. Determine the location where you would like to install your vanity.

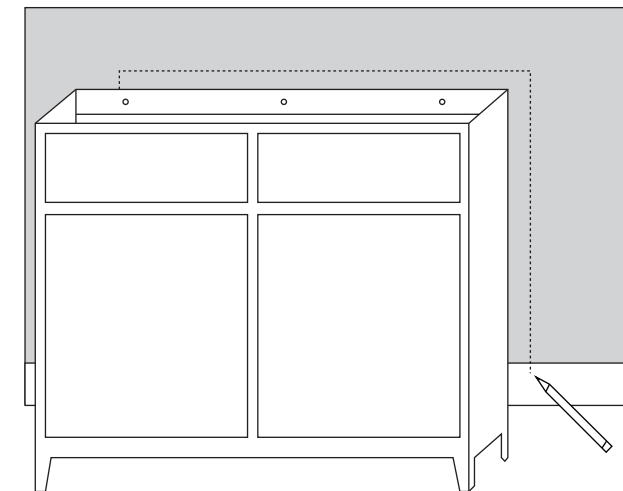


2. Locate and mark the location of the studs to which you will fasten your vanity. You can locate studs by using a stud finder.


Important: If the studs in your bathroom do not line up to the mounting location for your vanity, wood blocking can be installed between the studs using standard 2 x 4' s. If wood blocking needs to be installed behind the finished wall, we recommend consulting a professional if you are unfamiliar with this type of installation.

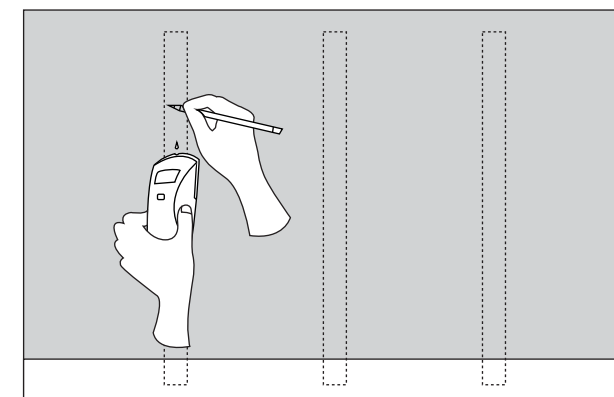

3. Place the vanity in the installation location. Verify that the vanity cabinet is level. If the vanity is not level, adjust the feet (if applicable) or use wooden shims to adjust as necessary.

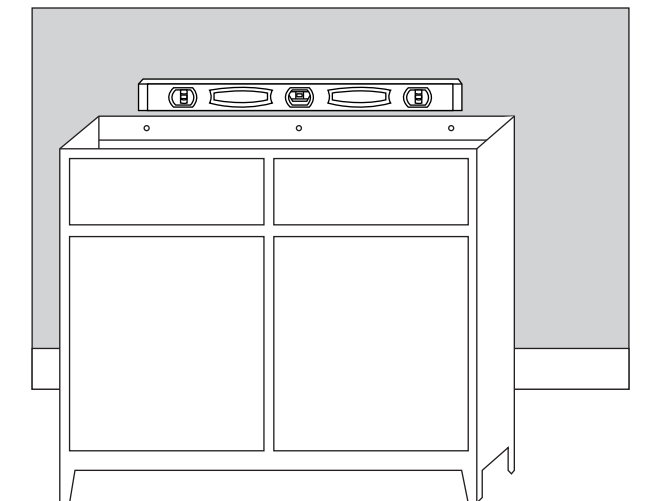

4. Attach the vanity to the wall by screwing through the back of the vanity cabinet. Use the marked stud locations as a guideline. Proceed to Step 2 for attaching your counter top.

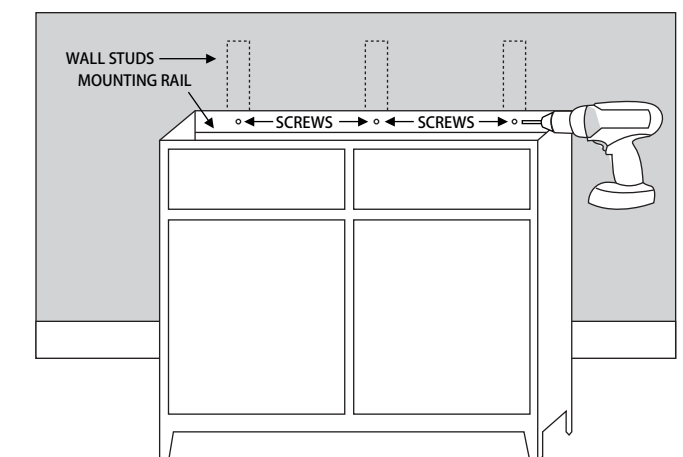




BATHROOM VANITY INSTALLATION GUIDE


Step 2: Counter Top Installation

1. Apply a bead of silicone sealant around the top edge of the vanity cabinet.

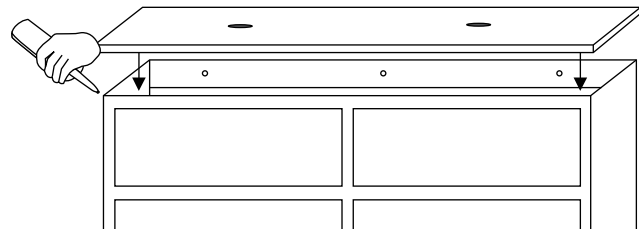


2. With assistance from another person, slowly and carefully set the counter top onto the vanity cabinet. Once positioned, press firmly in to place. Wipe away any excess sealant using a damp cloth.


Important: The counter top is very fragile. Take caution when handling, and have someone assist you.

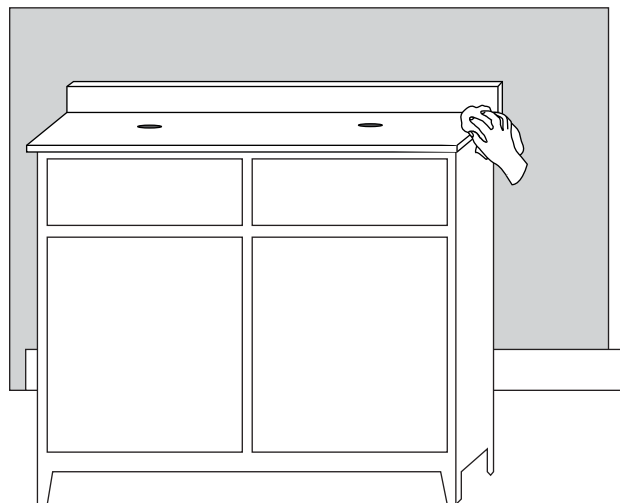

3. If you are installing a side-splash and/or back-splash, place a generous amount of silicone sealant on the back of it and press it into place against your bathroom wall. Fill any gaps that are left with silicone sealant. Wipe away any excess sealant with a damp cloth.

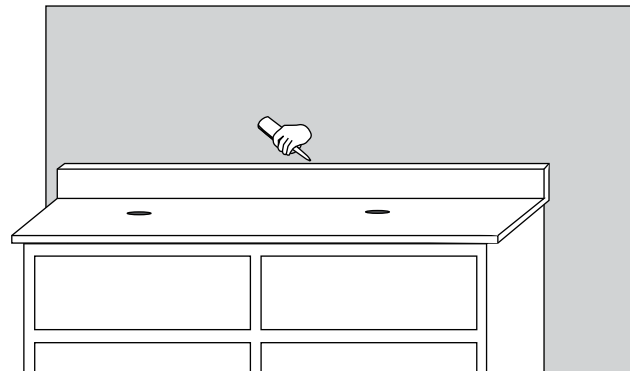


4. Allow the silicone sealant to dry, which could take up to 24 hours.

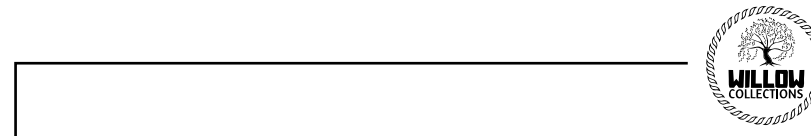

BATHROOM VANITY INSTALLATION GUIDE

5. For stone tops, such as marble and granite, it is recommended that you apply a high-quality sealer to protect from staining and discoloration. Stone sealer should be reapplied once or twice per year, depending upon usage.

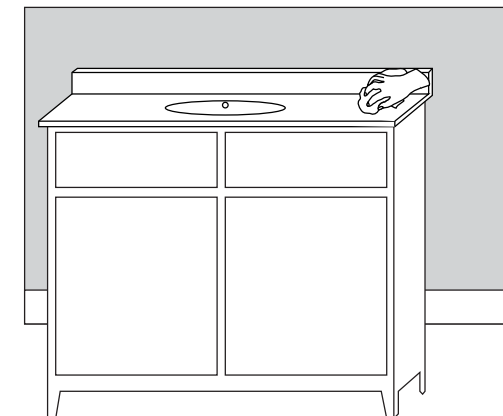

BATHROOM MIRROR

INSTALLATION INSTRUCTIONS

Before installing, read entire Bathroom Mirror Installation Instructions. Observe all local building and safety codes.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls or for personal injury during installation.

TOOLS AND MATERIALS:

Stud Finder
Level

Pencil
Drill

Tape Measure

INSTALLATION

1. With the help of another person, center the mirror above the sink at the appropriate height and mark a line at the top of the mirror on the wall.
2. Locate and mark the position of the wall studs to which you will fasten your mirror. You can find studs by listening for a solid sound as you knock on the wall or by using a stud finder.
Tip: If the studs in your bathroom do not line up to the mounting location for your mirror, wood blocking can be installed between the studs using standard 2 x 4's. We recommend consulting a professional if you are unfamiliar with this type of installation.
3. Measure the location of the D rings or keyhole brackets on the back of the mirror to determine the location of your mounting hardware. Use the top of the mirror as your guideline. Use your level to verify that the mounting hardware is properly aligned.
4. Drill pilot holes and install the mounting hardware. Because wall construction and materials vary from home to home, the appropriate mounting hardware may need to be purchased from your local hardware store. Consult a professional if you are unfamiliar with this type of installation.
5. With the help of another person, hang your mirror by attaching the D rings or keyhole brackets to the mounting hardware.