



# R931K-\*\*

TUB PLATE  
PLACA



ADAPTER  
ADAPTADOR

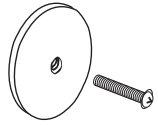

## INSTRUCTIONS:

1. Remove old overflow plate.
2. Install new faceplate using screw provided.
3. Remove old drain body using plier handles or similar tool.
4. Use 792BB brass adapter for 1-7/8"-11.5 drains, or remove for 1-5/8"-16 bath shoes.
5. Making sure threads are clear of debris, apply a thin bead of silicone and screw in new drain body.

## INSTRUCCIONES:

1. Quitar la placa usada del rebosadero.
2. Instale la placa nueva usando el tornillo provisto.
3. Desaloje el cuerpo del desagüe usando pinzas para manijas o una herramienta semejante.
4. Utilice un adaptador de latón 792BB para desagües de 1-7 / 8"-11.5, o quítese las zapatillas de baño de 1-5 / 8"-16.
5. Asegurándose de que las roscas estén libres de escombros, aplique una fina capa de silicona y atornille el nuevo cuerpo de drenaje.

## WESTBRASS

2429 E. Olympic Blvd.  
Los Angeles, CA 90021  
(213) 627-8441  
orders@westbrass.com  
www.westbrass.com

UPC Sticker