
ASSEMBLY INSTRUCTIONS

ASSEMBLY HARDWARE









6 WASHERS

6 M6X35 SQUARE SHANK BOLT

2 L-SHAPED CONNECTION TURF

INSTRUCTIONAL VIDEO



Scan QR code

Visit http://www.americanlawnmower.com/howto/uhandle Call (844) 531-3063 if further instruction is needed.

HANDLE ASSEMBLY INSTRUCTIONS

- Insert the two (2) center handle pieces into the left and right side of the top handle piece. The center handles are interchangeable. The dimpling around the hole does not indicate on which side the tube is to be placed. Secure the center handles to the top handle using the two (2) M6X35 bolts and wingnuts provided. It is recommended that the bolts are inserted from the front to the rear with the wingnuts to the rear of the handle. (FIGURE 1)
- Fasten the upper handle subassembly that you assembled in the preceding step to the lower handle subassembly using the four (4) remaining M6X35 bolts and wing nuts provided.

ATTACHING THE HANDLE TO THE MOWER

- DO NOT attempt to attach the handle to the bolts on the roller assembly at the rear of the mower. This is incorrect! As you follow the instruction below, refer to FIGURE 2 for more information.
- After assembling the handle, fit the holes at the end of the lower portion of the handle on the left and right side, over the short posts extending out from the side plates.


REPLACEMENT PART KITS





Scan OR code

Visit https://americanlawnmower.com/search?q=1804-18

Call (844) 531-3063 to order replacement parts.

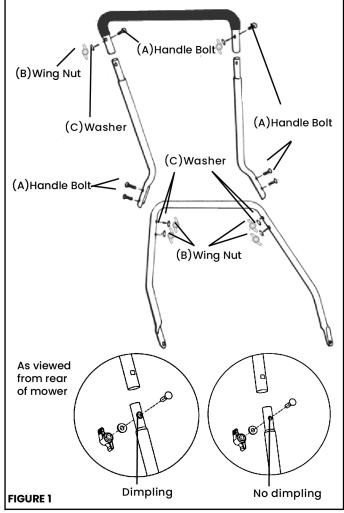

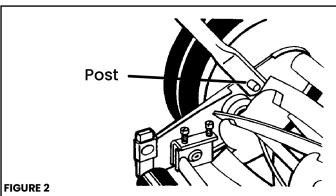

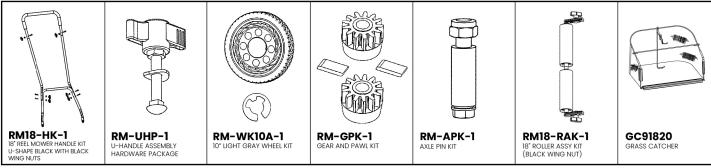

ALL PARTS ARE SOLD FACTORY DIRECT. ALL SHIPPING CHARGES ARE THE RESPONSIBILITY OF THE PURCHASER.

USAGE AND CARE

- To prevent unneccessary wear on blades, pull the reel mower rather than push when you are not cutting grass.
- Apply a light coating of oil or WD-40 to the blades after every use.