




DOUBLE COLD FRAME
Assembly instruction

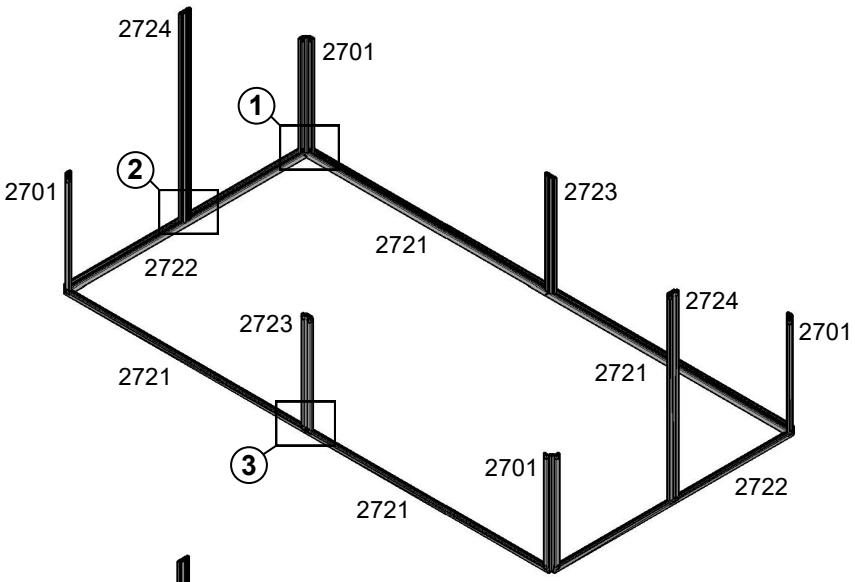


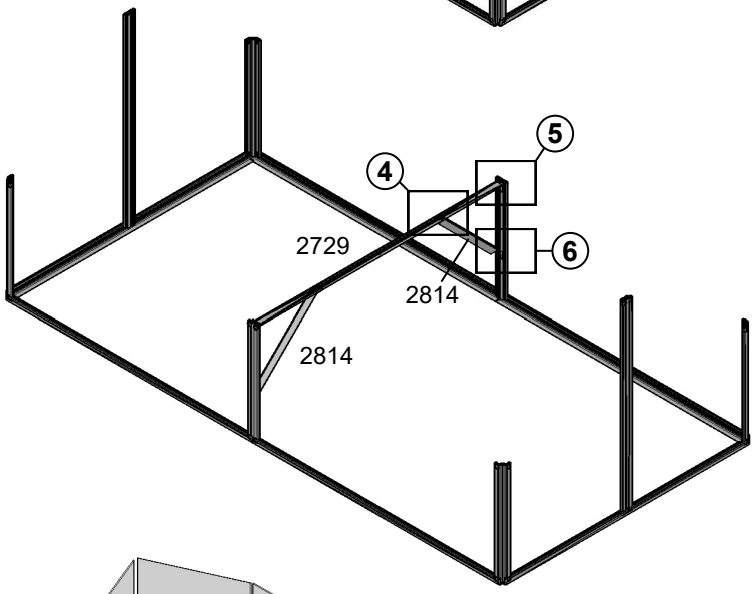


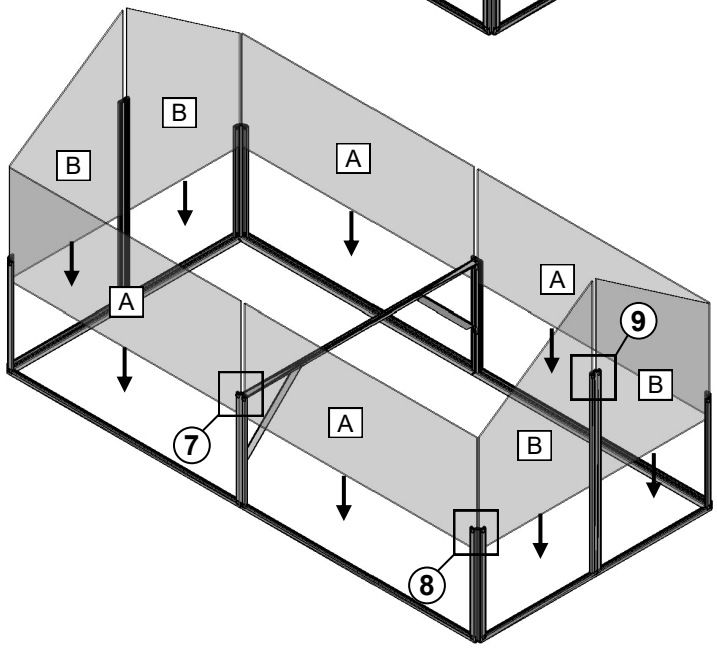


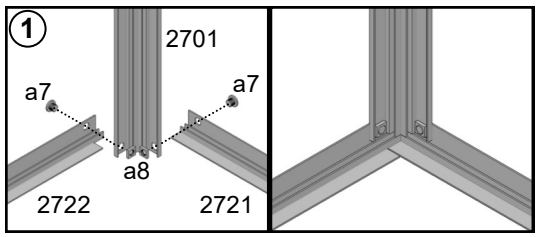


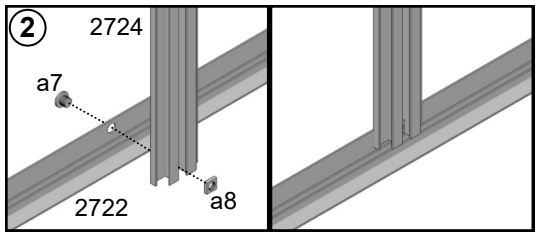


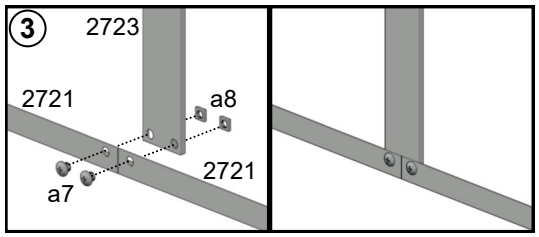


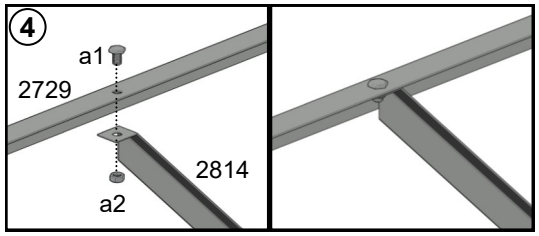


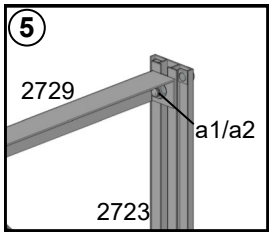

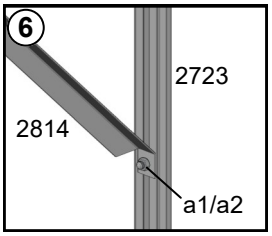


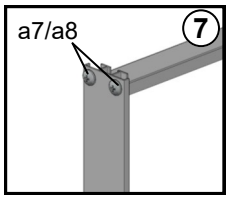


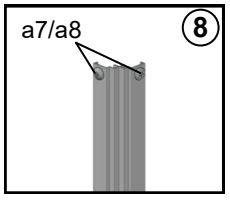


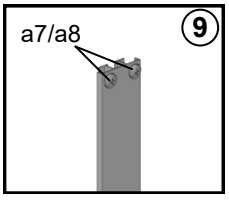



Screws and nuts installed first (not tighten) before top frame and PC panel inserted

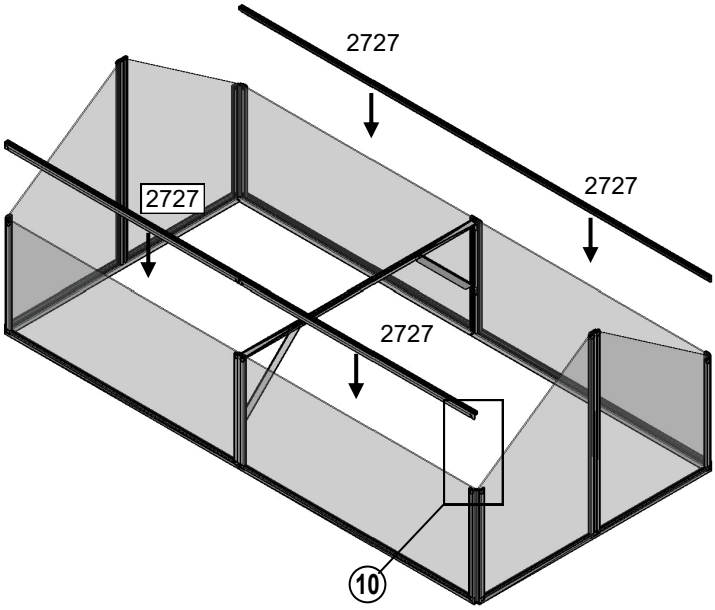


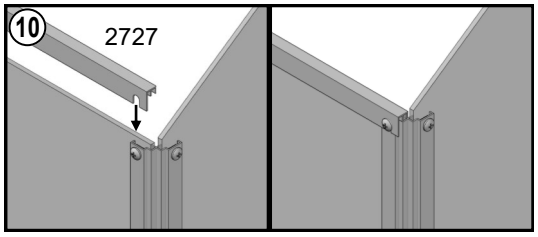


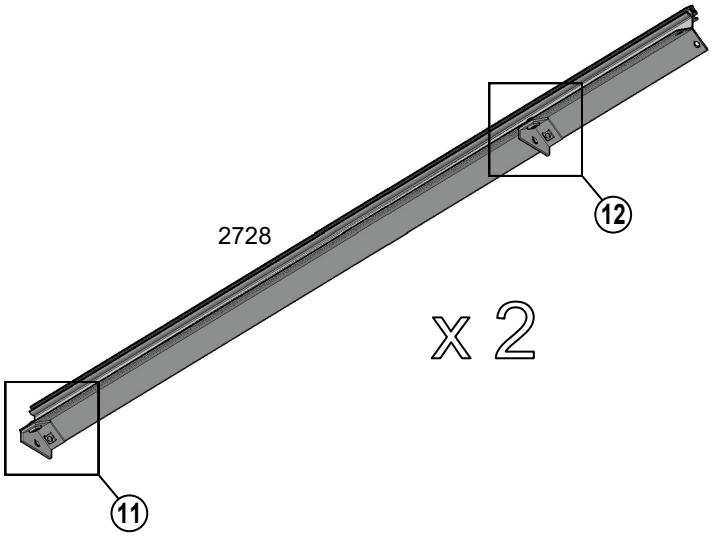


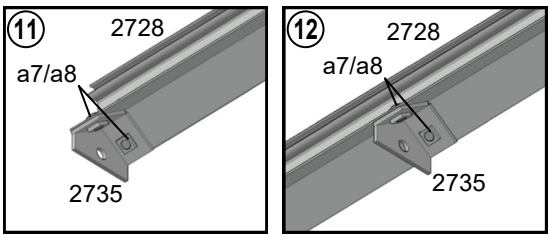

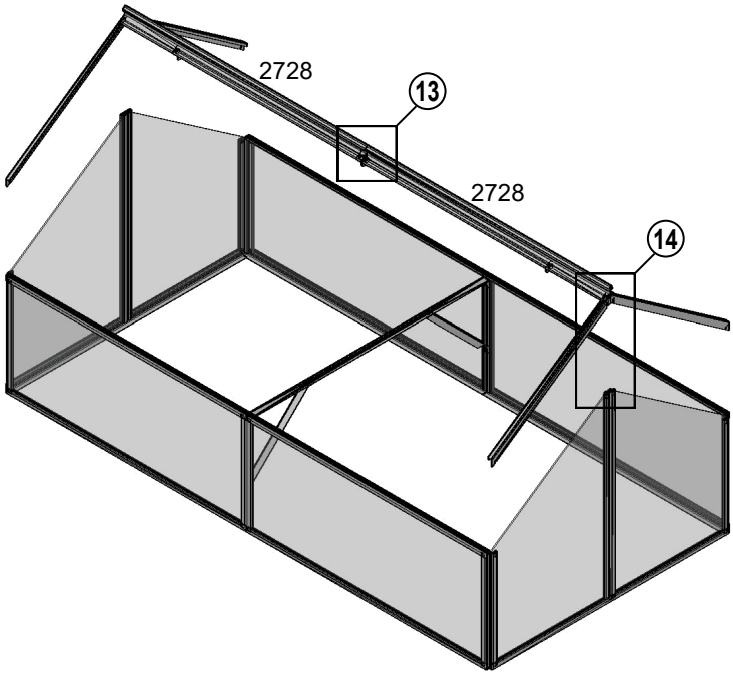


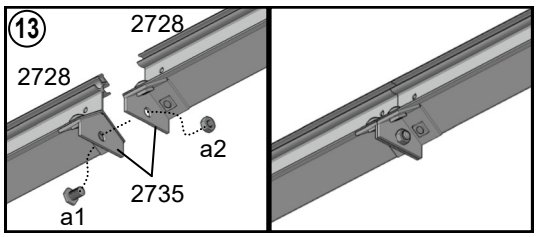

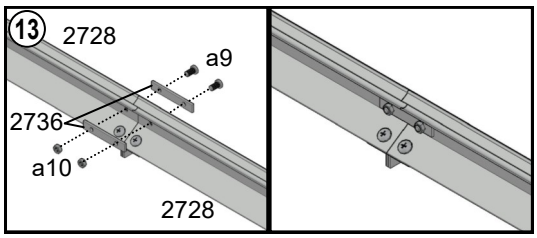


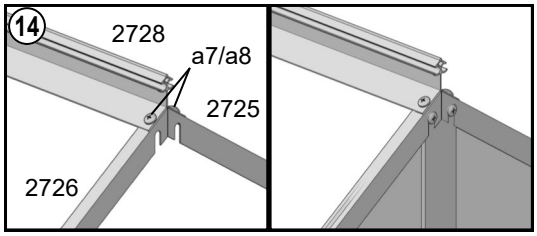



Note: Part #2725 & #2726 should be connected with part #2728 firstly, and then were fixed on the part #2701 & #2724.

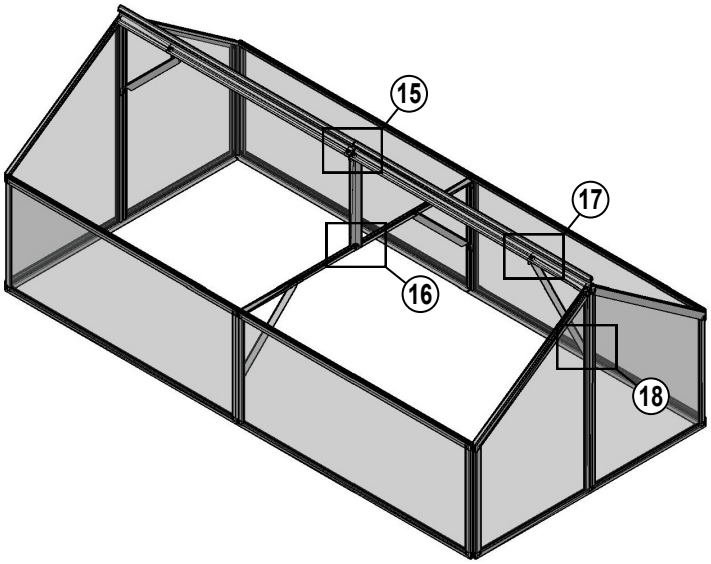



Loose a1/a2 first, then retighten with #2730 again

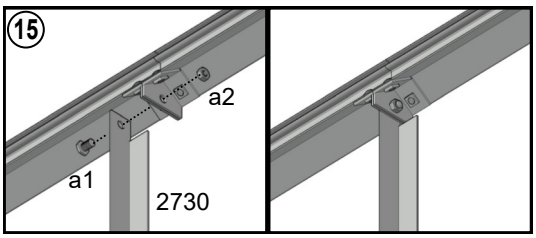


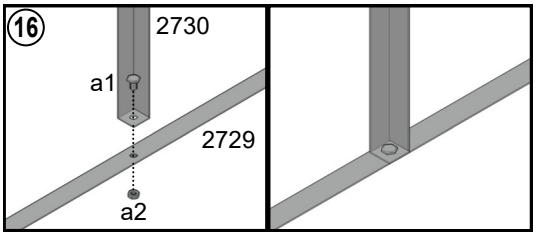


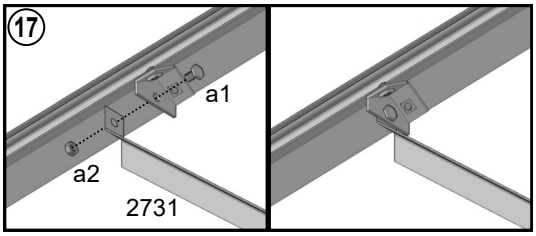


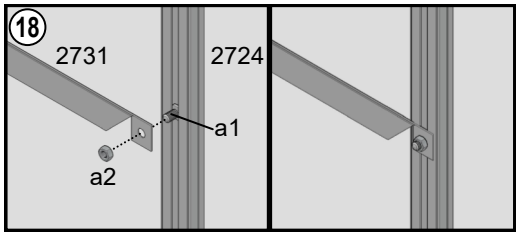

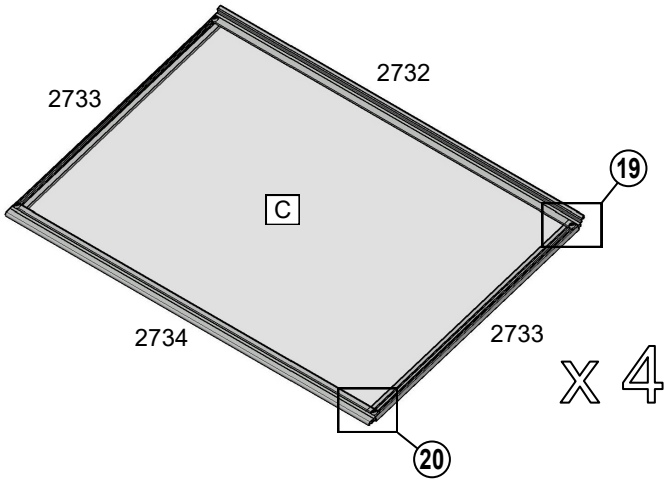


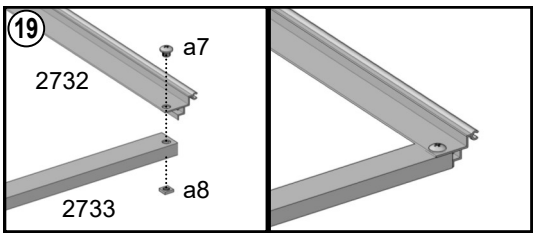


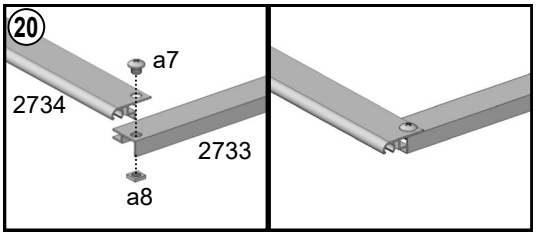


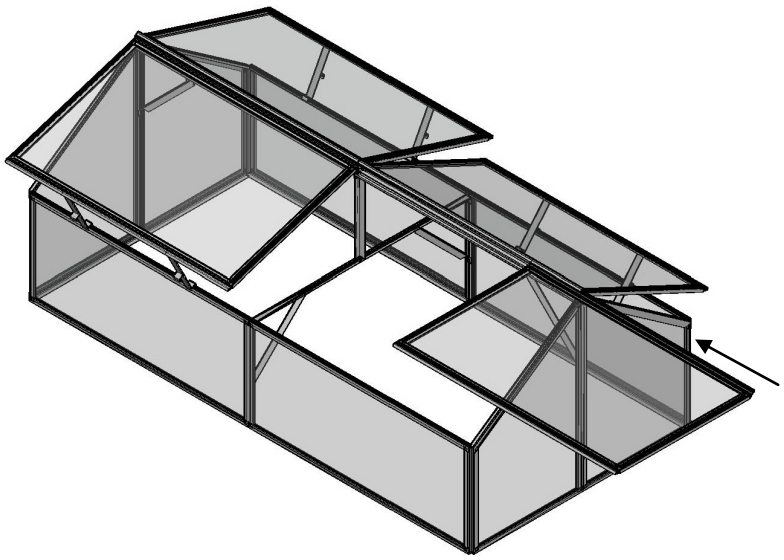


Mathes raised garden beds in the same size.

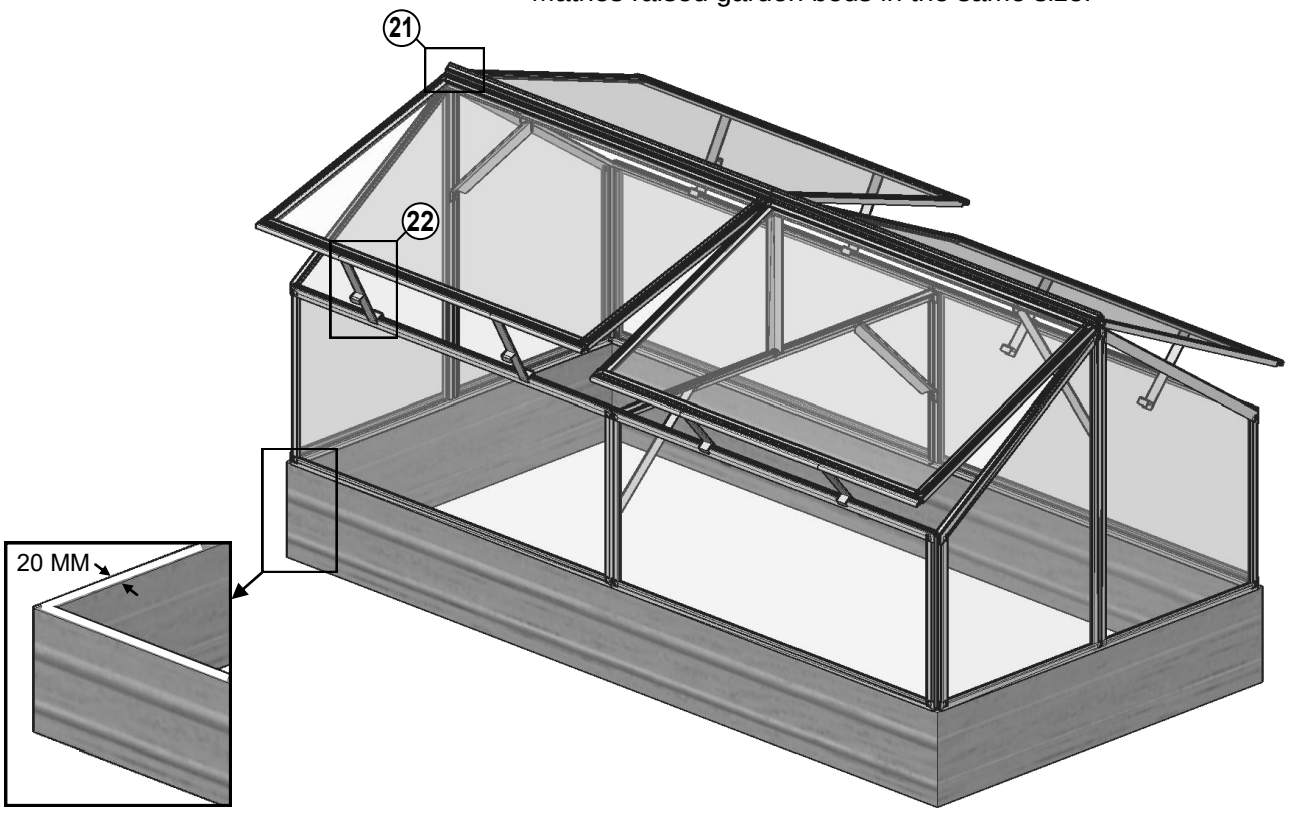

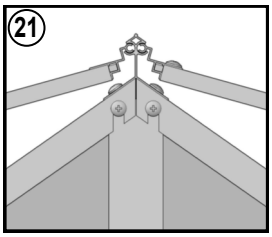

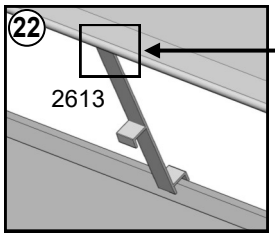

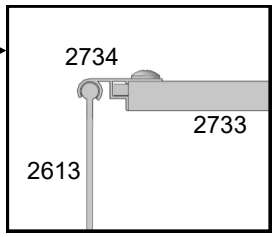

The list of Section

Part No.	Length (mm)	Drawing	QTY
2701	364		4
2721	889		4
2722	879		2
2723	364		2
2724	664		2
2727	889		4
2725	550		2
2726	550		2
2728	899		2
2729	911		1
2730	324		1
2814	335		2
2731	335		2
2732	900		4
2733	527		8

Part No.	Length (mm)	Drawing	QTY
2734	900		4
2613	20		8
2735	-		4
2736	-		2
a7	M6x4.8		58
a8	M6		58
a9	M4x8		2
a10	M4		2
a1	M6x10		12
a2	M6		12
	Φ3		4
A	882x373	Polycarbonate panel	4
B	432x373/672		4
C	872x538		4