

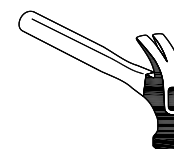


ASSEMBLY INSTRUCTIONS

MID CENTURY - MODERN CHEST 3 DRAWERS

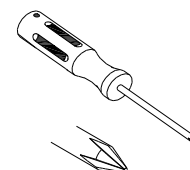

1:50 Hs

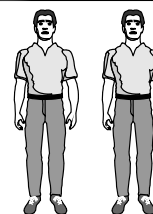

HARDWARE INCLUDED




A - 8,0x30 Wood Dowel
Qty. 24




B - 4,0x30 Screw
Qty. 36



C - 4,0x14 Screw
Qty. 12




D - 4,0x45 Screw
Qty. 06



F - 7,0x70 Screw
Qty. 04



H - M4x25 Screw
Qty. 06




I - Knob
Qty. 02




J - Knob
Qty. 02




K - 3,5x16 Screw
Qty. 12




N - Z Key
Qty. 01



O - 10x10 Nail
Qty. 26

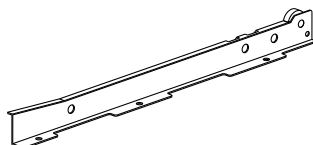

P - Slide Left 330mm
Qty. 03

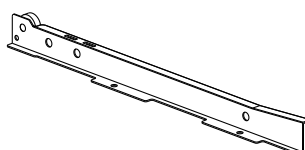


Q - Slide Right 330mm
Qty. 03


Anti-Tip Kit




4,0x30 Screw
Qty. 02



3,5x14 Screw
Qty. 02



Plastic wall bracket
Qty. 02




Nylon strap 300x4,8mm
Qty. 01




Plastic screw anchor 6mm
Qty. 02



PARTS INCLUDED

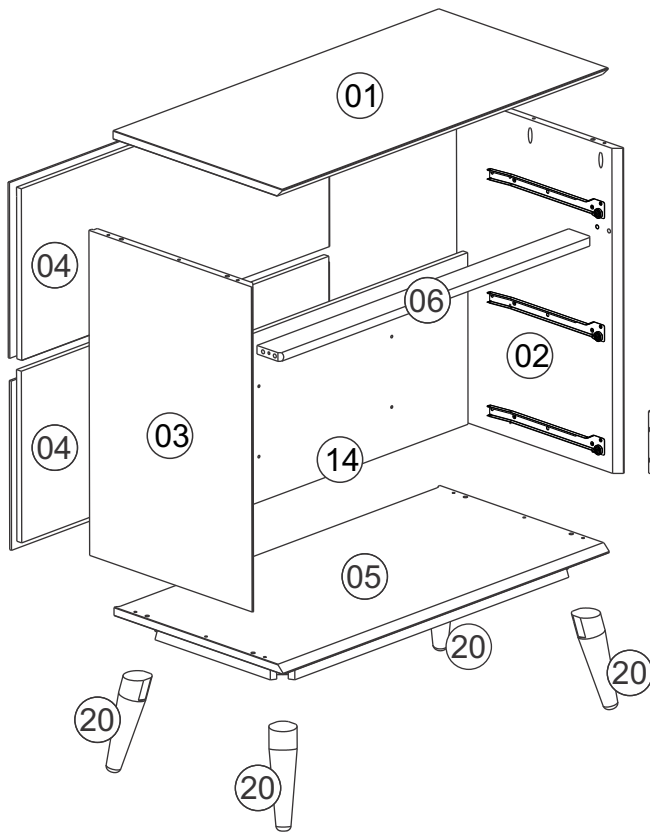

The side drawer with WARNING LABEL, should be mounted to the top drawer.

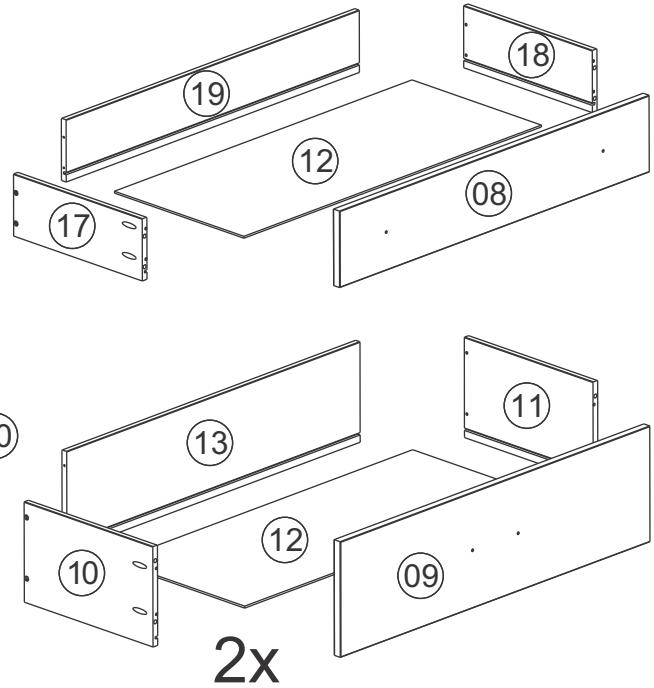


STEP 1

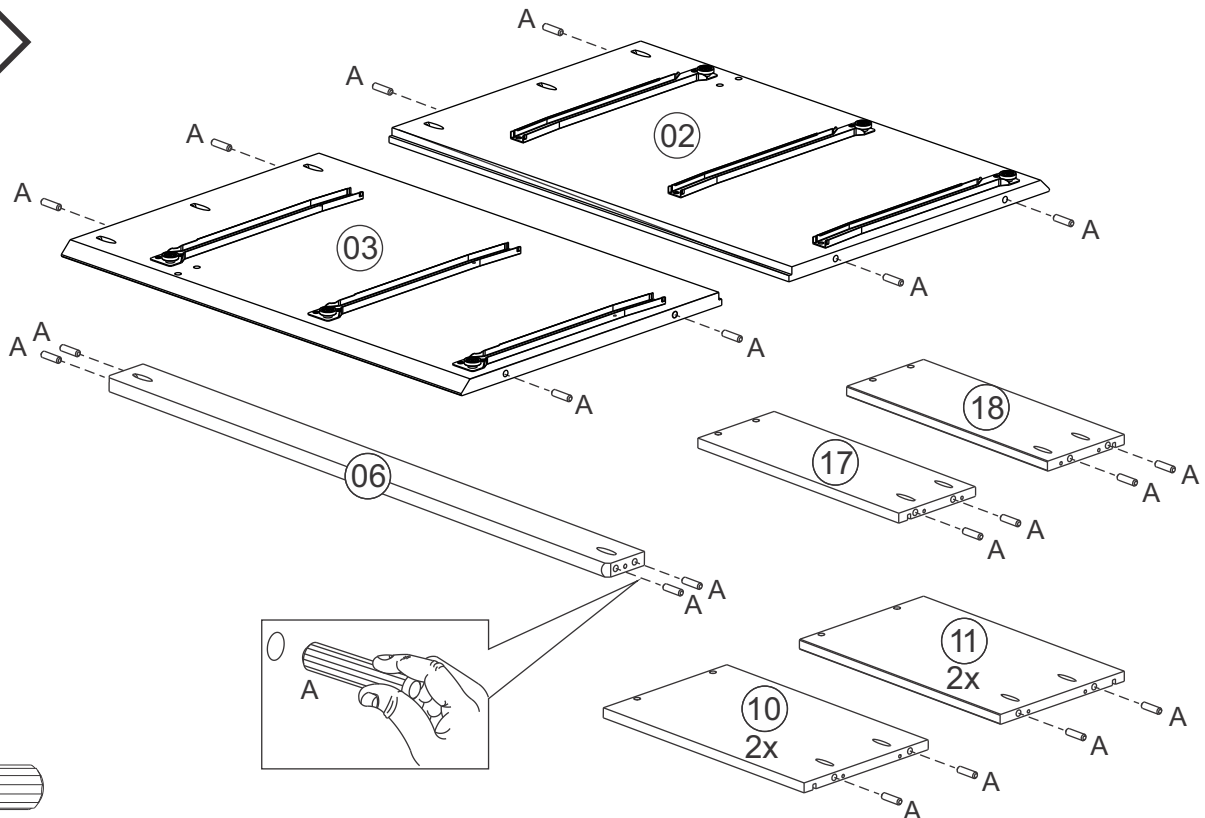


A - 8,0x30 Wood Dowel
Qty. 24

STEP 2

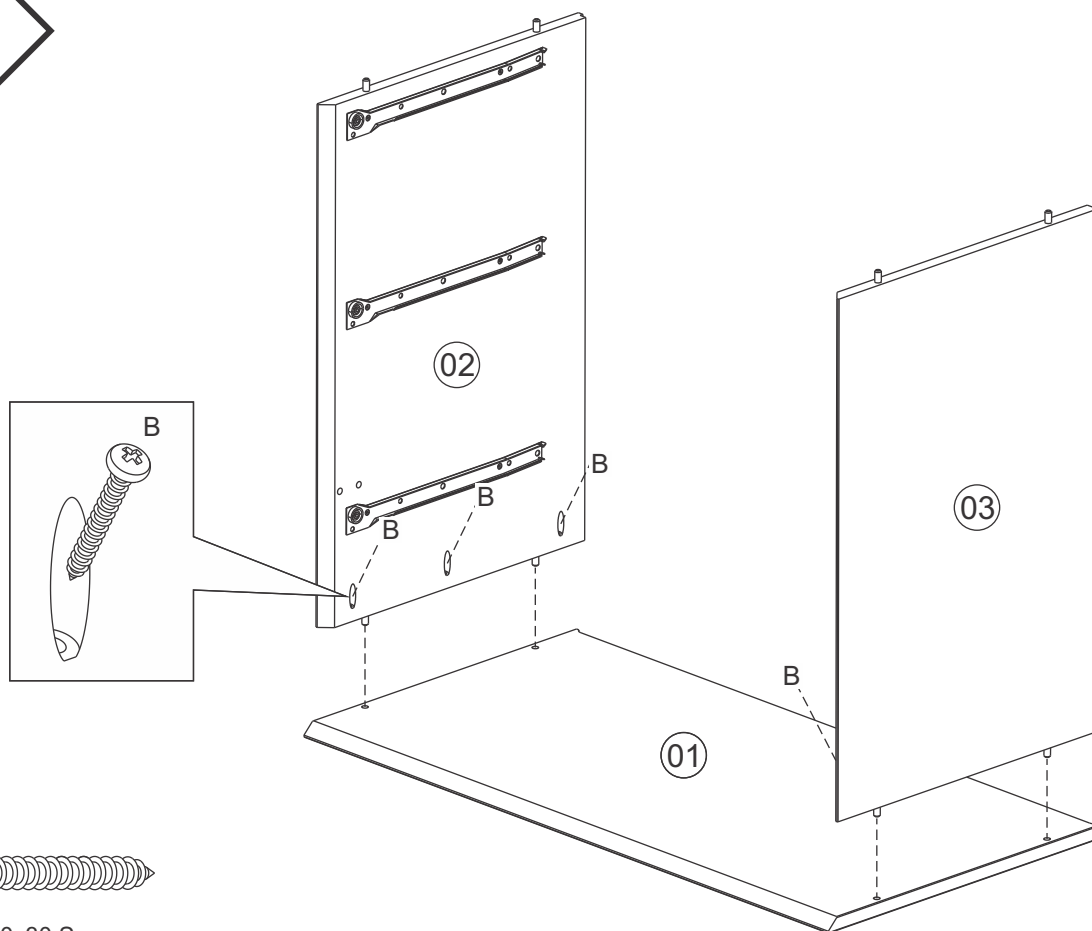


B - 4,0x30 Screw
Qty. 06

STEP 3

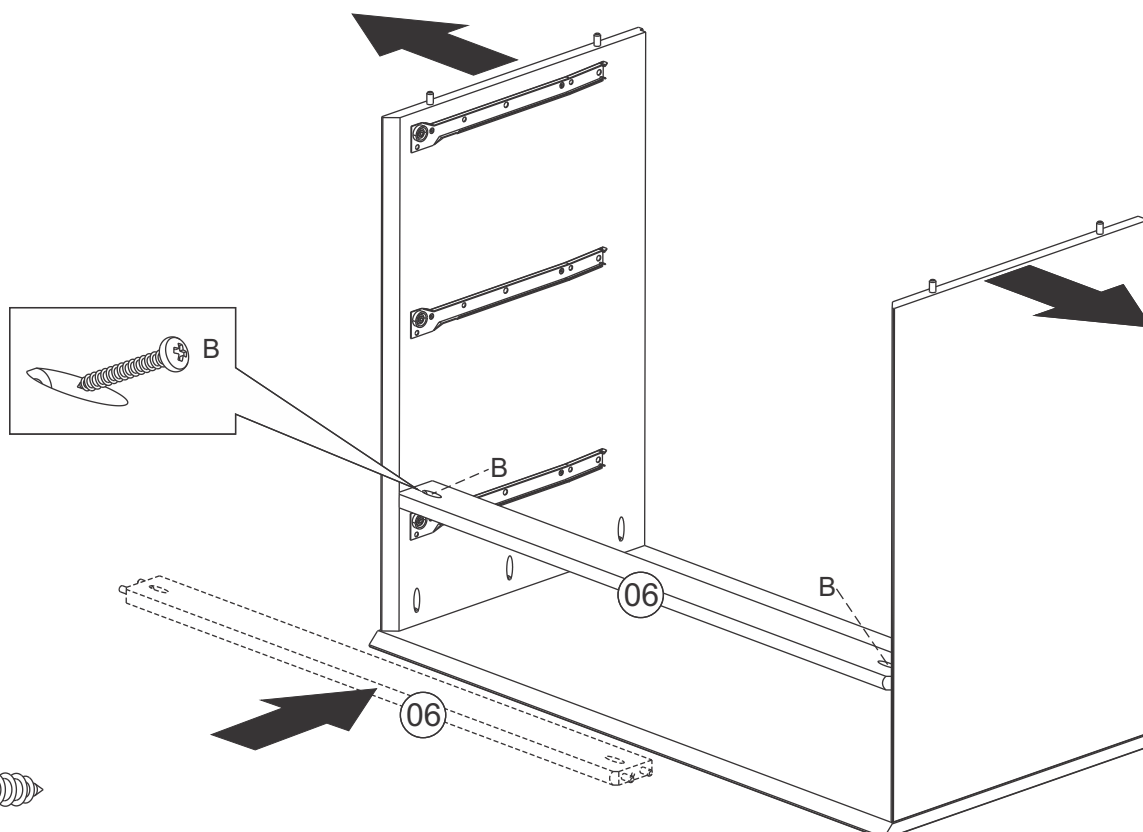


B - 4,0x30 Screw
Qty. 02


STEP 4



D -4,0x45 Screw
Qty. 06





F -7,0x70 Screw
Qty. 04




N -Z Key
Qty. 01

STEP 6


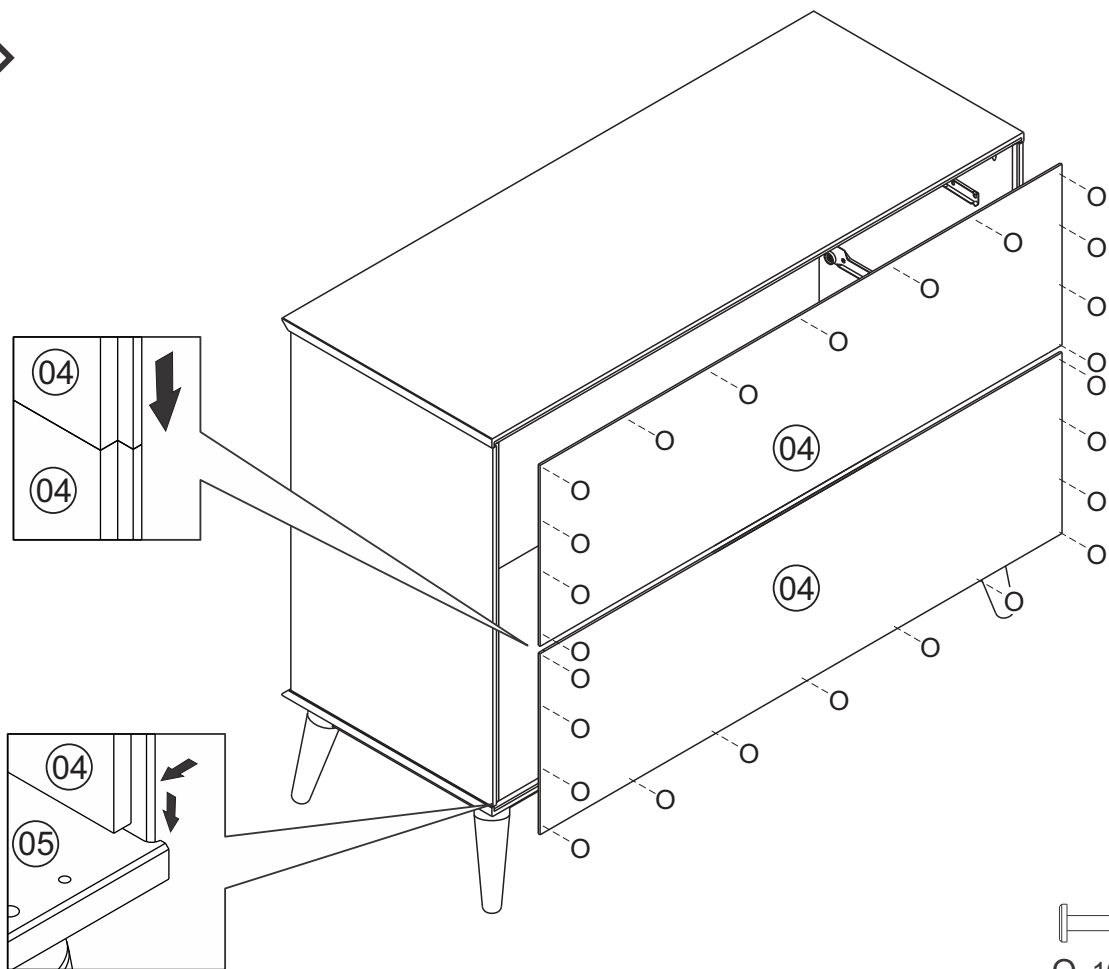



O -10x10 Nail
Qty. 26

STEP 7

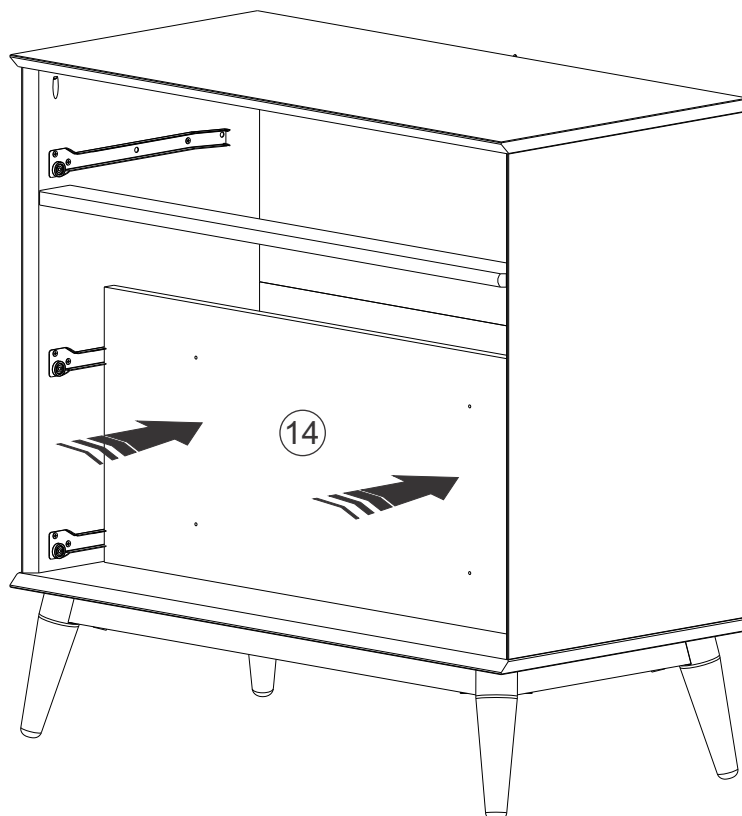


STEP 8


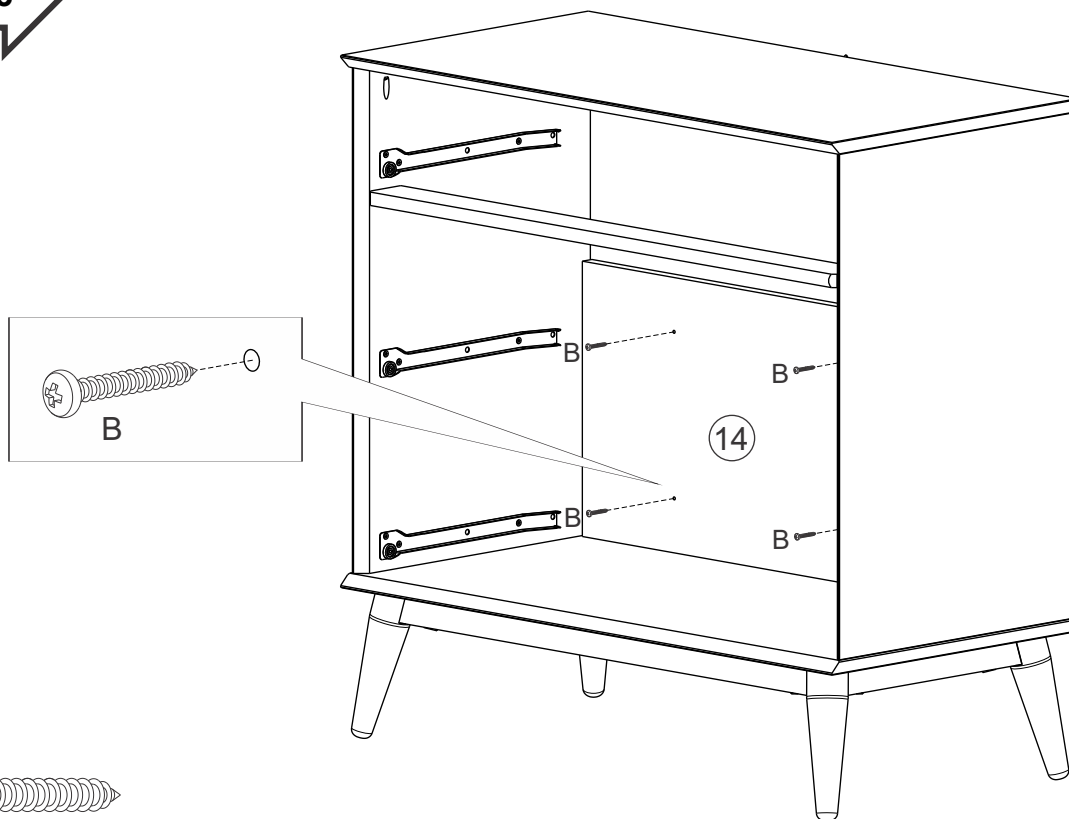


B - 4,0x30 Screw
Qty. 04

STEP 9

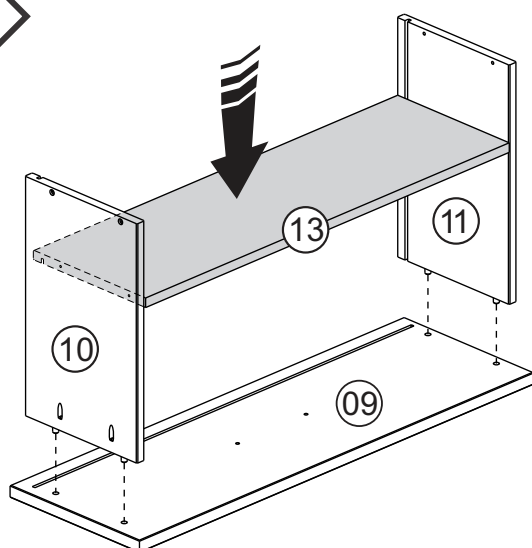


2x

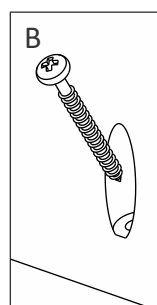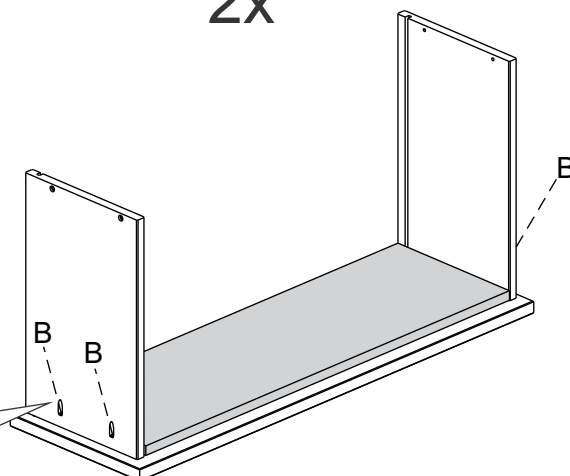


B - 4,0x30 Screw
Qty. 08

STEP 10

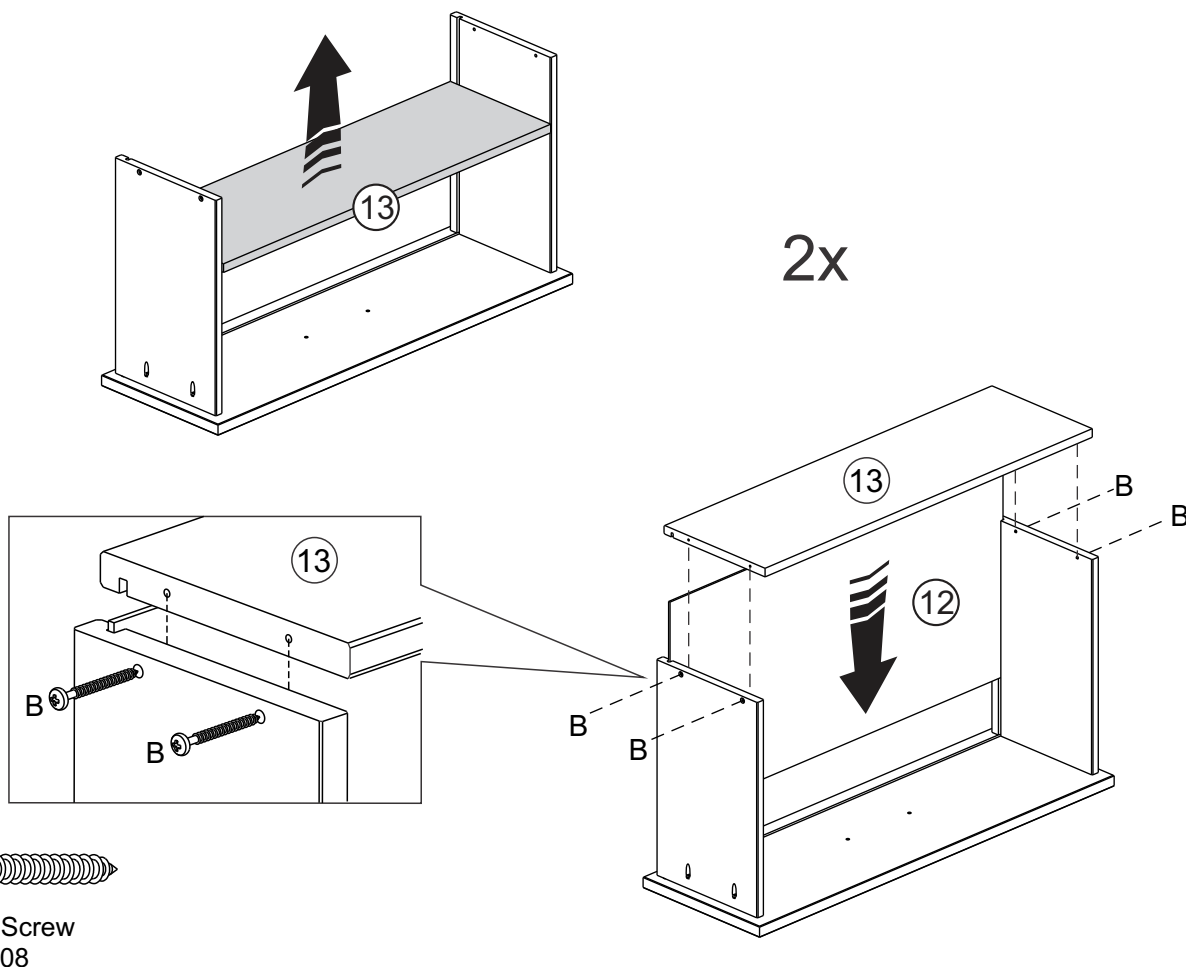


STEP 11

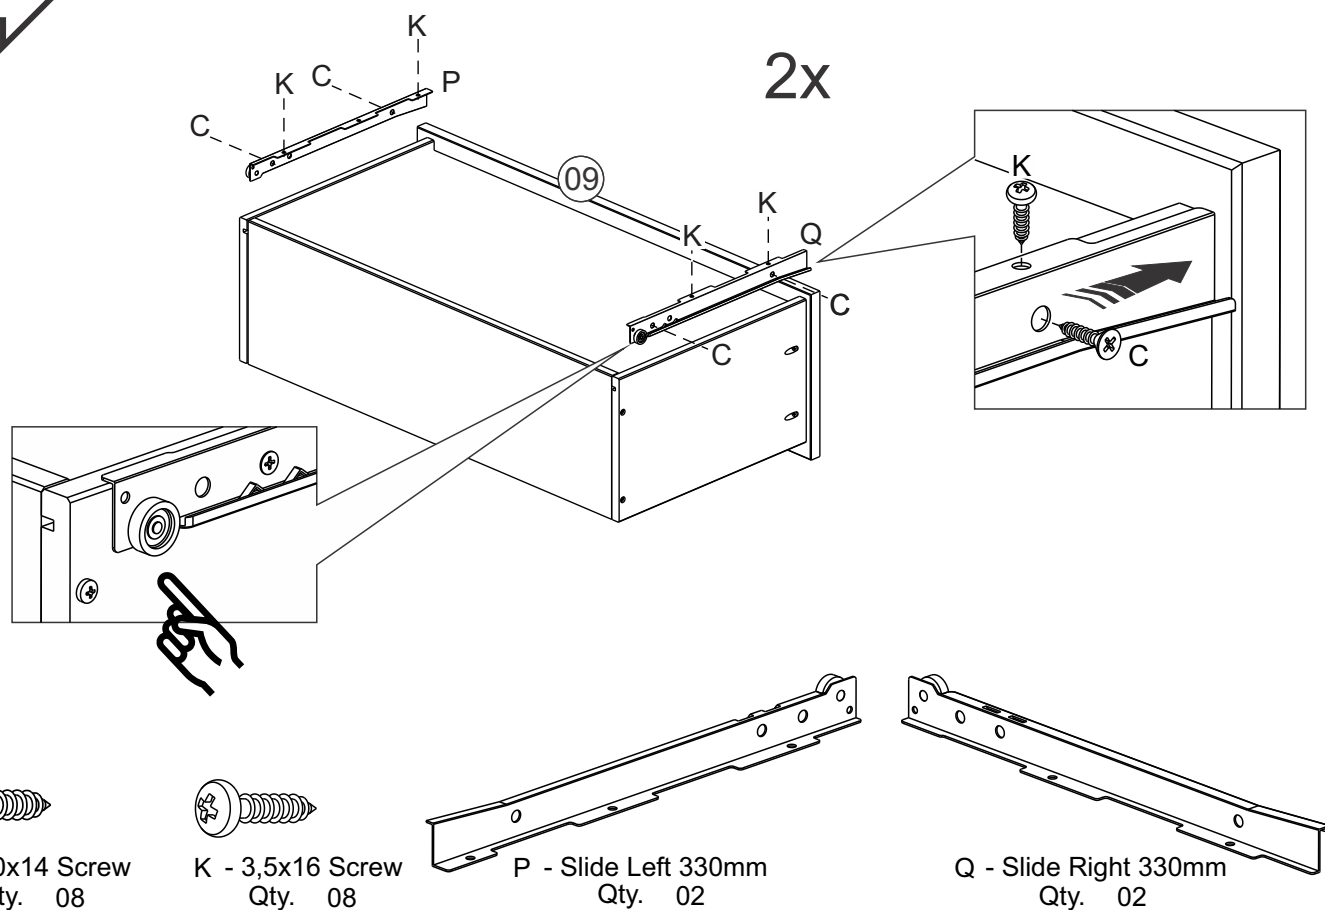


STEP 12

2x



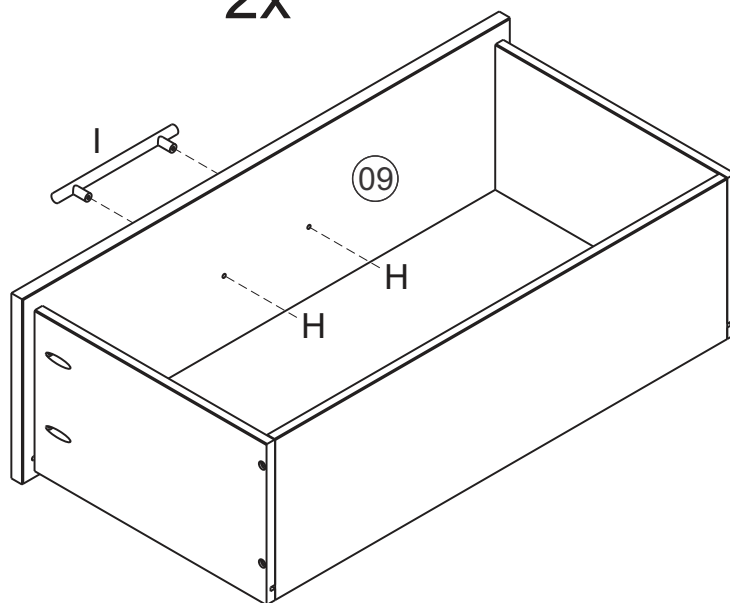


H -M4x25 Screw
Qty. 04




I-Knob
Qty. 02

STEP 13

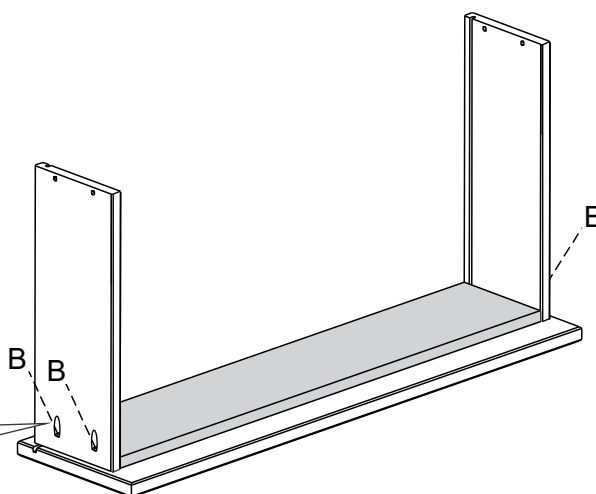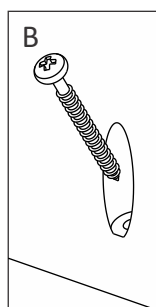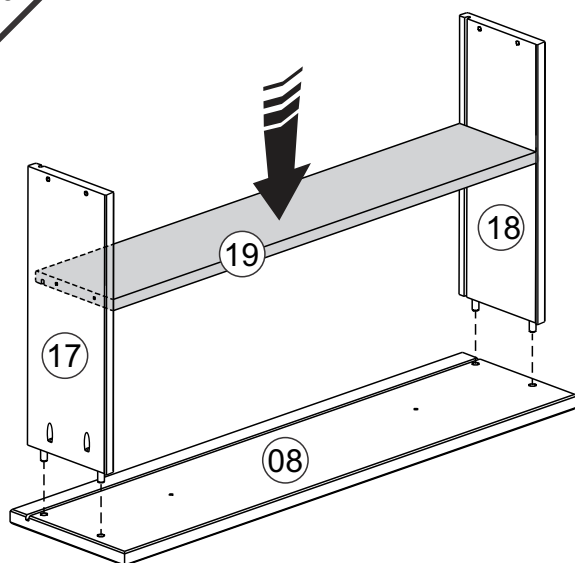


B - 4,0x30 Screw
Qty. 04

STEP 14

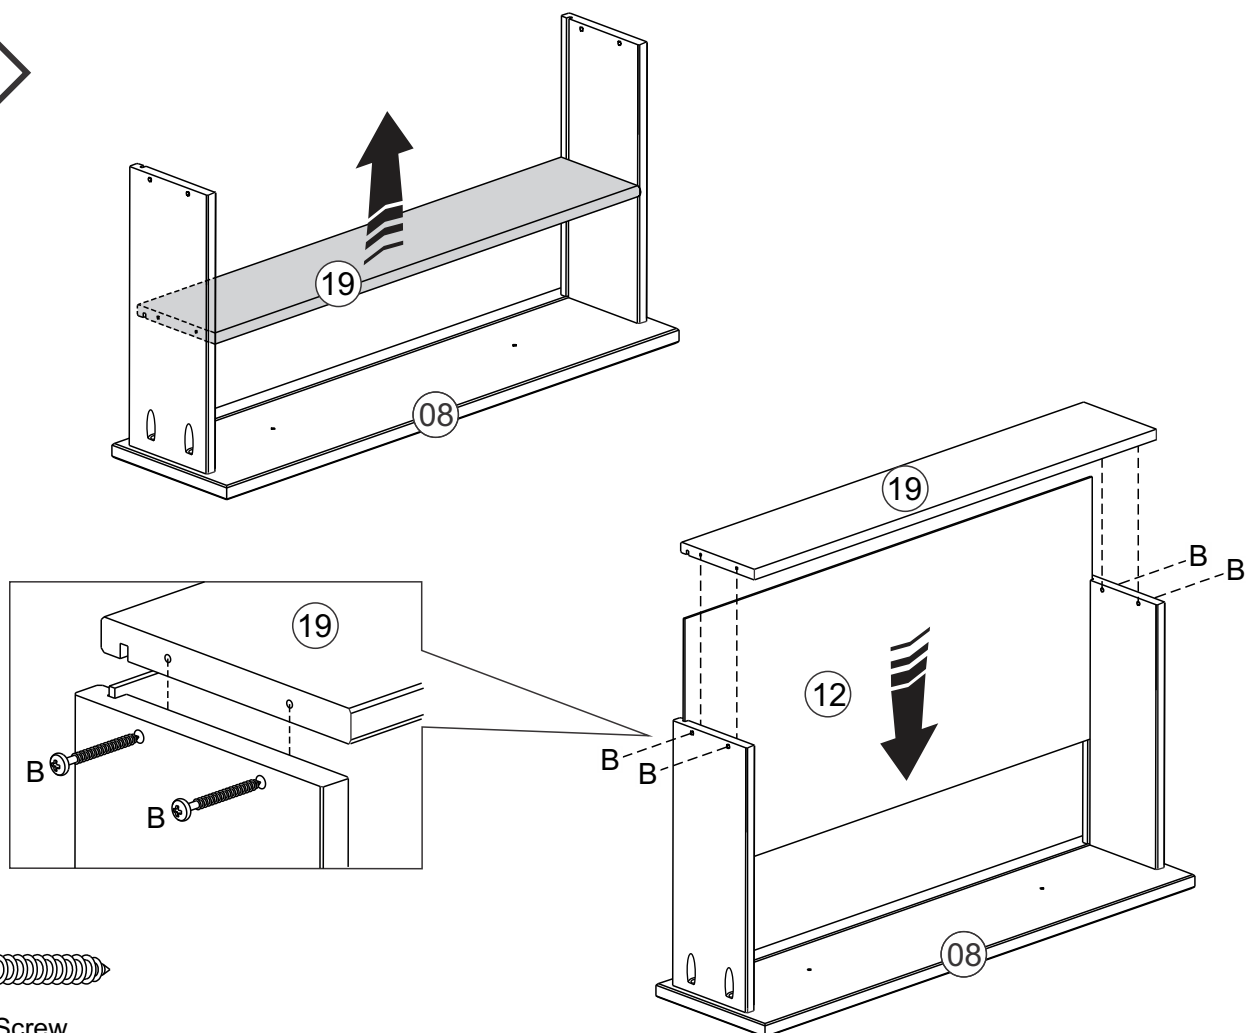

B - 4,0x30 Screw
Qty. 04


STEP 15

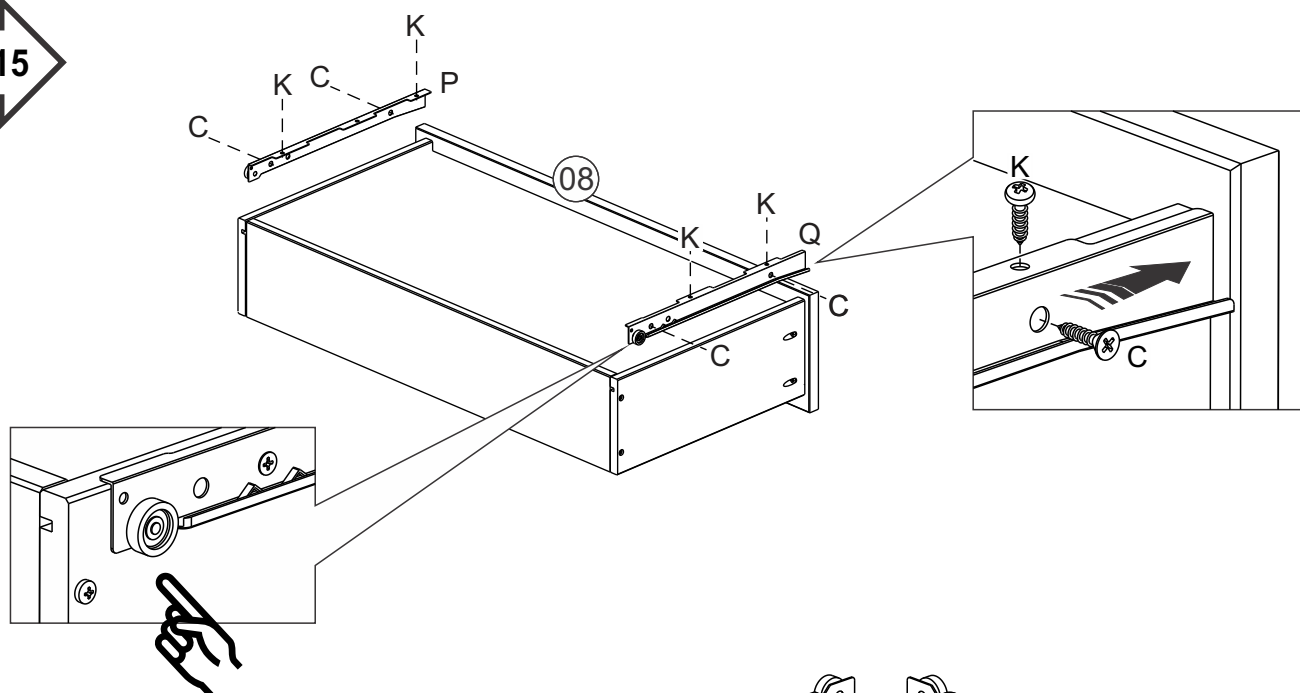


C - 4,0x14 Screw
Qty. 04



K - 3,5x16 Screw
Qty. 04

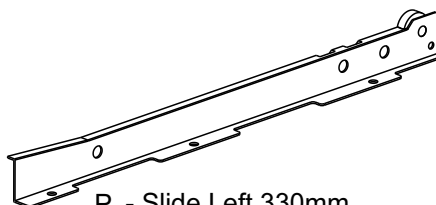


P - Slide Left 330mm
Qty. 01

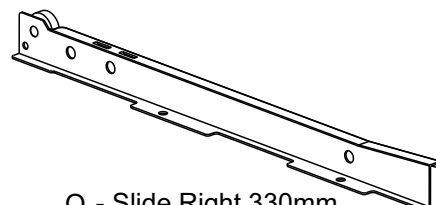

Q - Slide Right 330mm
Qty. 01

STEP 16

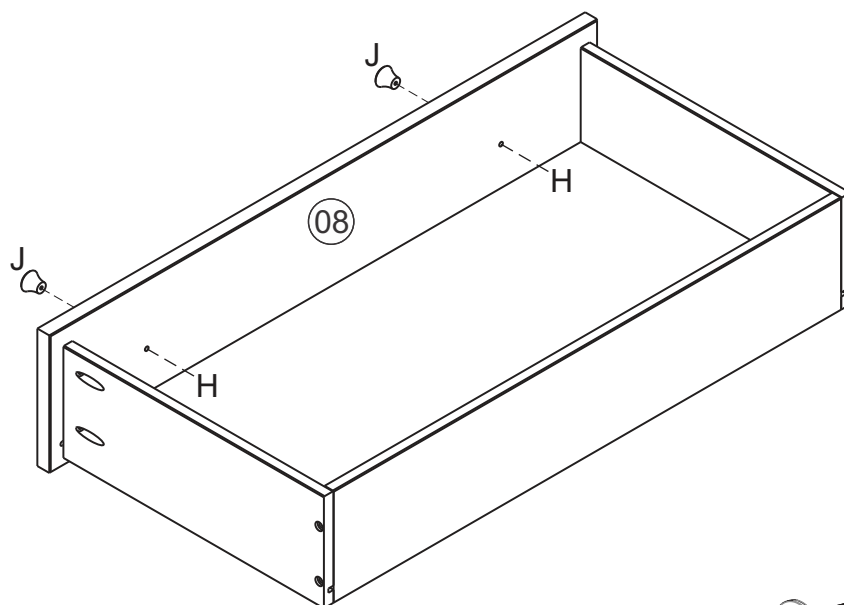


H -M4x25 Screw
Qty. 02





J -Knob
Qty. 02

STEP 17

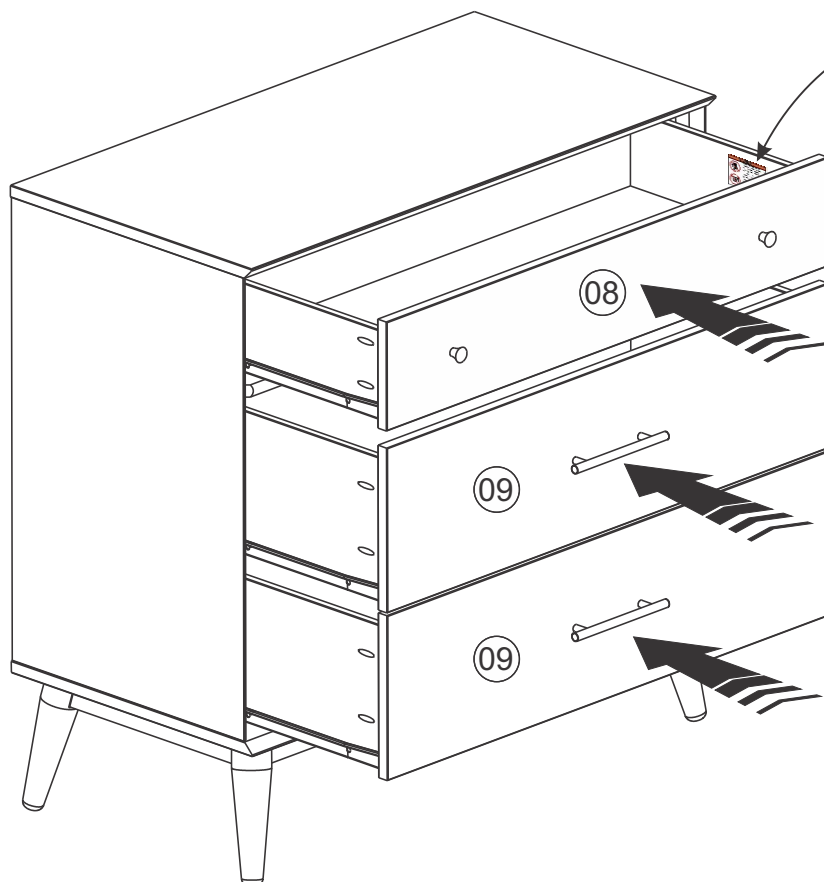

Place The Drawer
With Warning Label
in Upper Most Position
Of Chest As Shown.

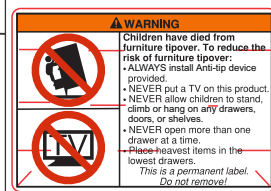

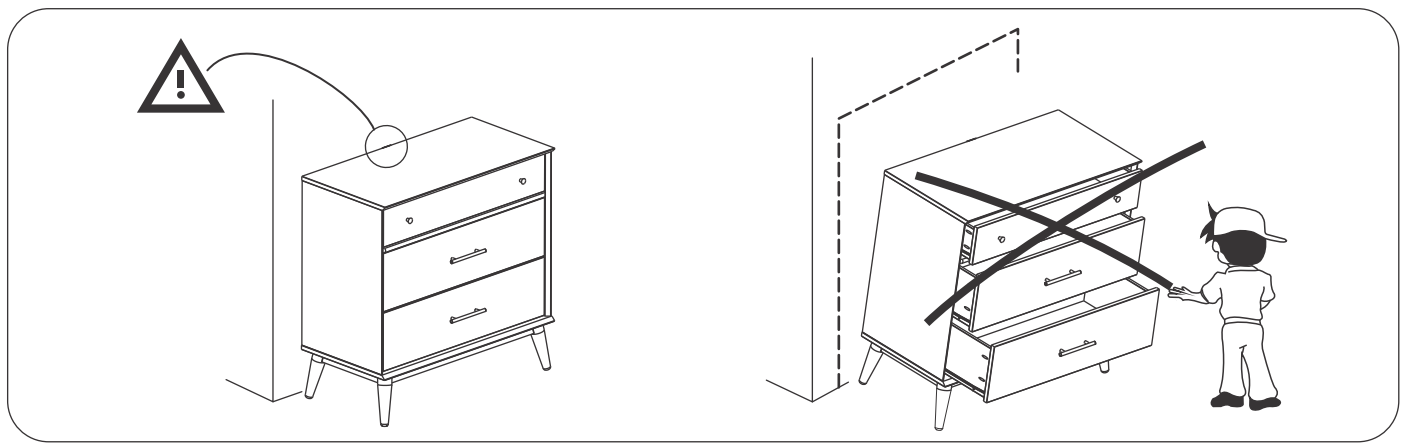

Anti-Tip Kit

