


MODEL RTA-7050

ASSEMBLY INSTRUCTIONS

Thank you for purchasing our product.

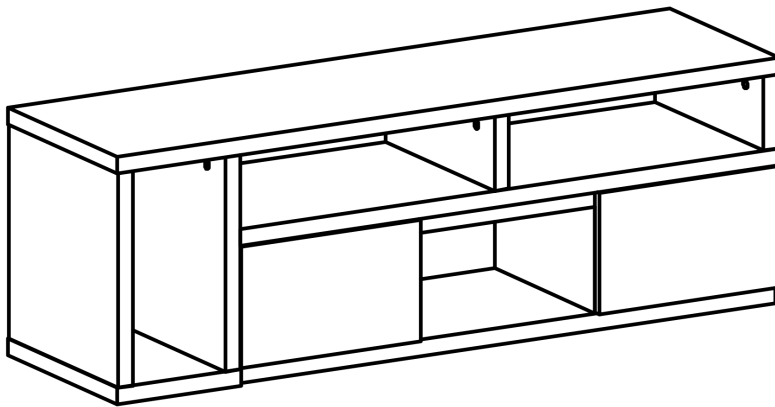

P.1	RTA-7050	P.1
-----	----------	-----



- Please read carefully the assembly instructions before the installation.



















- Do not discard this manual or any of the packaging material until the unit has been completely assembled.





- Might require two people.

P.2	RTA-7050	P.2
-----	----------	-----

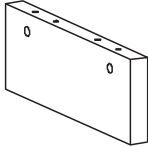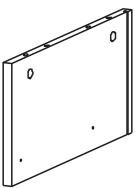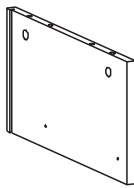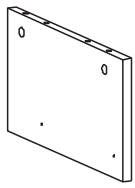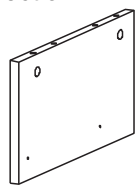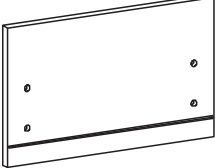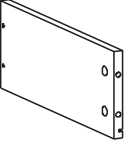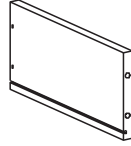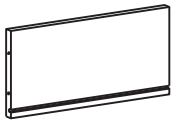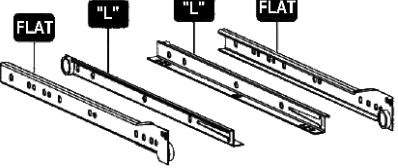
MAIN PARTS LIST		
1 x1 Top panel for upper section 	3 x2 Short vertical panel for upper section 	4 x1 Long exterior vertical panel for upper section 
2 x1 Middle panel for upper section 		
5 x1 Long interior vertical panel for upper section 	6 x1 Bottom panel for upper section 	7 x1 Top panel for lower section 
	8 x1 Bottom panel for lower section 	
9 x1 Left panel for lower section 	10 x1 Right panel for lower section 	11 x1 Middle-left panel for lower section 
		12 x1 Middle-right panel for lower section 
13 x1 Back panel for lower section 	14 x2 Drawer front panel 	15 x2 Drawer left panel 
		16 x2 Drawer right panel 
17 x2 Drawer back panel 	18 x2 Drawer bottom panel 	19 x2 Sets Sliders, SET of 4 pcs: - 2 "flat" for inside the unit. - 2 "L" shape for the drawers. 

P.3	RTA-7050	P.3
-----	----------	-----



LIST OF HARDWARE, SCREWS AND FITTINGS							
PART	QTY	ITEM		PART	QTY	ITEM	
A	26	M6x35		E	16	ST3x14	
B	34	ø8x30mm (wooden dowels)		F	10	ø25 (felt)	
C	16	ST7x58		G	8	ø22 (laminate)	
D	8	ST3.5x40			1		

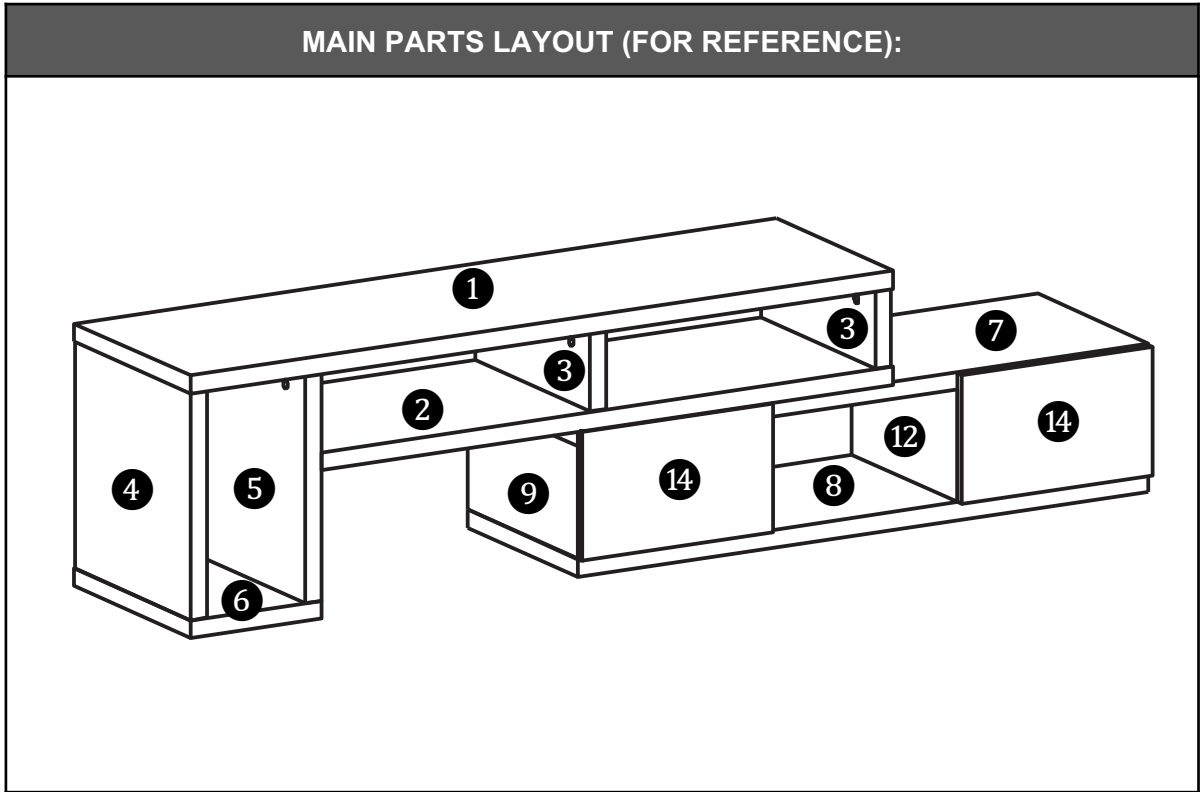



☛ This unit uses cam bolts and locks. The following explains how to use them. This is not an assembly step; it is a guide for when you are actually doing the assembly using this kind of hardware.



1. Screw the bolt into the corresponding panel.

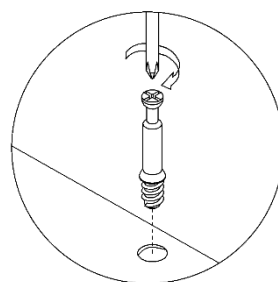
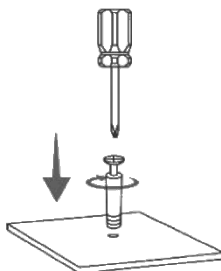


2. In the other panel, insert the cam lock and align it so it can properly receive the head of the bolt, then join the panels. There might be a very small gap between the panels which is normal.

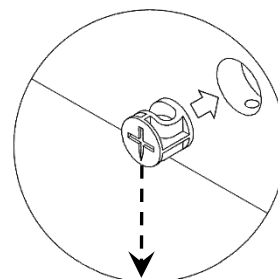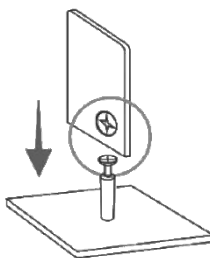

Alignment: Point towards the panel with the bolt.

3. Turn the cam lock clockwise. This will lock the parts together and will close any gaps.

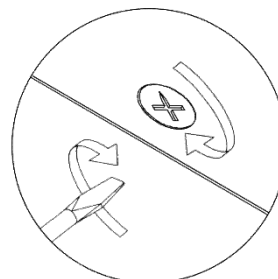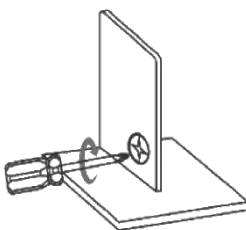


BEFORE YOU START THE ASSEMBLY, PLEASE READ THE FOLLOWING TIPS AND WARNINGS.

1 Do a quick inventory to make sure the package contains all the parts and hardware listed in the assembly instructions.




7 To avoid misalignments, always leave the screws loose and tighten them until all pieces are positioned correctly.

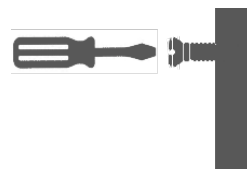

2 Missing, damaged and defective parts can be replaced at no cost to you. Please refer to the last pages on this manual.



8 Do not overtighten or force the screws as they might break, strip, damage the threads of the holes or get stuck inside the part.

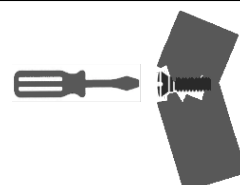

3 The replacement parts service is limited to the continental United States. If you reside in Hawaii, Puerto Rico, U.S. Dependencies or other countries, please contact the supplier from where the unit was purchased.



9 Sometimes the laminate might cover partially or entirely the hole on a panel. If there is no visible hole for the screw, pass and press the tip of your finger over the area where the hole should be located to feel the indentation, and once found, carefully pierce the laminate to reveal the hole underneath.




4 If during assembly you find an issue or need clarification, please contact our Customer Service for assistance. Please refer to the last pages on this manual.




5 On each step read the instructions and analyze the illustrations thoroughly before proceeding to do the assembly.



6 Make sure you understand which hardware will be used on each step. Using the wrong size of screw, bolt or pin might strip the threads or cause damage to the part in which it is being used.

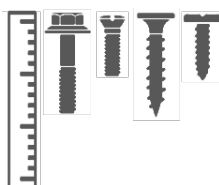

10 If the hole seems too small for the screw, first make sure you are using the correct size of screw and that it's been installed in the correct hole. If the hole still appears to be too small, carefully pierce the laminate to reveal the hole's actual size.

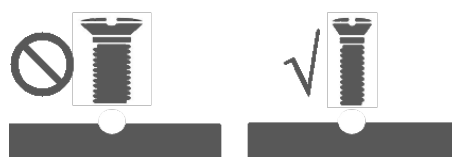


STEPS 1 THROUGH 11 IS FOR THE ASSEMBLY OF THE LOWER SECTION, WHICH WILL ASSEMBLE UPSIDE-DOWN

STEP 1

Separate the sliders **19** according to their shape:

- The "L" sliders (for the drawers) will be used until step **10**, please set them aside.
- The "flat" sliders (for inside the unit) are the ones being used in the next step.

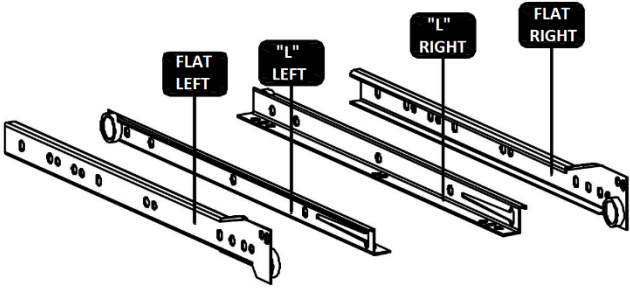

STEP 2

Hardware:

E



8
Pcs



Scan QR Code to
view this step



With the panels **9**, **10**, **11** and **12** oriented as shown, assemble the "Flat" sliders **19** on the bottom of the panels using screws **E** as shown. Please note the correct holes to use on the sliders and make sure the wheels face towards the front of the panels.



Left sliders to panels 9 and 12:



Right sliders to panels 10 and 11:

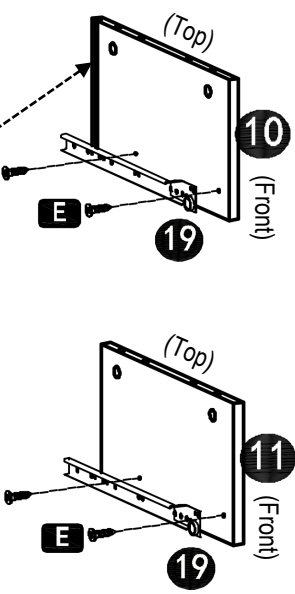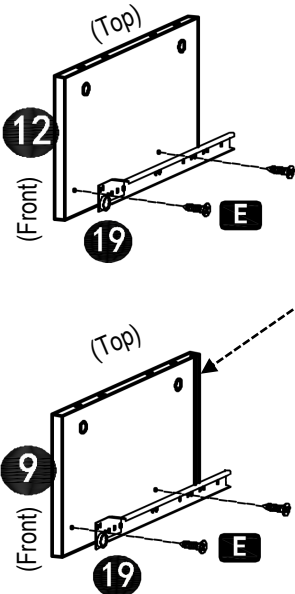


The groove on
panels 9 and 10
go at the back
of the panels.

STEP 3					
Hardware:					
A	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;"></td> <td style="text-align: center;">8 Pcs</td> </tr> <tr> <td style="text-align: center;">M6x35</td> <td></td> </tr> </table>		8 Pcs	M6x35	
	8 Pcs				
M6x35					
B	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;"></td> <td style="text-align: center;">8 Pcs</td> </tr> <tr> <td style="text-align: center;">Φ8x30</td> <td></td> </tr> </table>		8 Pcs	Φ8x30	
	8 Pcs				
Φ8x30					
					


On the top panel **7** screw the bolts **A** into the outermost holes and insert the wooden dowels **B** in the innermost holes as shown.

A Bolts: Outermost holes


B Dowels: Innermost holes

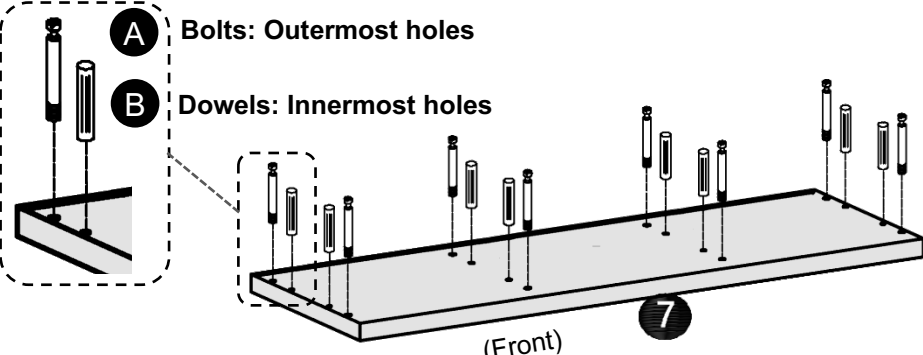

(Front) **7**

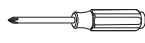
STEP 4					
Hardware:					
A	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;"></td> <td style="text-align: center;">8 Pcs</td> </tr> <tr> <td style="text-align: center;">Cam lock</td> <td></td> </tr> </table>		8 Pcs	Cam lock	
	8 Pcs				
Cam lock					
					


With the panels **9**, **10**, **11** and **12** oriented **upside-down**, insert and align the cam locks **A** into the panels, then slide down the panels over the bolts and dowels of panel **7**, and turn the cam locks to secure all panels as shown and as explained in page 4.

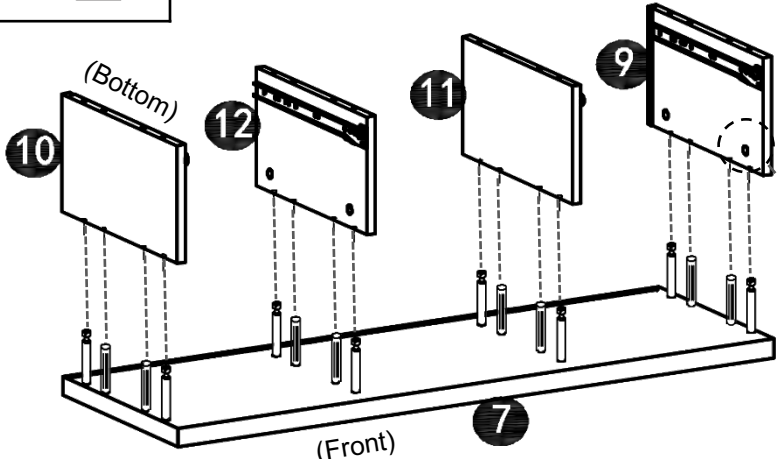

The grooves on panels **7**, **9** and **10** go at the back of the panels.

Refer to page 4

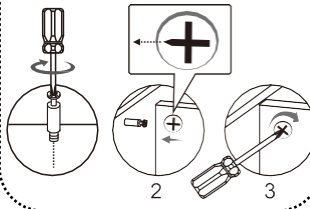


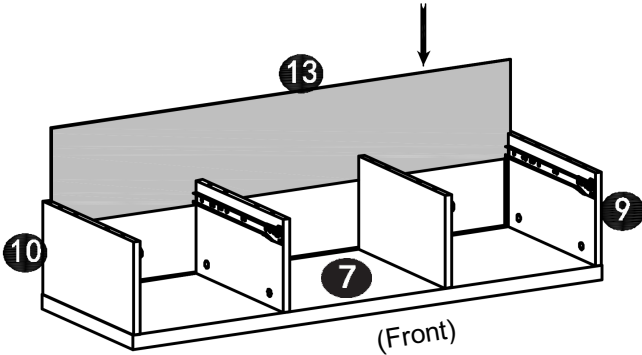STEP 5	Slide the back panel 13 through the grooves of panels 7, 9 and 10.  (Front)
---------------	---

STEP 6


Hardware:

B	 $\Phi 8 \times 30$	8 Pcs
C	 $ST7 \times 58$	8 Pcs

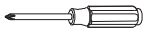



First insert the dowels **B** in the innermost holes on panels **9**, **10**, **11** and **12**, then with the help of another person place the bottom panel **8** and assemble it to the panels using screws **C** as shown.

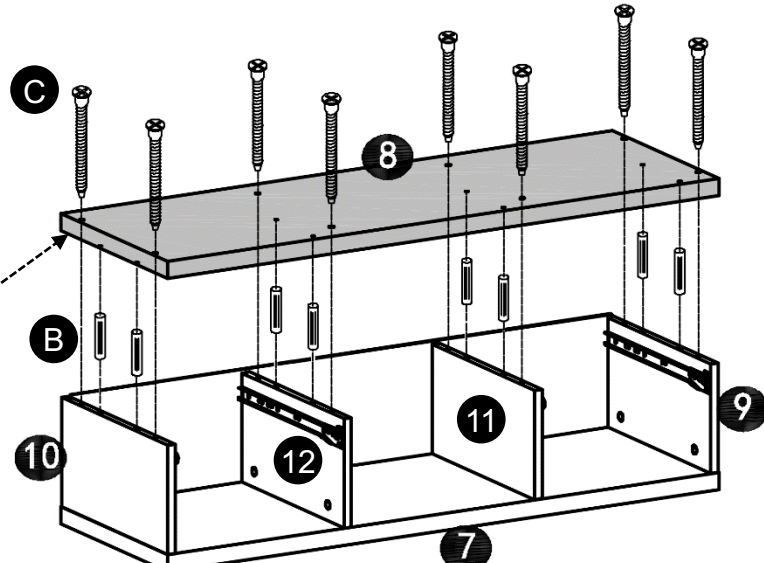

The groove on panel 8 go at the back of the panel.


STEP 7

Hardware:

F	 $\Phi 25$ (Felt)	6 Pcs
----------	---	----------



Peel off and adhere the felt covers **F** on panel **8** as shown. Then with the help of another person turn the unit it upright.

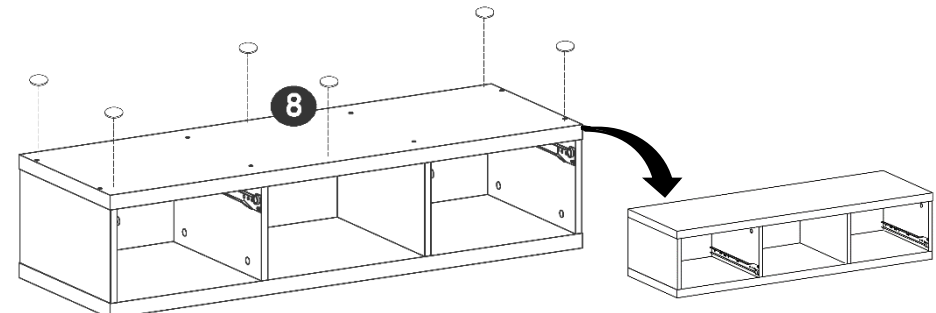


STEP 8

Hardware:


D	 $ST3.5 \times 40$	4 Pcs
----------	--	----------




Assemble the drawer back panel **17** to the side panels **15** and **16** using screws **D**, then slide in the drawer bottom panel **18** through all the grooves as shown.

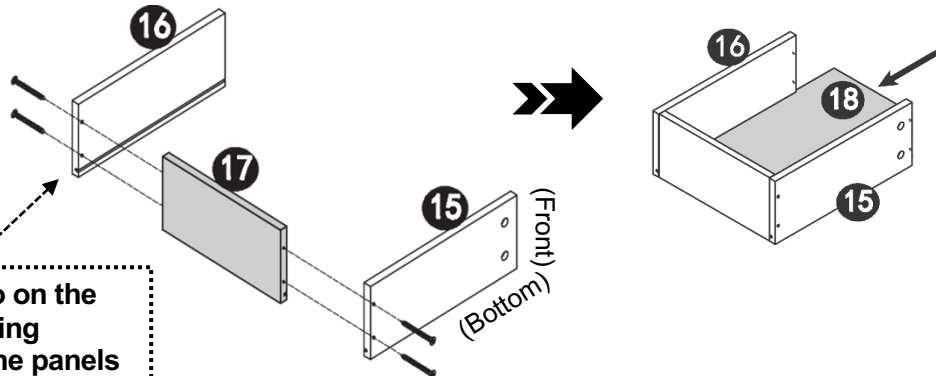


The grooves go on the bottom and facing inwards in all the panels

STEP 9	
Hardware:	
A	 4 Sets M6x35
	


Insert and align the cam locks **A** in the side panels **15** and **16**. Then screw the bolts **A** into panel **14**, and assemble this panel to panels **15** and **16** as shown and as explained on page 4.

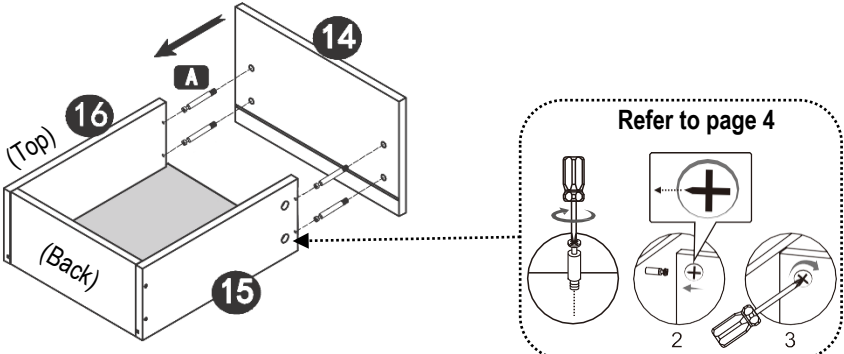


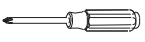
STEP 10	
Hardware:	
E	 4 Pcs ST3x14
 (NOT INCLUDED)	
 Scan QR Code to view this step	

Put the drawer upside-down, and assemble the “L” shaped sliders **19** using screws **E** as shown, making sure the wheel goes towards the back and the sliders don't protrude at the bottom. Please note that protruding sliders rise the drawer 1" and won't fit in the unit.

VERY IMPORTANT!

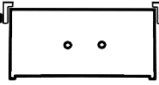
 **CORRECT**

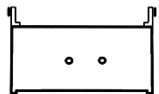 **INCORRECT**

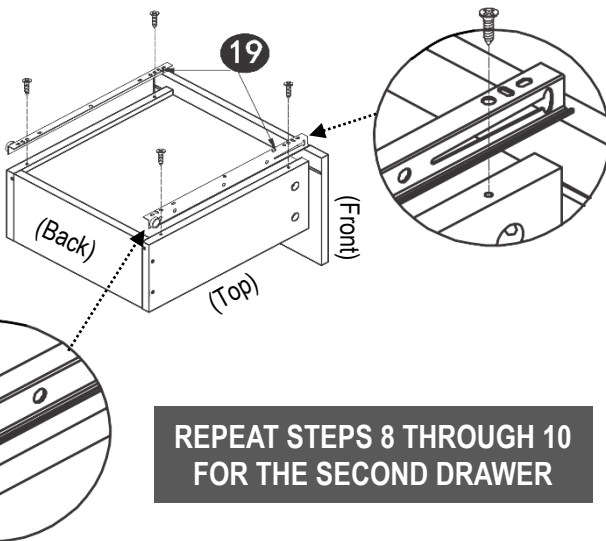


REPEAT STEPS 8 THROUGH 10 FOR THE SECOND DRAWER

STEP 11	Insert the drawers into the unit. If they don't seem to fit, review steps 2 and 10 for the correct assembly of the sliders.
----------------	---

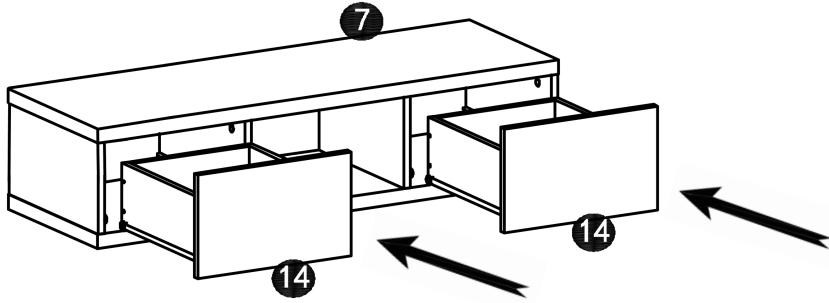


STEPS 12 THROUGH 17 ARE FOR THE ASSEMBLY OF THE UPPER SECTION, WHICH WILL ALSO ASSEMBLE UPSIDE-DOWN

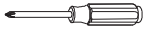STEP 12		
Hardware:		
A	 M6x35	4 Sets
B	 Φ8x30	4 Pcs
		

1st: Insert the dowels **B** in the innermost holes on panel **1** on the **center** and **right** side.
2nd: Insert the bolts **A** in the outermost holes on panel **1**.
3rd: Insert and align the cam locks **A** in the panels **3**.
4th: Assemble the panels **3** to the panel **1** as shown and as explained on page **4**.


The cam locks must go facing towards the inside

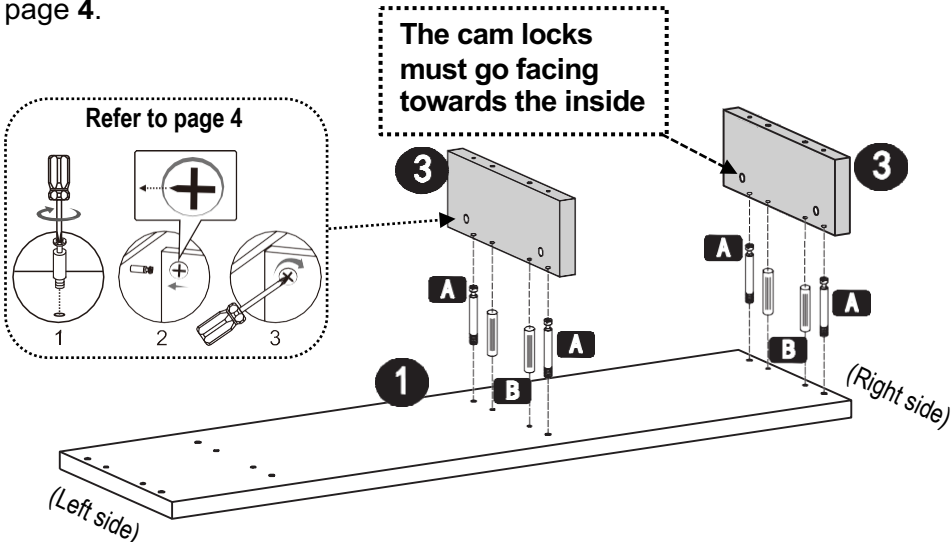

STEP 13		
Hardware:		
A	 M6x35	2 Sets
B	 Φ8x30	2 Pcs
		



Following the same procedures as in step **12**, and as explained in page **4**, assemble panel **5** to panel **2** with bolts/cam locks **A** and dowels **B** as shown.

Refer to page 4

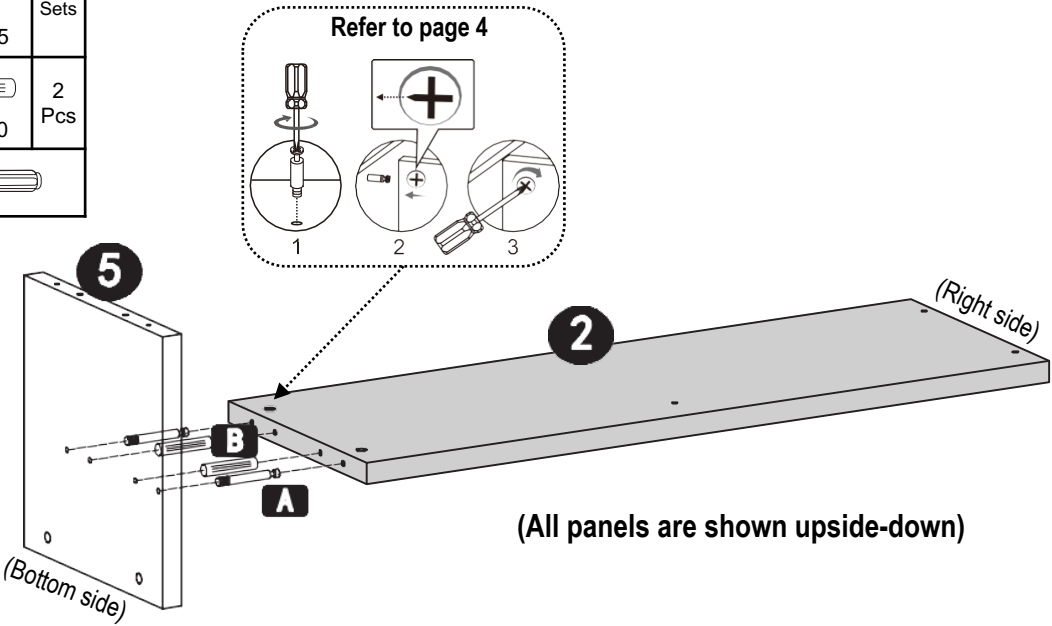

STEP 14		
Hardware:		
A	 M6x35	2 Sets
B	 Φ8x30	6 Pcs



- 1st:** Insert the dowels **B** in the innermost holes on panels **1** and **3**.
2nd: Insert the bolts **A** in the outermost holes on panel **1**.
3rd: Insert and align the cam locks **A** in panel **5**.
4th: Assemble the panel **2** to the panels **3**, and the panel **5** to the panel **1** as shown and as explained in page 4.

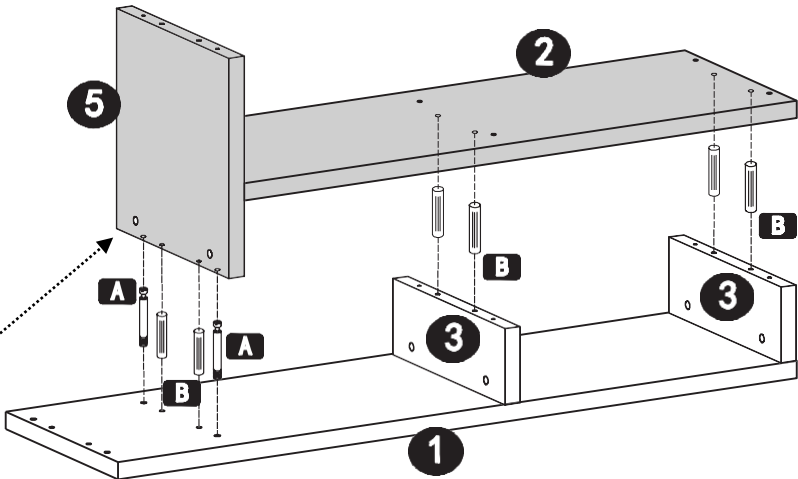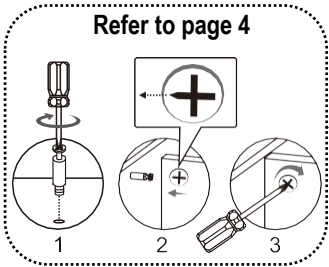

STEP 15		
Hardware:		
A	 M6x35	2 Sets
B	 Φ8x30	2 Pcs
C	 ST7x58	4 Pcs


- 1st:** Secure the panel **2** to the panels **3** with screws **C**.
2nd: Insert the dowels **B** in the innermost holes on panel **1**.
3rd: Assemble the panel **4** to panel **1** with bolts/cam locks **A** as shown and as explained in page 4.

Make sure to assemble panel **4** with the cam locks facing inwards

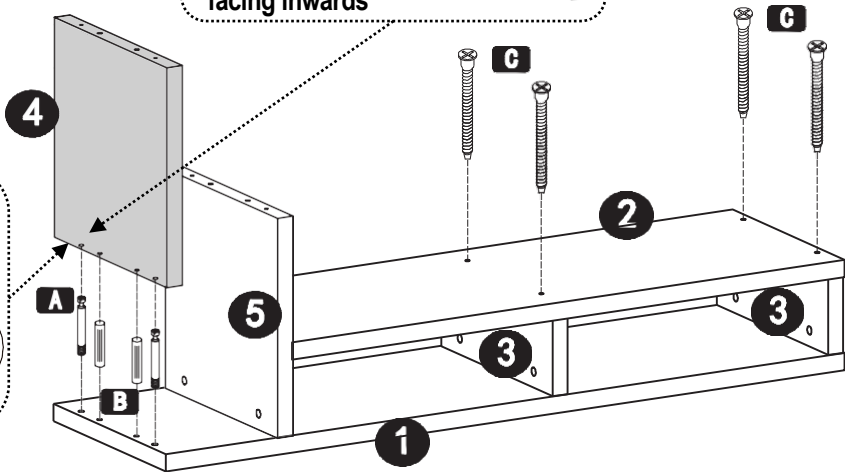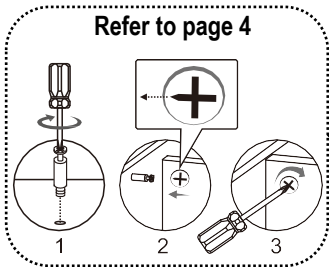


STEP 16		
Hardware:		
B		4 Pcs
	Φ8x30	
C		4 Pcs
	ST7x58	
		

Insert the dowels **B** in the innermost holes on panels **4** and **5**, then assemble panel **6** using screws **C**.

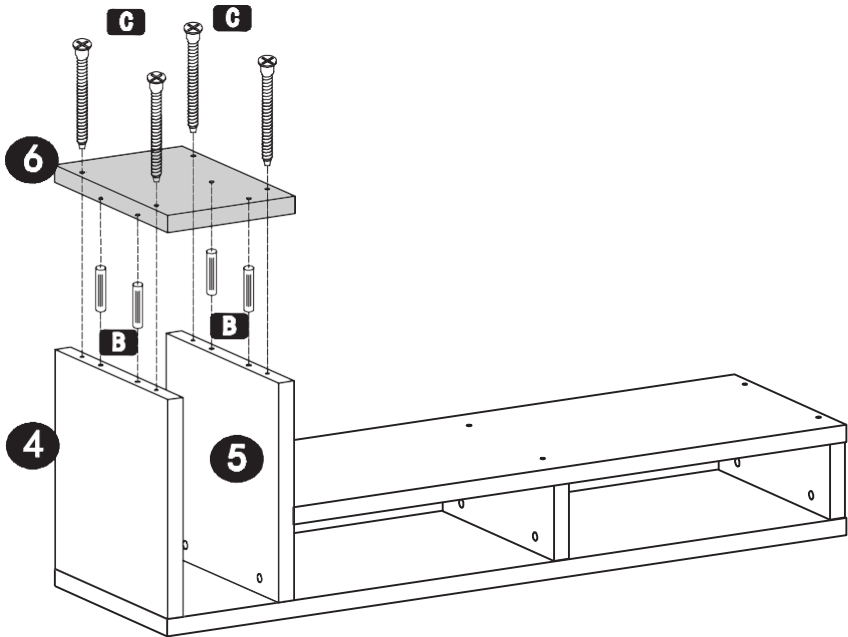

STEP 17		
Hardware:		
F		4 Pcs
	Φ25 (felt)	
G		8 Pcs
	Φ22 (laminate)	

Place the following adhesive stickers:
Felt **F** on panel **6**.
Laminate **G** for the cam lock holes on panels **3**, **4** and **5**.

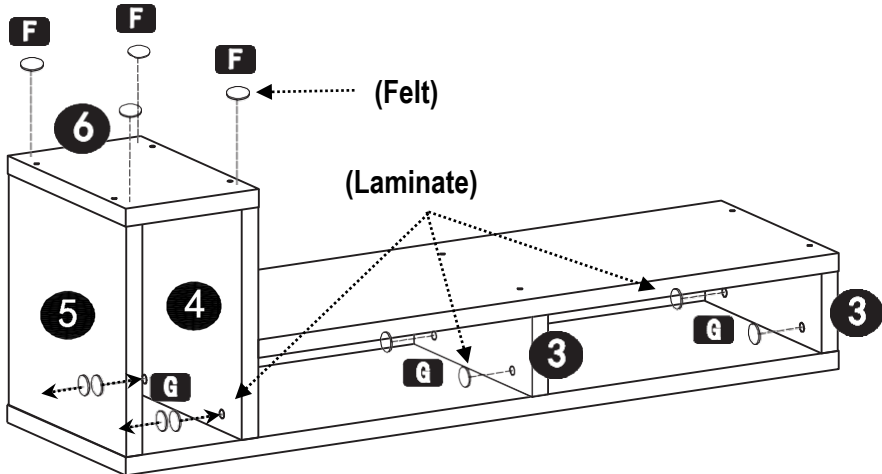





Give yourself a nice pat on the back. You did a great job!

You can place the upper section over the lower section according to your preference. The below illustrations show some suggestions.



WARNING:

For safety, when setting the unit in expanded option, do not place the upper section too close to the edge on the lower section.

CLOSED:

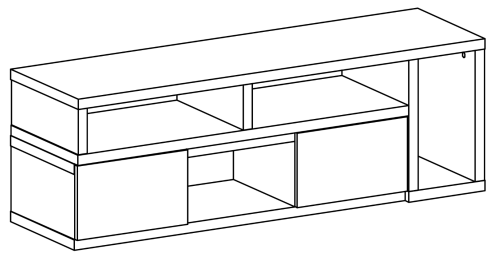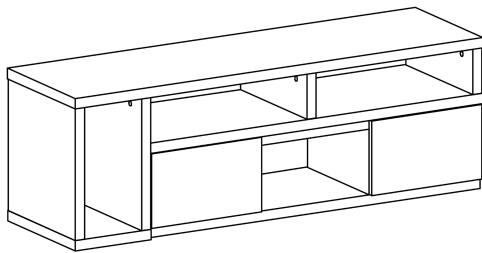


EXPANDED:

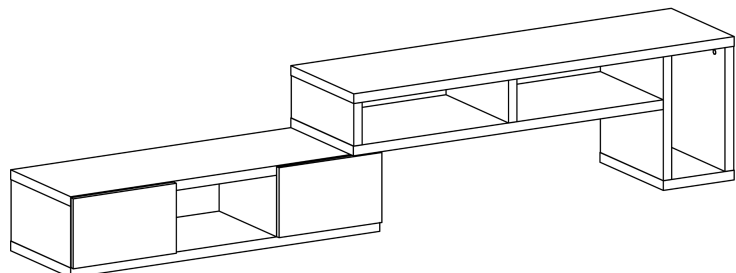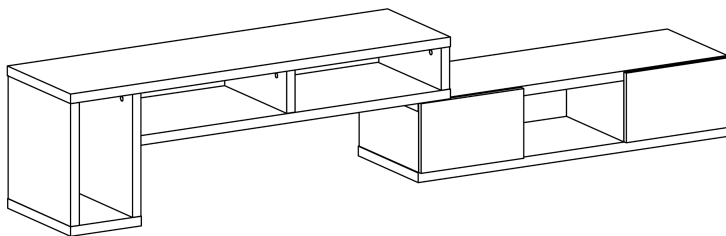


AFTER THE ASSEMBLY IS DONE, PLEASE READ CAREFULLY THE FOLLOWING CARE AND MAINTENANCE WARNINGS:

WEIGHT LIMITS:

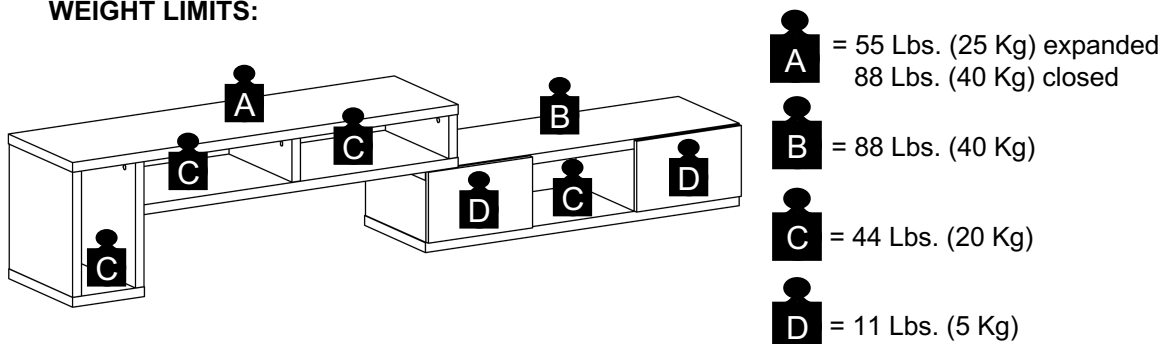

**MAXIMUM RECOMMENDED
EXPANDED LENGTH:**

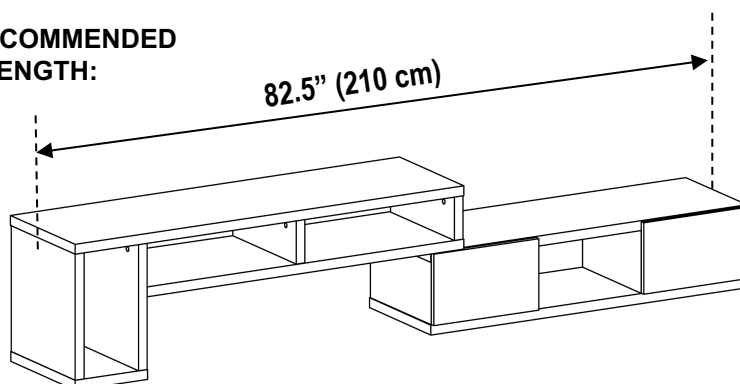

- Do not exceed the indicated weight limits.
- When setting the unit in expanded option, do not place the upper section too close to the edge on the lower section.
- Do not expose the surfaces to direct sunlight or to extreme environmental conditions.
- Clean the surfaces preferable with a clean cloth damped in a solution of mild soap and water, then dry with a clean towel.
- Do not use solvents or abrasive materials to clean the unit.
- If you decide to use a cleaning agent, test first on an area hidden from view such as underneath the top panel.
- Do not seat on the unit or stand on it to use it as a ladder.
- Do not allow small children to play over the unit or under the upper section (expanded option), or reach inside the drawers or compartments without your supervision.
- Do not pull, push or drag the unit to move it for more than 1 feet. The unit must be lifted by at least 2 persons when moving in the same or adjacent rooms.
- Before moving the unit or re-positioning the top section, remove your TV and make sure to secure or remove any object that is heavy or might fall off.
- When lifting the unit, use both hands and bend your knees, not your backs.
- When transporting the unit to places far away, protect and secure the unit to avoid damage in transit.
- Shall any part of the unit become defective during the warranty period, replacement parts might be available to you at no charge. Please refer to the last pages on this manual.
- The warranty does not extend to regular wear and tear, nor the manufacturer assumes liability for damages or consequences due to accidents, incorrect assembly, negligence, improper use, modifications, or not heeding the above warnings.

P.15	RTA-7050	P.15
------	----------	------

TECHNI MOBILI WARRANTY
DESKS/LAPTOP CARTS/FILE CABINETS: LIMITED 5-YEAR WARRANTY
TV Stand/Entertainment Center: 2 YEAR WARRANTY

RTA Products, LLC warrants to the Original Purchaser who acquired a new product from RTA Products or its authorized resellers that this product will be free from defects in its workmanship and materials, under normal use and service conditions, as described herein. "Defects" as used in this warranty, is defined as any imperfections that impair the use of the furniture or product. RTA Products LLC will replace any defective part, at its discretion, and without charge to the original purchaser other than the freight from the end consumer to RTA Products.

Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty will be effective for the applicable time period beginning the date of purchase on your original sales receipt. RTA product's obligation under this warranty is limited to repairing or replacing products or parts as provided herein. This product has been designed for and is intended for office and home-office use only. This warranty is Original Purchaser's sole remedy for product defects, and this warranty does not extend to any product, or damage to any product, caused by or attributed to abuse or misuse, products used for commercial or rental purposes, use modifications of, or attachments to the product, and products or parts not used, maintained, or extended hereunder is in lieu of any and all other warranties, express or implied, including without limitations any implied warranty or merchantability or of fitness for a particular purpose. Please note, all desks made with PVC Laminate surface should not be exposed to direct sunlight, as it may damage the material. Damage of this nature is not covered under this warranty.

RTA Products will not be responsible for indirect, special, incidental or consequential damages. This warranty is limited to merchandise purchased in the Continental United States. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state.

RTA Products will advise you of the procedure to follow in making warranty claims. The following are the procedures for warranty claims:

- a. Call us Monday – Friday, from 9am-5pm (Eastern Time) at (866) 782-5520 to explain the defect and give your name, address and phone number. Please have ready the model number of our product, date and place of purchase. You can also write to us by e-mail to warranty@rtaproducts.com and include the same information.
- b. If we determine that replacement will remedy the situation, and in order to determine the extent or the cause of the defect, purchaser will need to send the part in question at purchaser's expense. Once we receive the part, we will examine it and determine whether the claim is valid (or not), and then proceed to send the replacement. We will ship the replacement at our expense.

P.16	RTA-7050	P.16
------	----------	------

FOR SEVERAL HELP OPTIONS INCLUDING REPLACEMENT PARTS ORDERS

VISIT: WWW.TECHNIMOBILI.COM



CLICK ON SUPPORT TAB



Scan QR Code to order replacement parts

OR EMAIL US: SUPPORT@RTAPRODUCTS.COM