

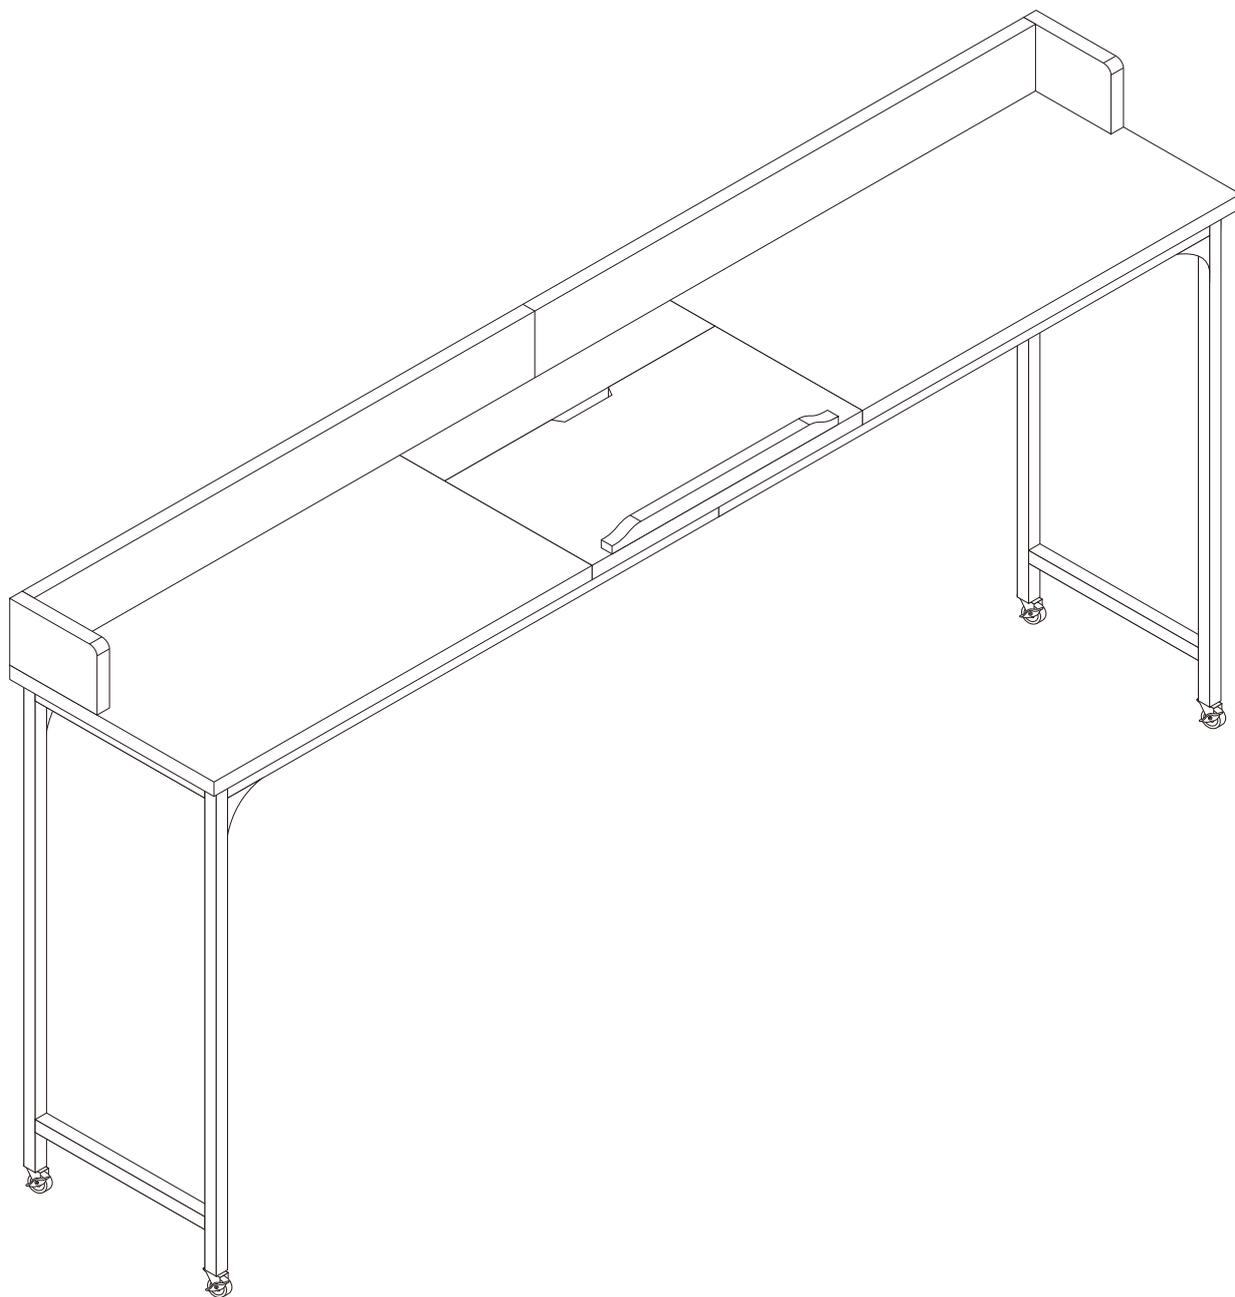
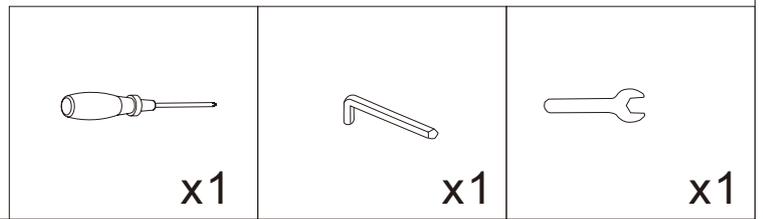
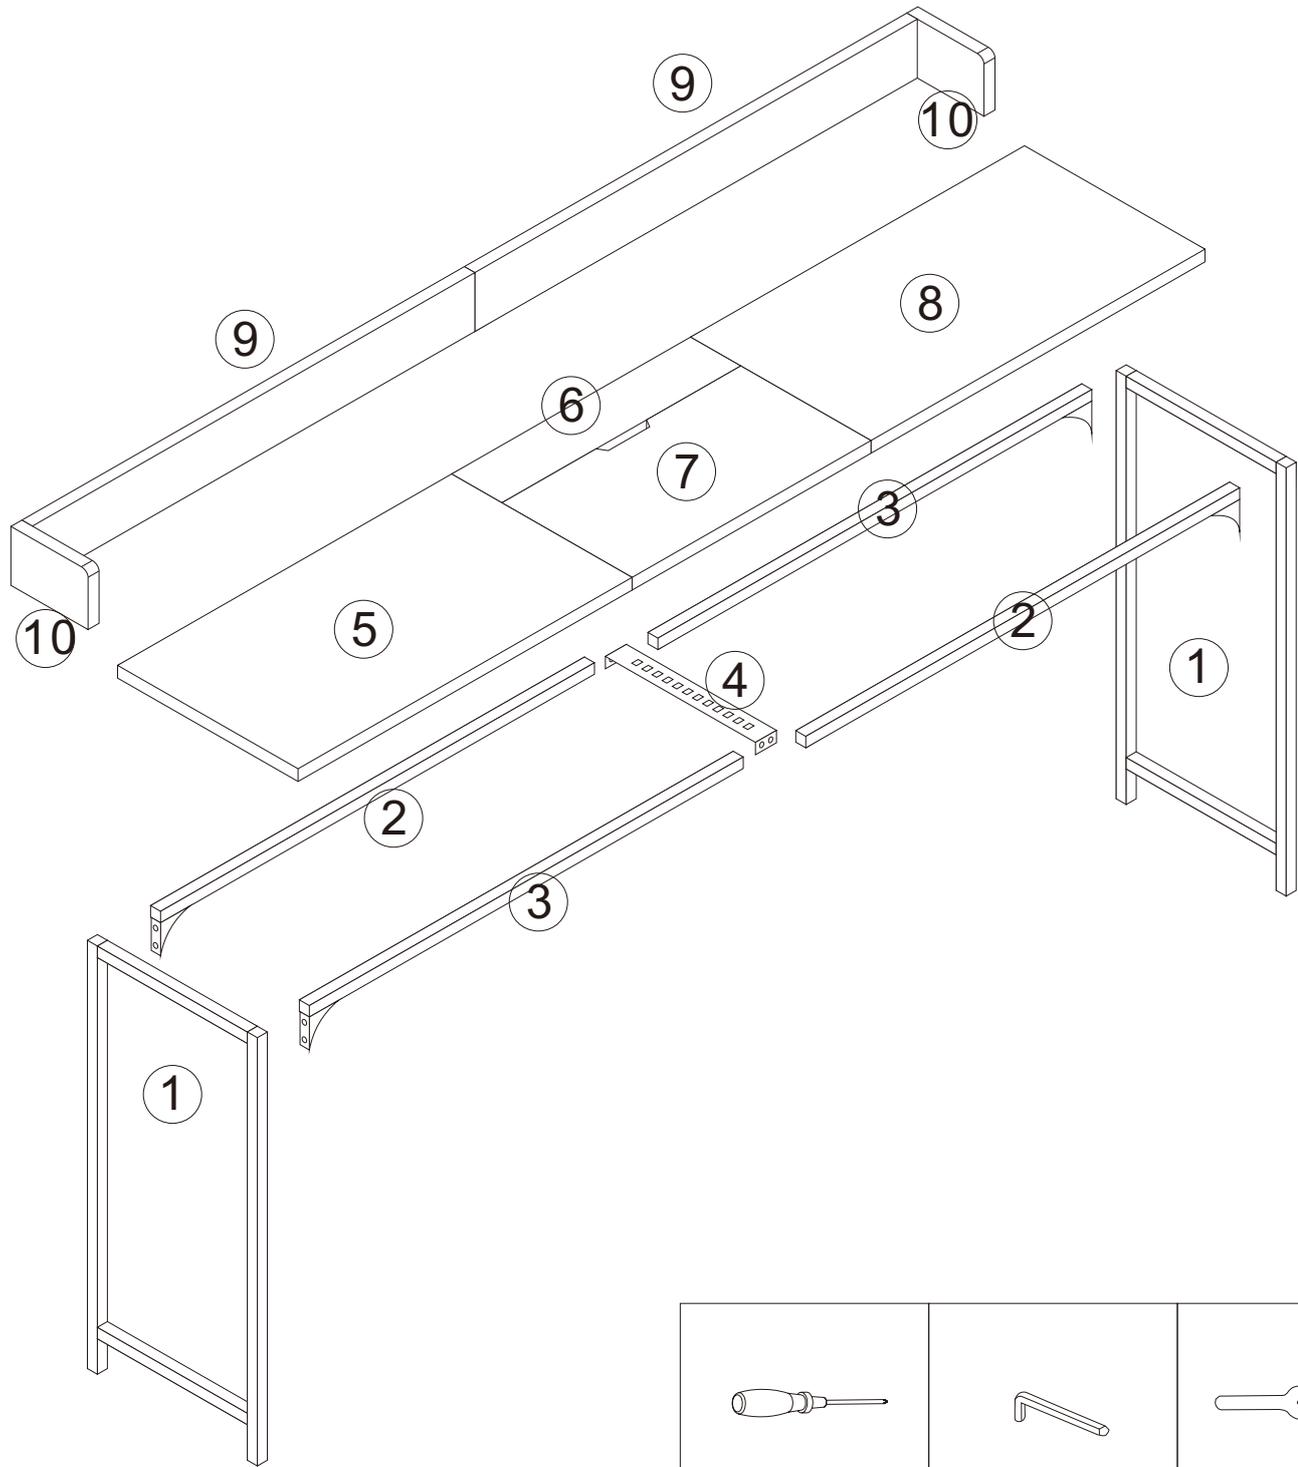



Installation instructions

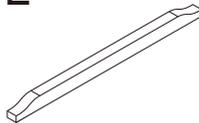



A  M8x50 x4	B  8x40mm x12	C  x12	D  M6x40 x8	E  x4	F  x6
G  x10	H  x2	J  8x20mm x4	K  6x25mm x2	L  x1	M  x2

01

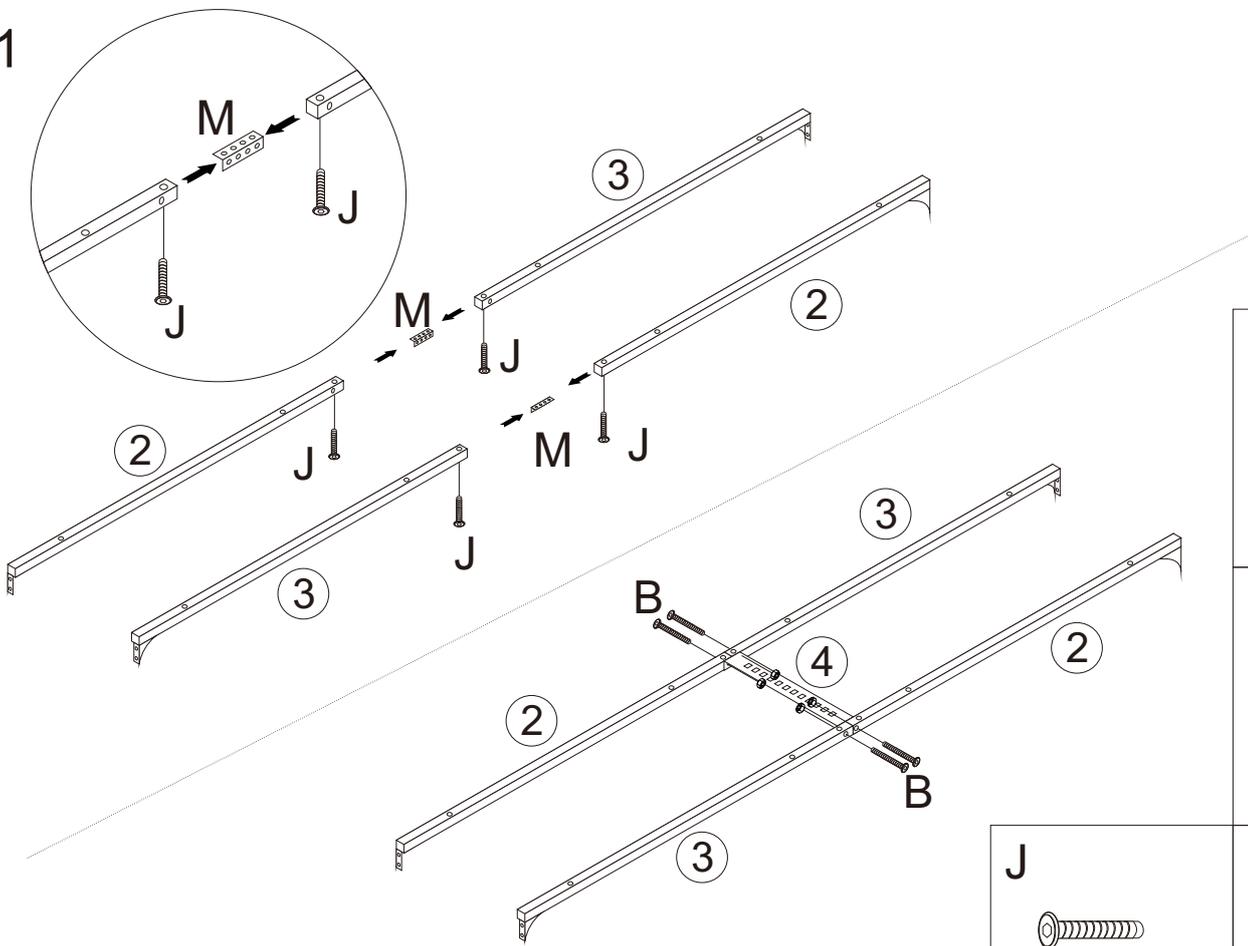

M

x2

B

8x40mm

x4

J


8x20mm

x4

C

x4

02

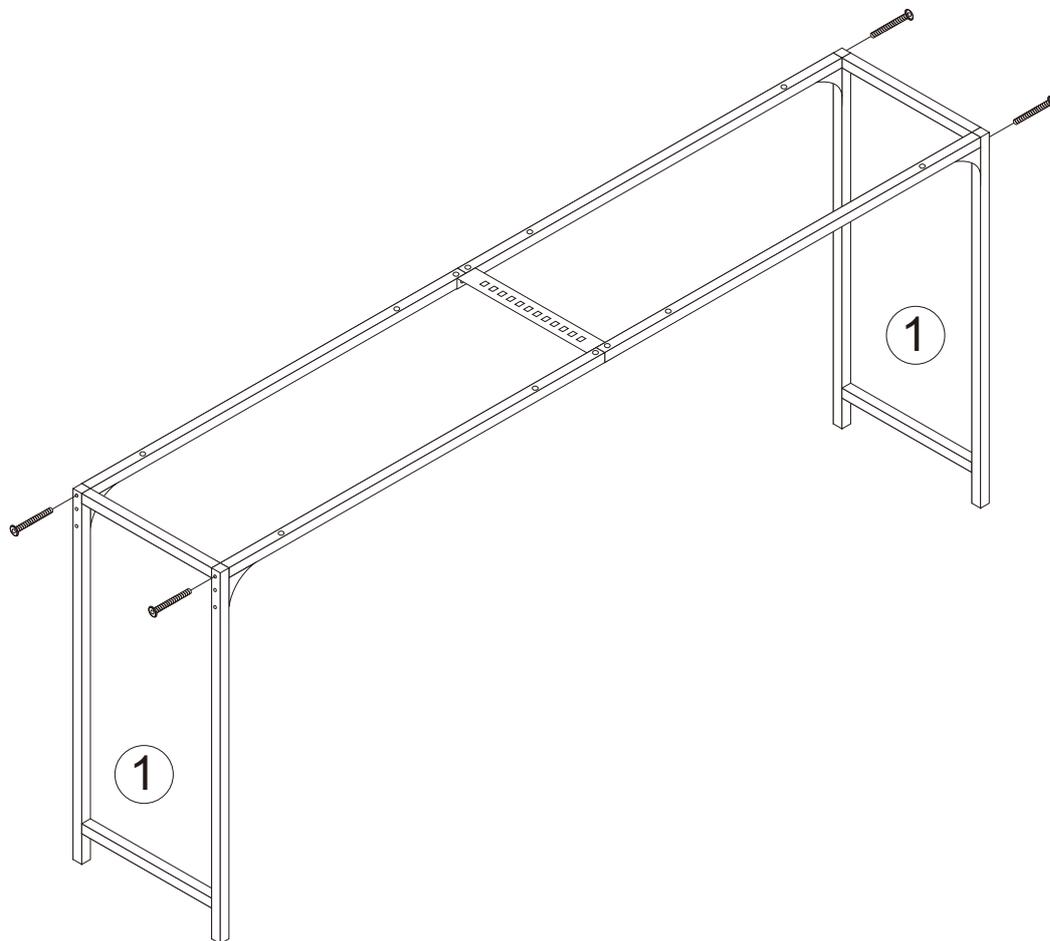


A

8x50mm


x4


03

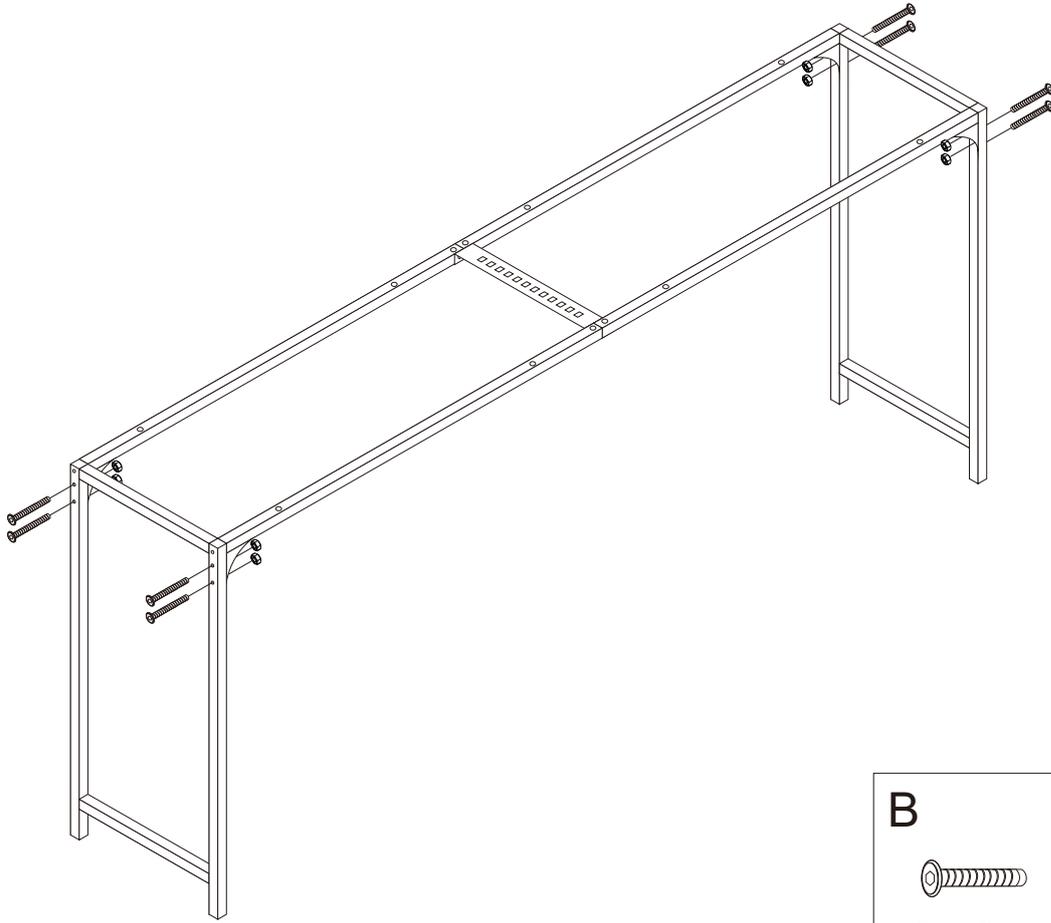



<p>B</p>  <p>8x40mm x8</p>	<p>C</p>  <p>x8</p>
--	--

04

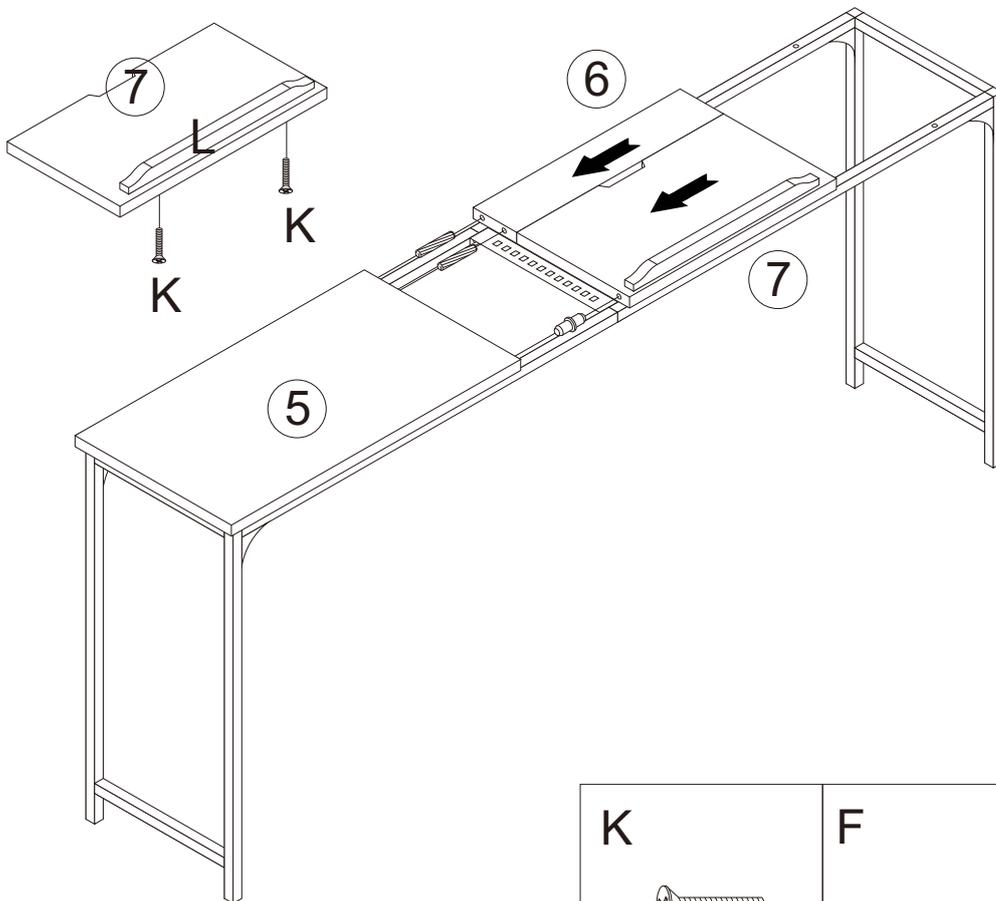


<p>K</p>  <p>6x25mm x2</p>	<p>F</p>  <p>x2</p>	<p>H</p>  <p>x1</p>
---	---	---

05

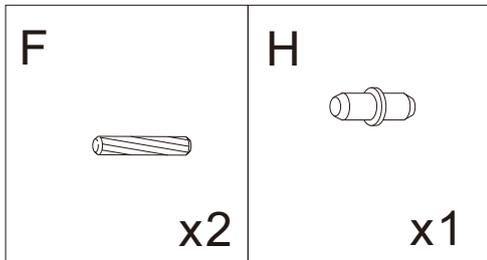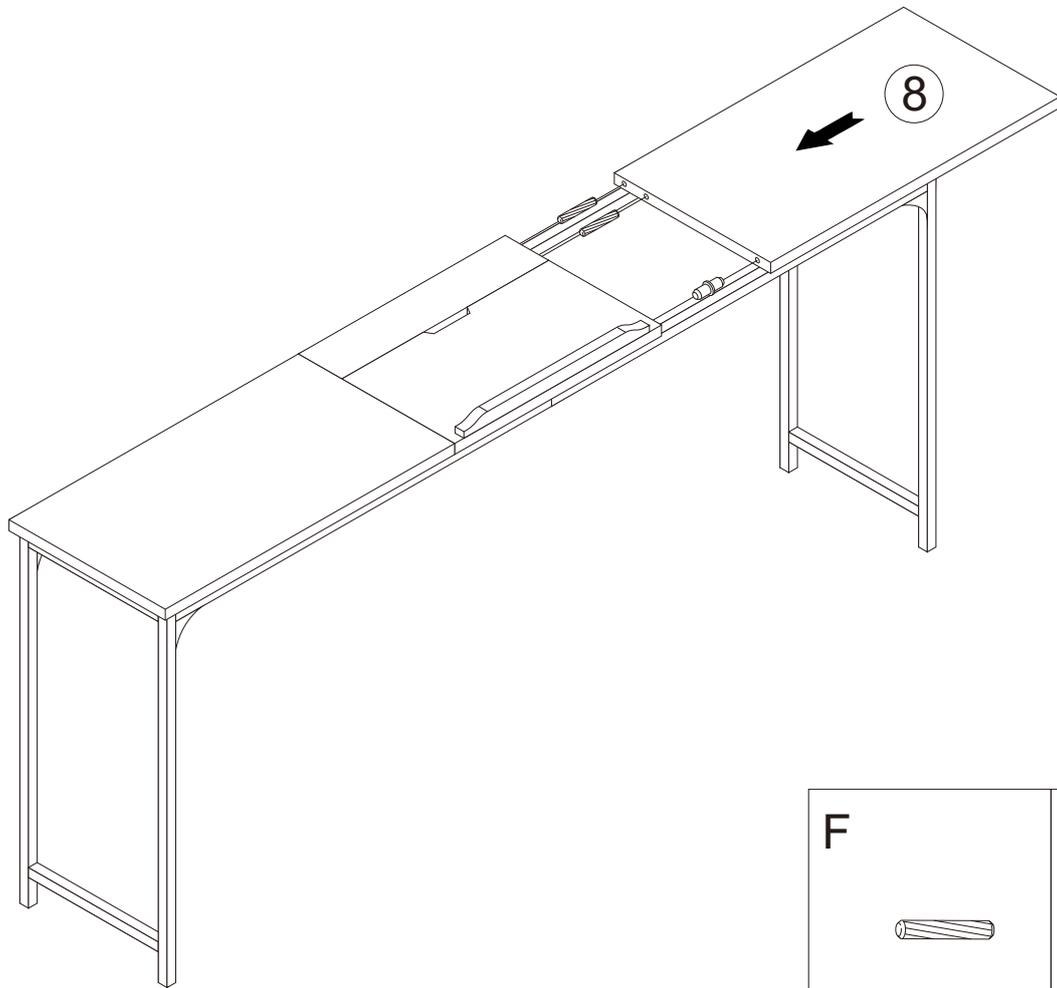

06


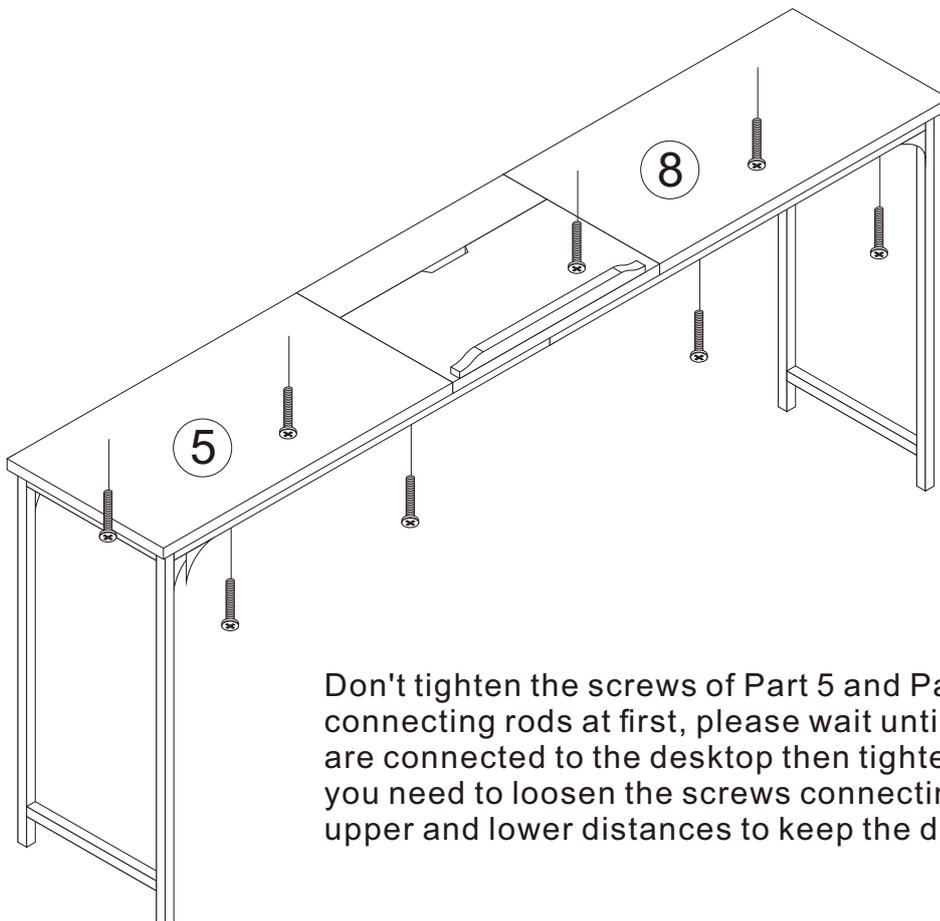


Don't tighten the screws of Part 5 and Part 8 and the bottom connecting rods at first, please wait until Part 9 and Part 10 are connected to the desktop then tighten them. If Part 7 is not flat, you need to loosen the screws connecting Part 4 to fine-tune the upper and lower distances to keep the desktop flat.

D

M6x40
x8

07

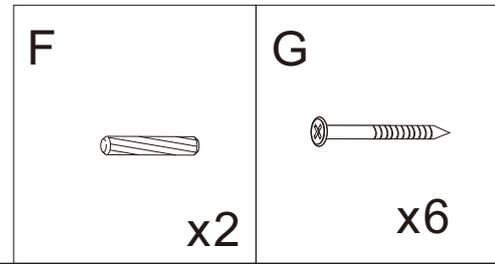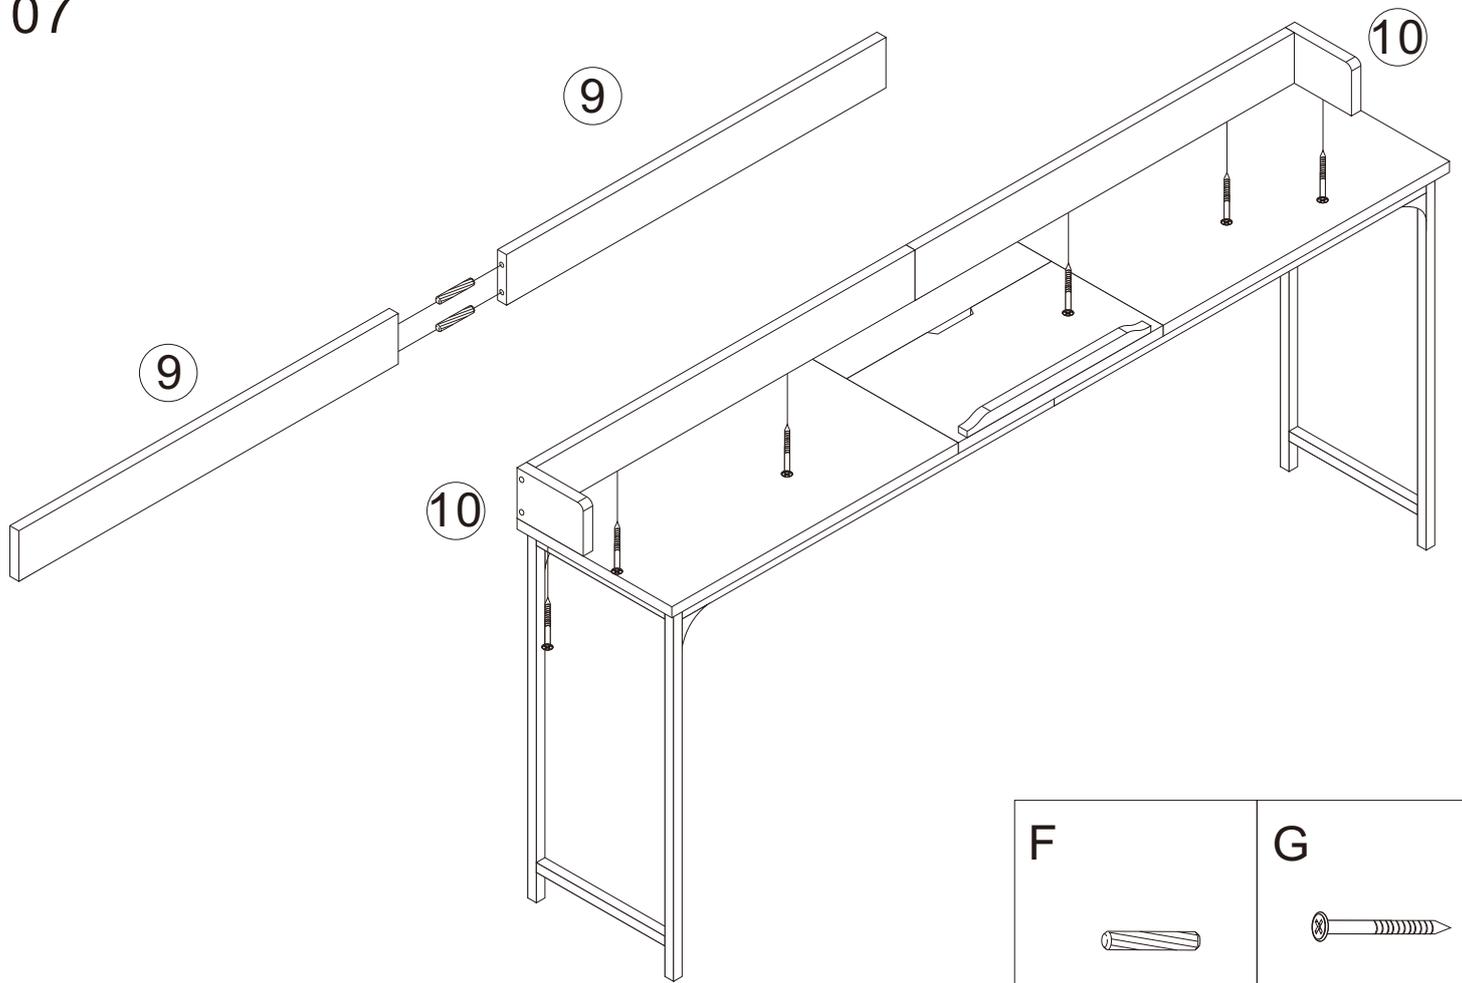

08

