


Easy to Install


Step 1 - Bracket Placement

Hold shade against window frame and mark where brackets will be secured with pencil. Secure bracket with screws.

Installation à l'extérieur

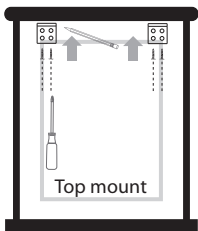

or

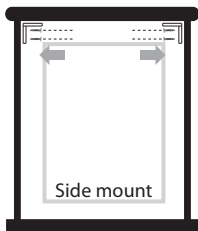

Step 2 - Shade Placement



Place shade channels directly over bolts and secure with wing nut.

Installation à l'intérieur


Top mount

or

Side mount

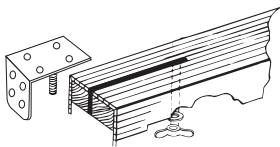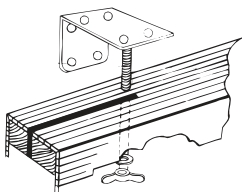

Step 3 - Enjoy your Home Decorators Collection Shade

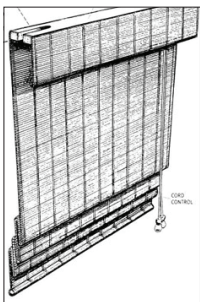

MADE IN CHINA
HECHO EN CHINA

FOR U.S., DISTRIBUTED BY
DISTRIBUIDO EN EE. U. POR
HOME DEPOT U.S.A., INC.
2455 PACES FERRY RD., N.W.
GA 30067

FOR ASSISTANCE CALL:
SI NECESITAS AYUDA LLAMA AL:
1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

Inside and outside mounting
instructions are included.

