



easy steps to
select your
curtains

Step 1


Measure your window

Measure the width

Measure the width from one end of the inside window frame to the other inside frame. Add approximately 3" on each side to obtain the wall mount width.

Measure the length

Measure the length from one end of the outside window frame to the other outside frame. Decide if you want your curtain to fall above (A), below the sill (B) or to the floor (C). The rod should be installed at approximately 6" above the trim.

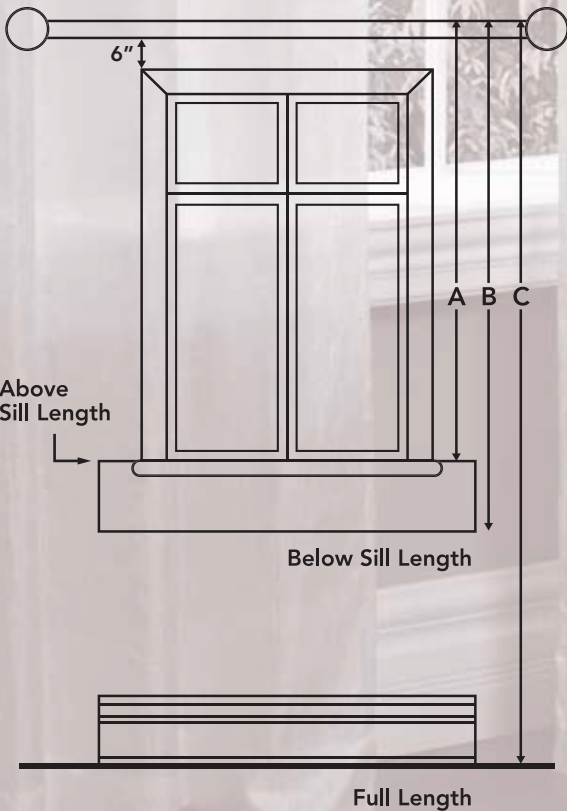

Step 2

Pick your curtain

Colour

Shop by color to enhance or coordinate with your room's decor theme or desired color palette.

Fabric

Choose your panel texture and style to coordinate with your room setting. Is your room setting: casual, formal, dramatic or modern?

Consider the opacity of the fabric = the amount of light filtering into the room. There are several options to choose from: Sheer, Semi-sheer, Opaque, Room Darkening and Blackout.

Look for the Thermalogic brand and enjoy these benefits!

THERMALOGIC™

Energy Saving:
Keep warm air in during winter and cool air stays in during summer

Light Blocking:
From room darkening to 100% hotel quality BLACKOUT

Noise Reduction:
Enjoy more peace and quiet and restful sleep

Length

The most common length is 84" and 95" and longer lengths are trending due to new home window constructions and the trend towards elongated looks.

Top Treatment


There are several header types available to choose from in ready-made curtains (See adjacent page)

Step 3

Please refer to the table below for suggested number of panels based on window size.

For windows measuring	You will need
up to 29 in (74 cm)	1 panel
30-39 in (76-99 cm)	2 panels
40-48 in (102-122 cm)	3 panels
49-72 in (124-183 cm)	3-4 panels
73-96 in (185-244 cm)	4-5 panels
97-120 in (246-305 cm)	5-6 panels
121-144 in (307-366 cm)	6-7 panels

Based on 50" wide panels

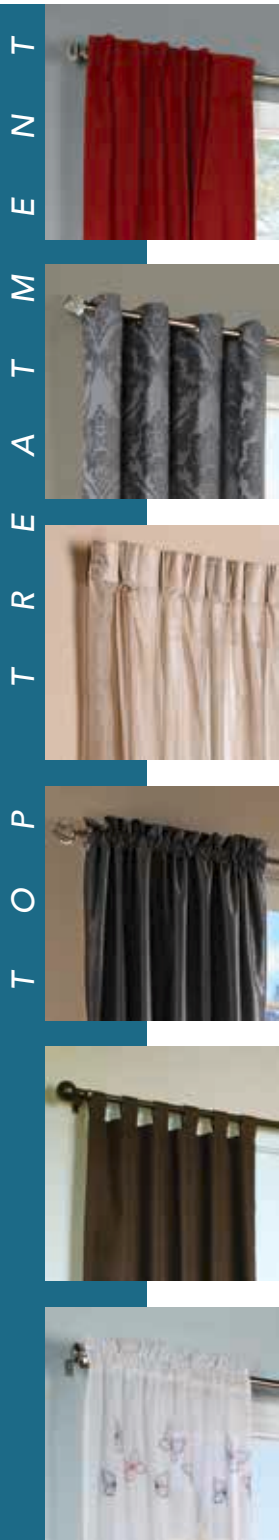

Dual Header Back Tab/Pocket Top

Typically 5 to 8 tabs depending on style
Easy to install and decorative
Fits any rods

Grommet

6 to 8 metal grommets
Easy to install
Diameter: 1.5"
Suggest 1" diameter rod

Pinch Pleated

Traditional look
Fullness already accounted for

Pole Top

Traditional look
3" rod pocket will fit up to 2" diameter decorative rods or wooden poles

Tab Top

Typically 5 to 8 tabs depending on style
Easy to install and decorative
Fits any rods

Tailored

Fabric gathered along the rod for a more traditional look
Header: 1.5"
Rod Pocket: 2"
Suggest 1" diameter rod