



STEP 1:

Measure the inside of your window frame.
This is the size range you should purchase.

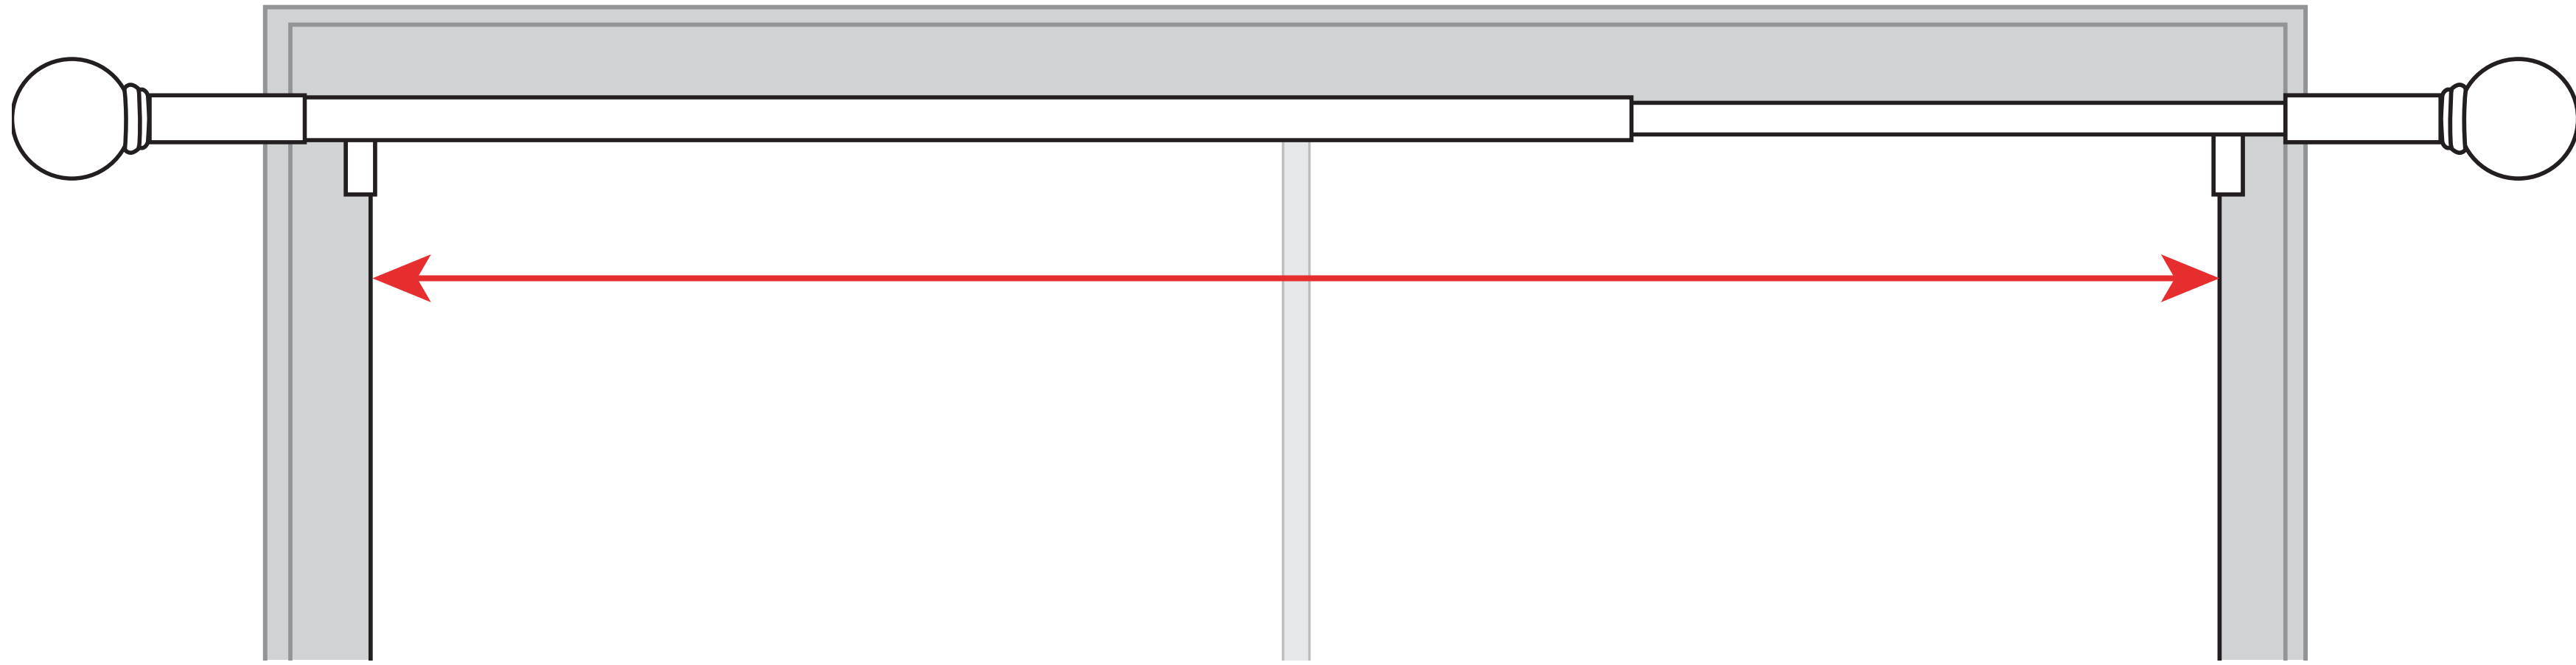

STEP 2:

Confirm you have 5" of clearance from the
inside of your window frame outward.

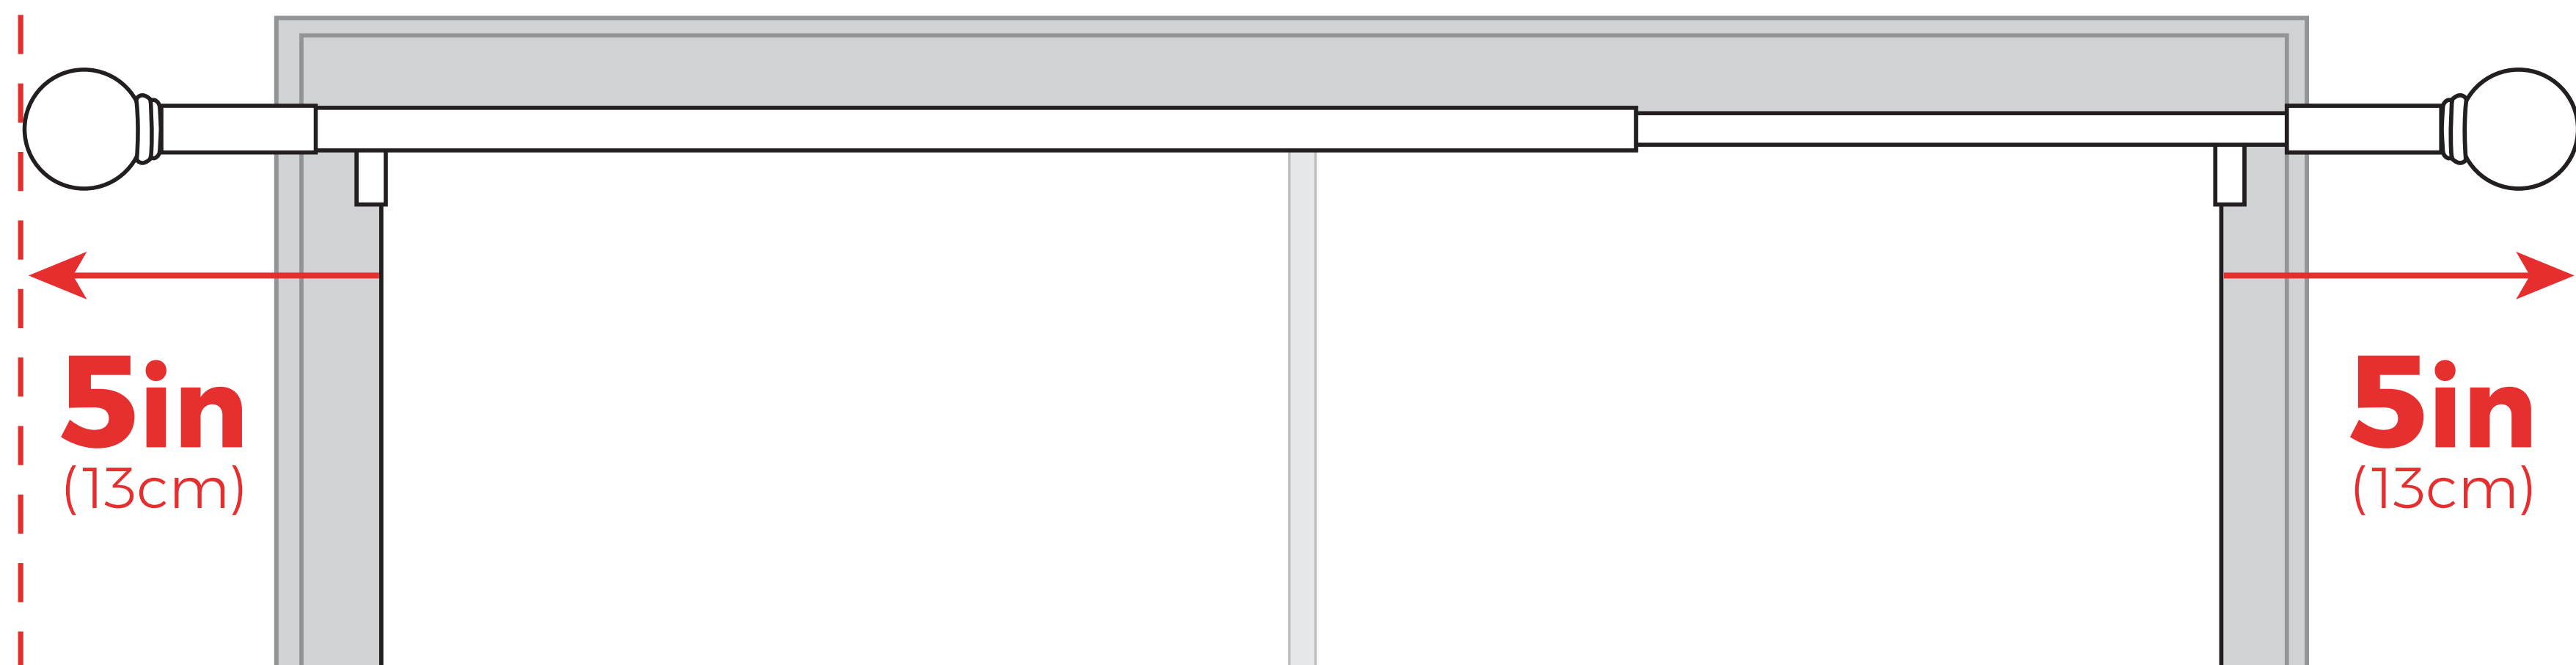

STEP 3:

The inside of your window frame must be flat.

