


Please Note: The Foundation should be assembled on a hard, flat Surface
 Be aware of rough or sharp edges, use care during assembly - It is recommended that two people are available for assembly -Please follow steps in order for best results

ASSEMBLY INSTRUCTIONS

Content List:

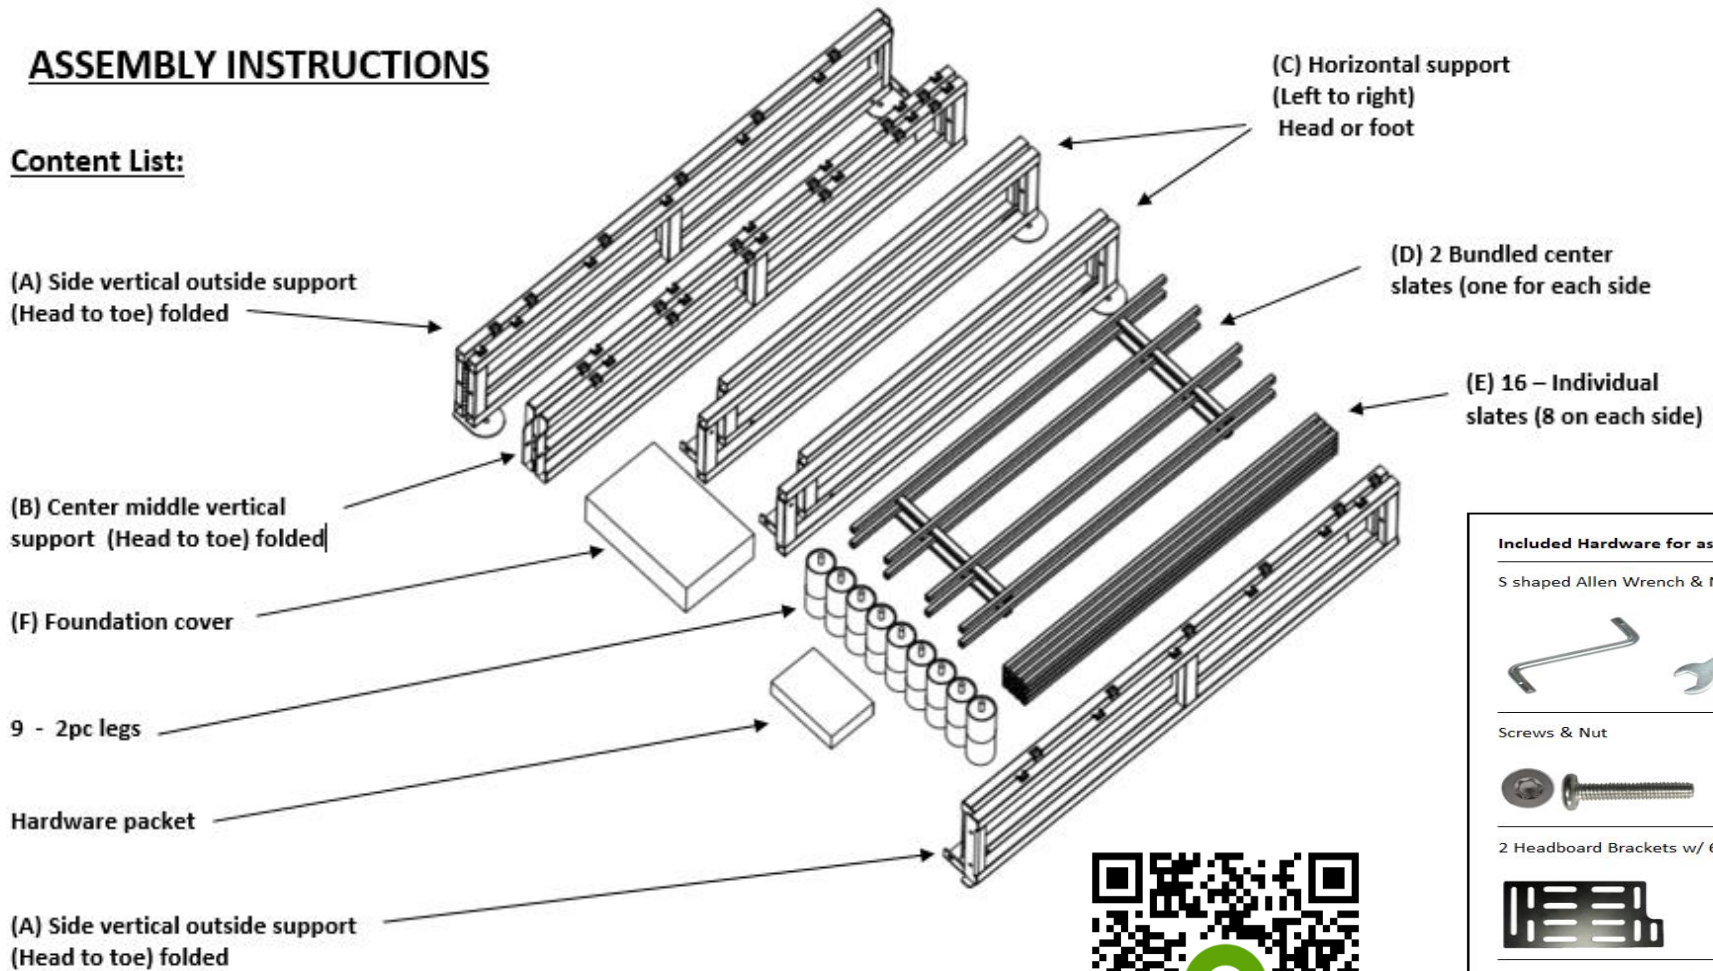

Included Hardware for assembly

S shaped Allen Wrench & Nut Wrench



Screws & Nut



2 Headboard Brackets w/ 6 Screws




Please Visit WWW.GhostBed.com for product Information and Video Instructions.

Limited 3-year warranty visit
WWW.GhostBed.com to view and register warranty
 Compliant with CPSC FR1633




Watch our assembly video at www.ghostbed.com/assembly

- 1.** Unfold the side vertical outside supports (A) placing them approx. 4 feet apart **with the hinges facing inward**. Unfold and place the center middle vertical support (B) in between the 2 supports. Unfold and place the Horizontal Support (C) at the head and foot **with the hinges facing outward**.

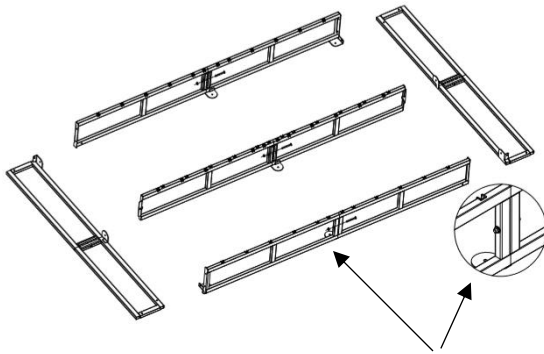


Thru the unfolded hinge, insert and tighten 1 Screw and nut


- 2.** Align the side vertical support corners with the horizontal support corners and attached with 1 screw and nut at the top and 1 at the bottom by the leg plate. Attached the middle support with the longest screw thru the hinge section. Use the **enclosed wrenches** to tighten.

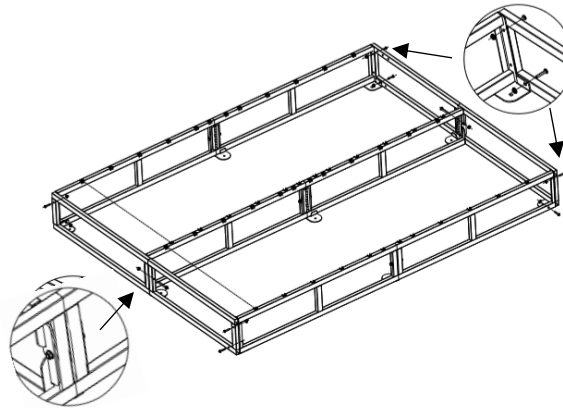


- 3.** Place the Bundled slat sections (D) in the middle on each side snapping each slat end into the plastic seat.

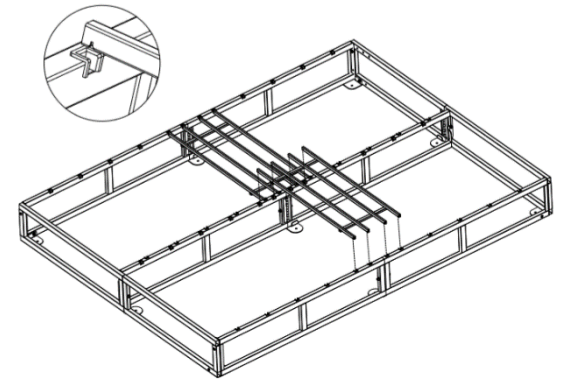


- 4.** Place each of the 16 slats (E) into each of the seats, snapping each end in place.

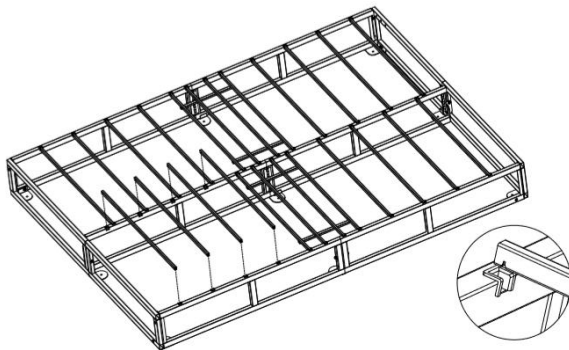

- 5.** Unfold and unzip the cover, then place over the foundation. With an assistant tip the foundation on its side to zip the cover closed.

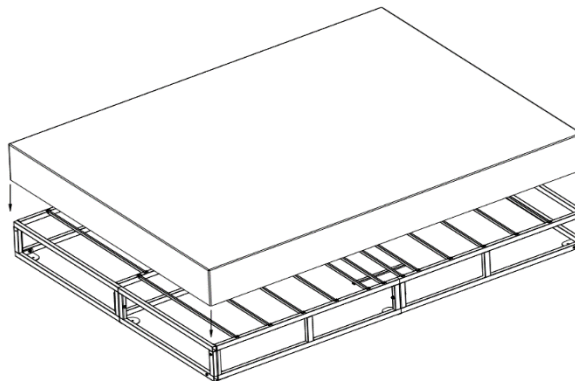

- 6.** If using the legs, screw each leg into the frame thru the slit in the cover. Make sure to hand tighten each leg completely.

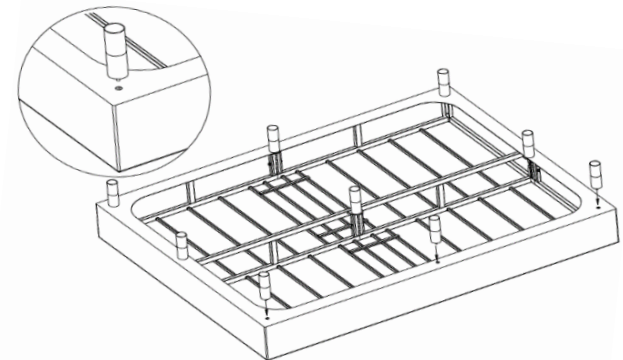

- 7.** If attaching to a Headboard – see instructions accompanying Headboard Brackets