


1 Parts Identification

PB 18-48
PB 18-48S

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

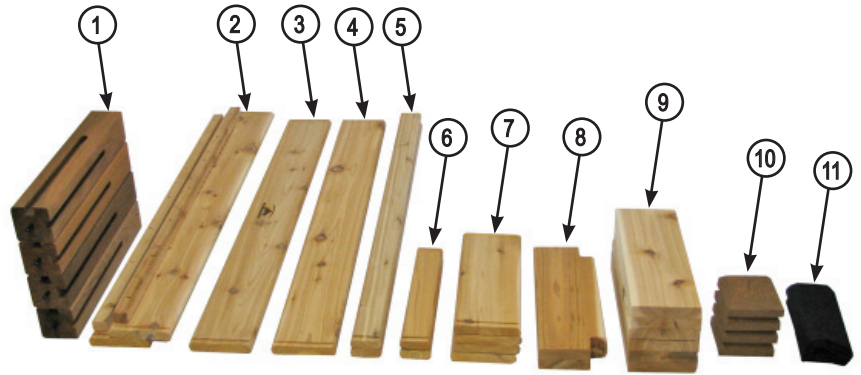

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	1900	Corner Post, 4" x 4" x 19"
2	2	7011	Side Rail w/Cleat, 45" x 5-1/2" x 1"
3	1	4501L	Side Rail w/Logo, 45" x 5-1/2" x 1"
4	1	4501	Side Rail, 45" x 5-1/2" x 1"
5	2	4502	Narrow Center Side Rail, 45-1/2" x 2-1/2" x 1"
6	2	1451	Narrow Center Side Rail, 14-1/2" x 2-1/2" x 1"
7	4	1450	Side Rail, 14-1/2" x 5-1/2" x 1"
8	2	1552	Corner Notched Bottom Board, 15" x 5-1/2" x 1"
9	6	1550	Bottom Board, 15" x 5-1/2" x 1"
10	4	3100	Post Cap, 4" x 4" x 1-1/2"
11	1	2003	Fabric Liner, 22" x 36"


2 Side Rail Assembly

Stand two 4" x 4" x 19" corner posts (Item 1) upright with slots facing each post and slots facing you.

Locate a 14-1/2" x 5-1/2" side rail w/cleat (Item 2). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining 4" x 4" x 19" corner posts and 14-1/2" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 10". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

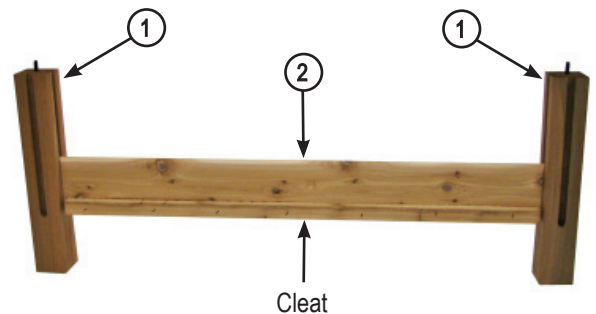


Packaged & Inspected by:

Date:

Continued

3 End Rail Assembly


Install the two 14-1/2" x 5-1/2" side rails (Item 7) into the slots and slide to the bottom of the slots.

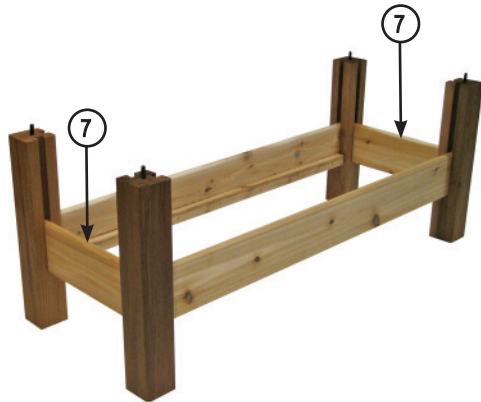

4 Narrow Center Side Rail Assembly

Install the two 45" x 2-1/2" narrow center side rails (Item 5) into the slots and slide down.


Install the two 14-1/2" x 2-1/2" narrow center side rails (Item 6) into the slots and slide down.

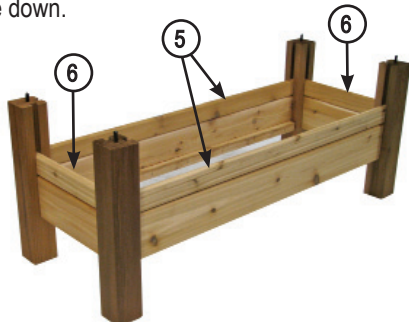

5 Final Side Rail Assembly

Install the 45" x 5-1/2" side rail w/logo (Item 3) and 45" x 5-1/2" side rail (Item 4) and slide down.

Install the remaining 14-1/2" x 5-1/2" side rails (Item 7) into the slots and slide down.

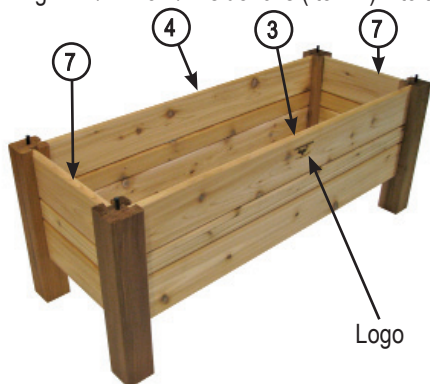


6 Bottom Board and Fabric Installation

Place one 15" x 5-1/2" x corner notched bottom board (Item 8) on each end of the planter box.

Place six 15" x 5-1/2" bottom boards (Item 9) into the planter box. (Gap boards evenly to allow for water drainage).

Install fabric liner into the planter box.

Soil Capacity: 4.3 Cubic Feet

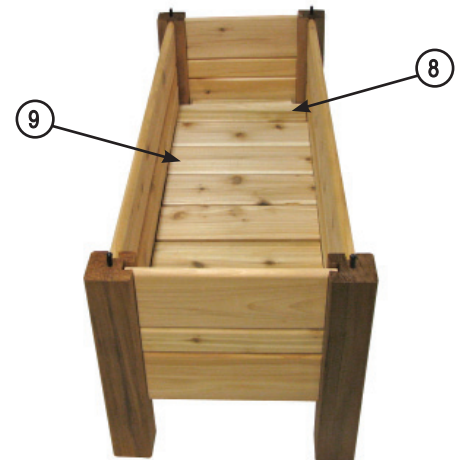

7 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 10) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

