


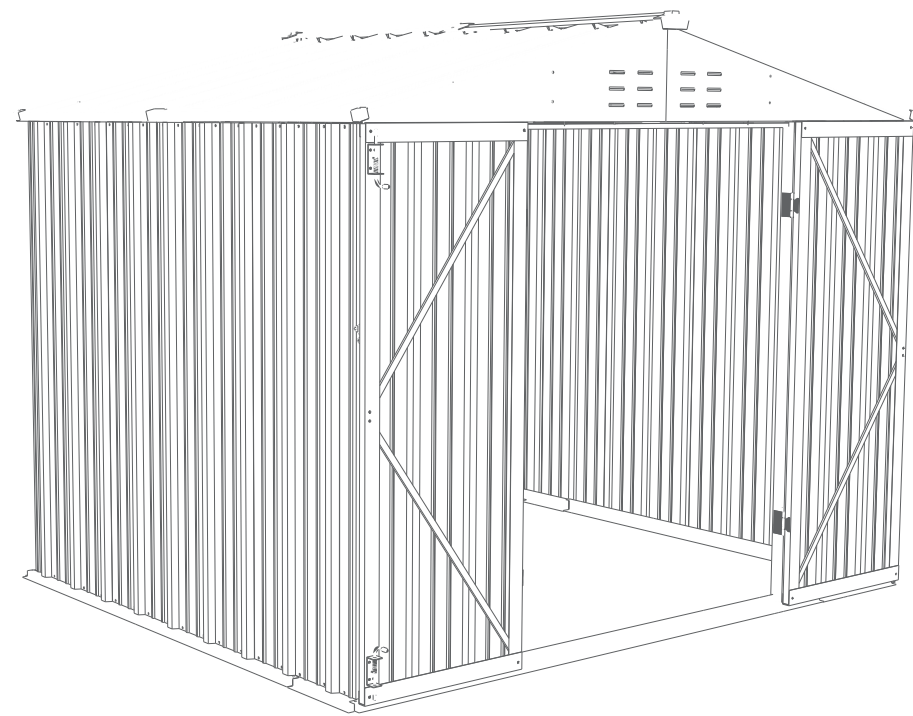

ASSEMBLY INSTRUCTIONS

METAL GARDEN SHED

SKU: T-PS1268S0BN-1A
T-PS1268S0BN-2A

BE
YOUR
LIFE BUILDER

www.patiowell.com



Patiowell
Metal Garden Shed
Installation Tutorial
[https://www.patiowell.com/
pages/video-t-ps1268s0bna](https://www.patiowell.com/pages/video-t-ps1268s0bna)


 saleservice@patiowell.com

SITE PREPARATION


Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

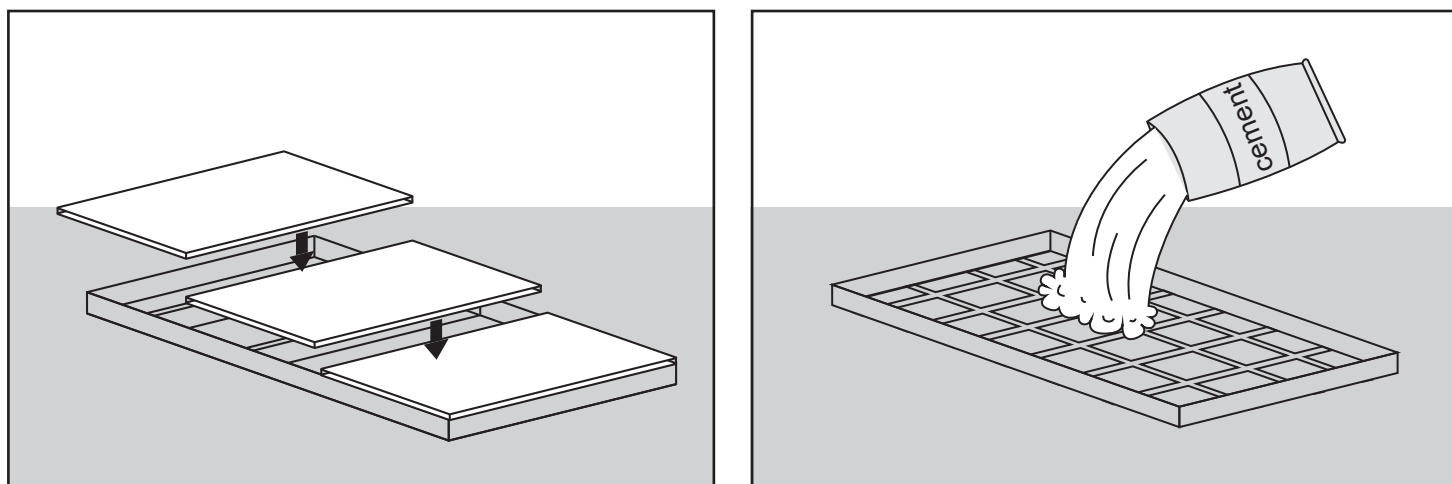

The external dimensions of the product :

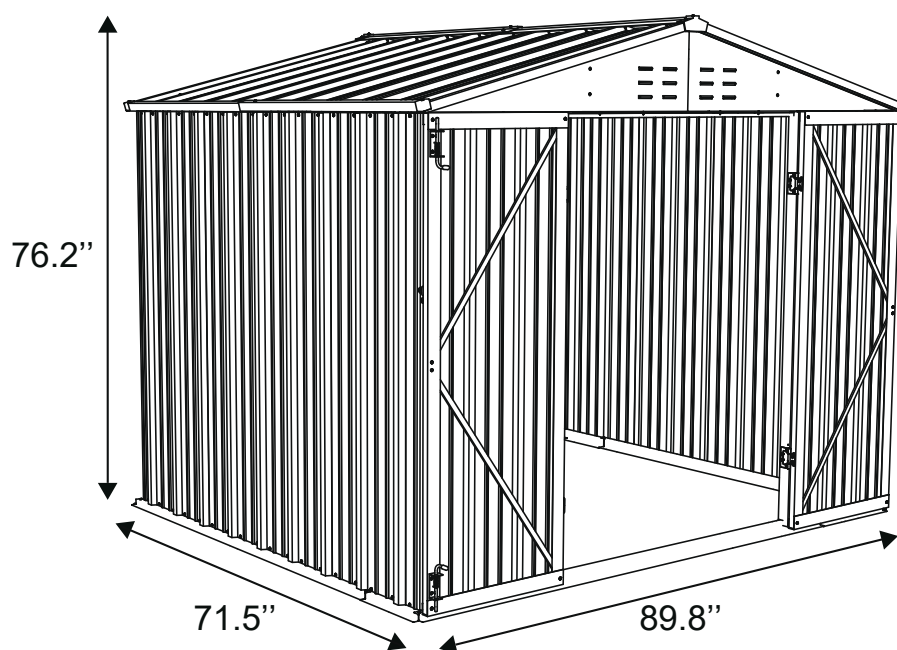

BEFORE STARTING ASSEMBLY


Remove all of the pieces from the 2 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

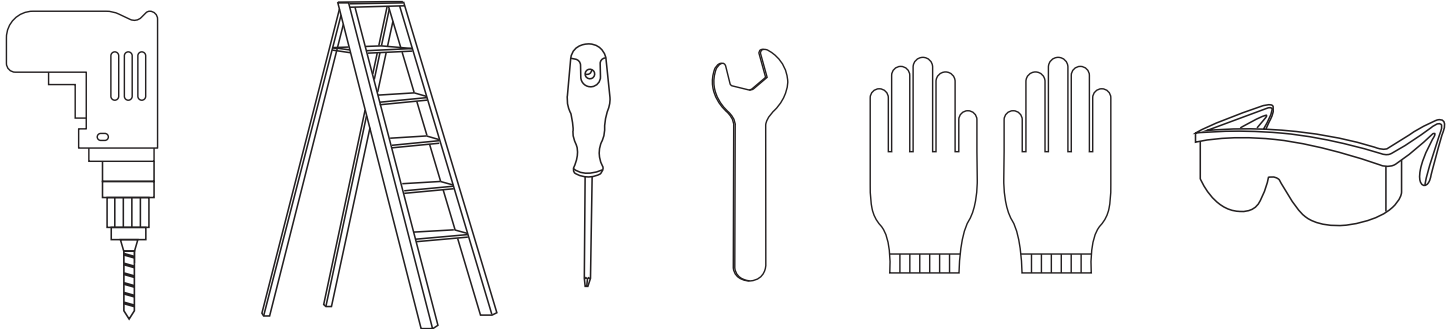

CAUTION















Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.








Requires two people and takes 3 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

**DO NOT RETURN YOUR UNIT
TO THE STORE**
Contact us first
saleservice@patiowell.com





ROOF PARTS

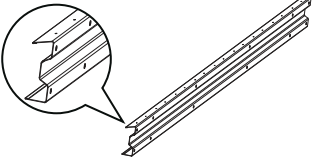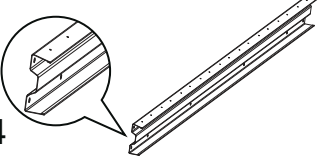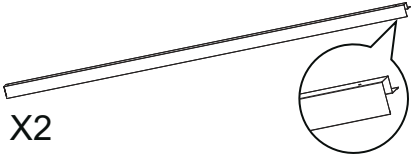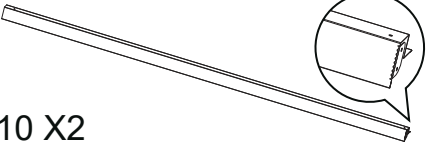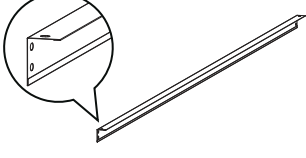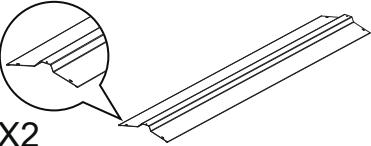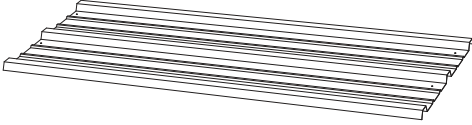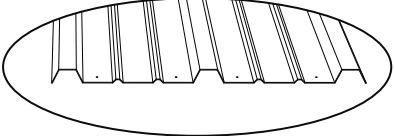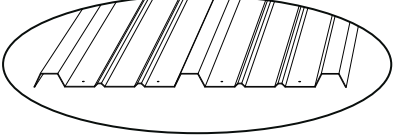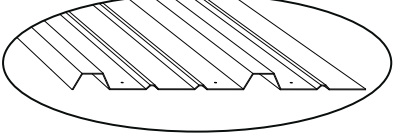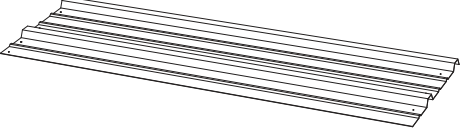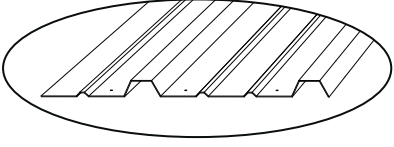A3 X2 	A4 X2 	C4R X2 
C4L X2 	C5 X4 	GC X4 
GE X2 	M2 X4 	M2L X4 
M9 X2 	M10 X2 	M11 X4 
M13 X2 		
PE3 X2 		
PE4 X4 		
PE5 X2 		
PE6 X2 		






WALL PARTS

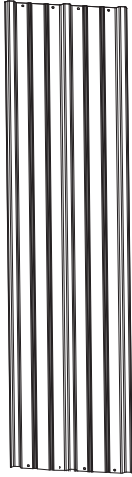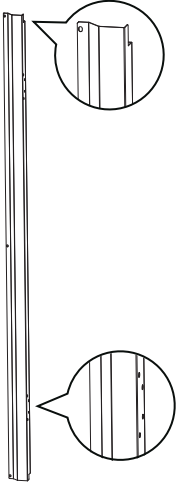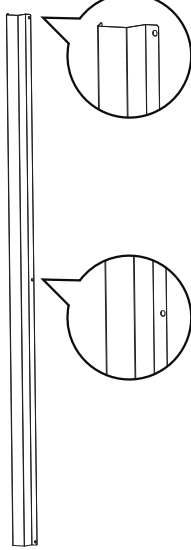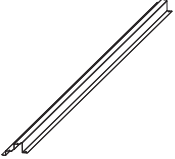
			
W1A X12	WS2A X4	WS3A X2	ULA X1
			
BE1 X1			C2 X4
			
BE2 X1			GS X2
			
UE1 X1			GR X2
			
UE2 X1			V1 X50
			
BE1L X1	BE2L X1		V2 X309
			
UE1L X1	UE2R X1	US3 X4	BS3L X2

DOOR PARTS

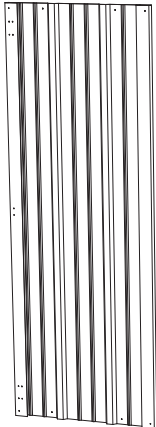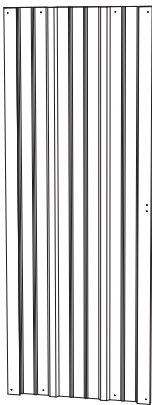
		 20 X4	 DC X2
DLA X1	DRA X1	 DG X1	 DH X4
		 DF X1	
		 DX2 X4	

SCREW

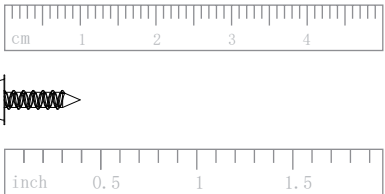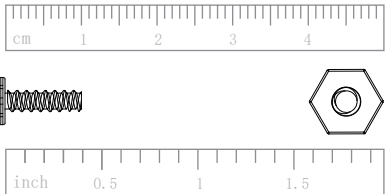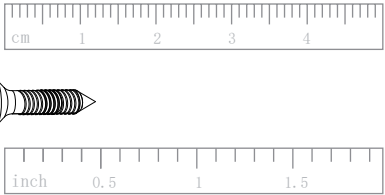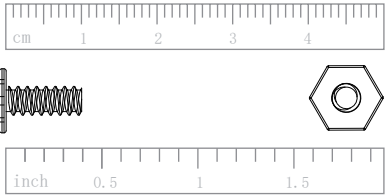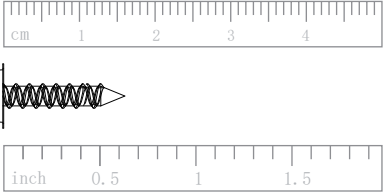  F1(X343) M4*10	  F2(X44) M4*10
  F3(X32) M5*12	  F4(X5) M6*10
  For GC F5(X4) M4*16	

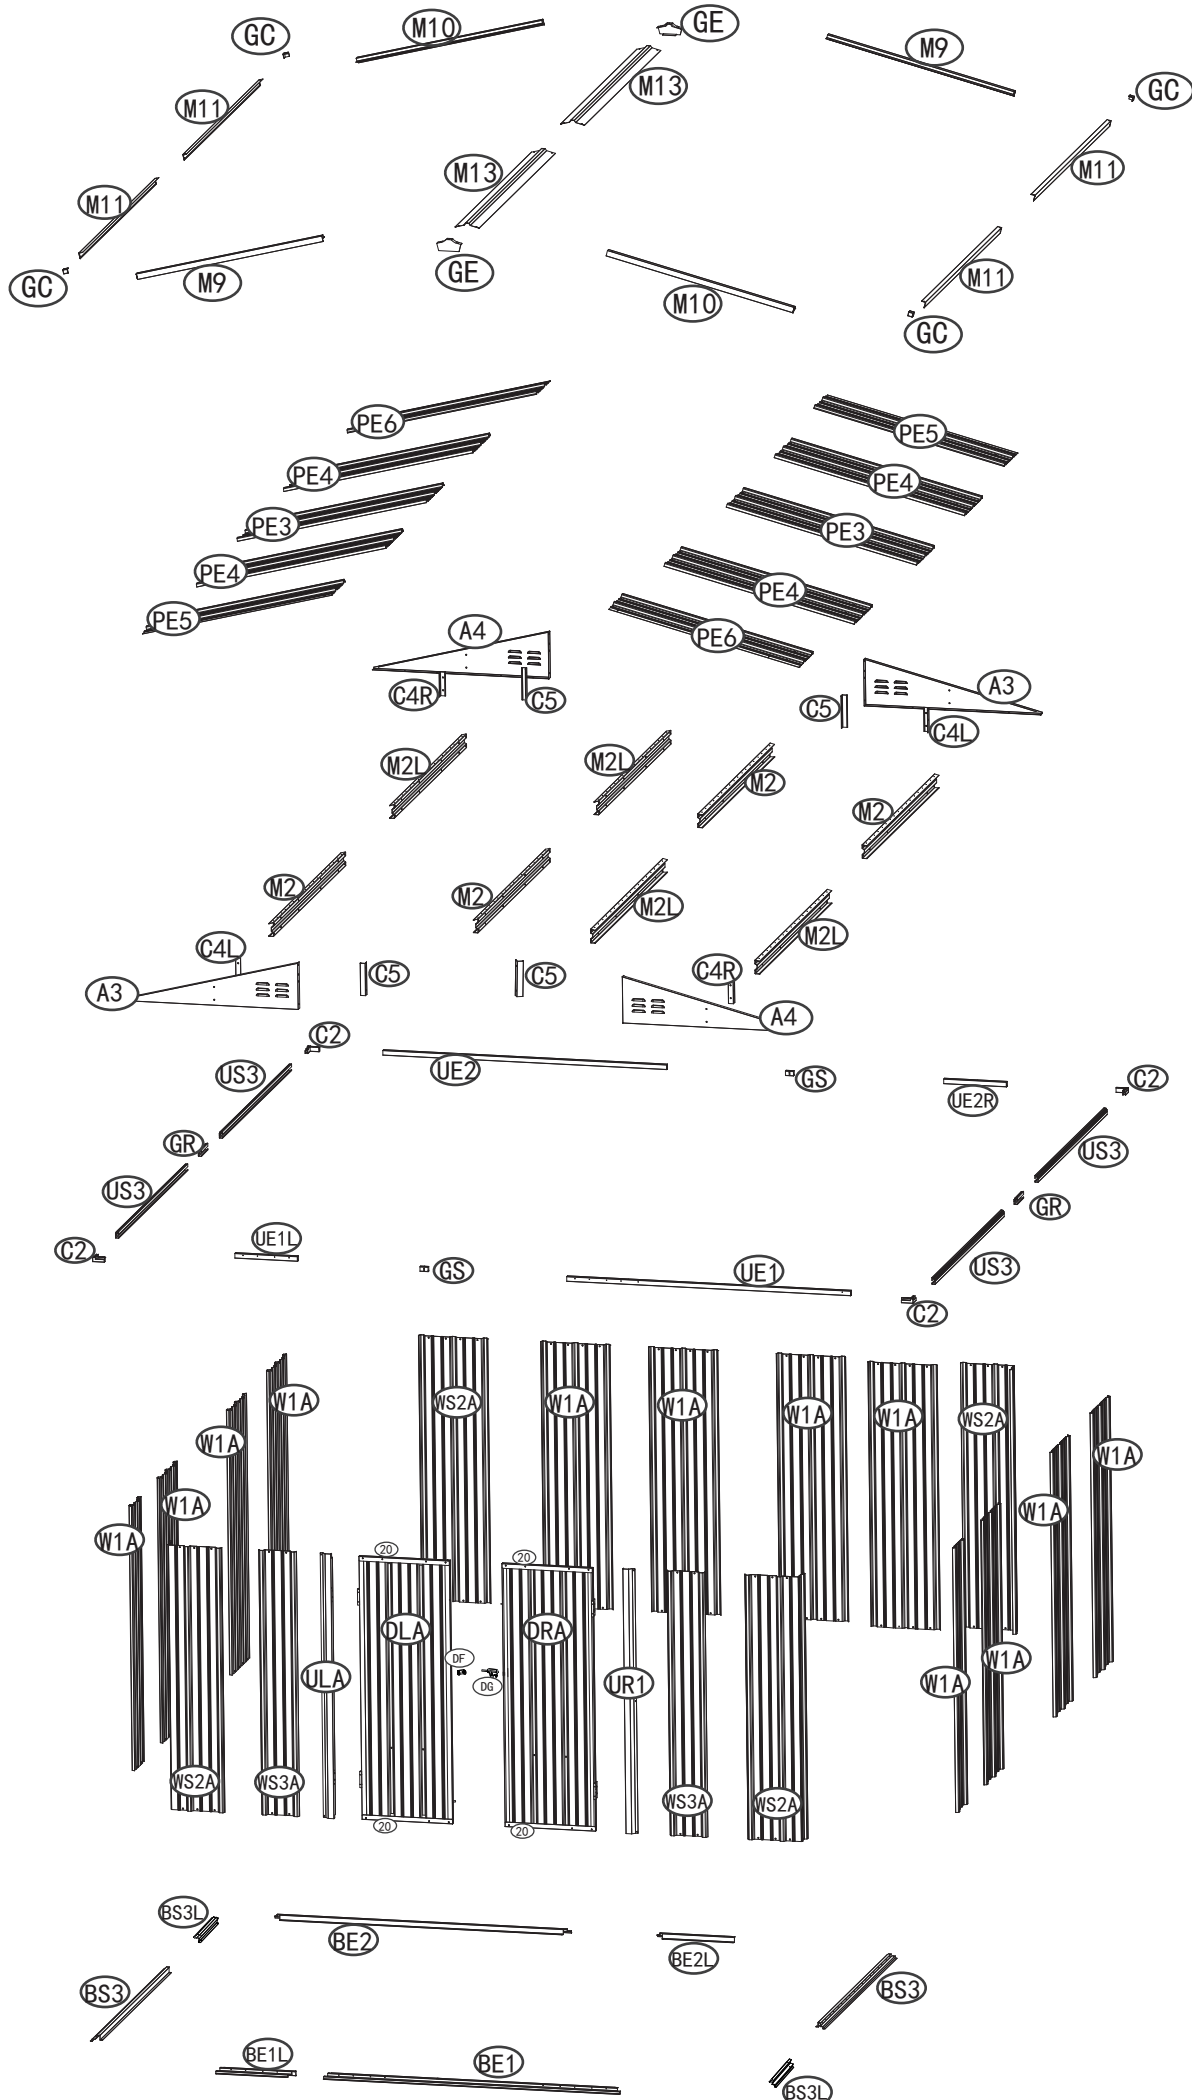


CONTENTS

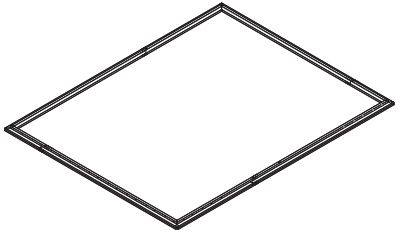


Bottom frame construction

09-12
(page)

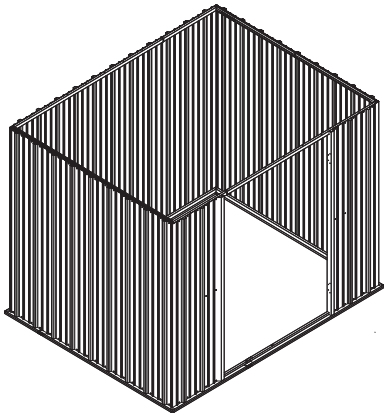


Wall construction

13-24
(page)

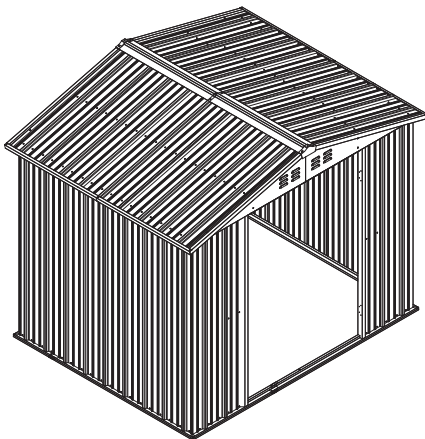

Roof Mount


25-33
(page)

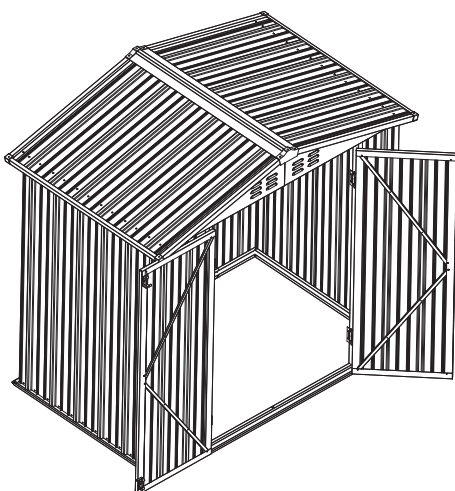


Door installation

34-41
(page)


STEP 1

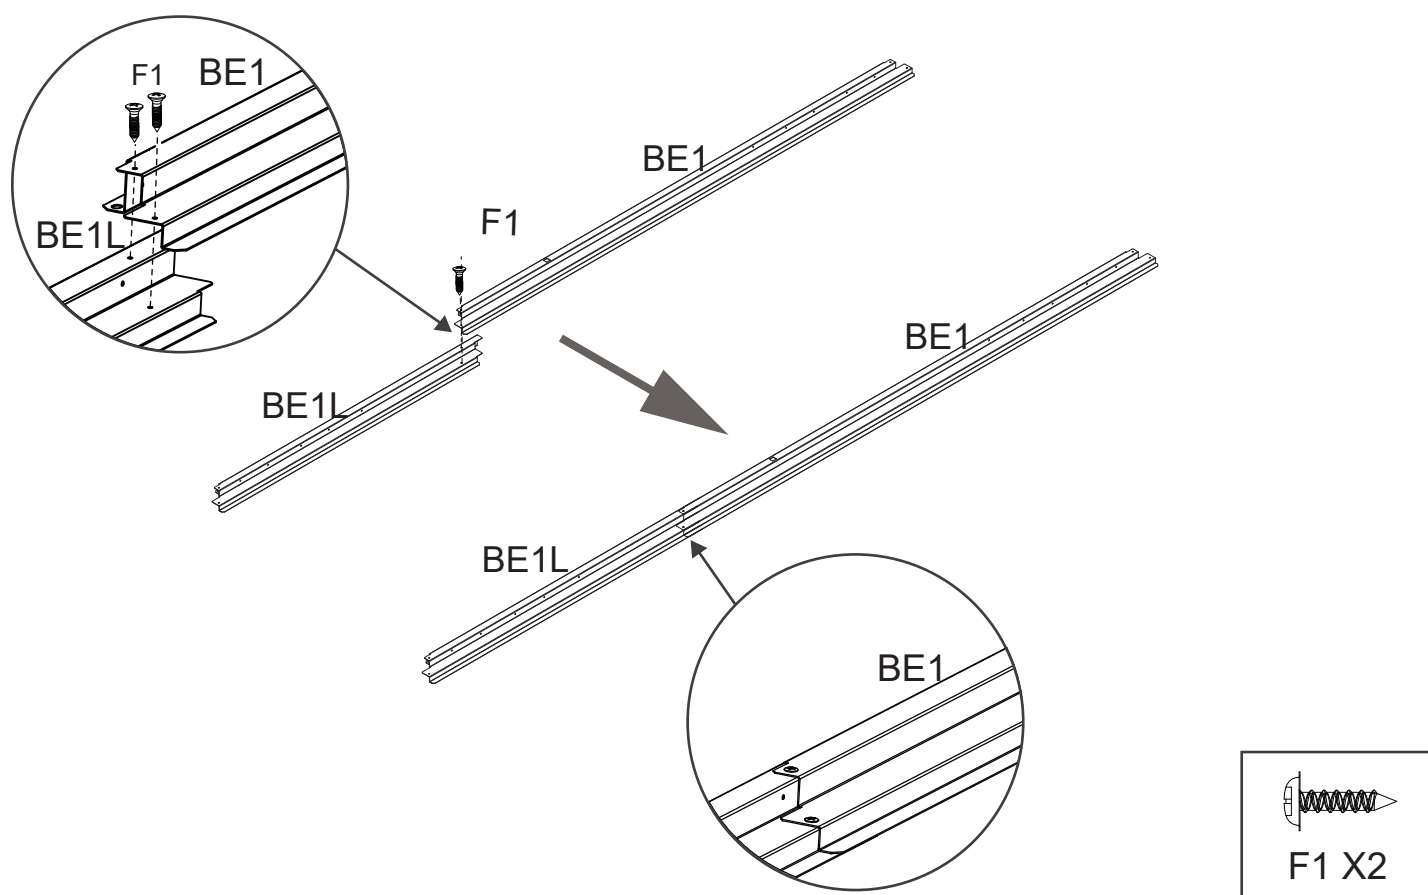


STEP 2

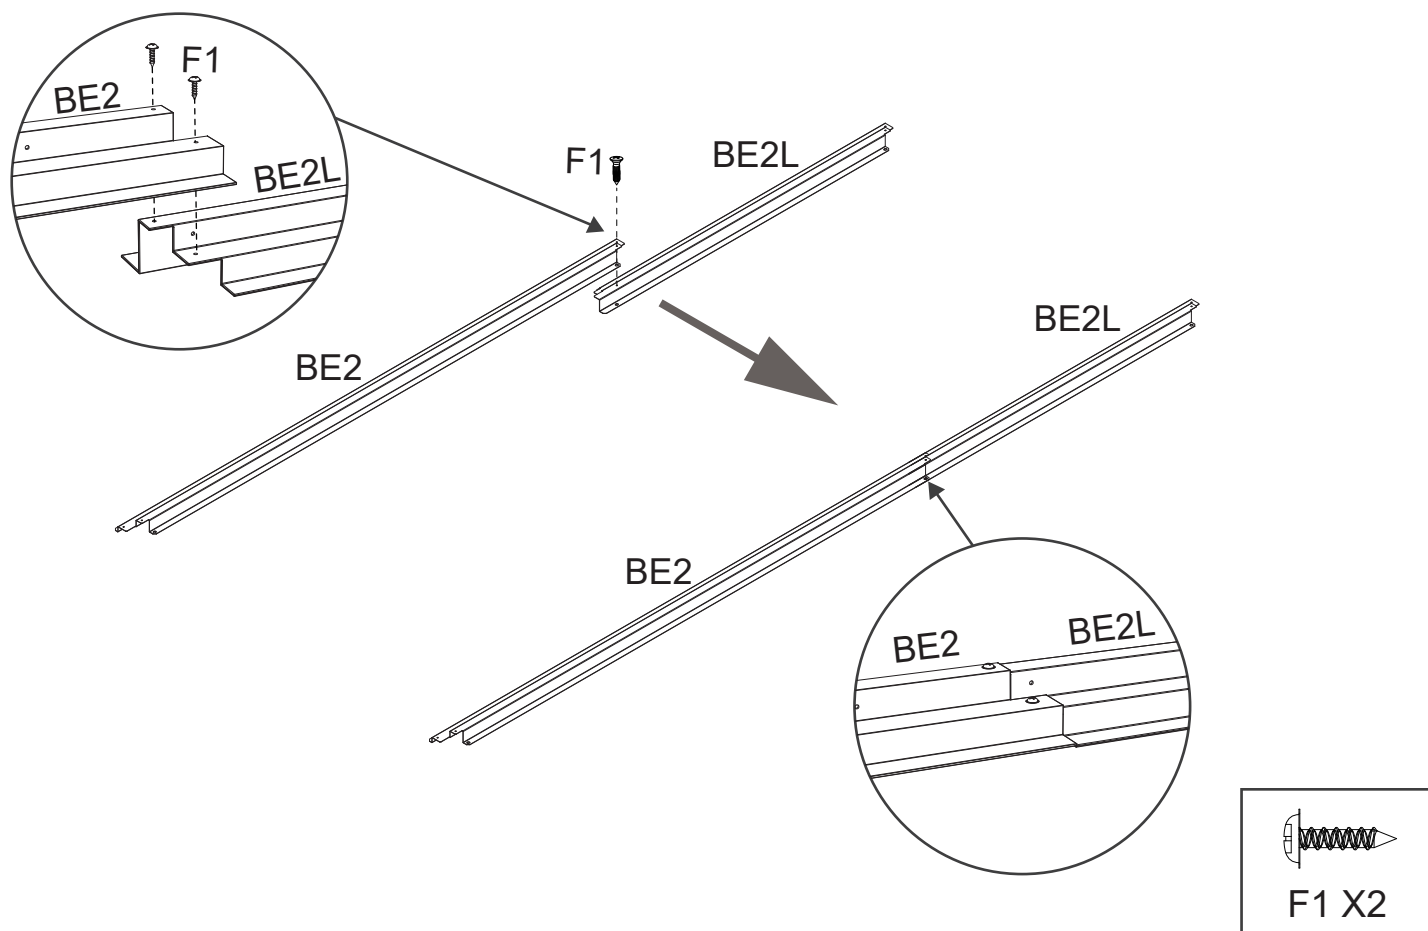


STEP 3

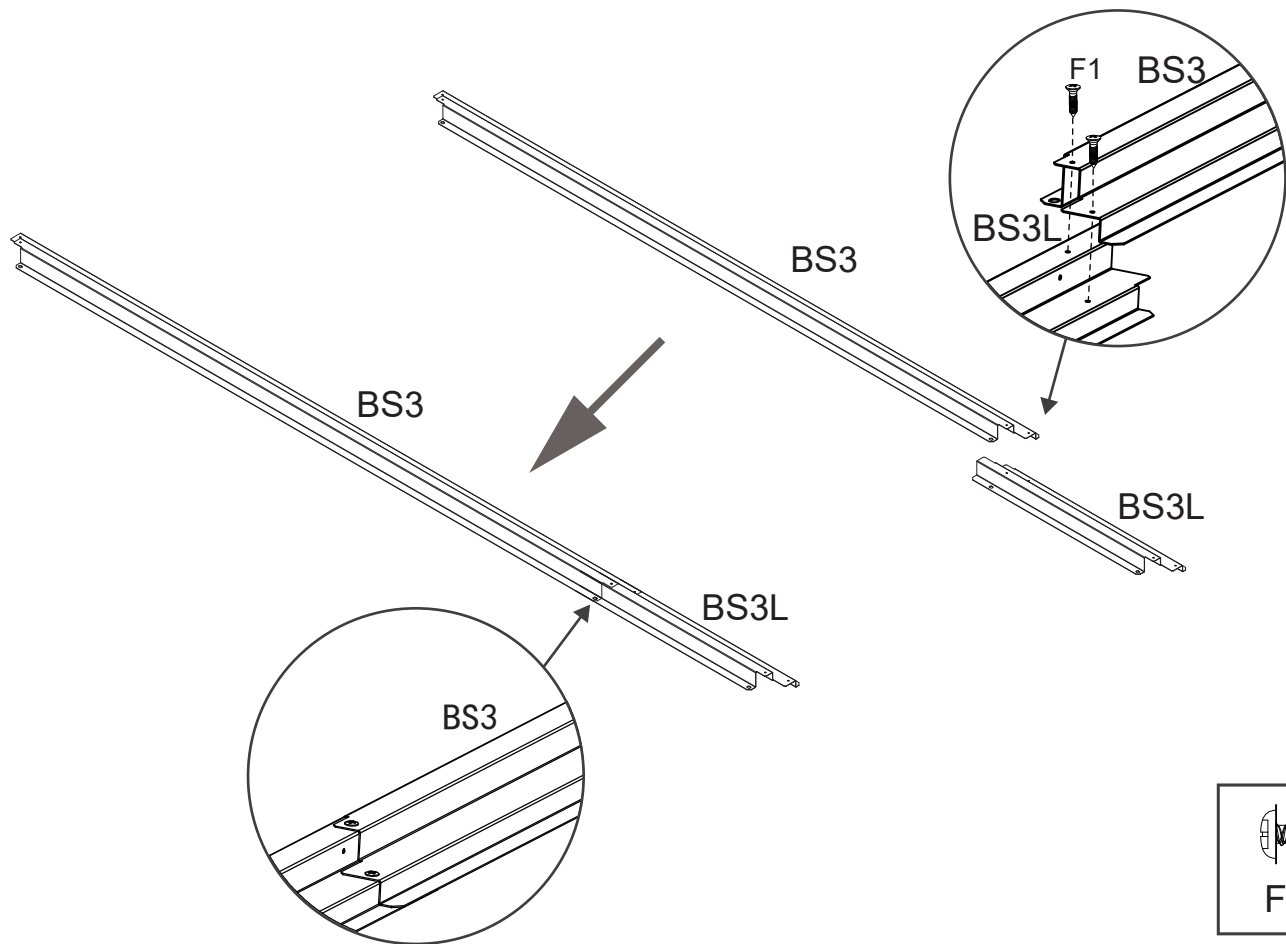


STEP 4

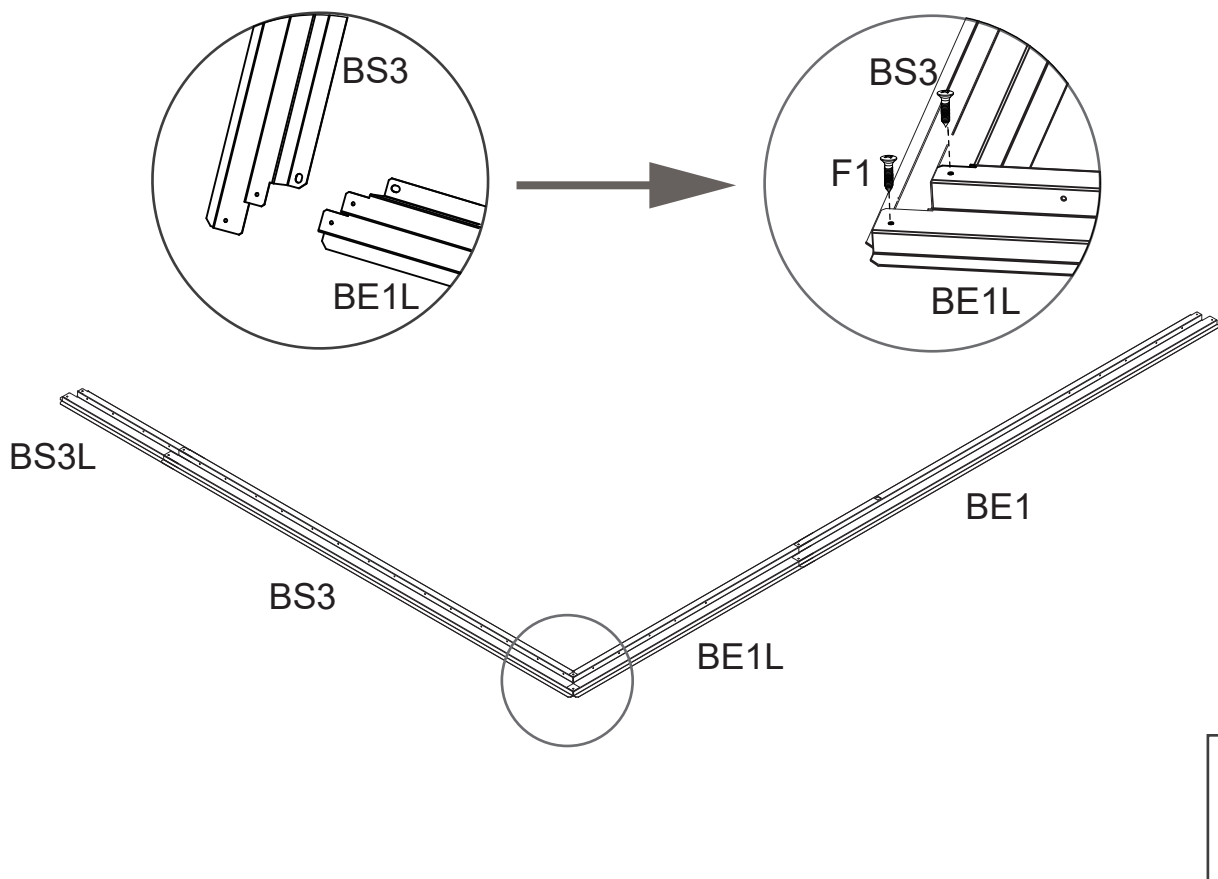



STEP 5

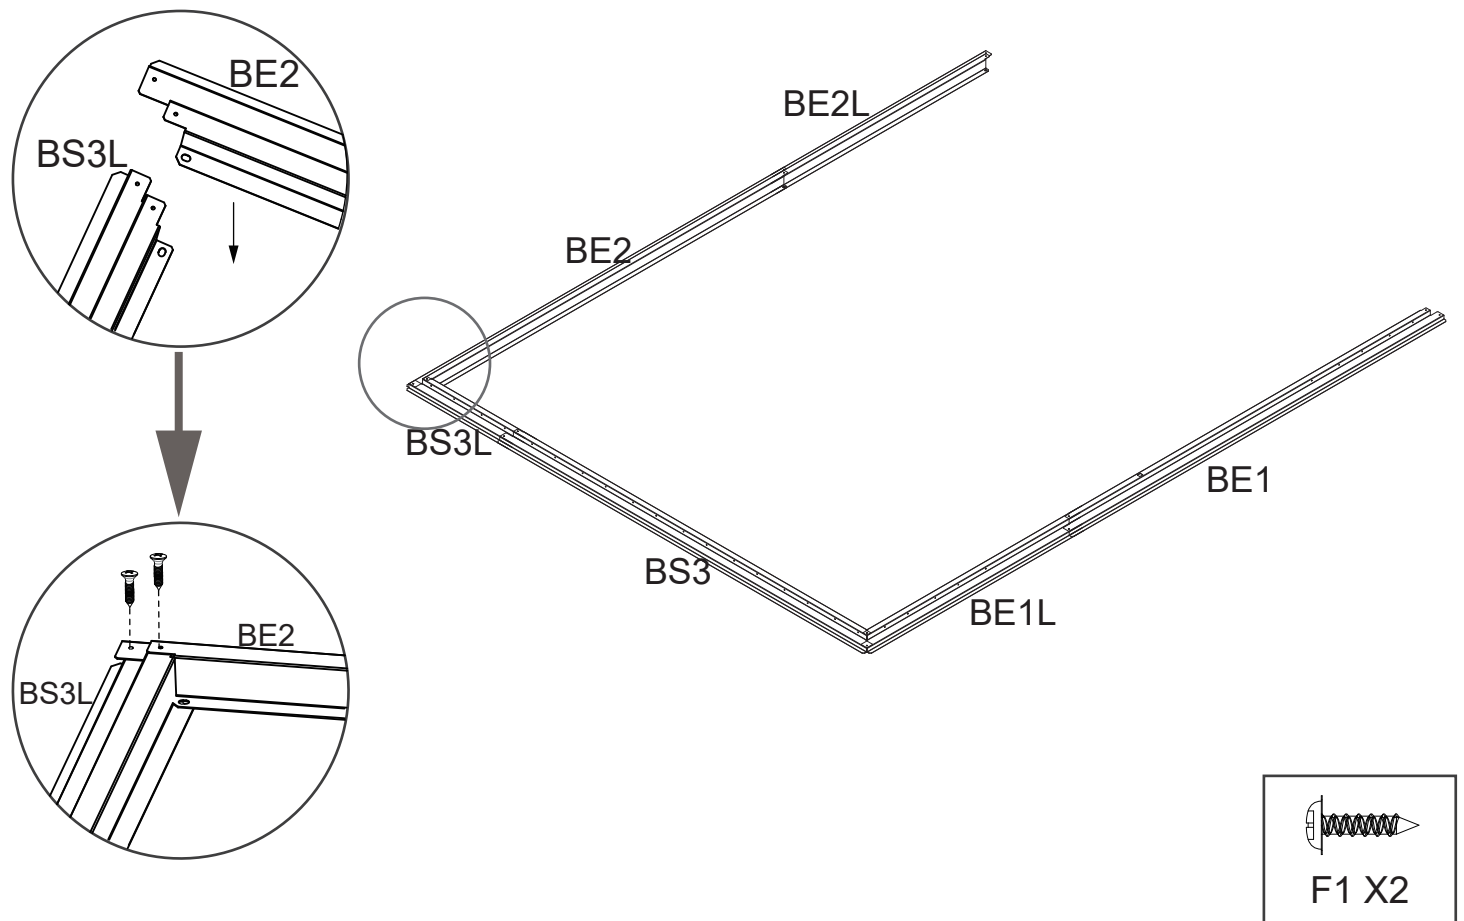



STEP 6

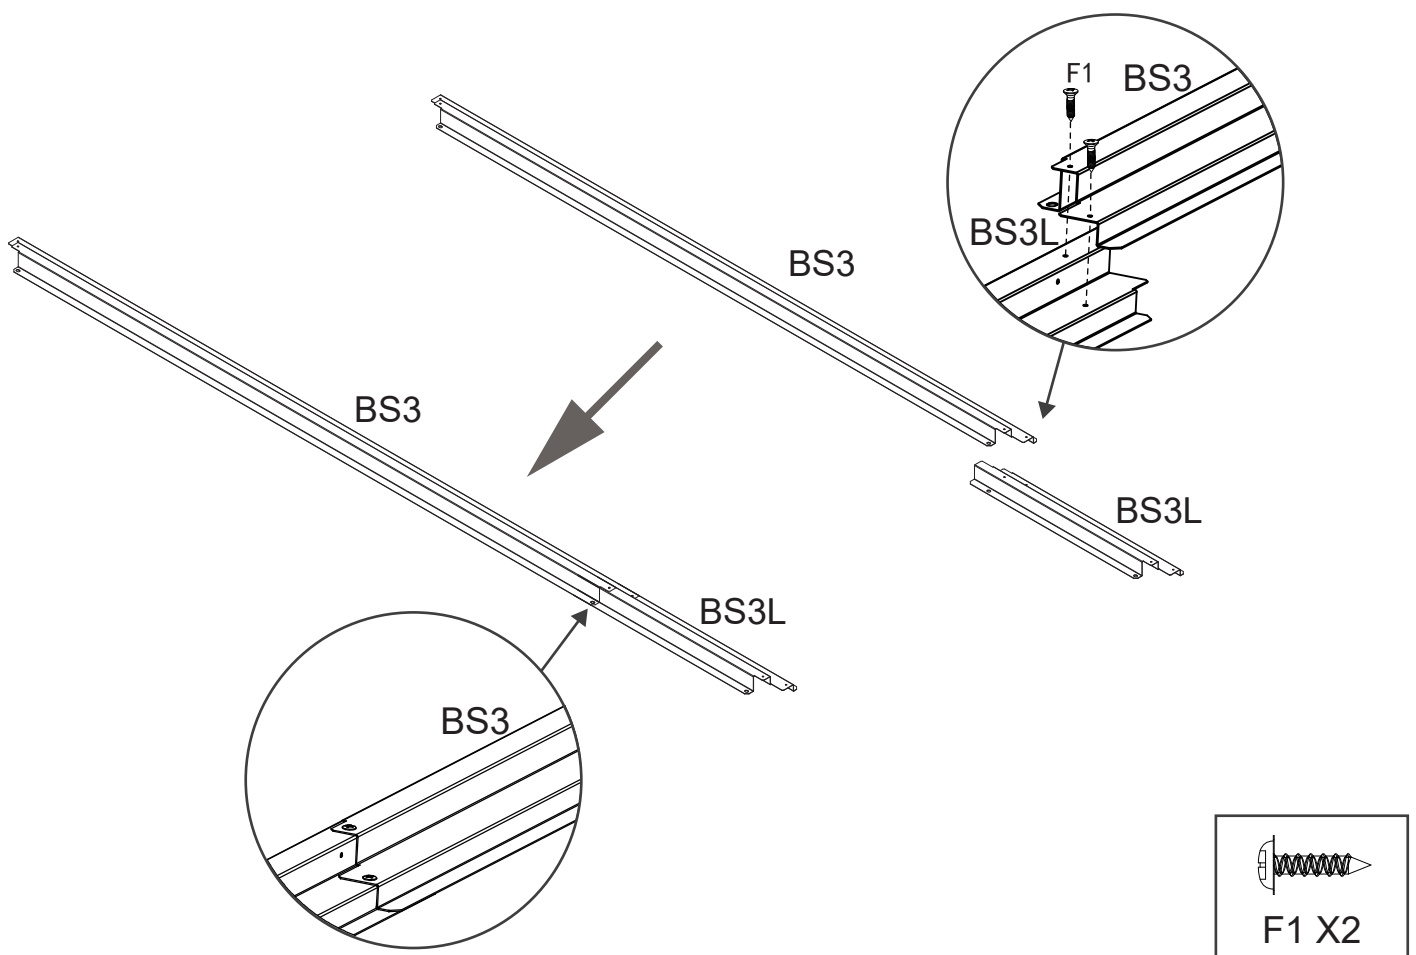

STEP 7

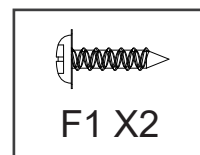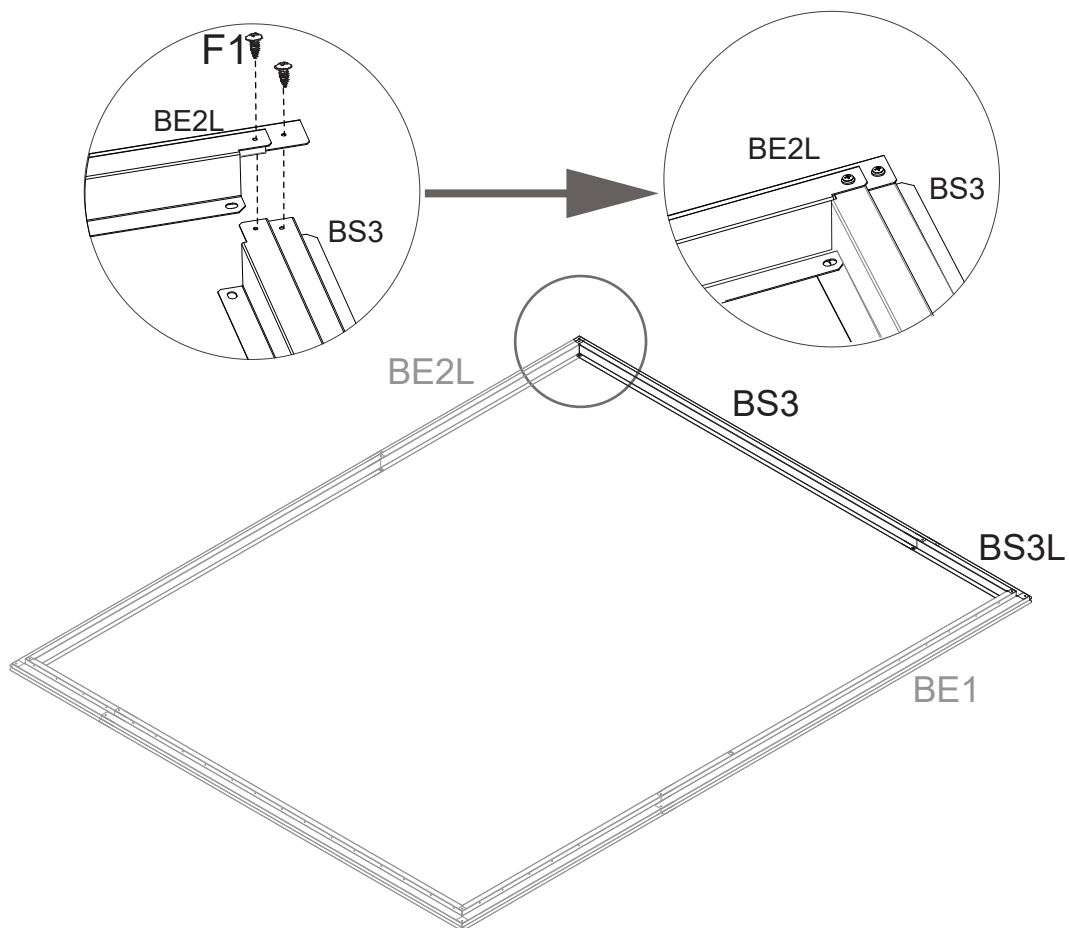


STEP 8

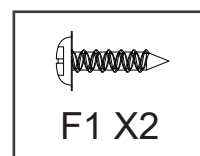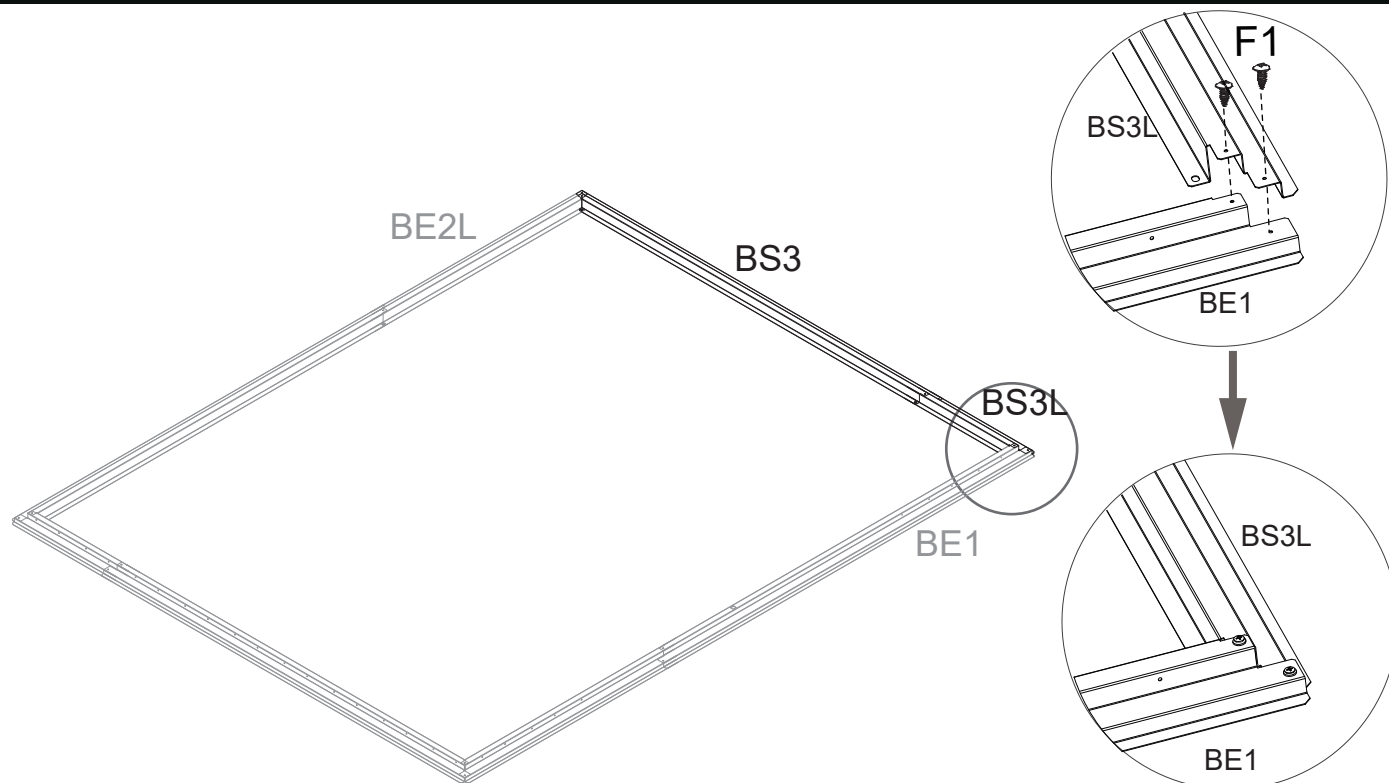

STEP 9




Tips: Align the gasket with the hole, and then use the electric drill to drill the V2 into the hole.

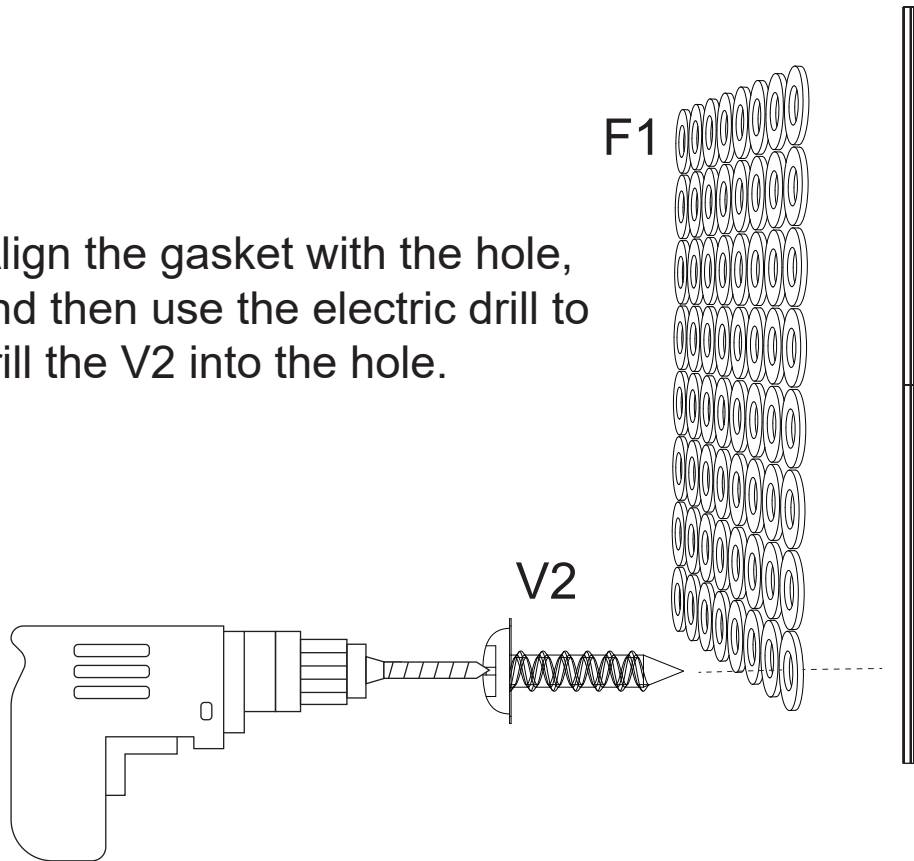


STEP 10




Please align the screws with the screw holes for installation.

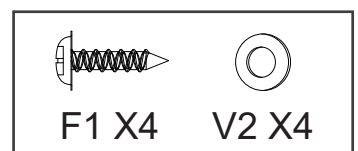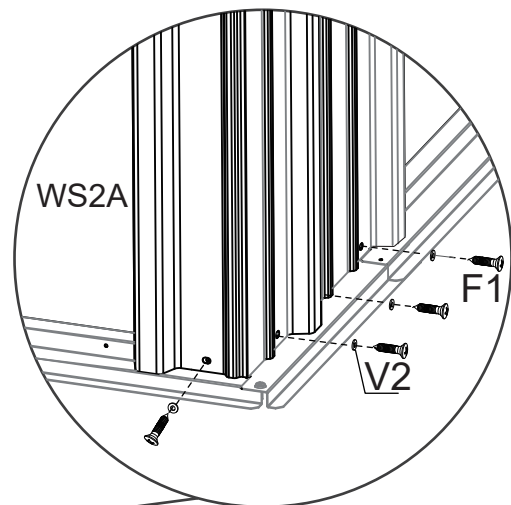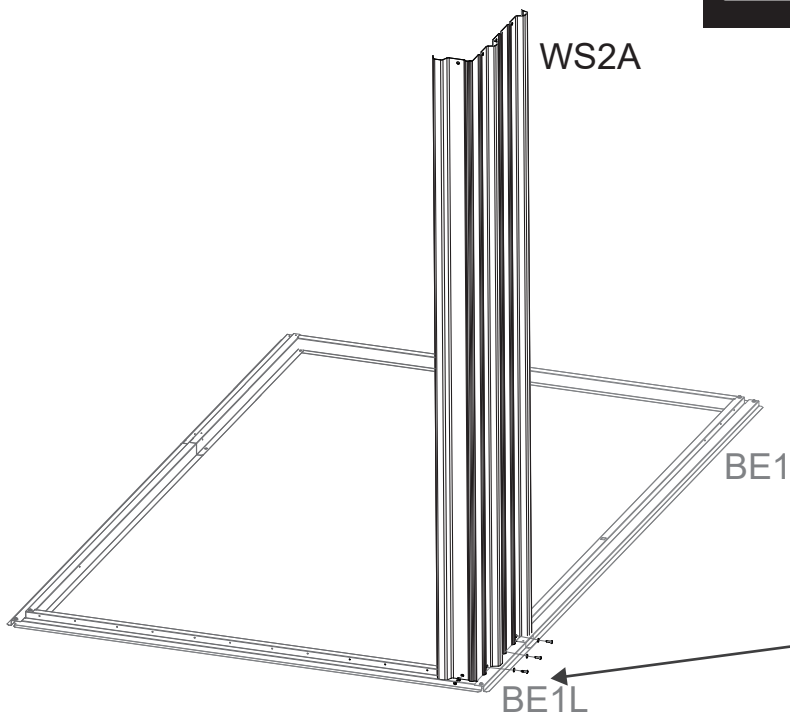


STEP 11

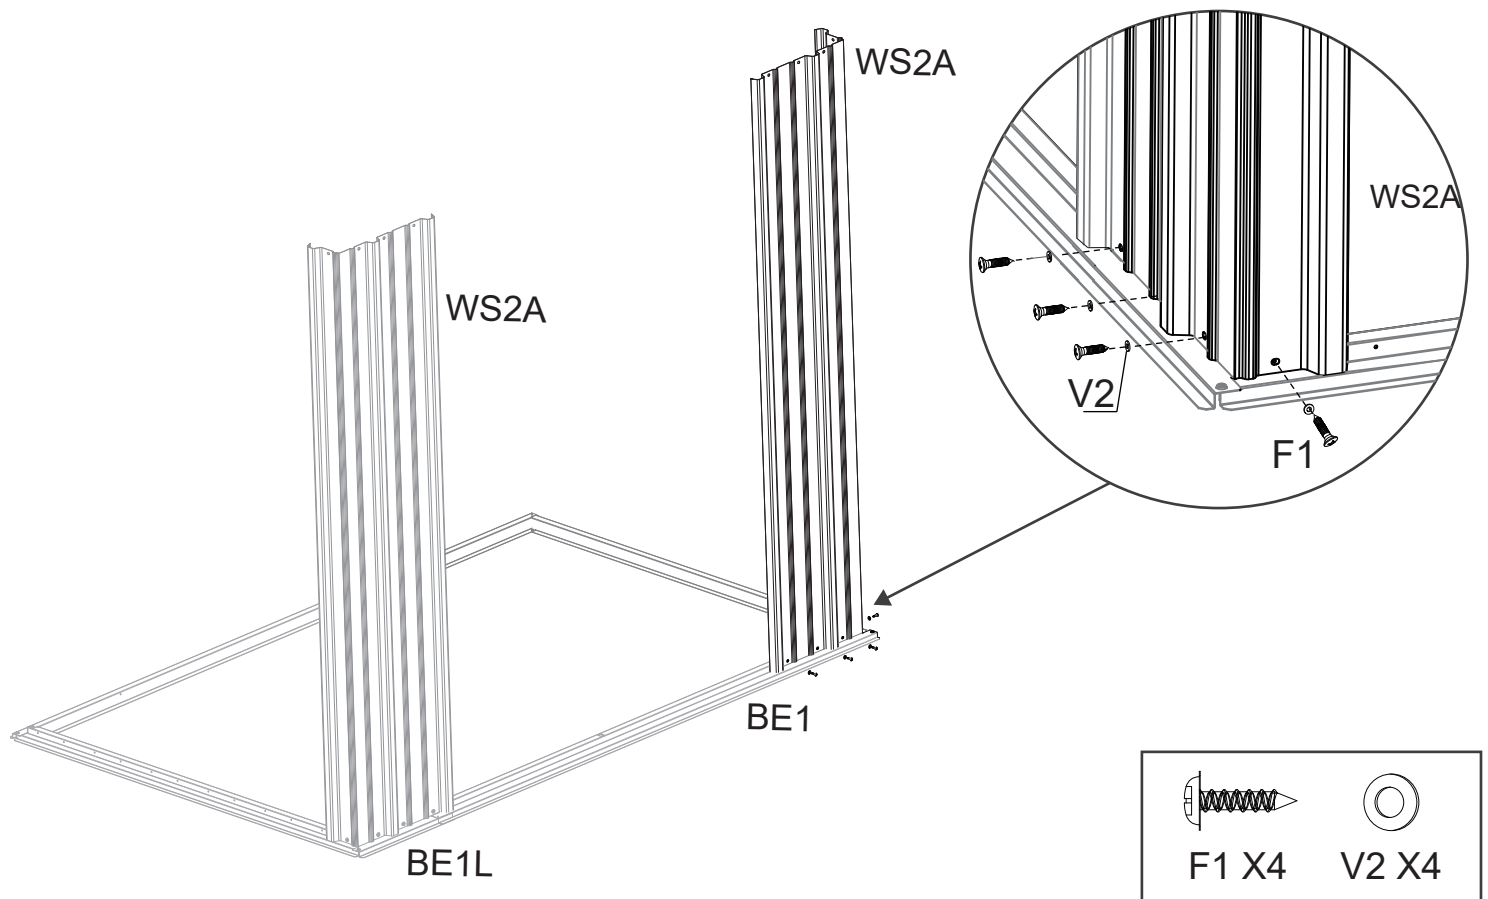


STEP 12

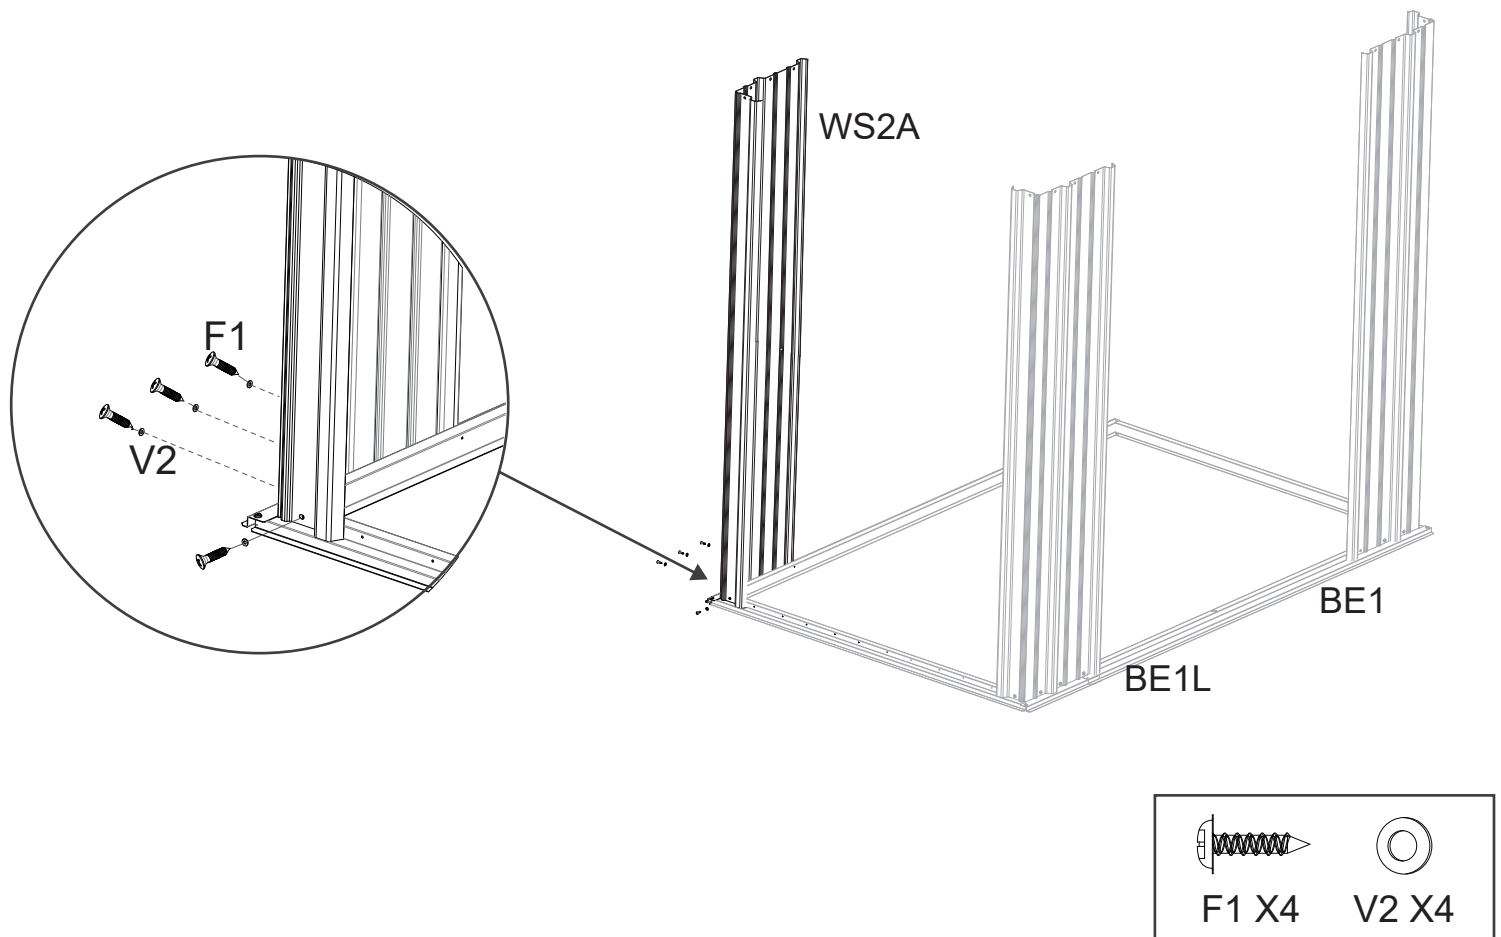




STEP 13

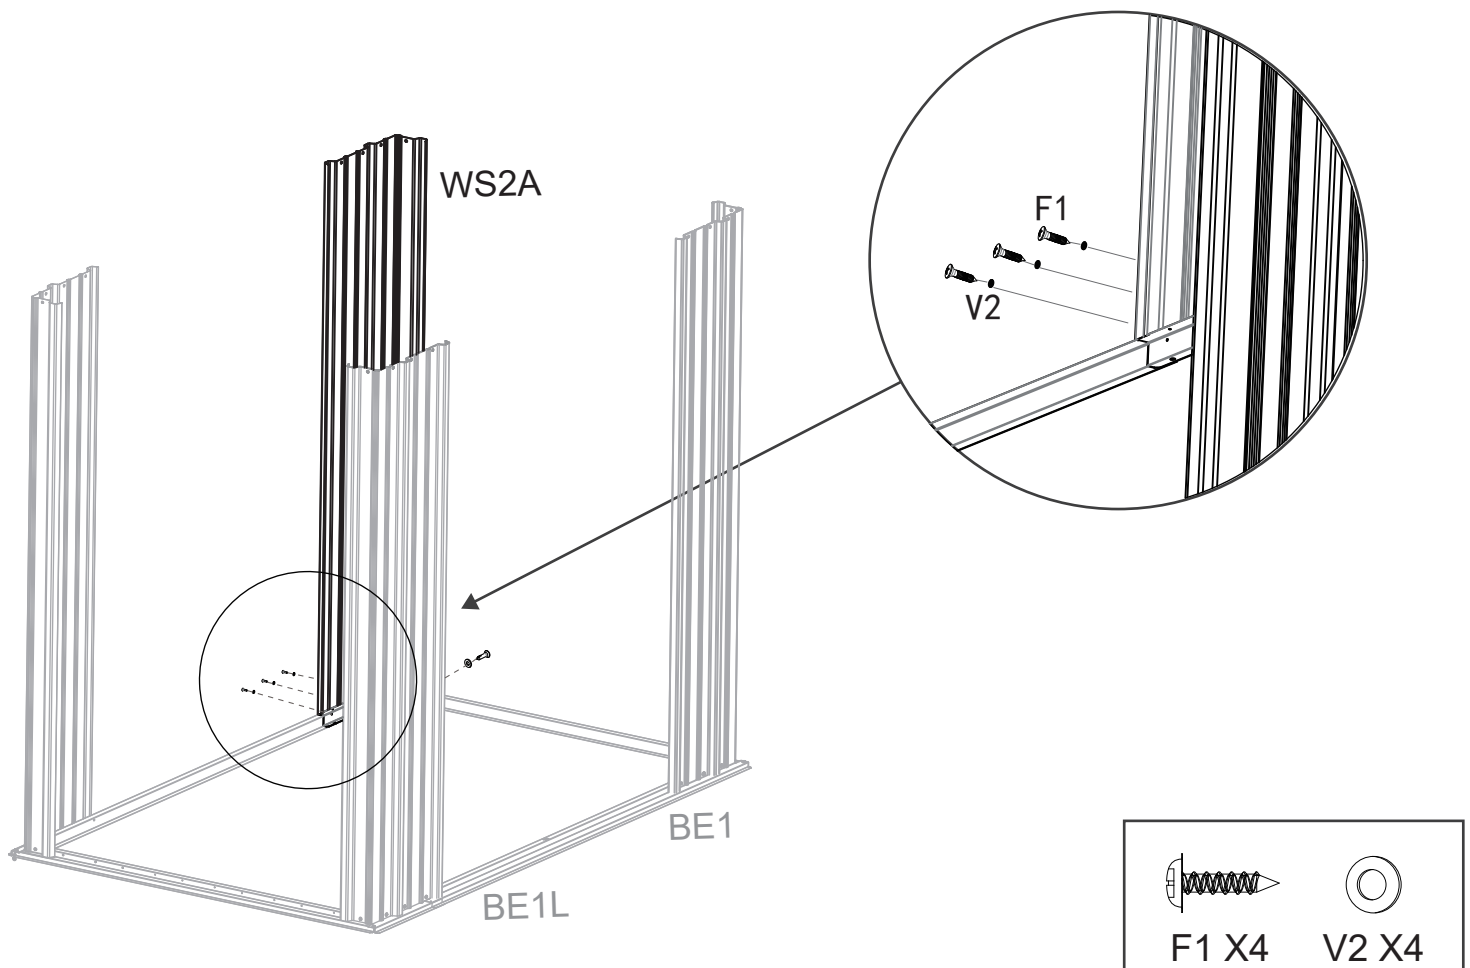

STEP 14

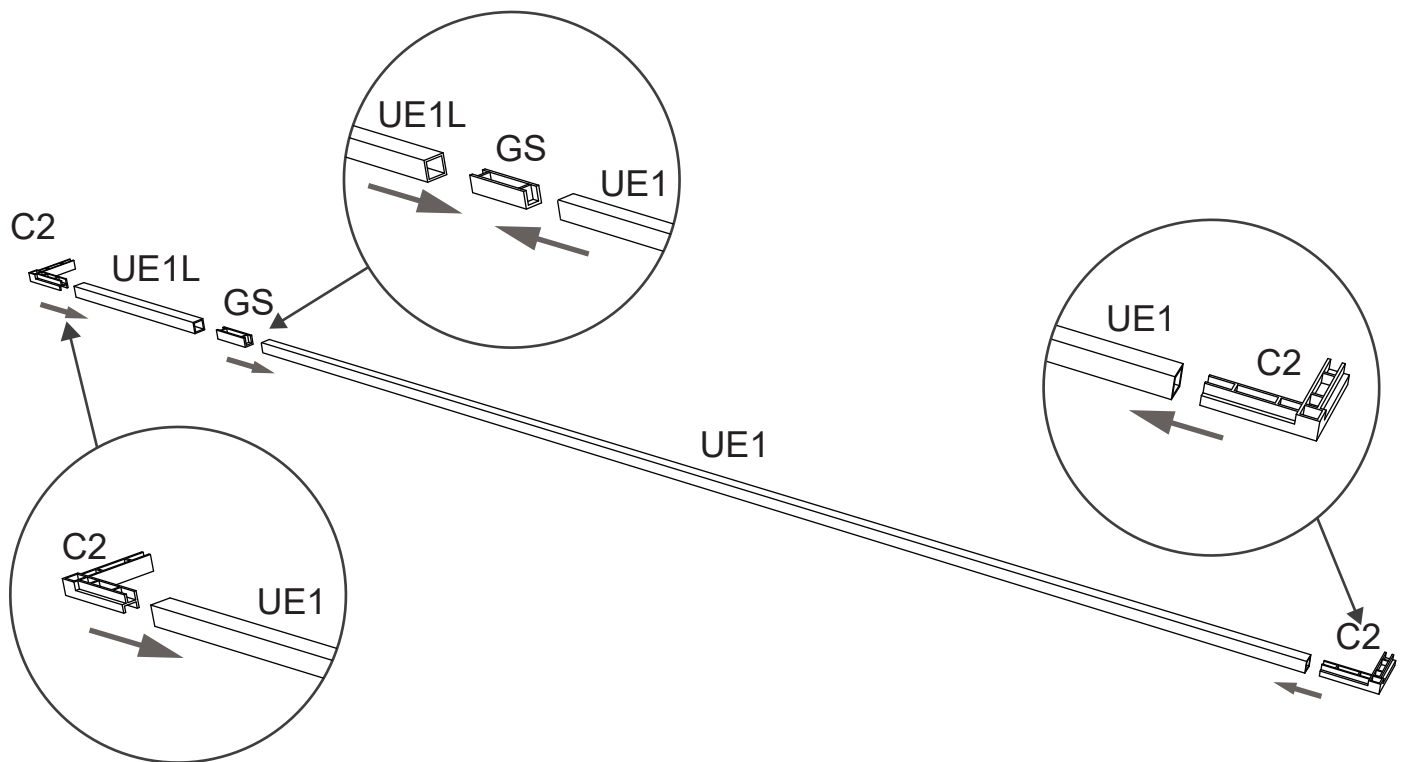



STEP 15

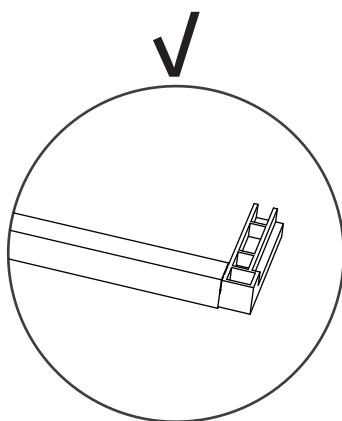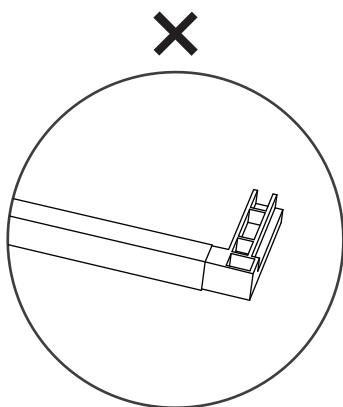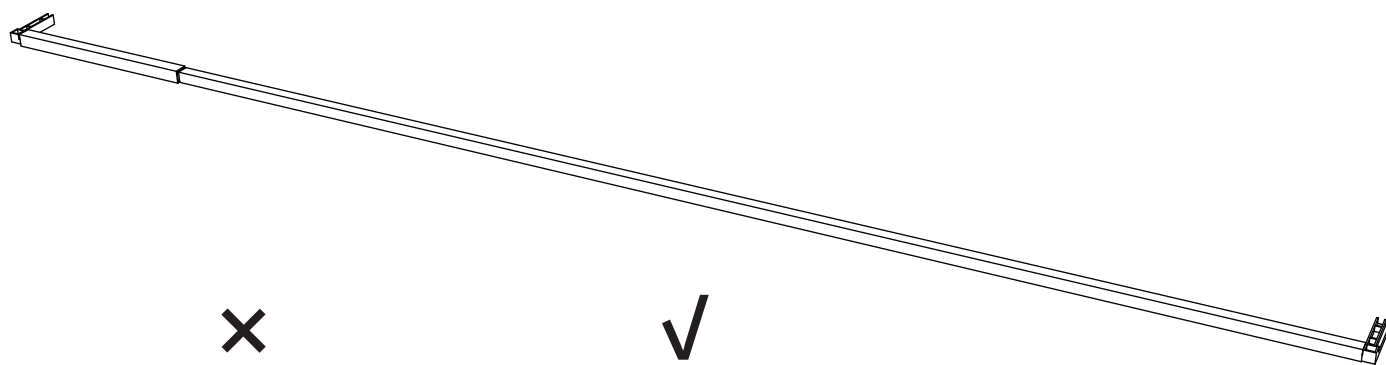


Note:
Connector must fit.

STEP 16


Pay attention to distinguishing
the direction when installing.

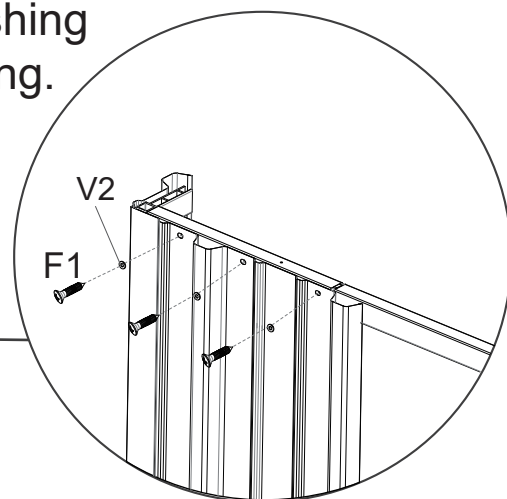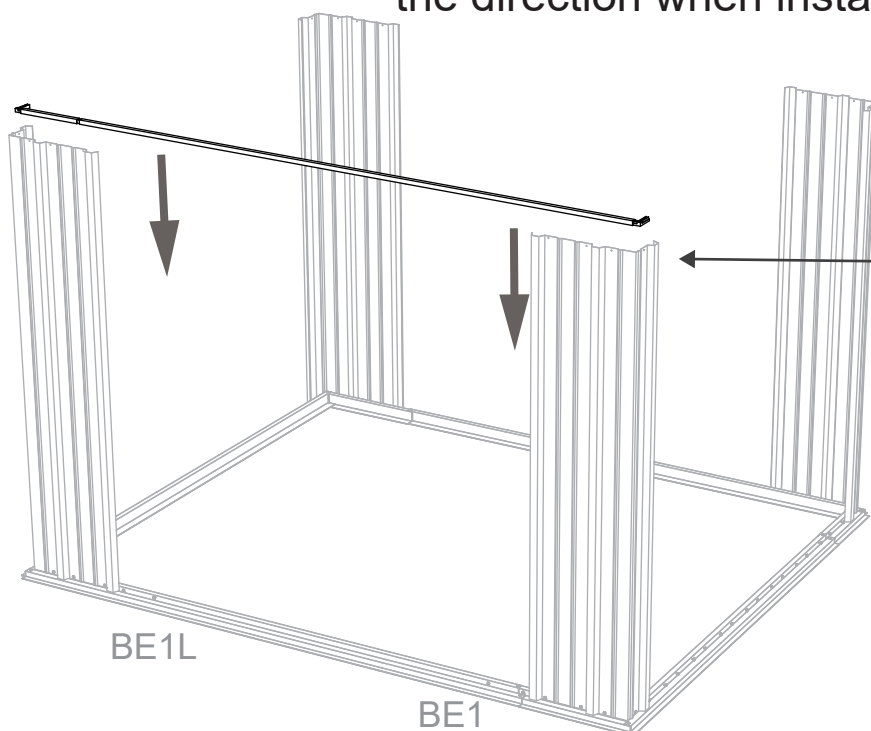


x2

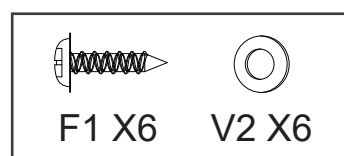


STEP 17

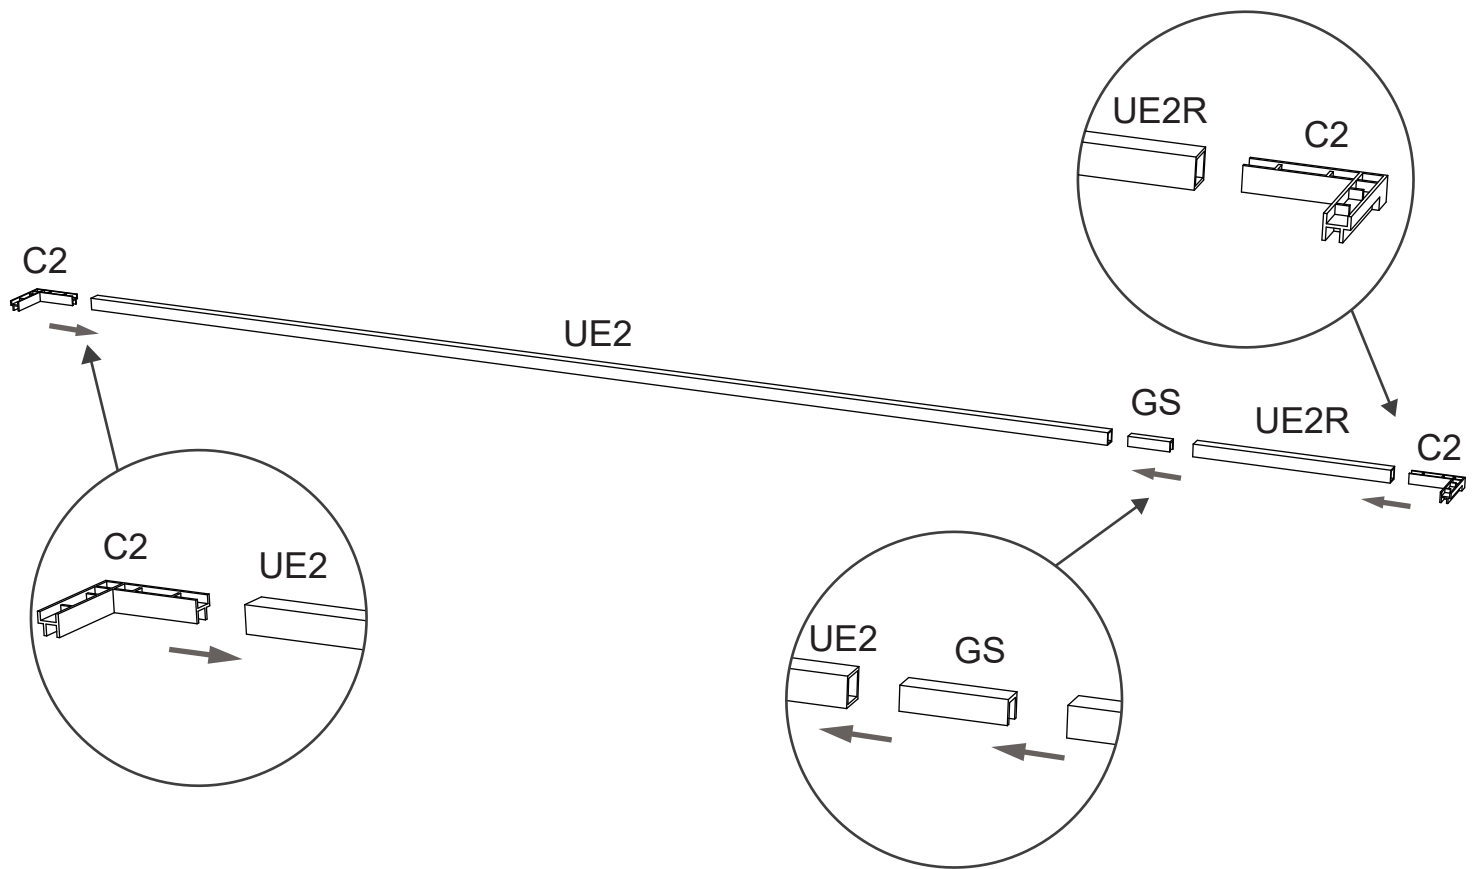

STEP 18

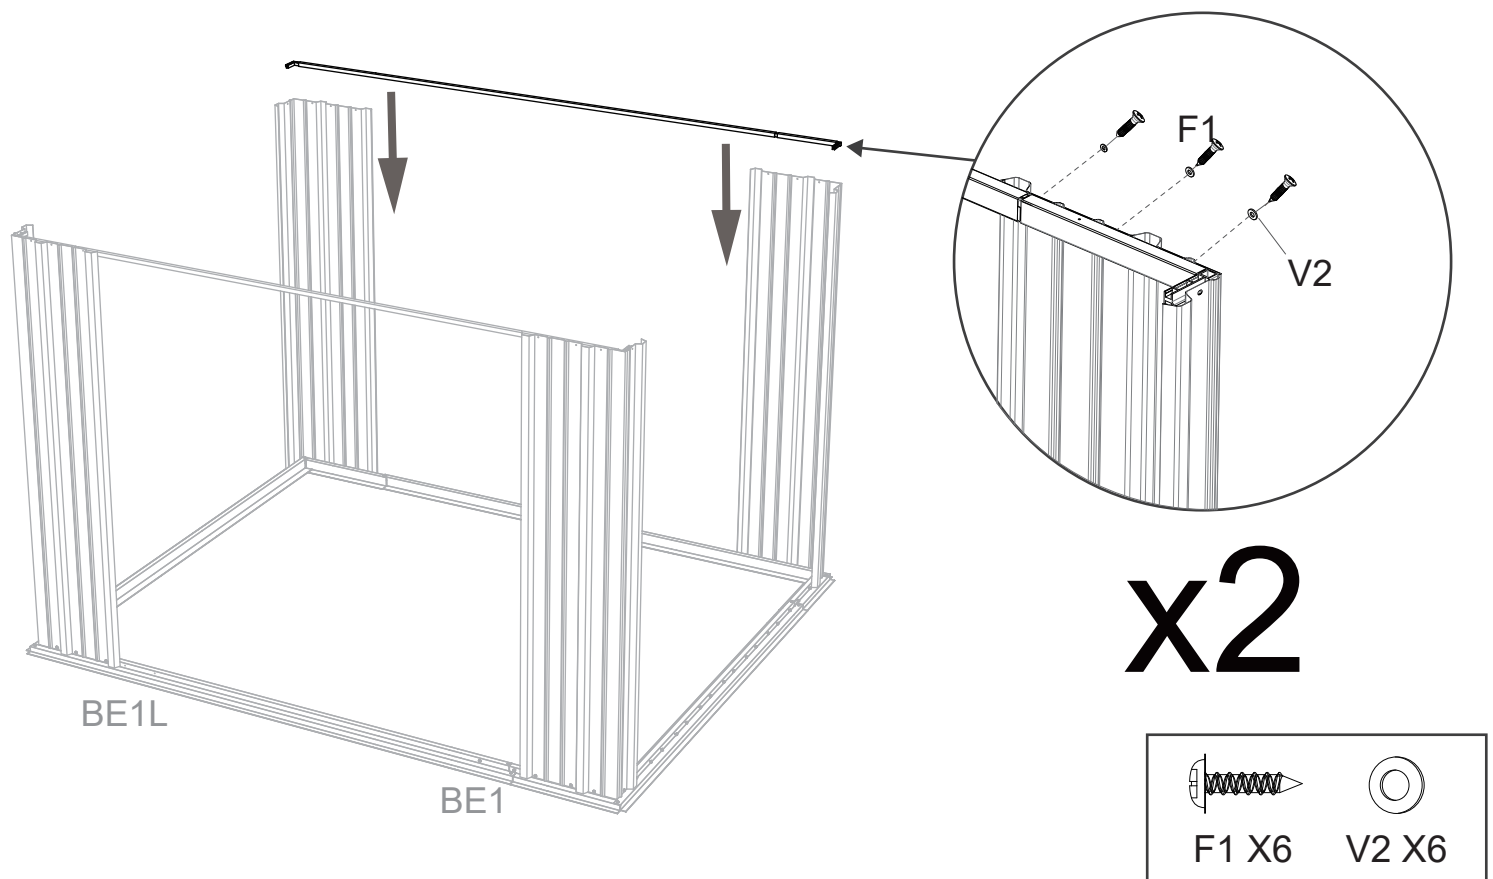


STEP 19

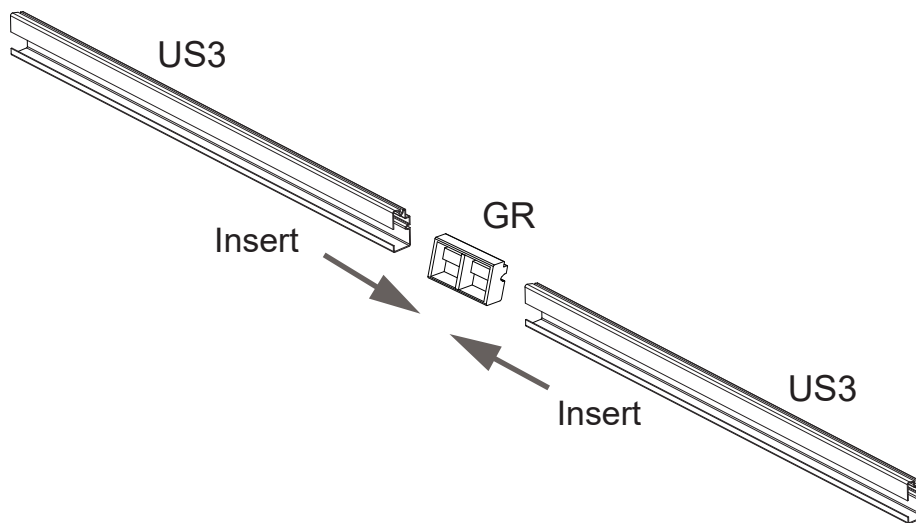

x2


STEP 20

Tips: Insert US3 into C2.

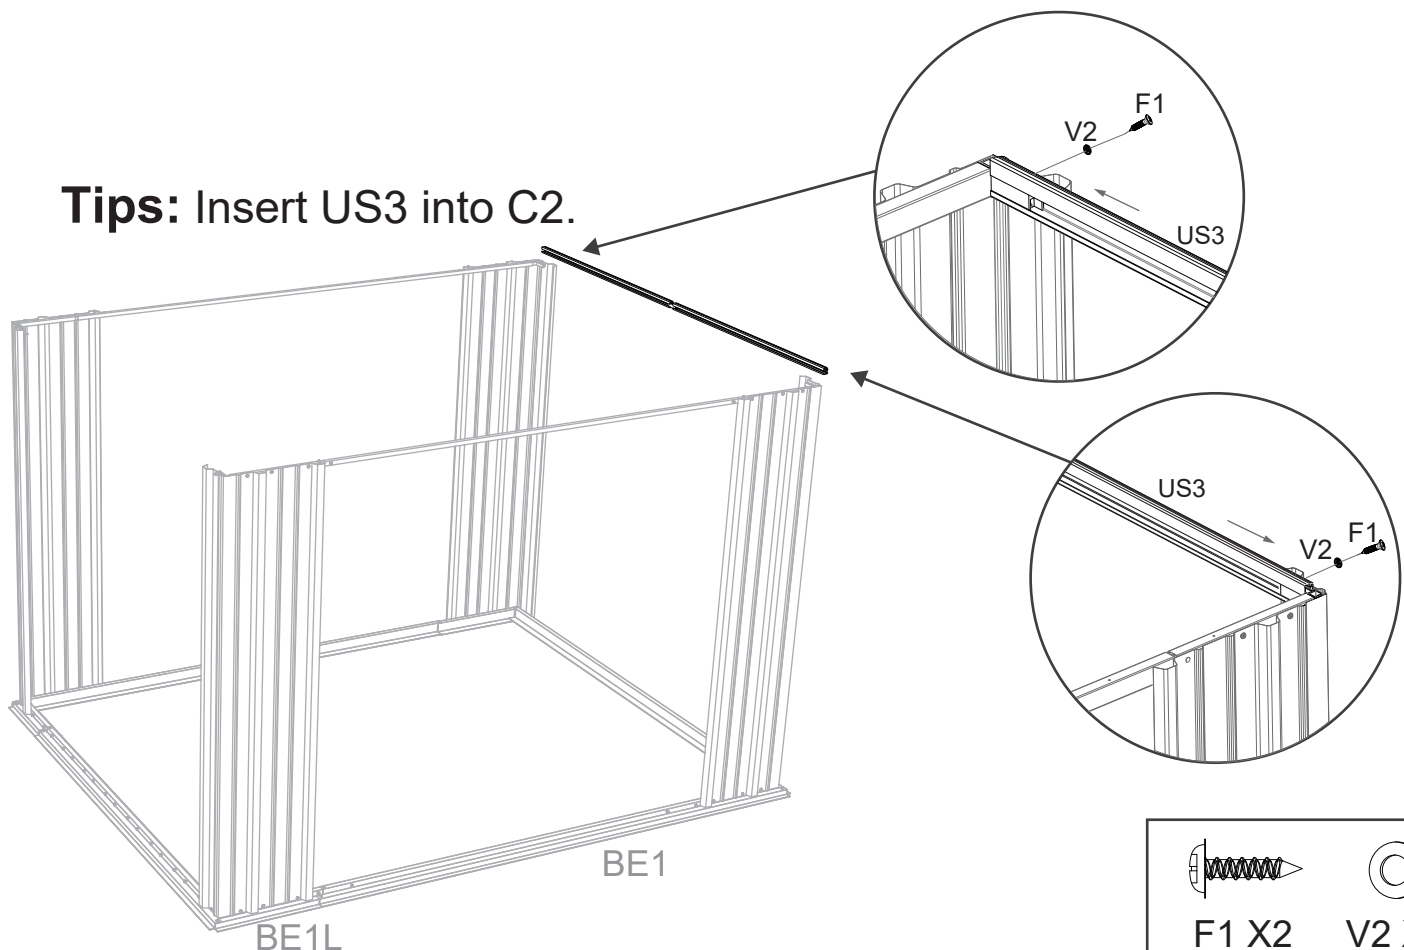


STEP 21


Note: Insert US3 into C2

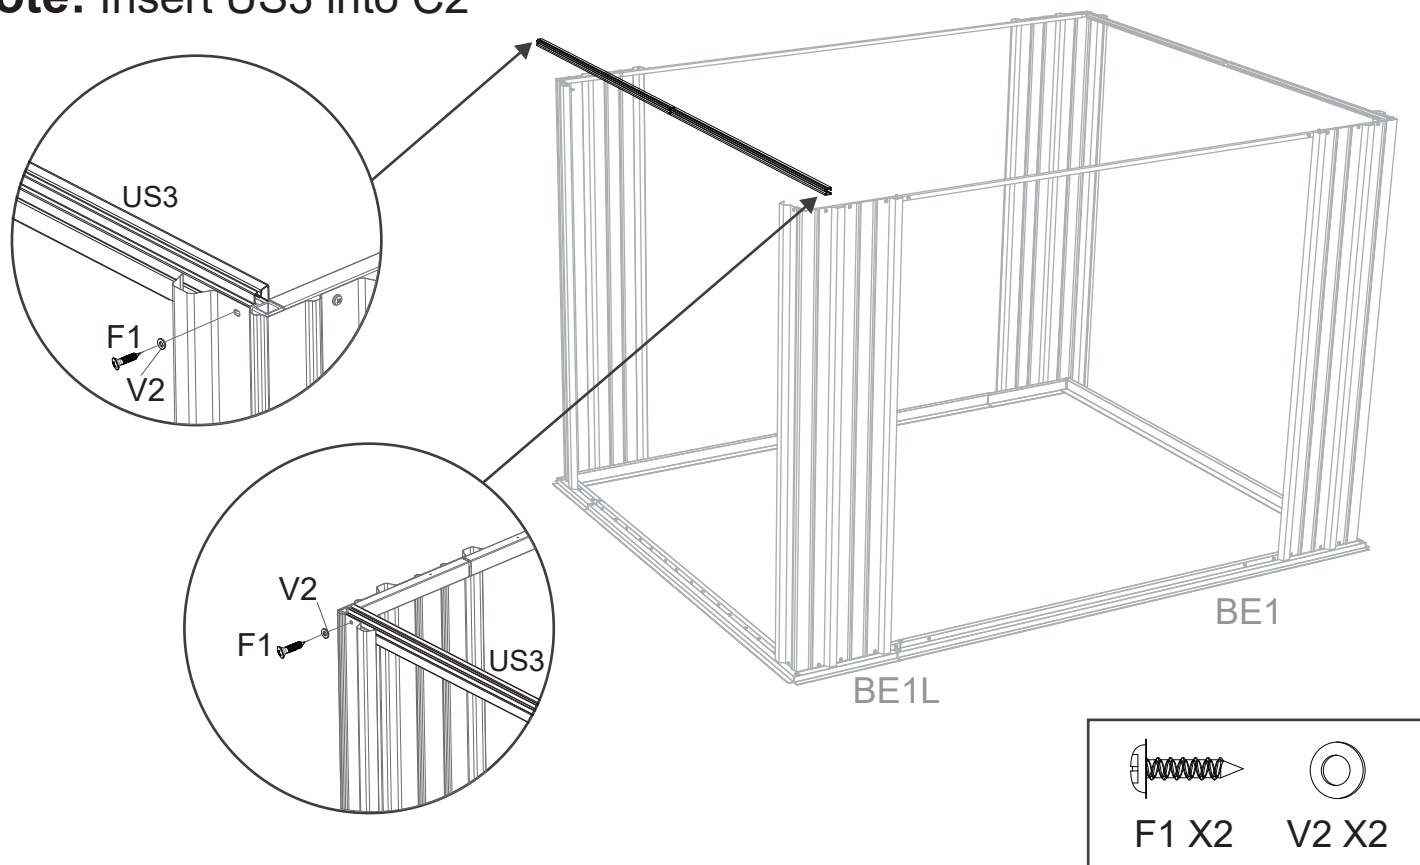



STEP 22

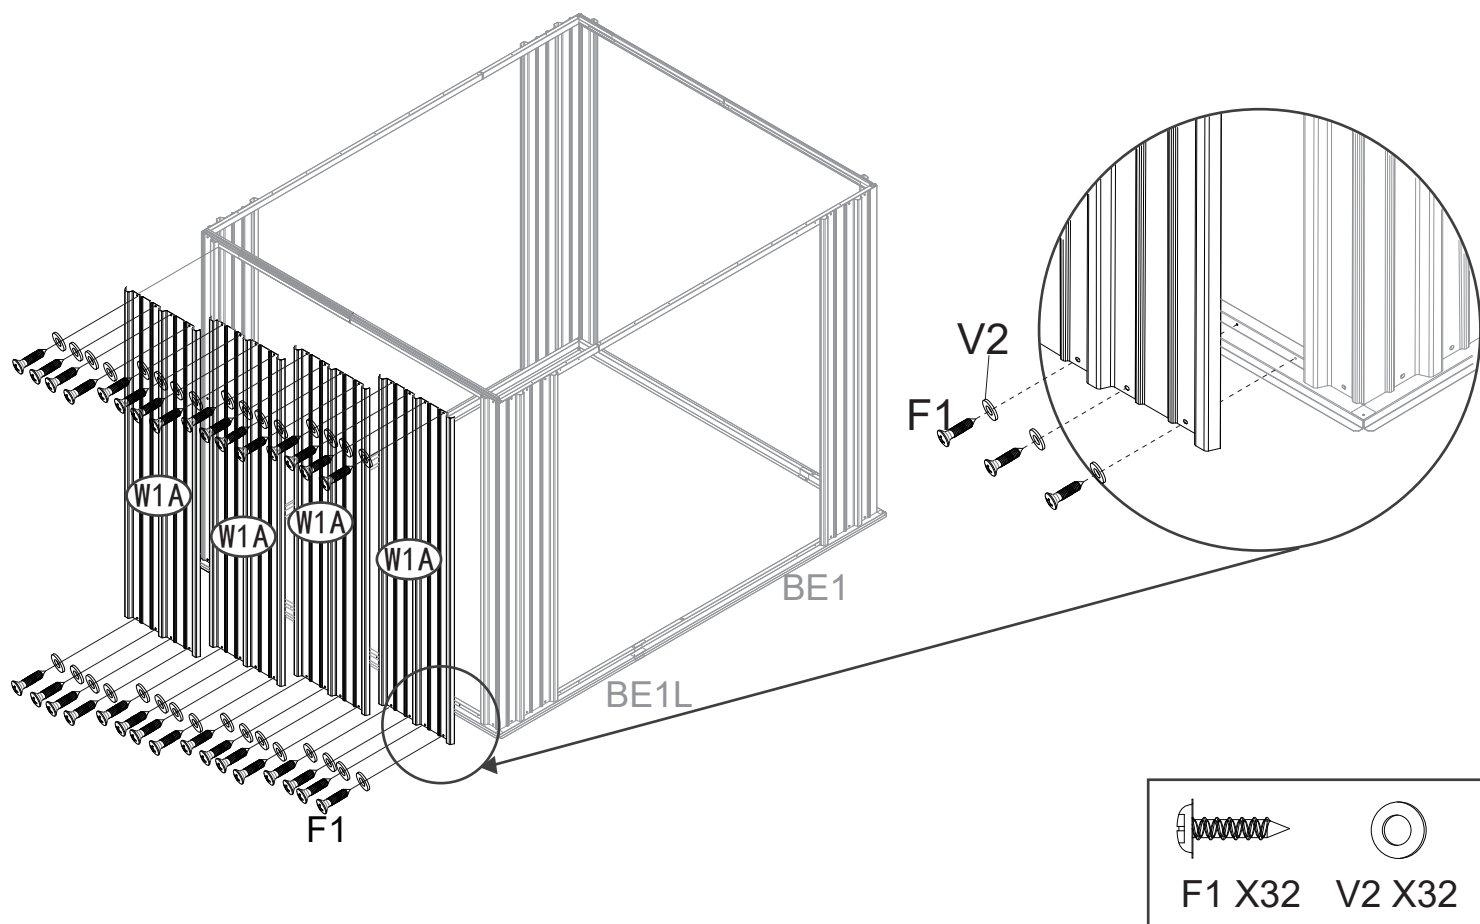


STEP 23

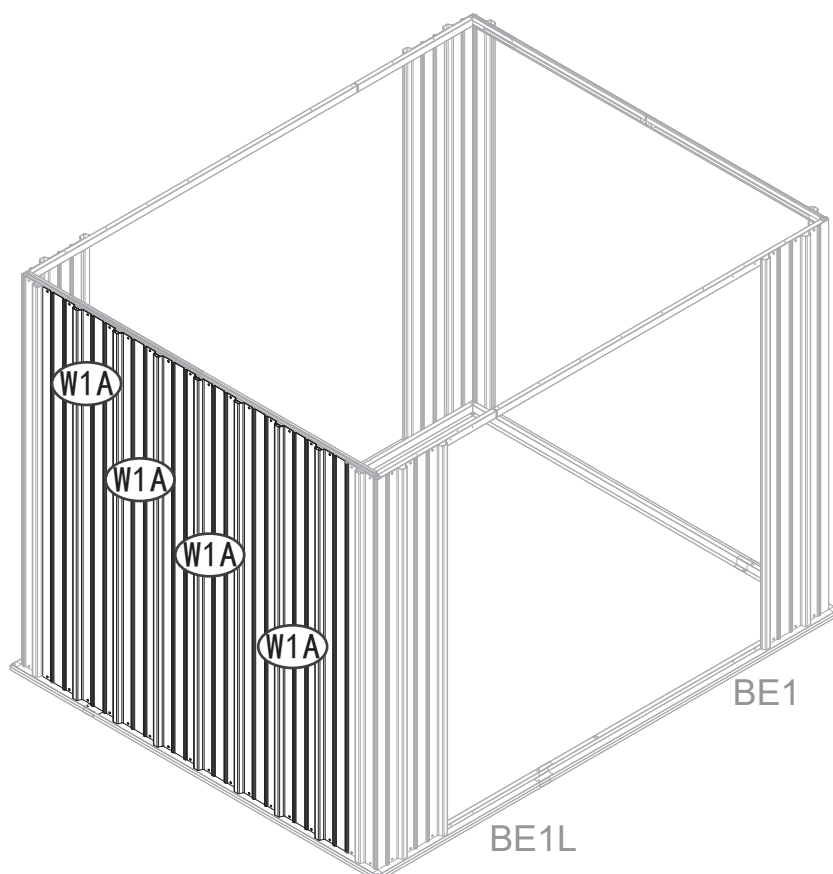



STEP 24

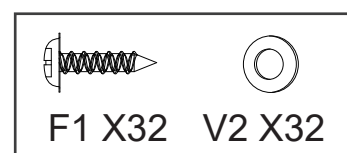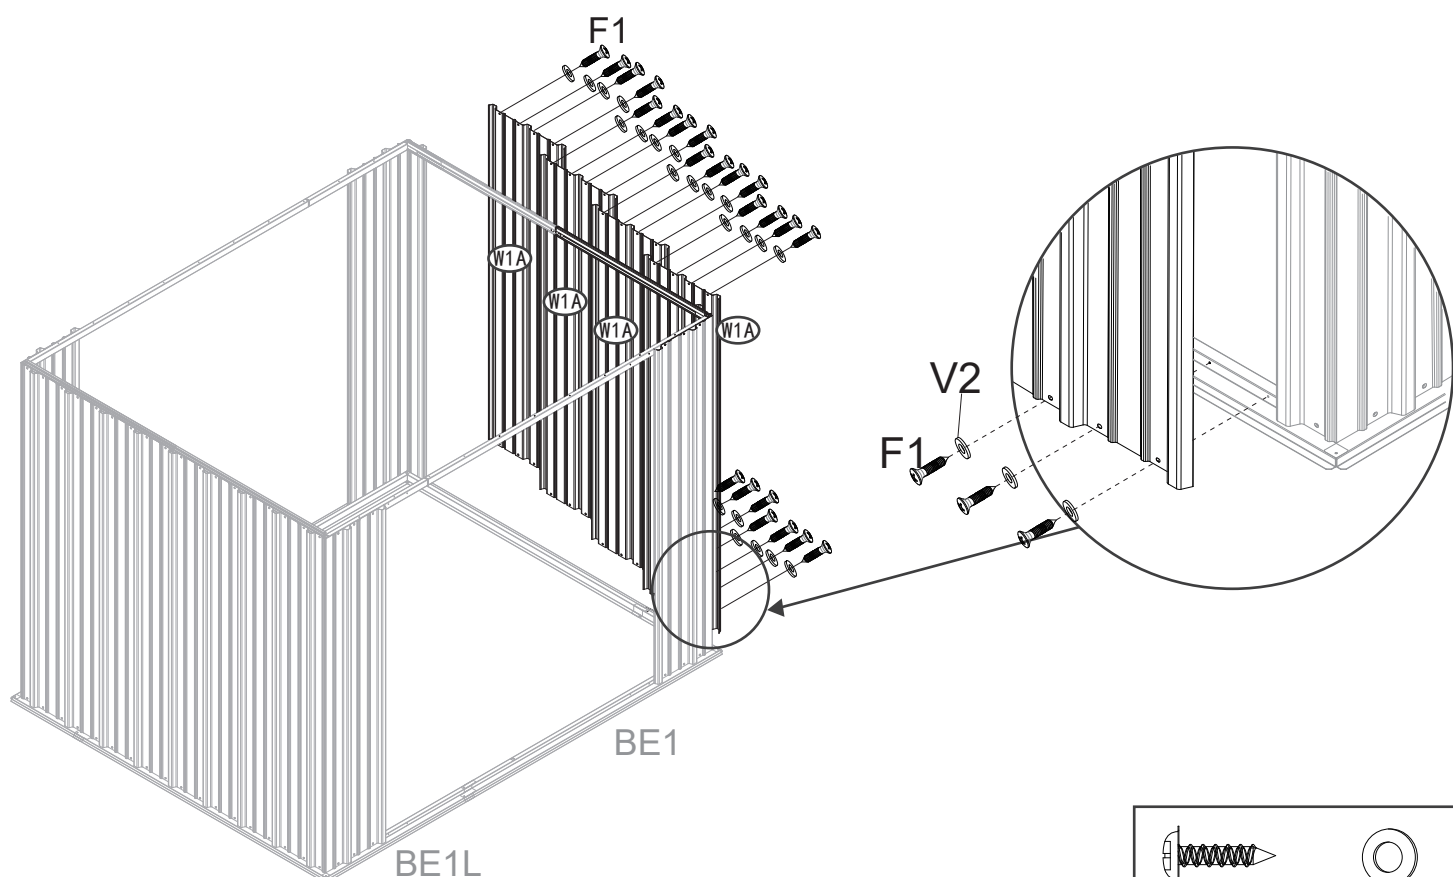


STEP 25

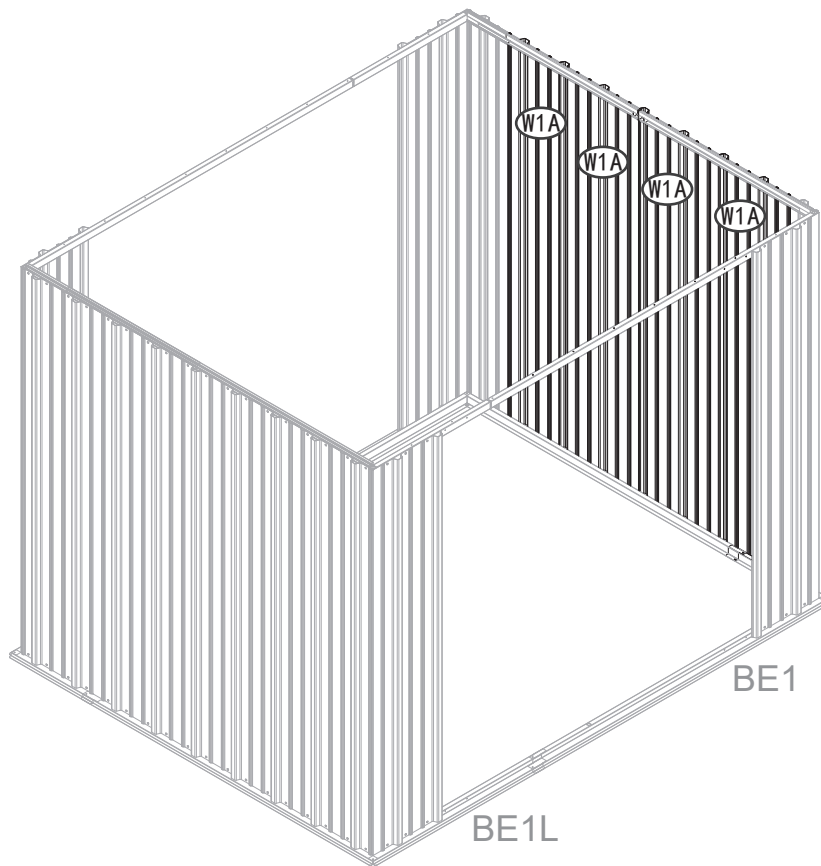


STEP 26

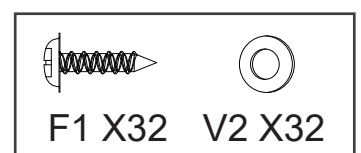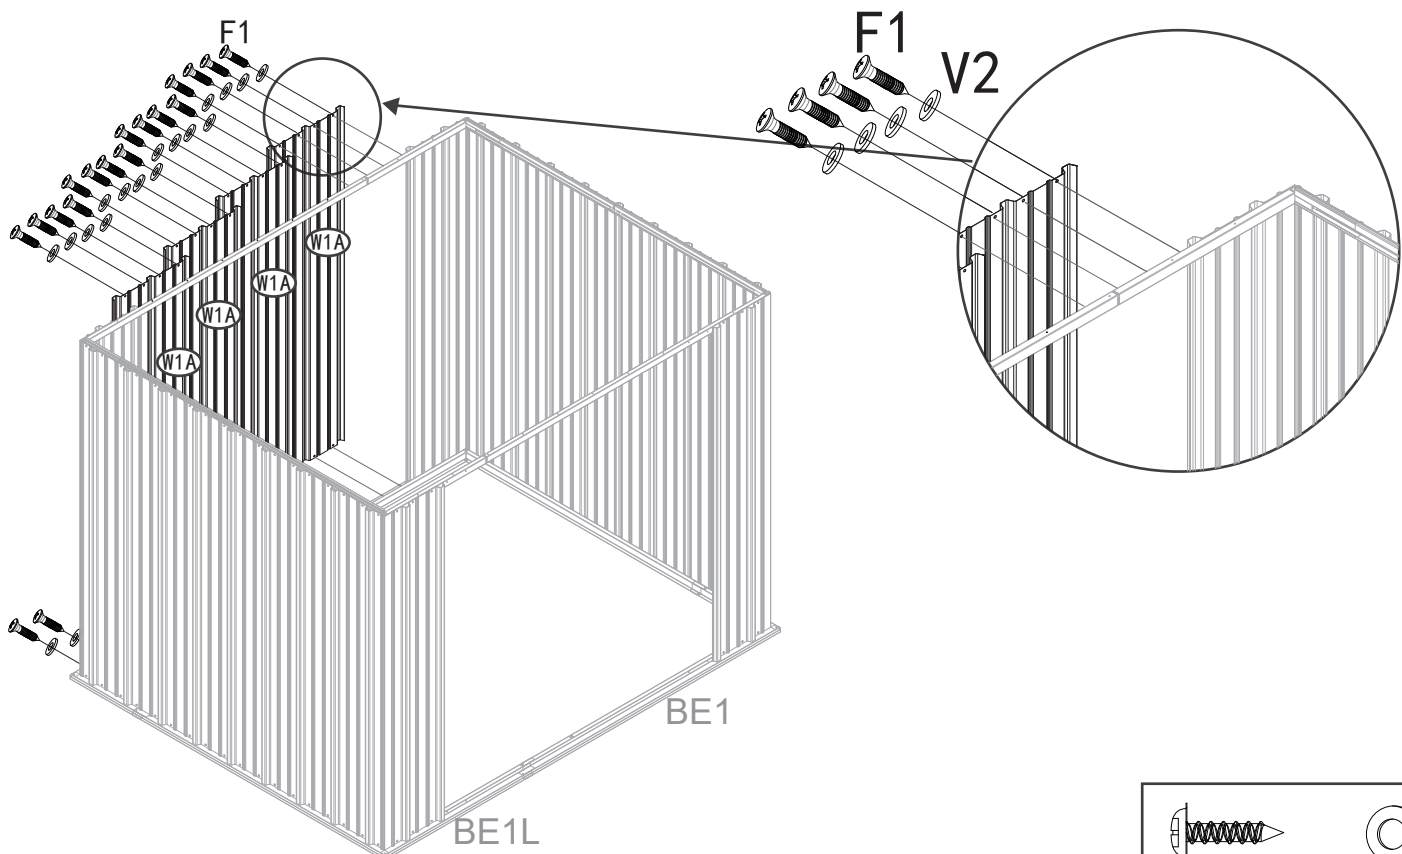


STEP 27

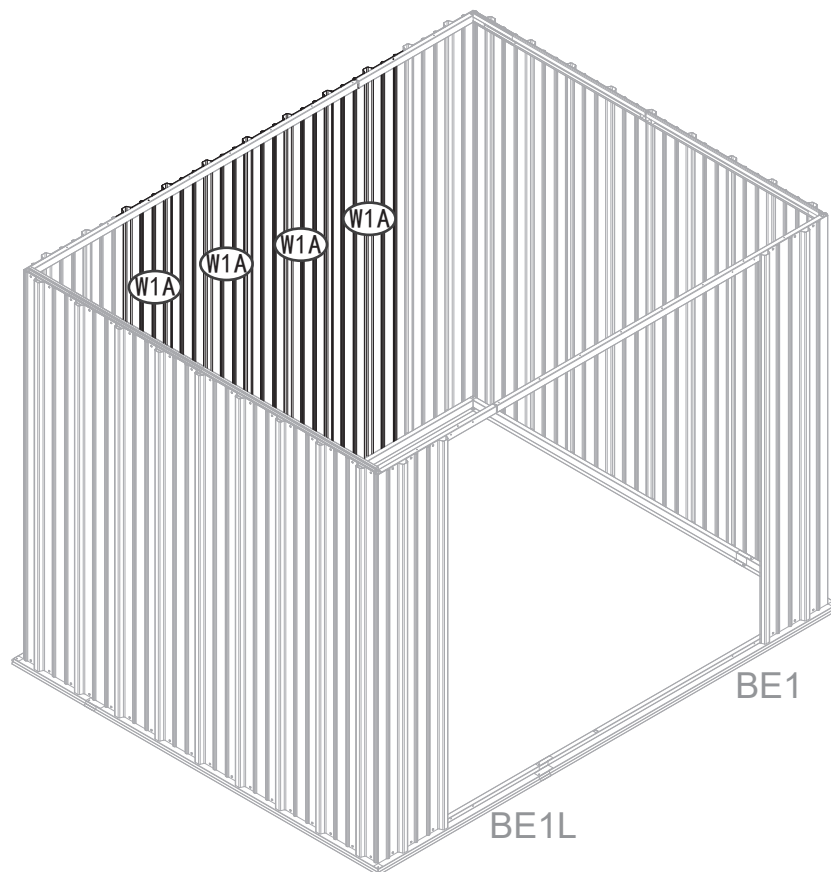


STEP 28

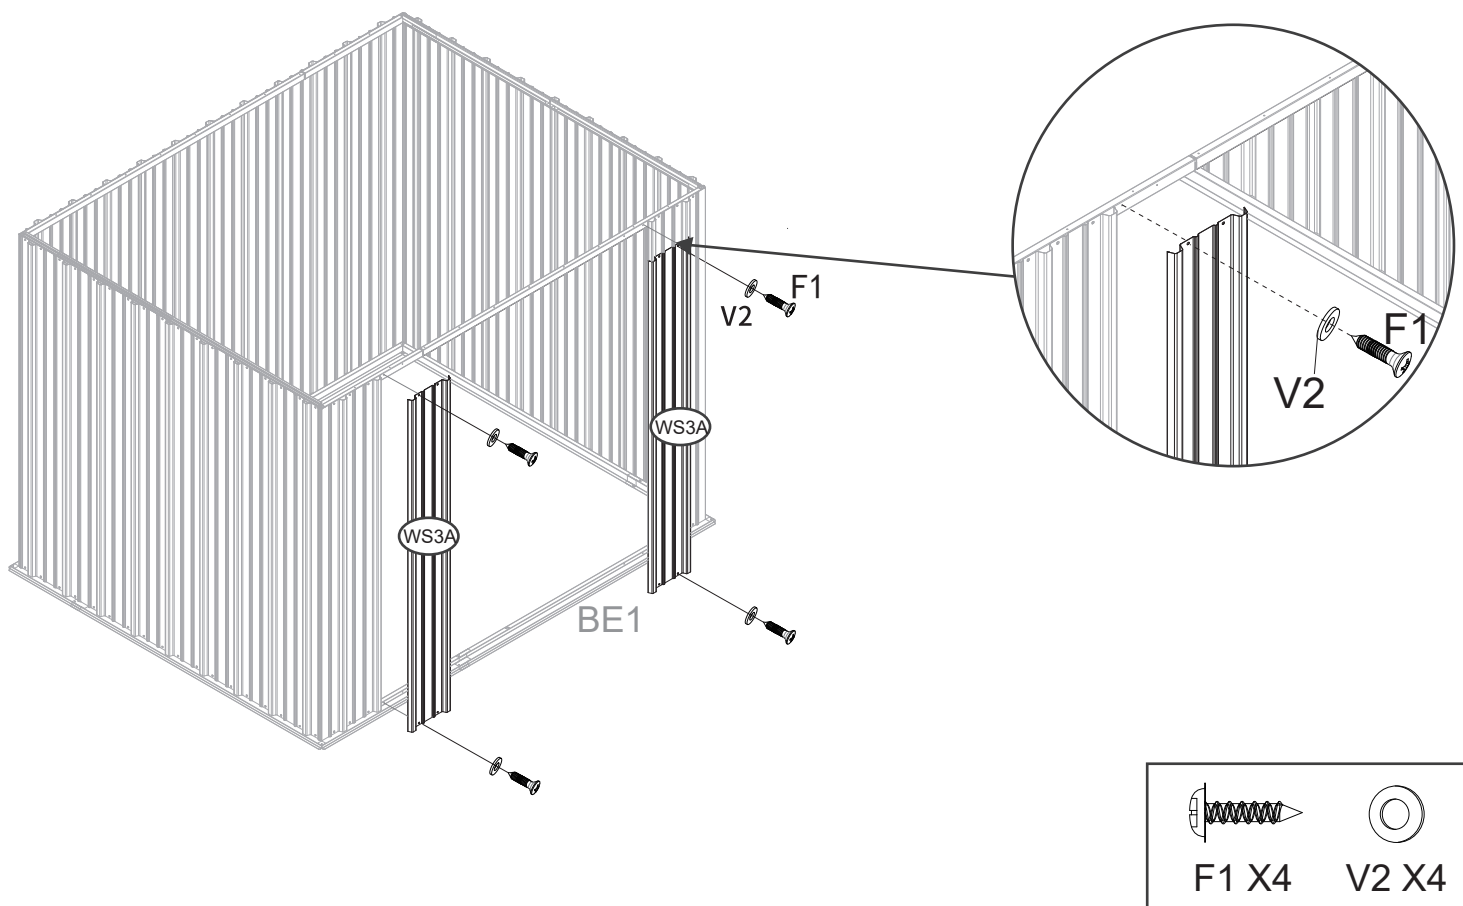

STEP 29

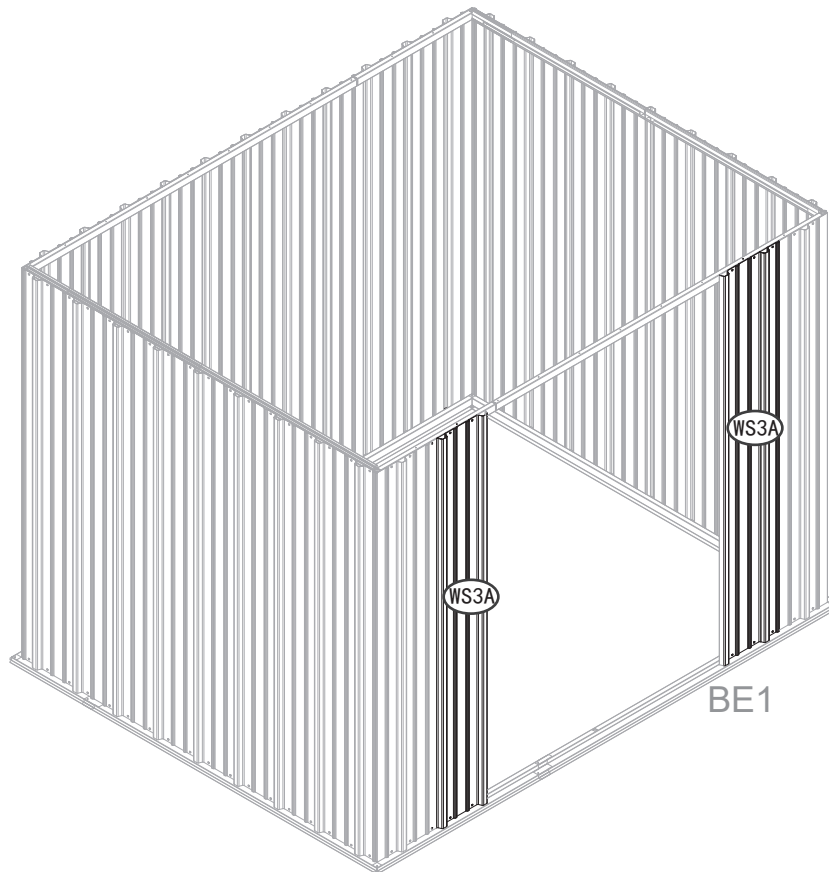


STEP 30

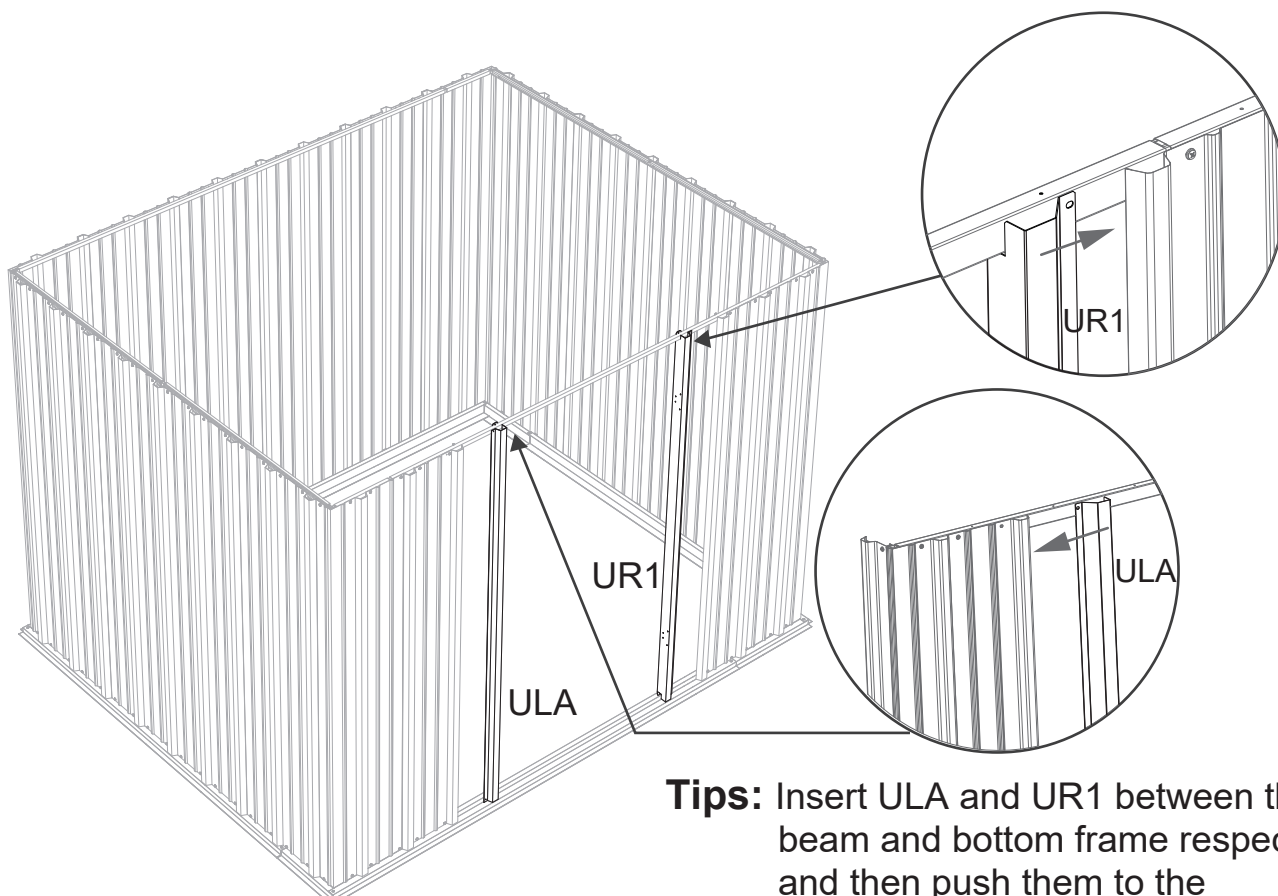


Tips: Insert ULA and UR1 between the top beam and bottom frame respectively, and then push them to the corresponding position.


STEP 31

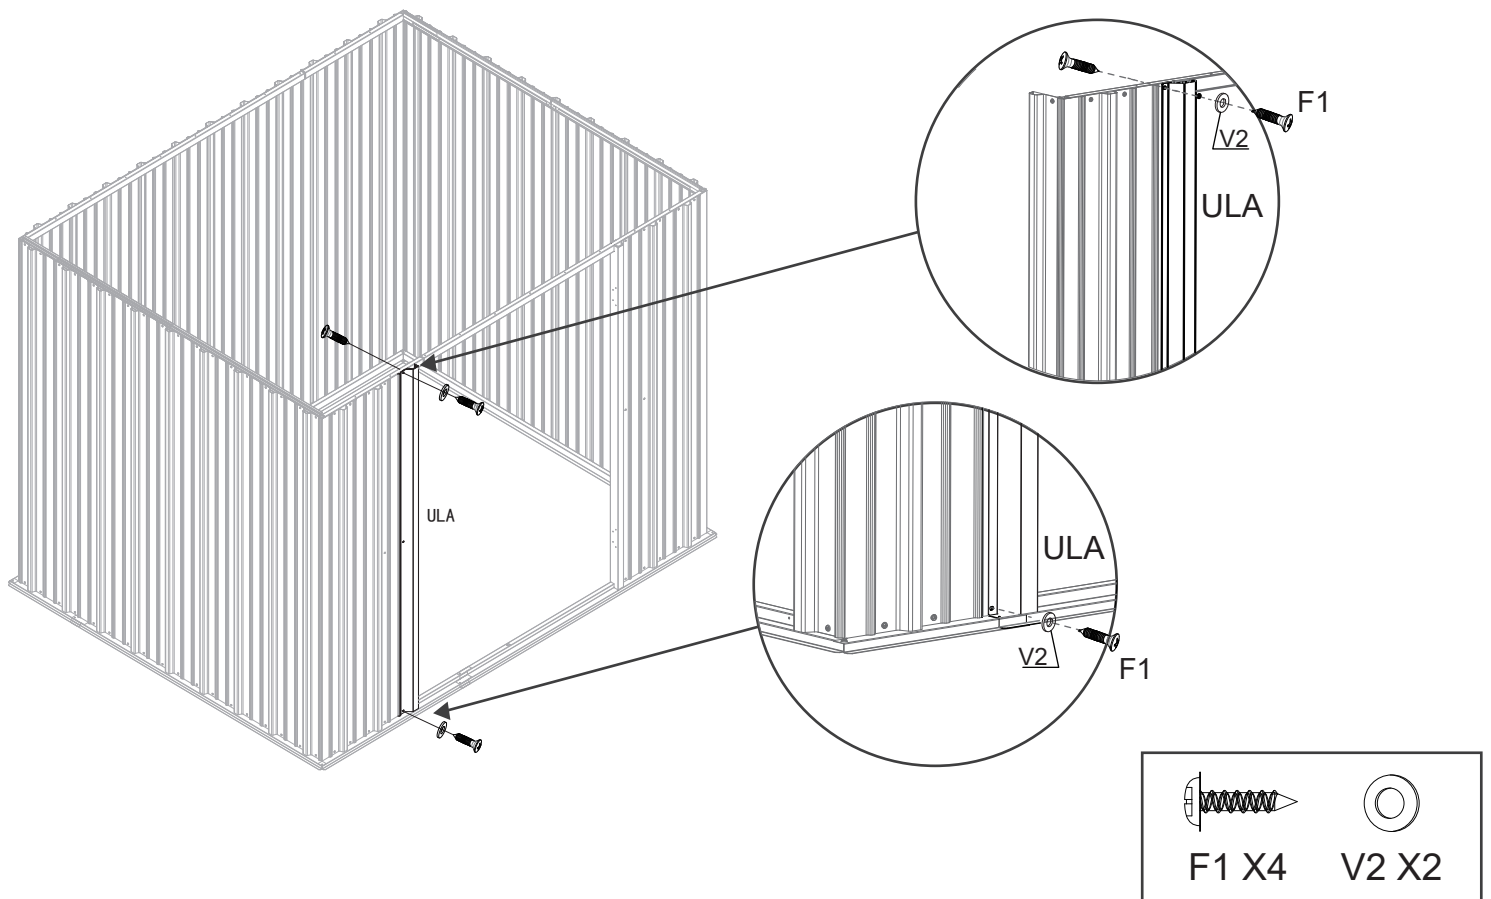


STEP 32

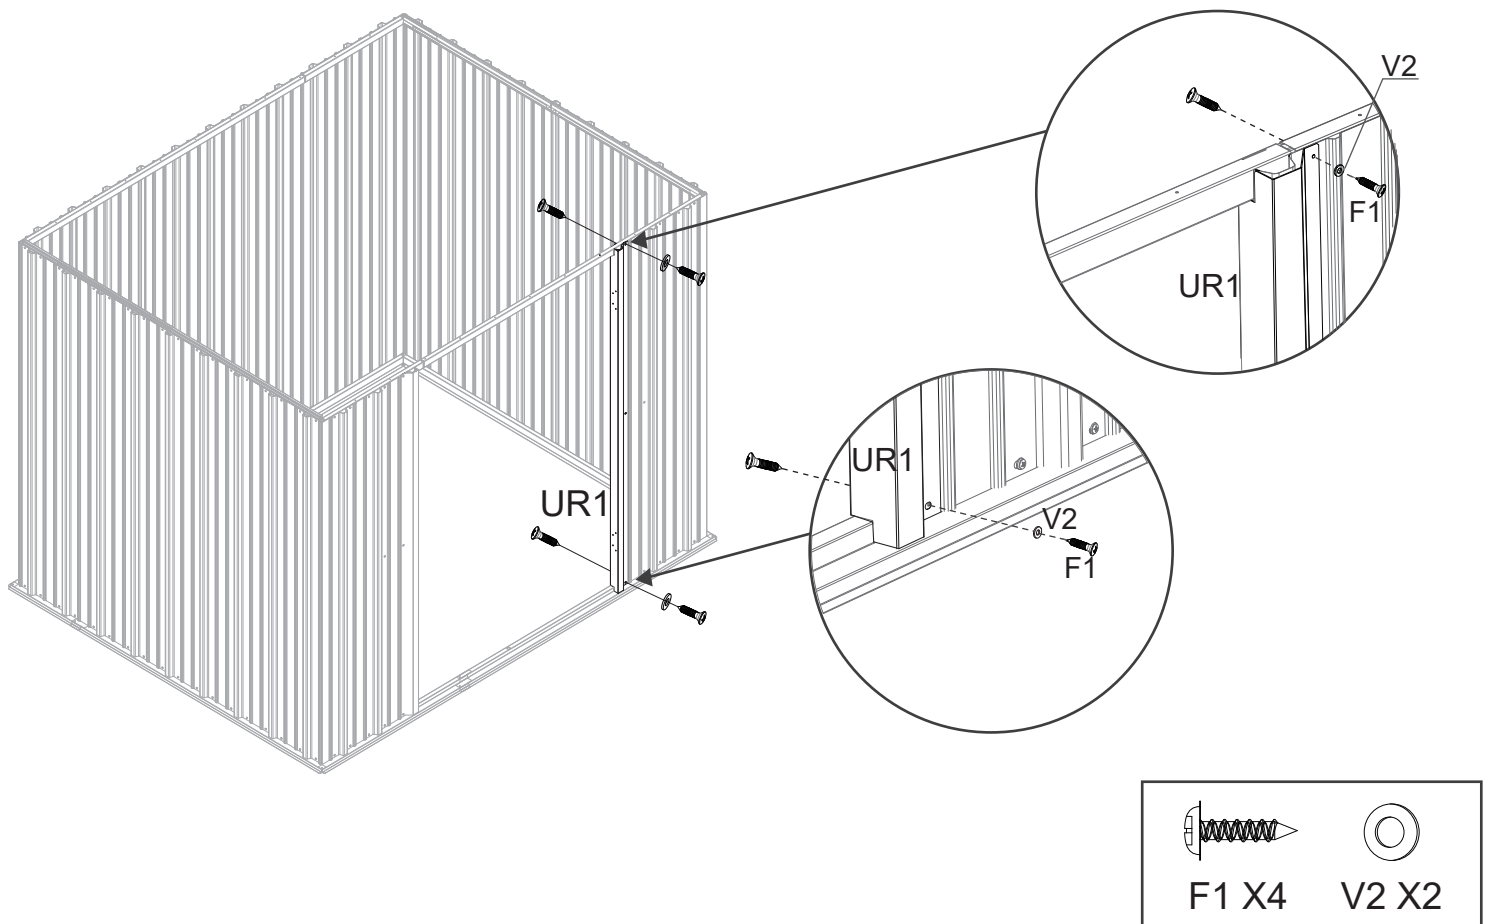


STEP 33

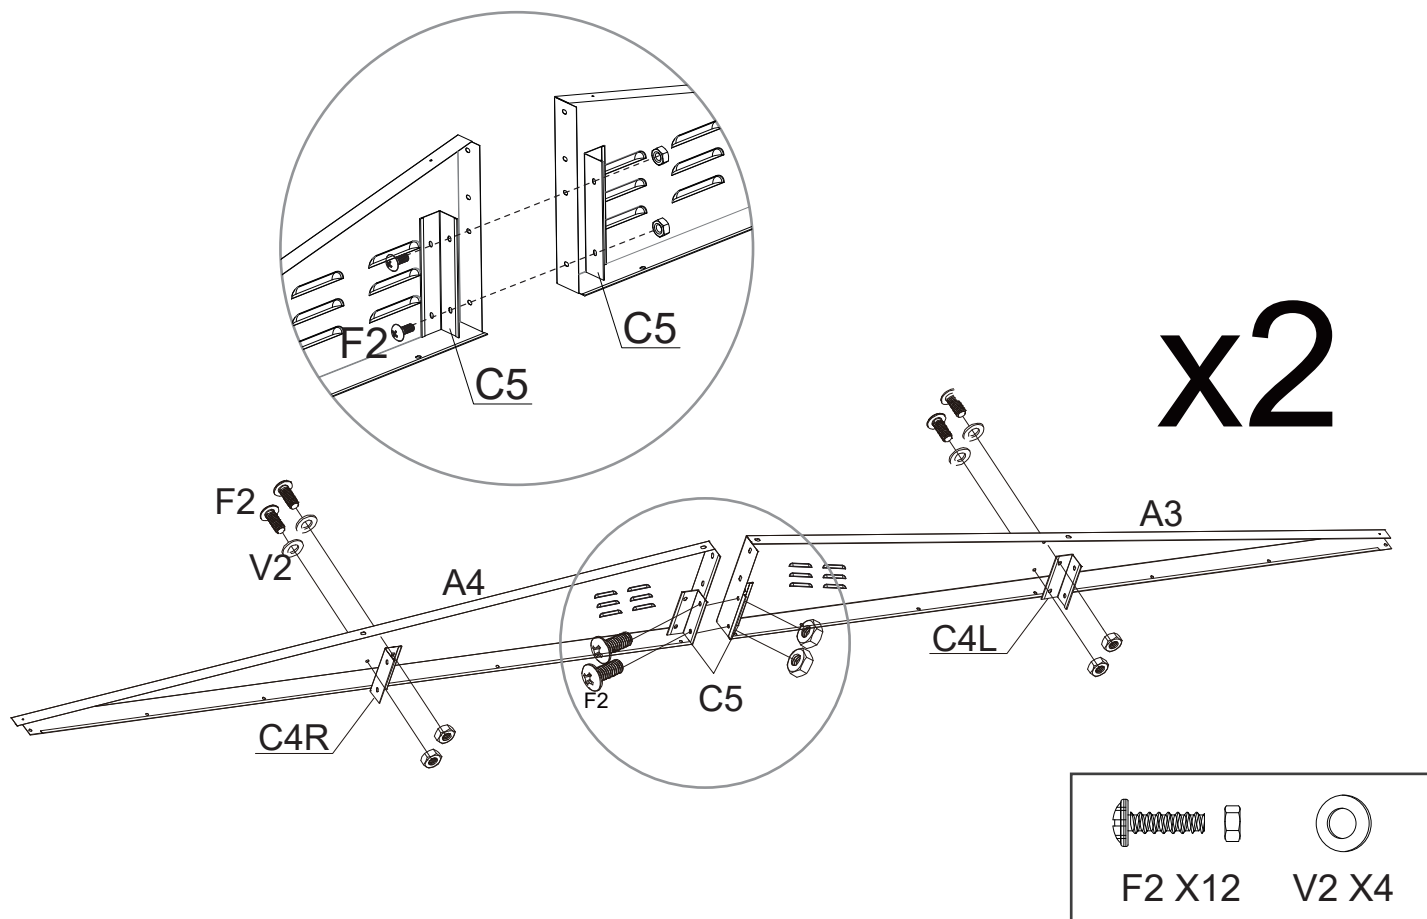


STEP 34

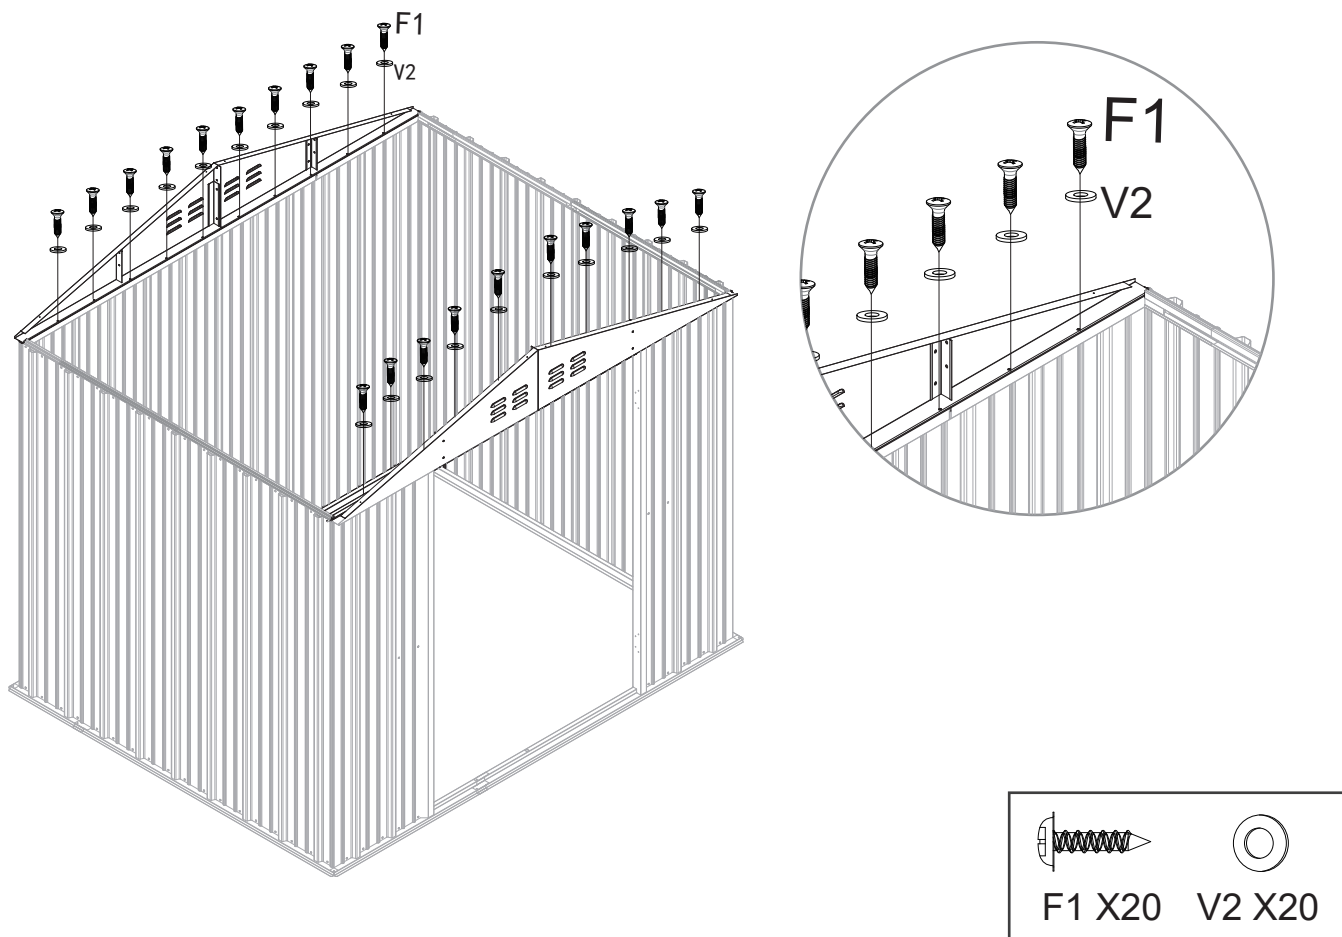



STEP 35

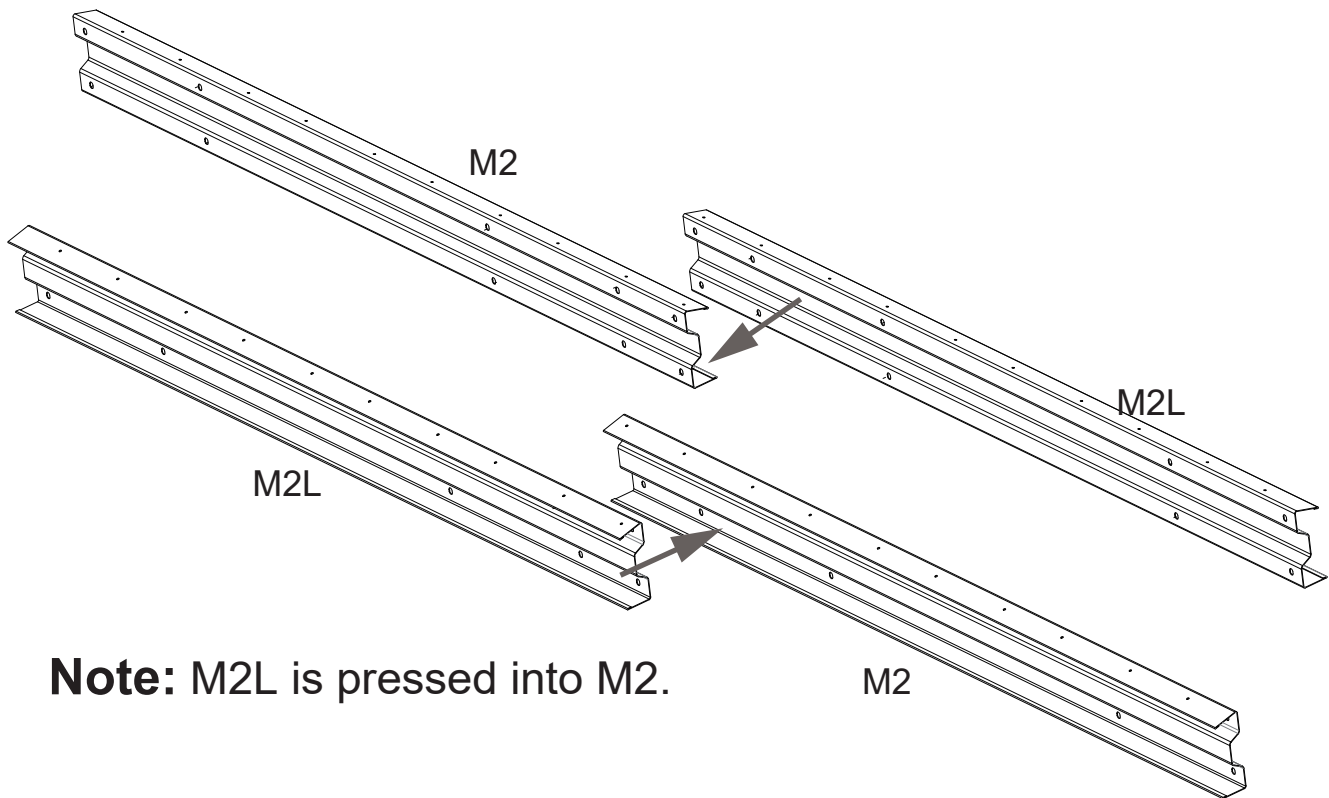



STEP 36

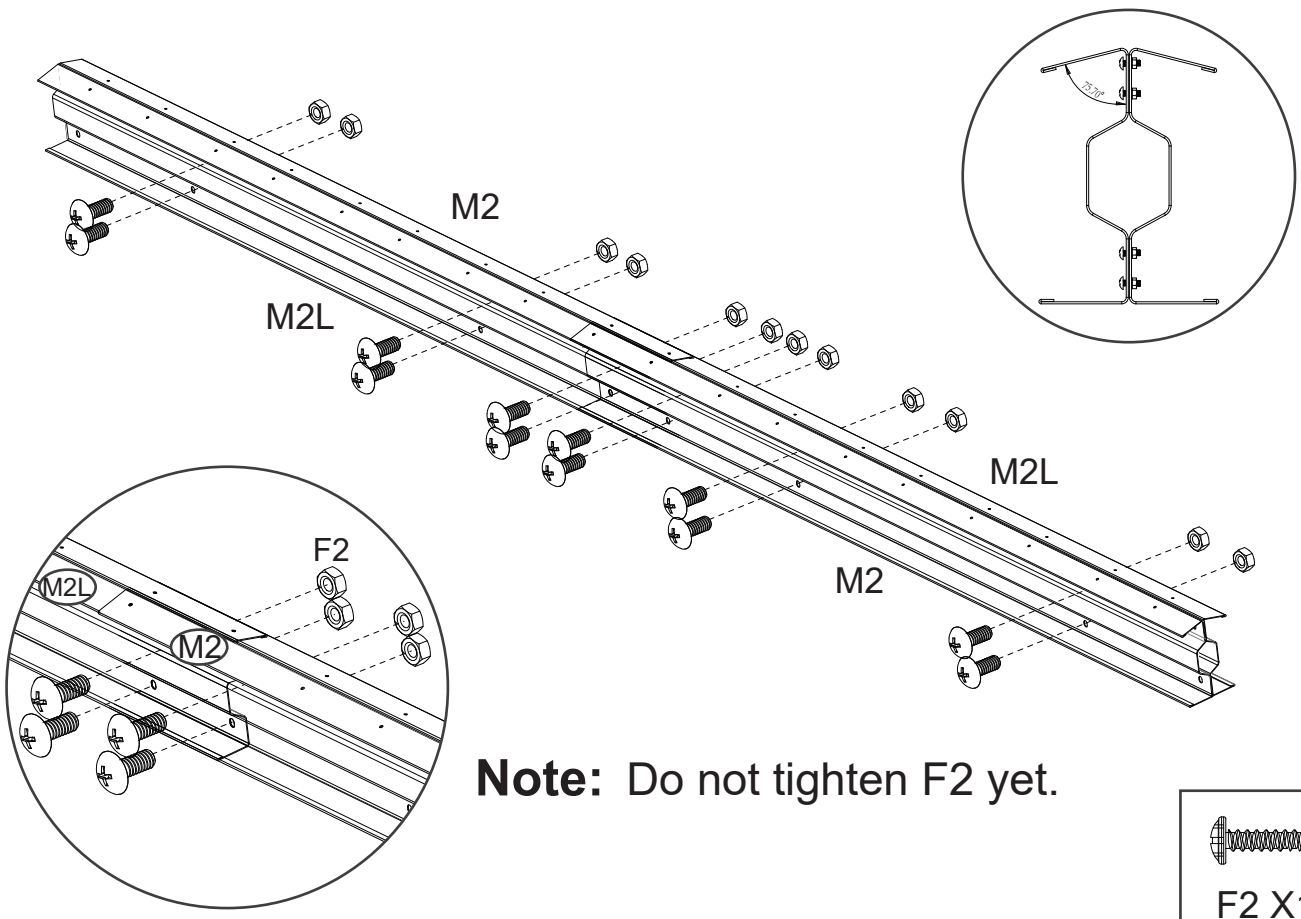


STEP 37

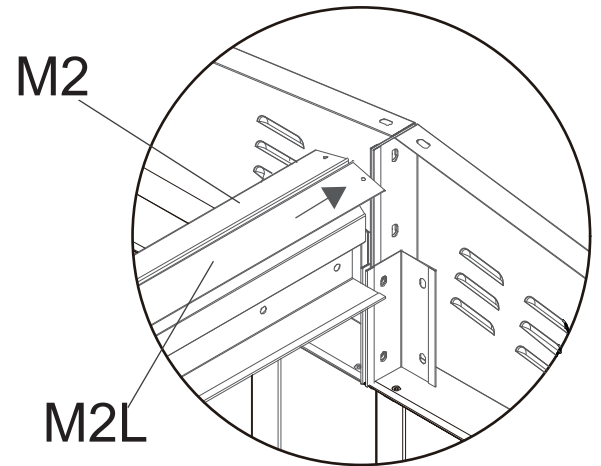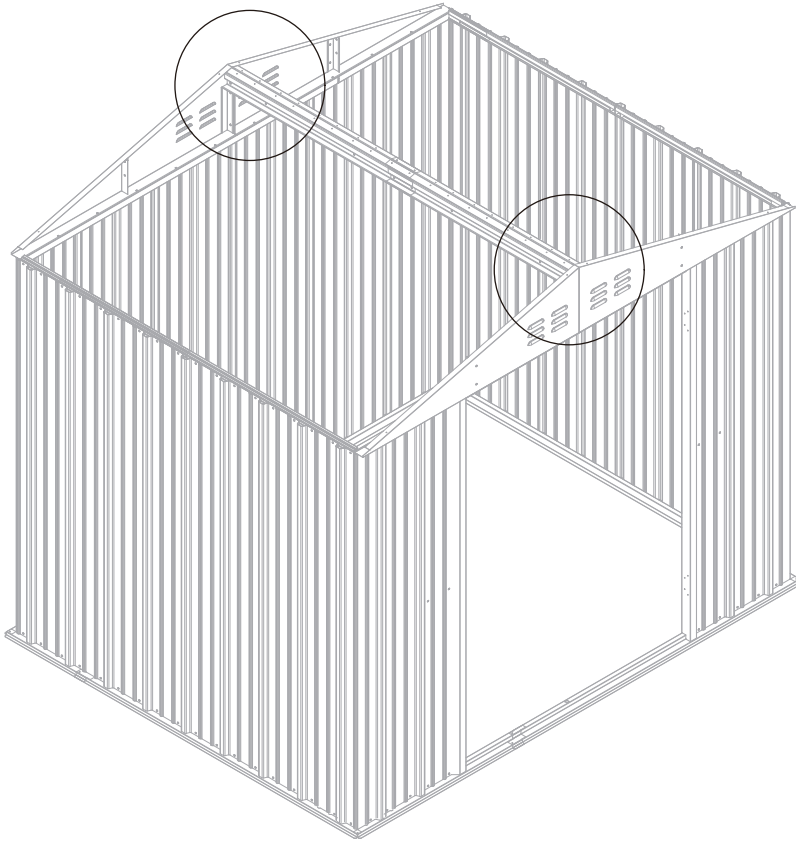


STEP 38

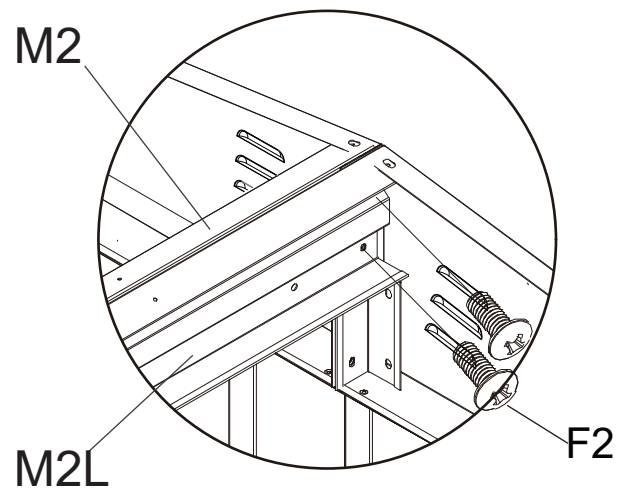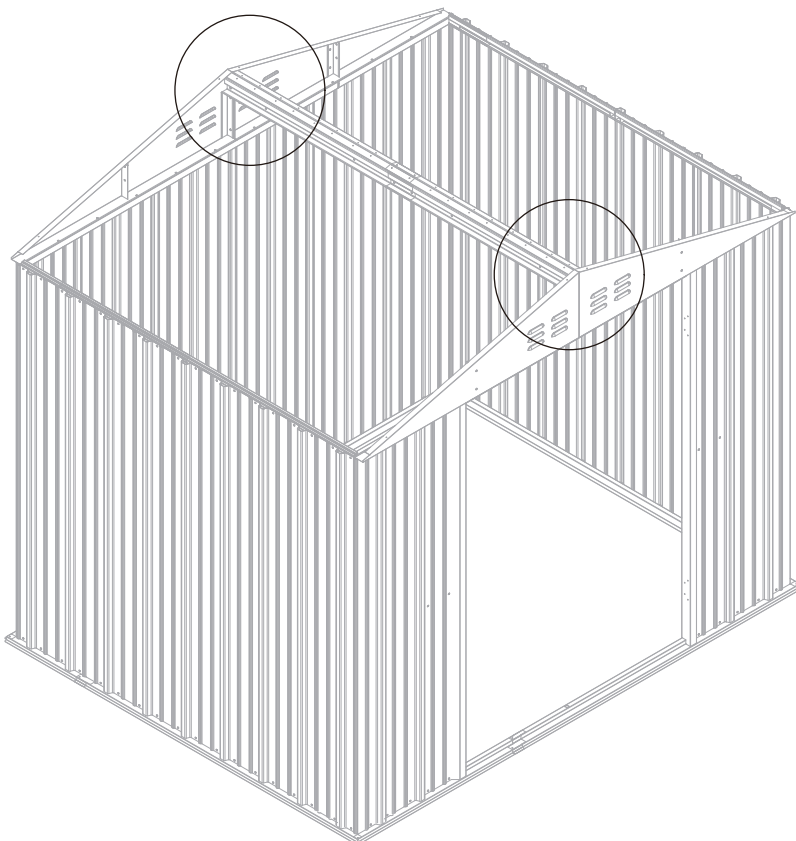


Note: Finally tighten all F2.

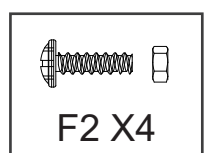


STEP 39

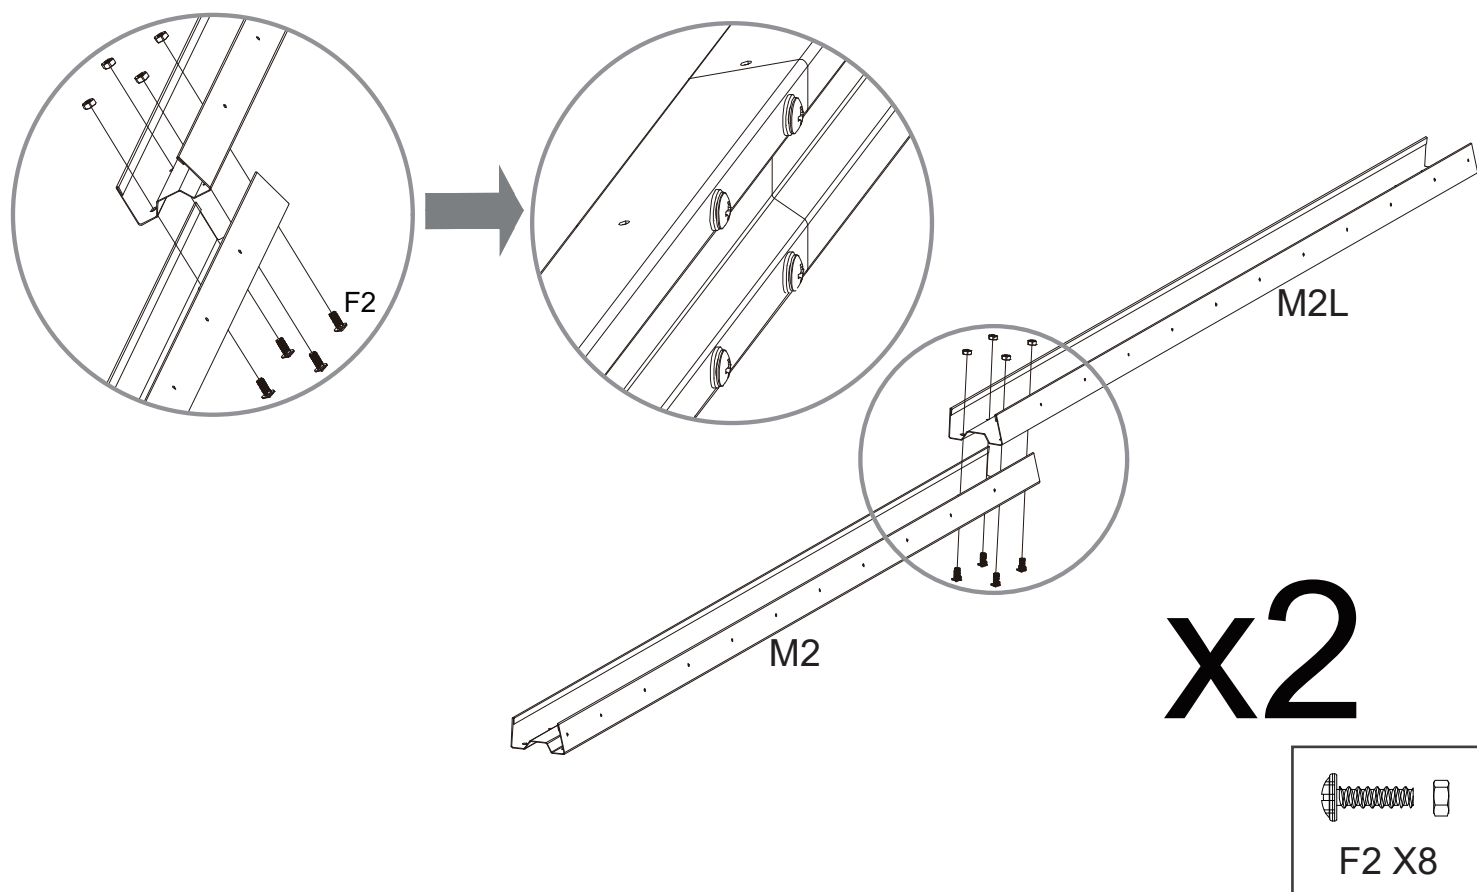

STEP 40

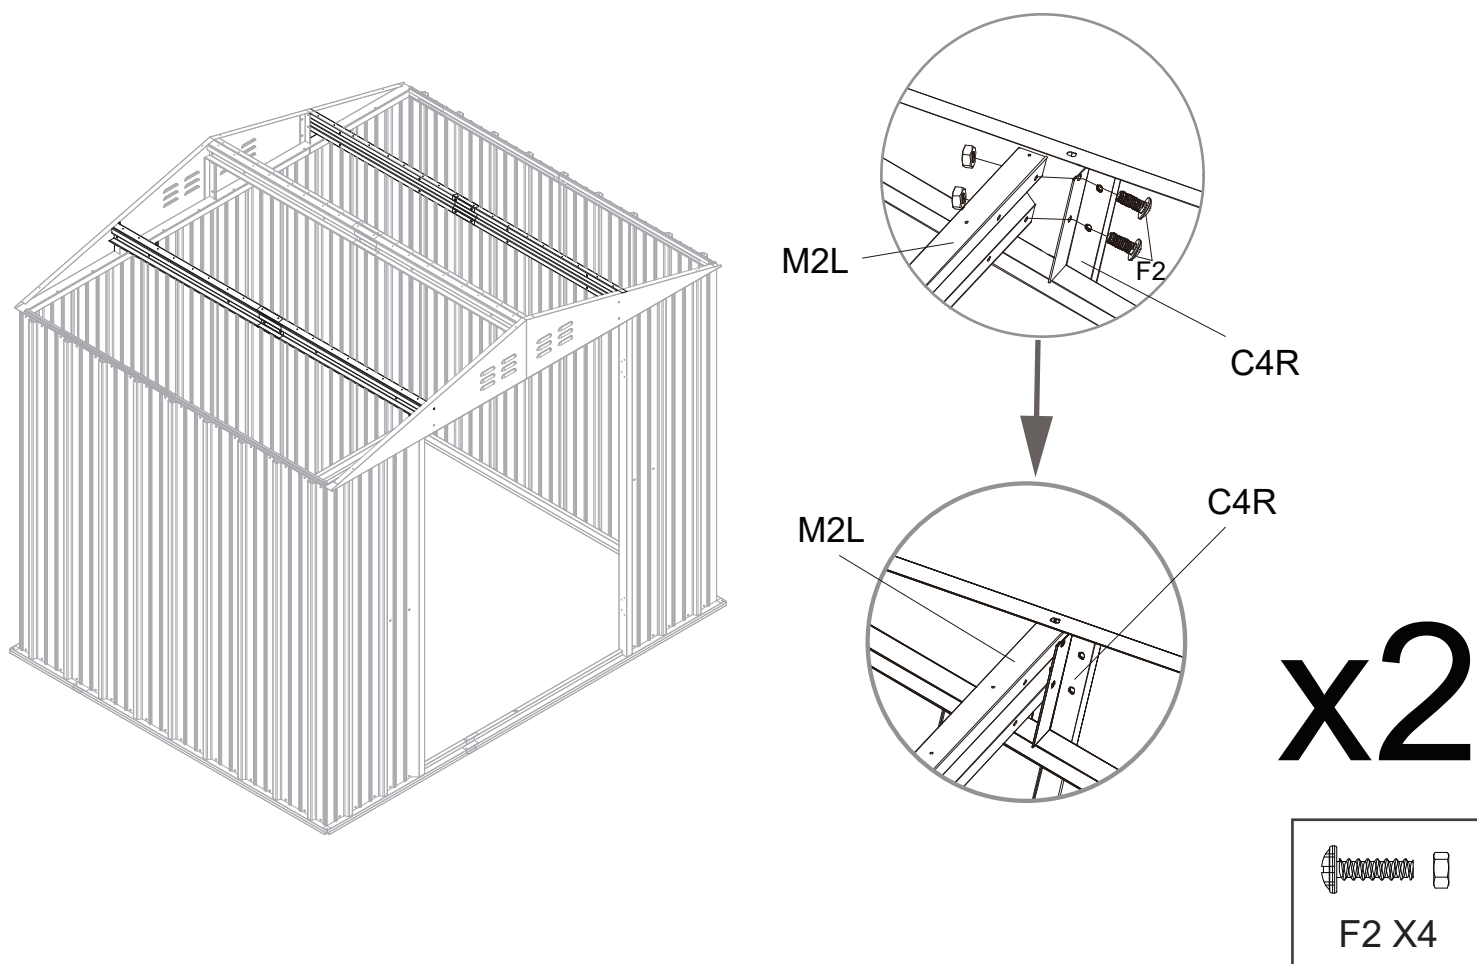


STEP 41

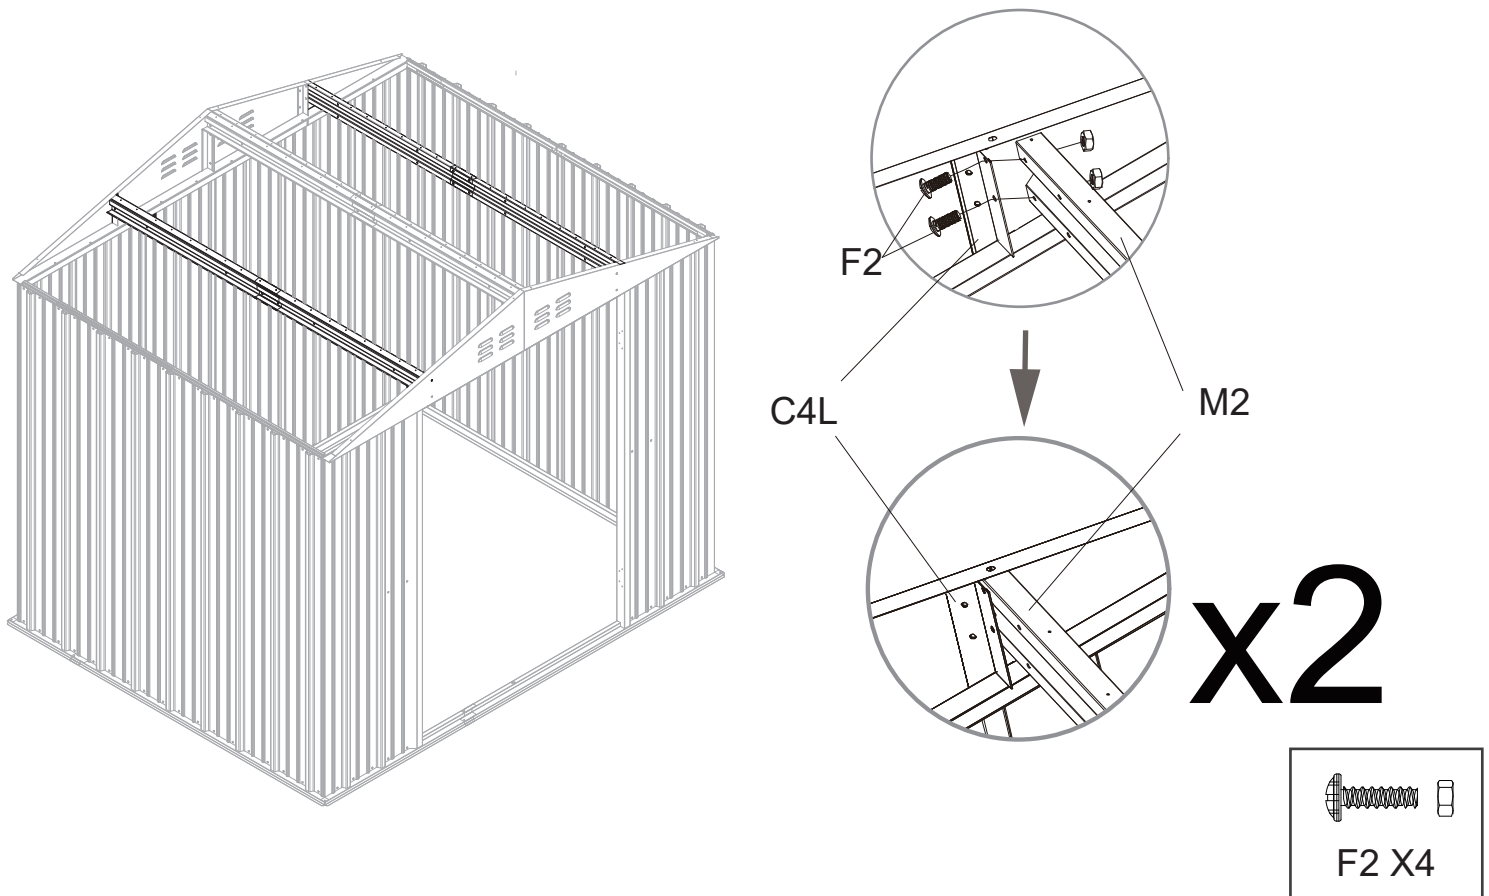


STEP 42


Note: Do not install F1 and V2 in the holes near the outer side of PE5.

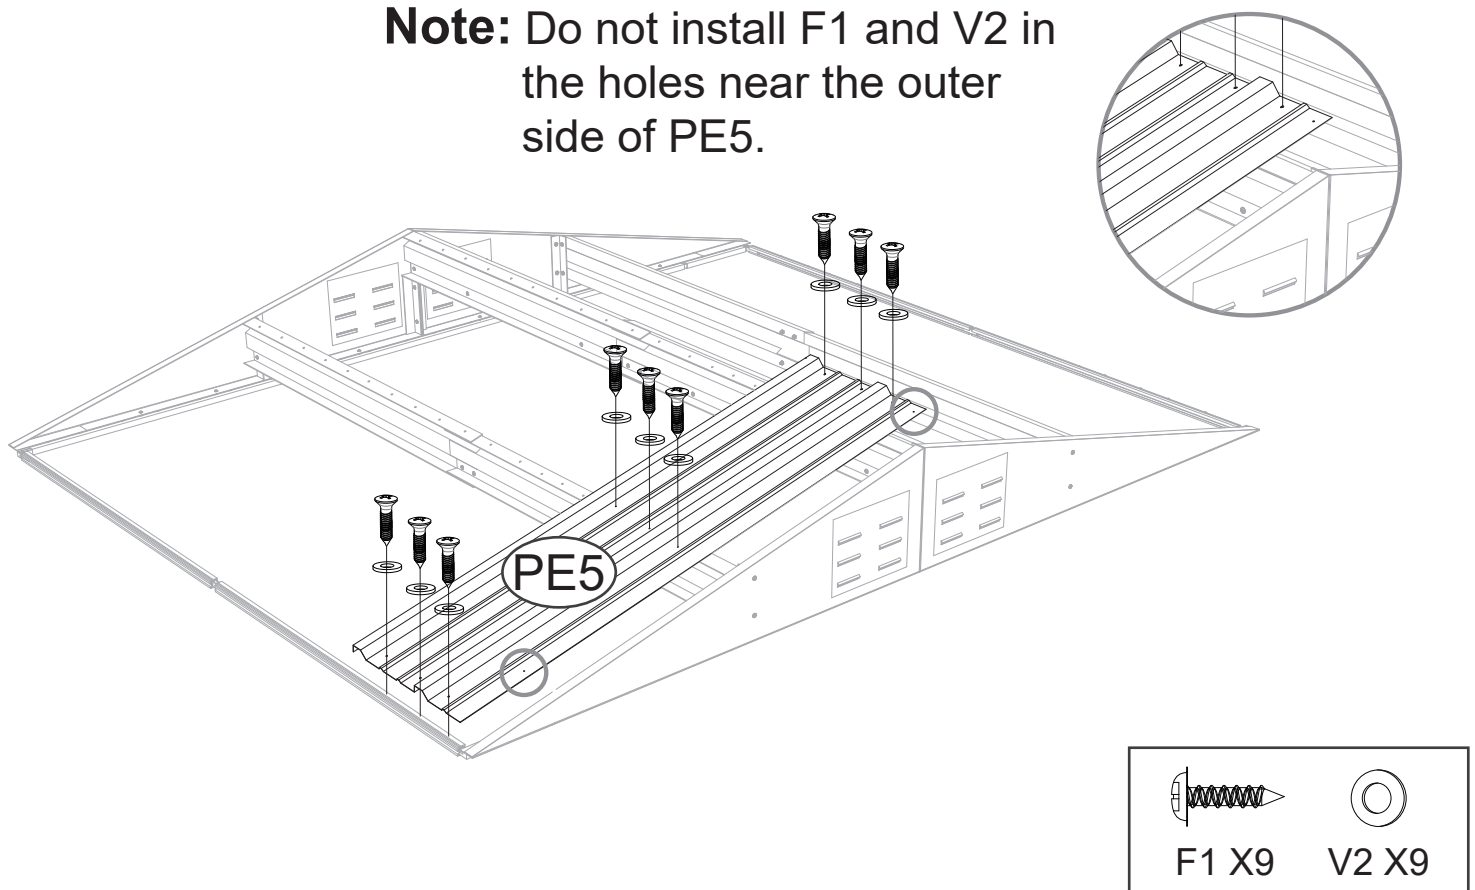


STEP 43

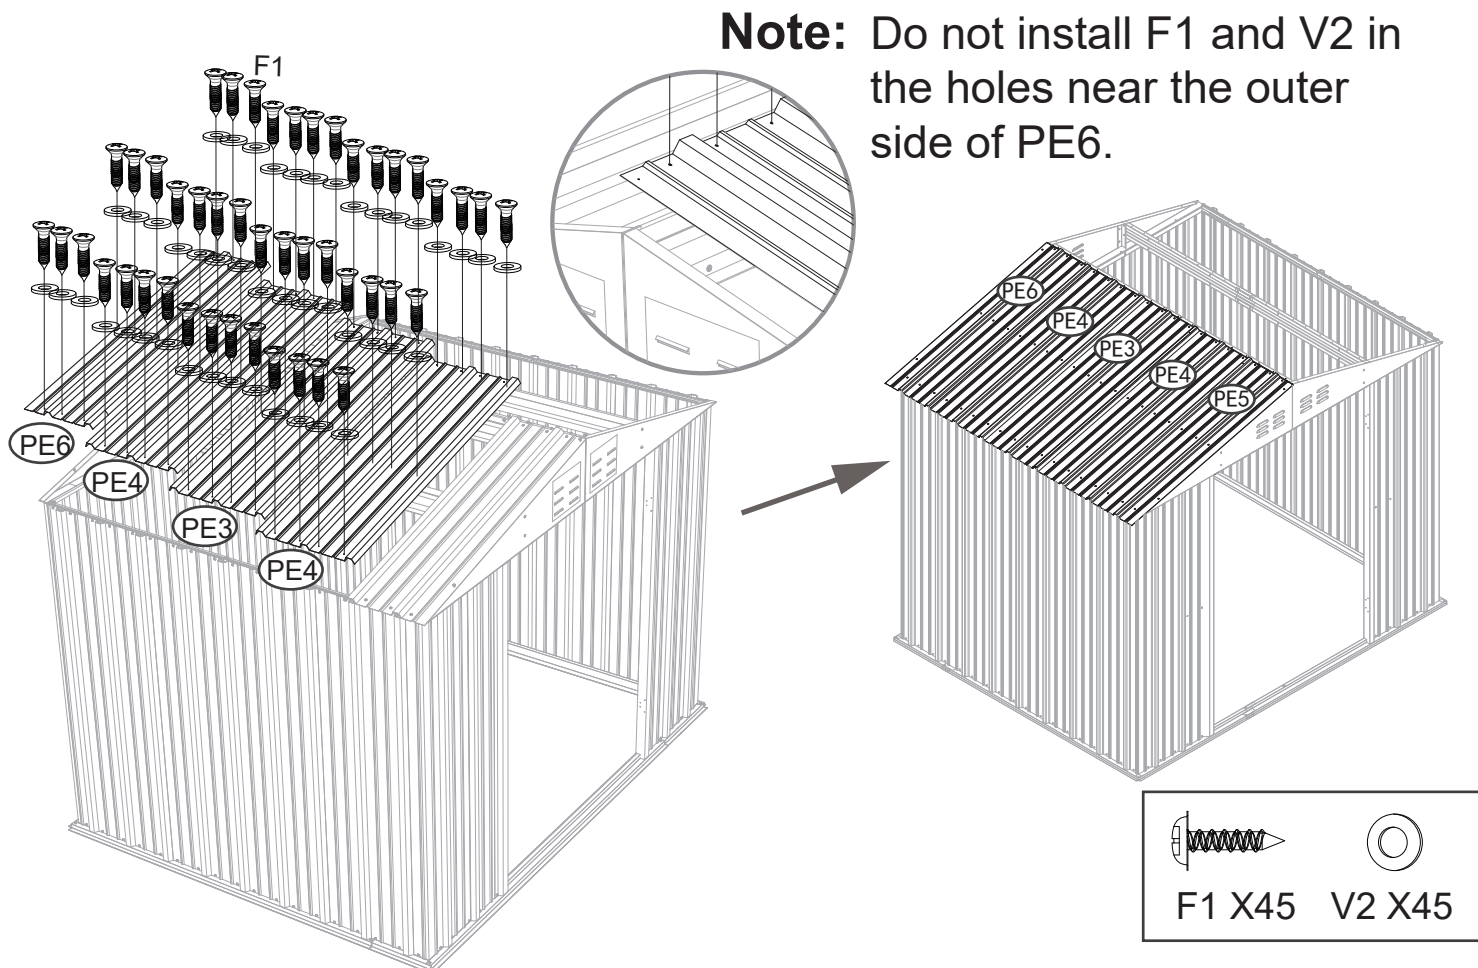



STEP 44

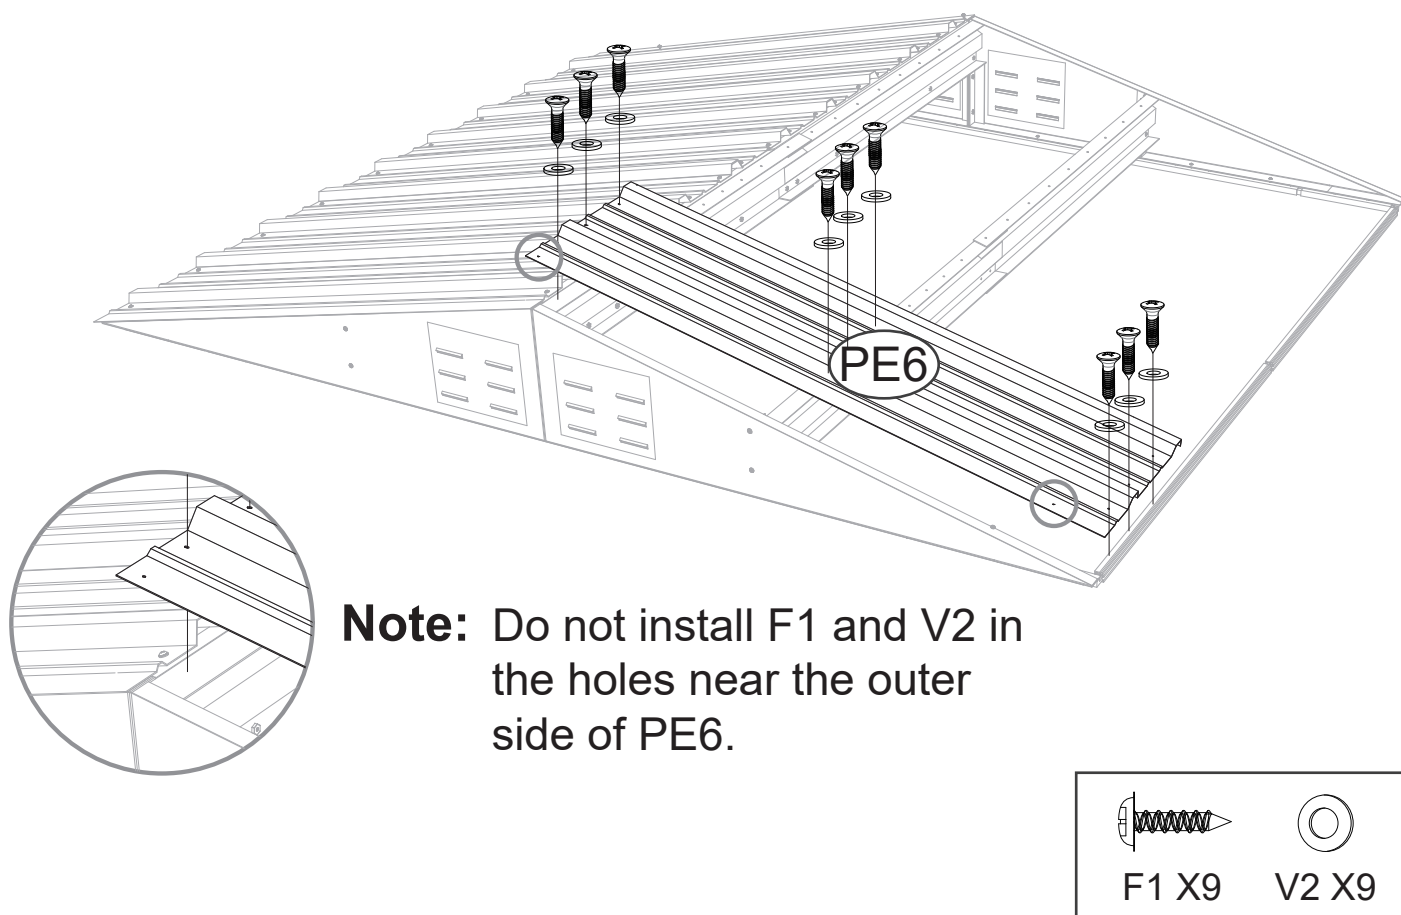




STEP 45

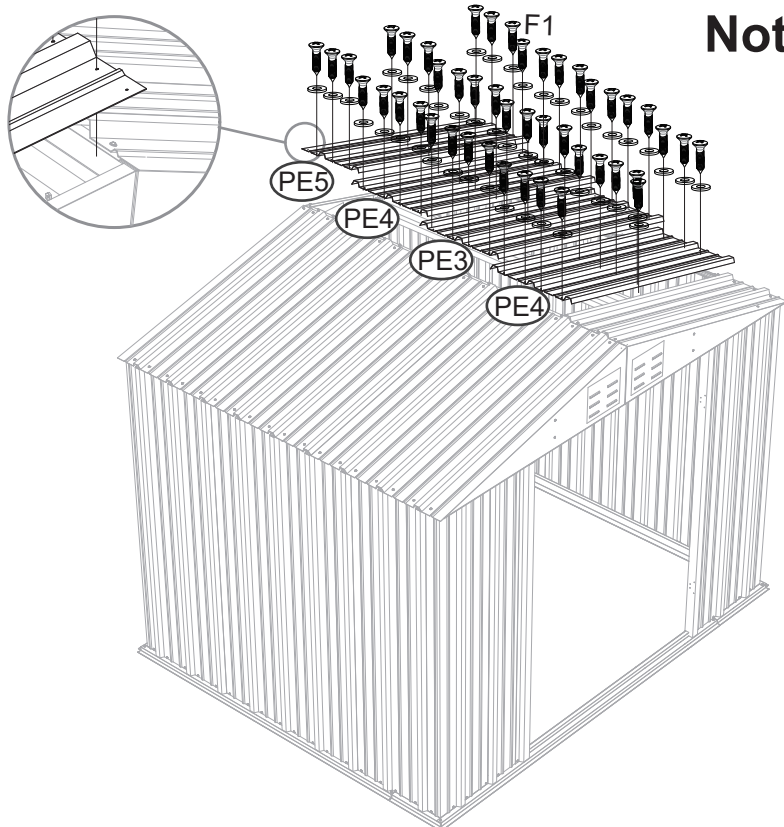


Note: Do not install F1 and V2 in the holes near the outer side of PE5.

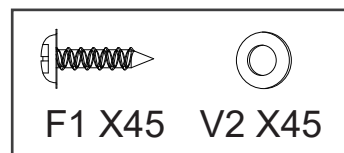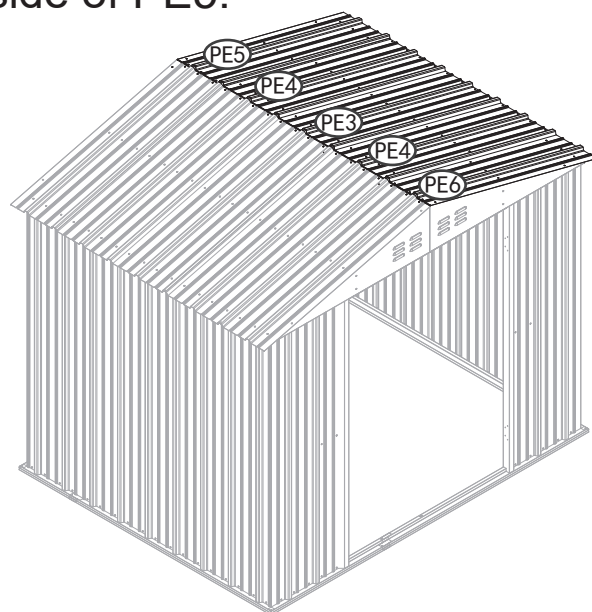


STEP 46

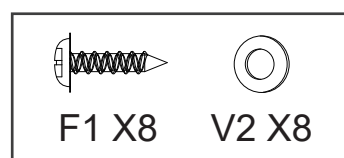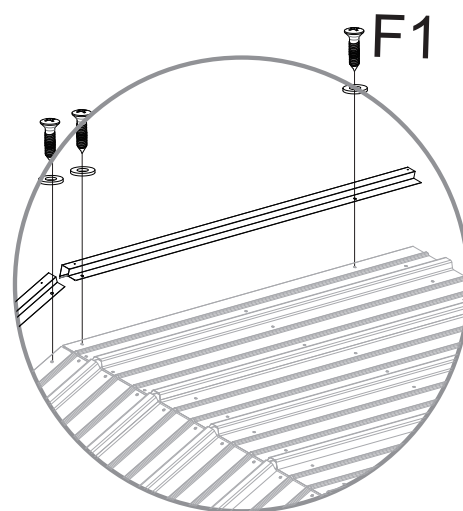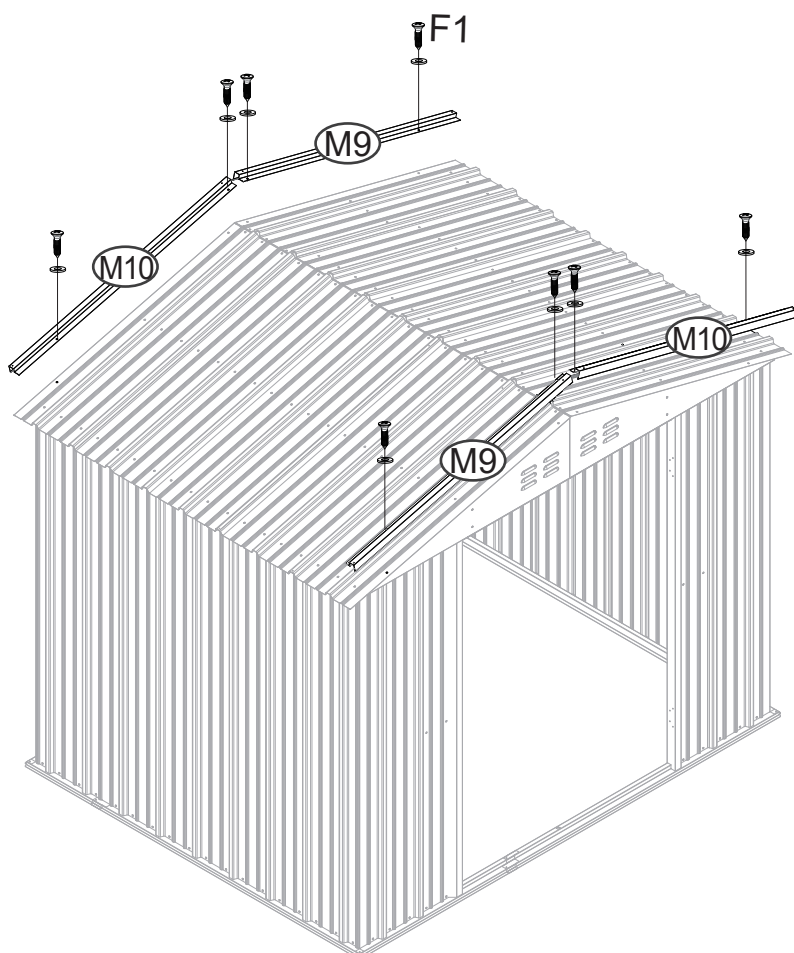



STEP 47

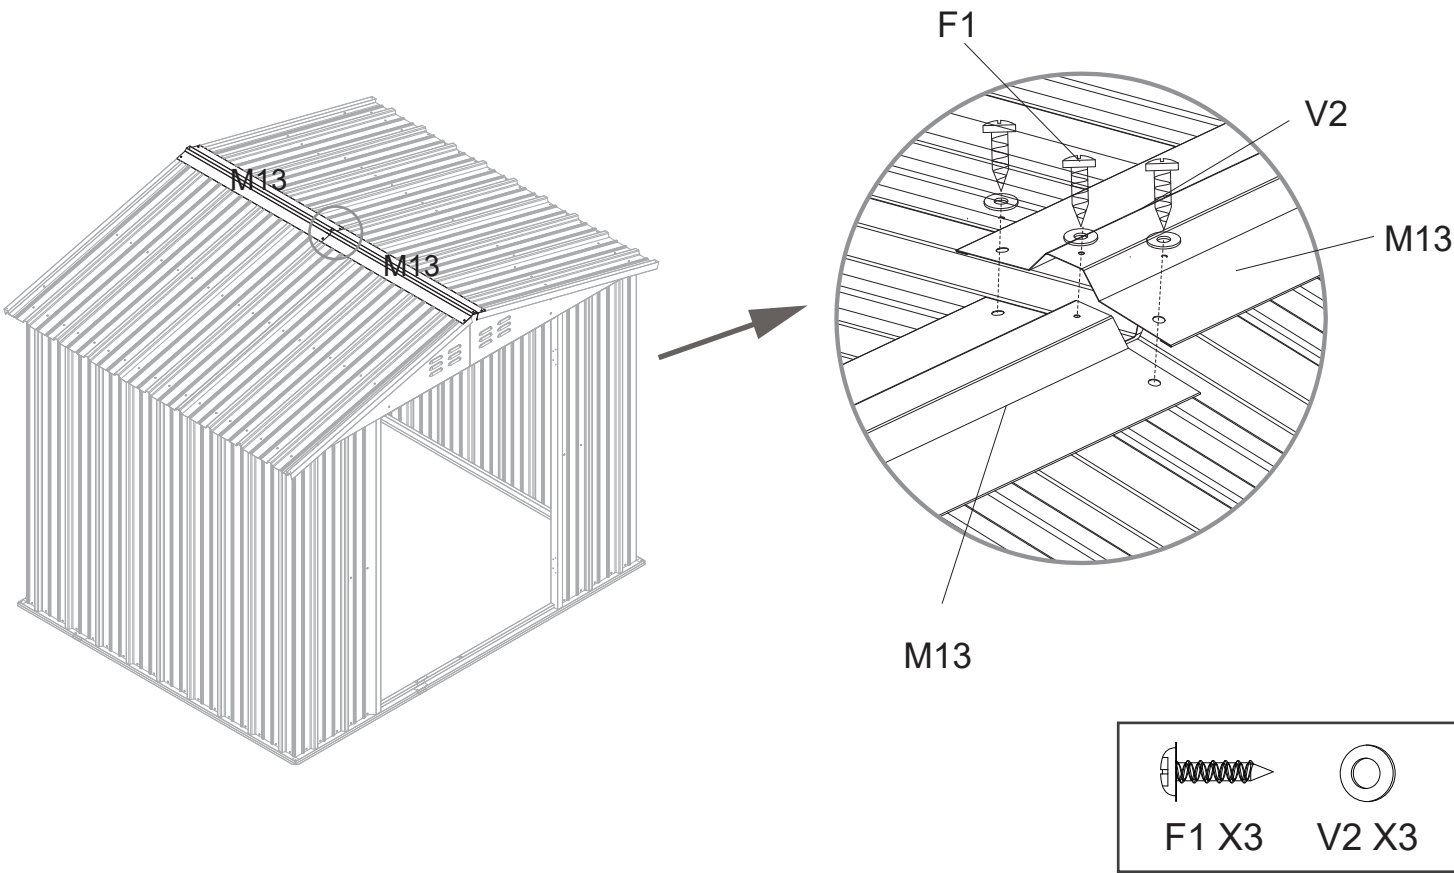


STEP 48

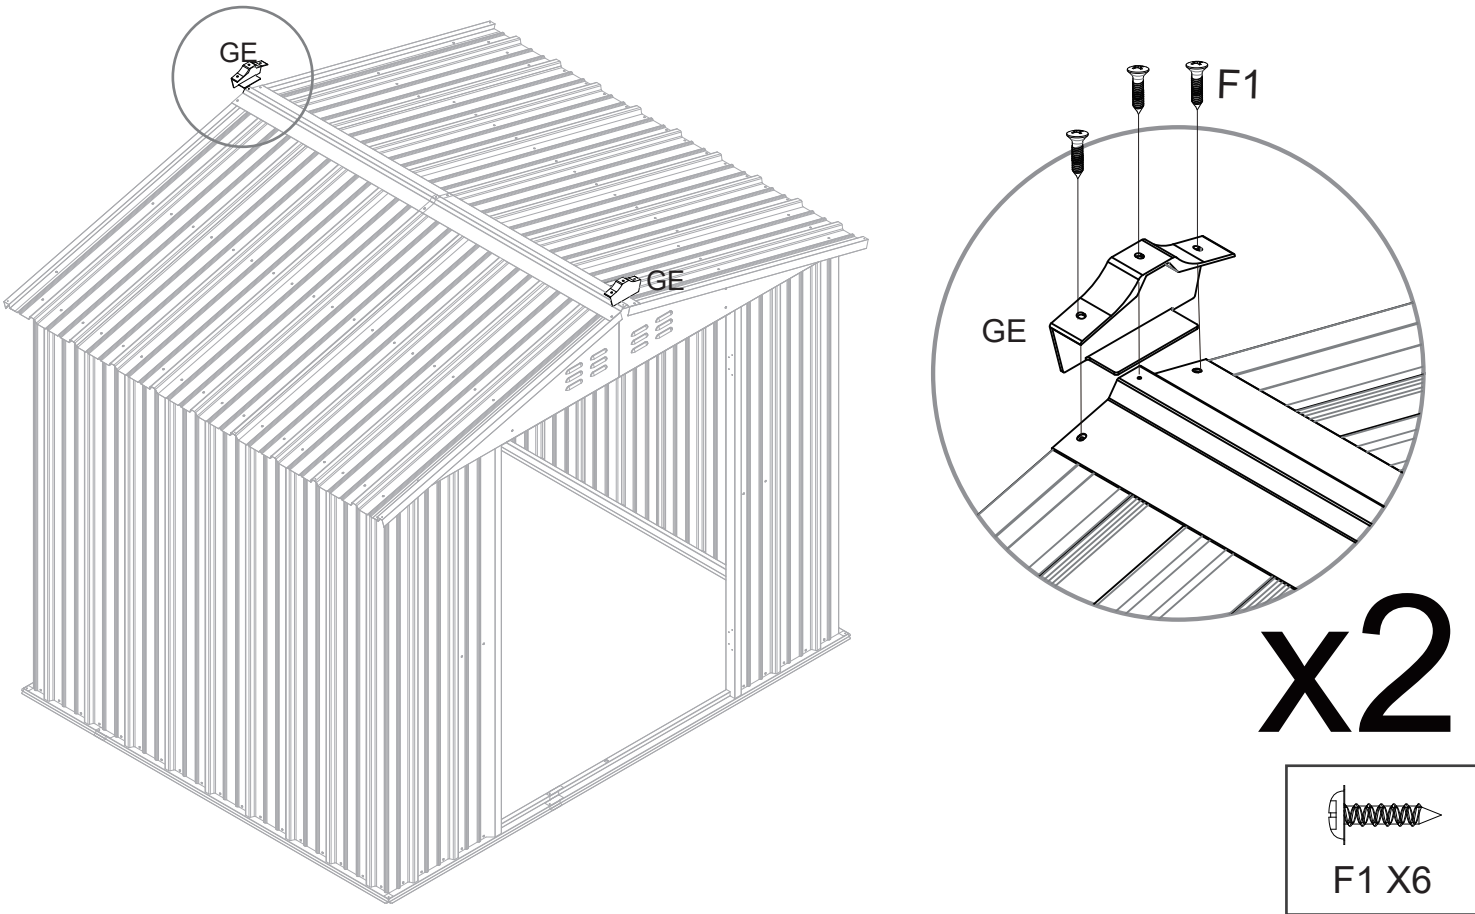



STEP 49

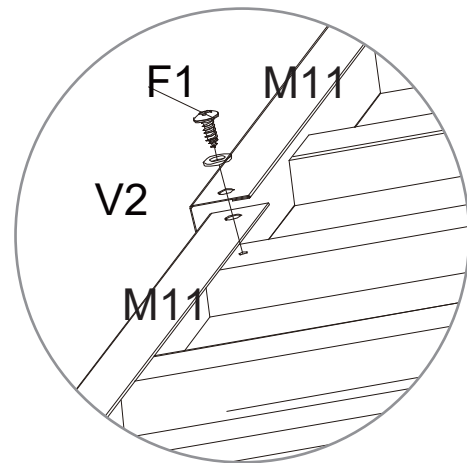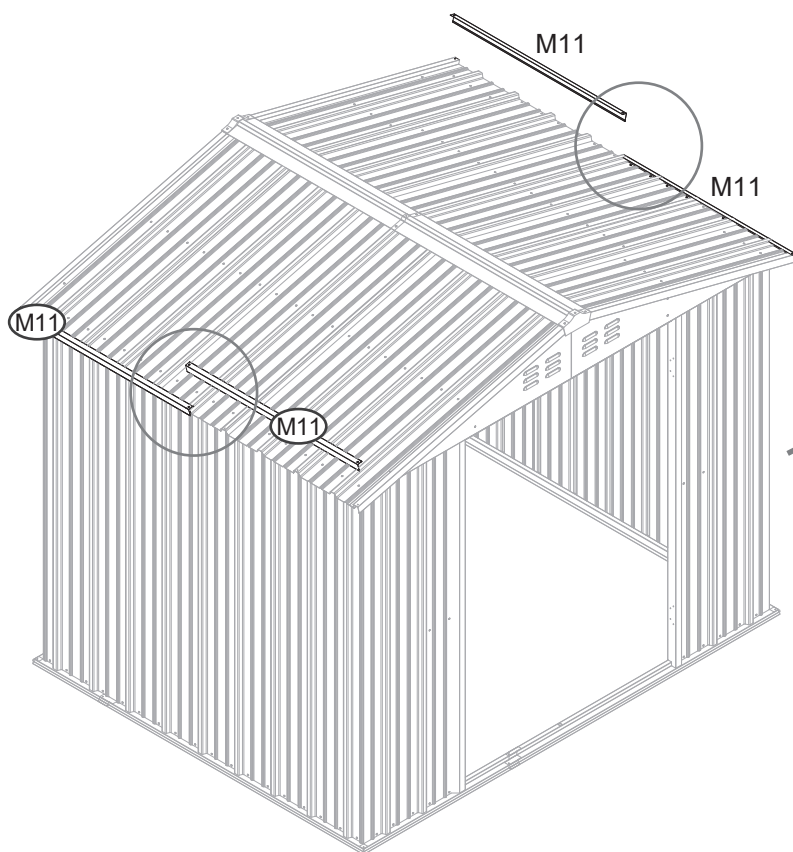


x2

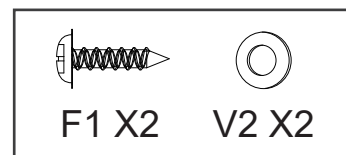


STEP 50

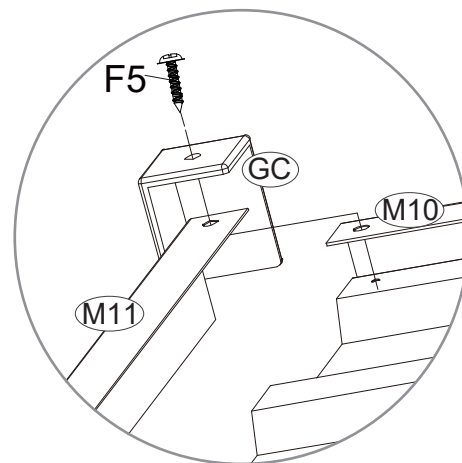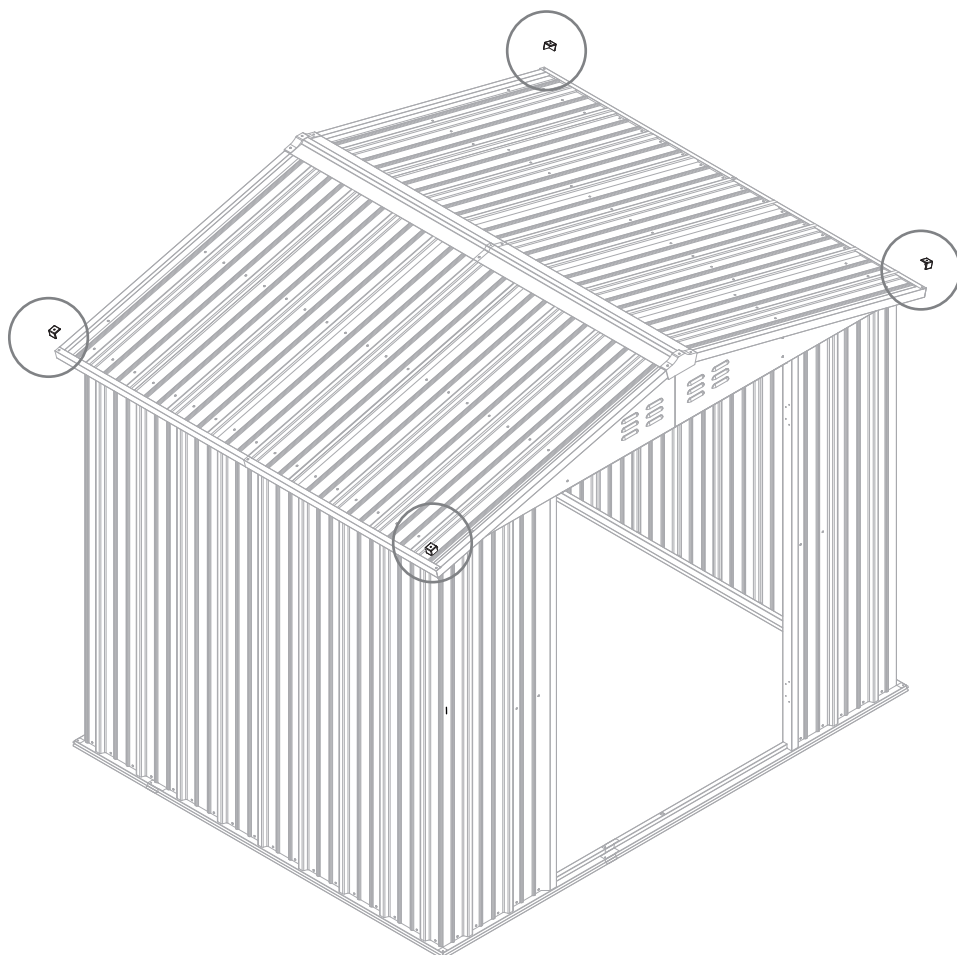


x4

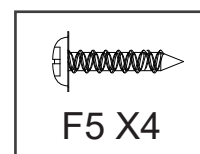

STEP 51

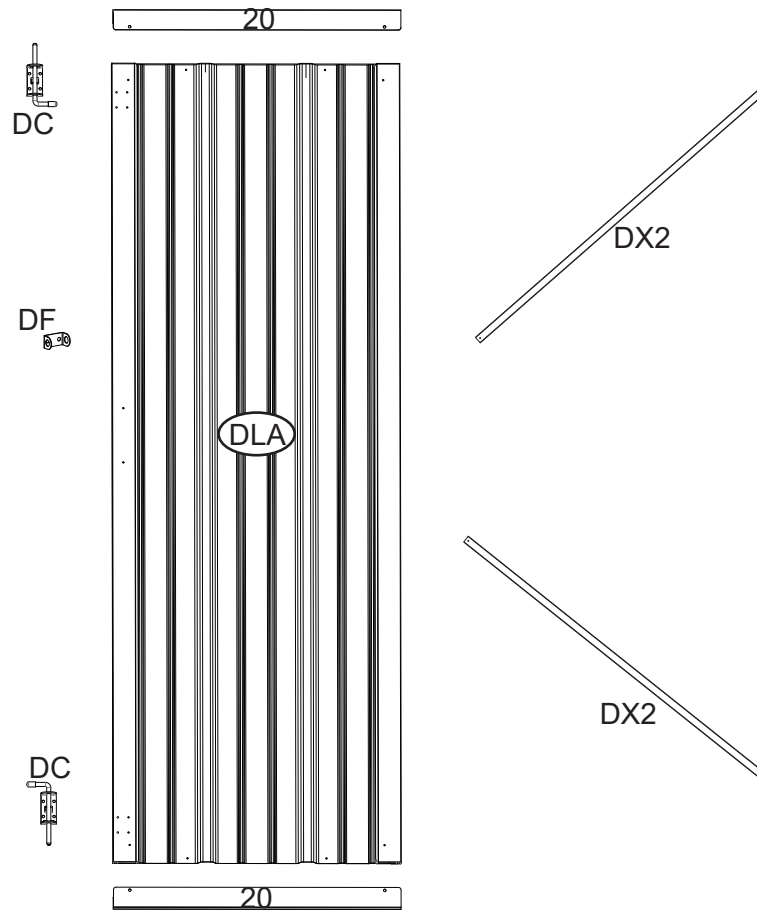


STEP 52

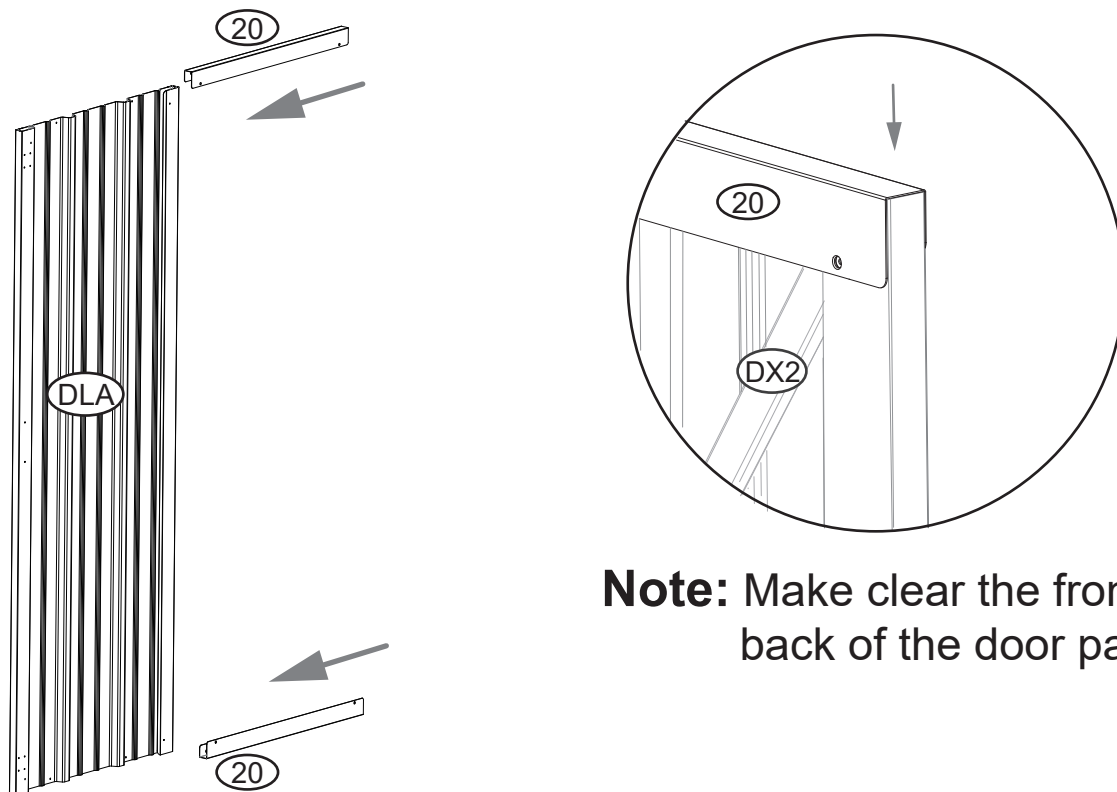


Note: Make clear the front and back of the door panel.


STEP 53

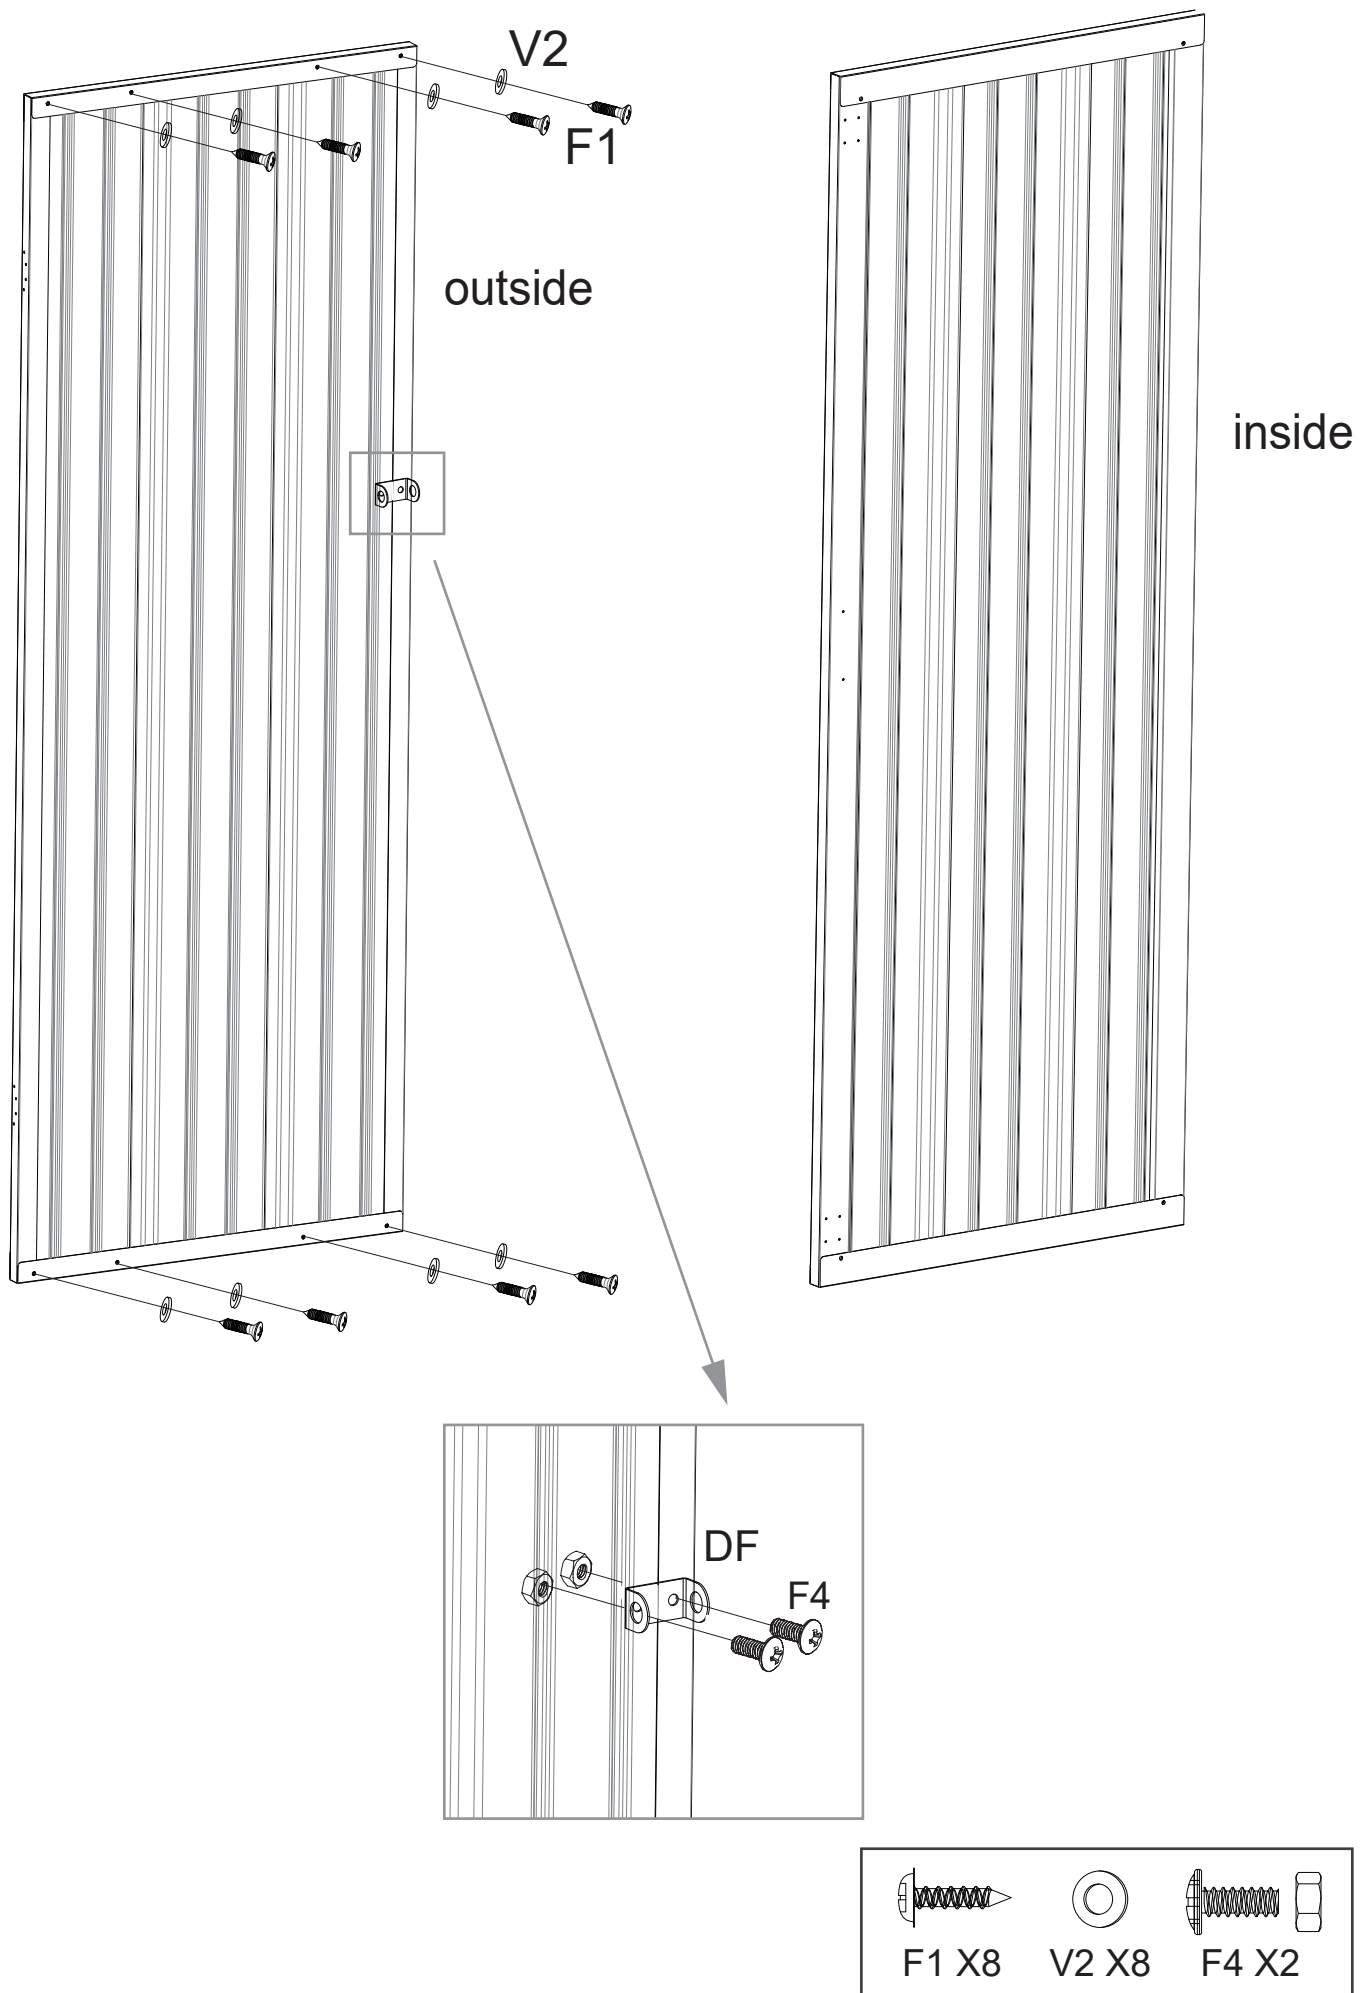






STEP 54



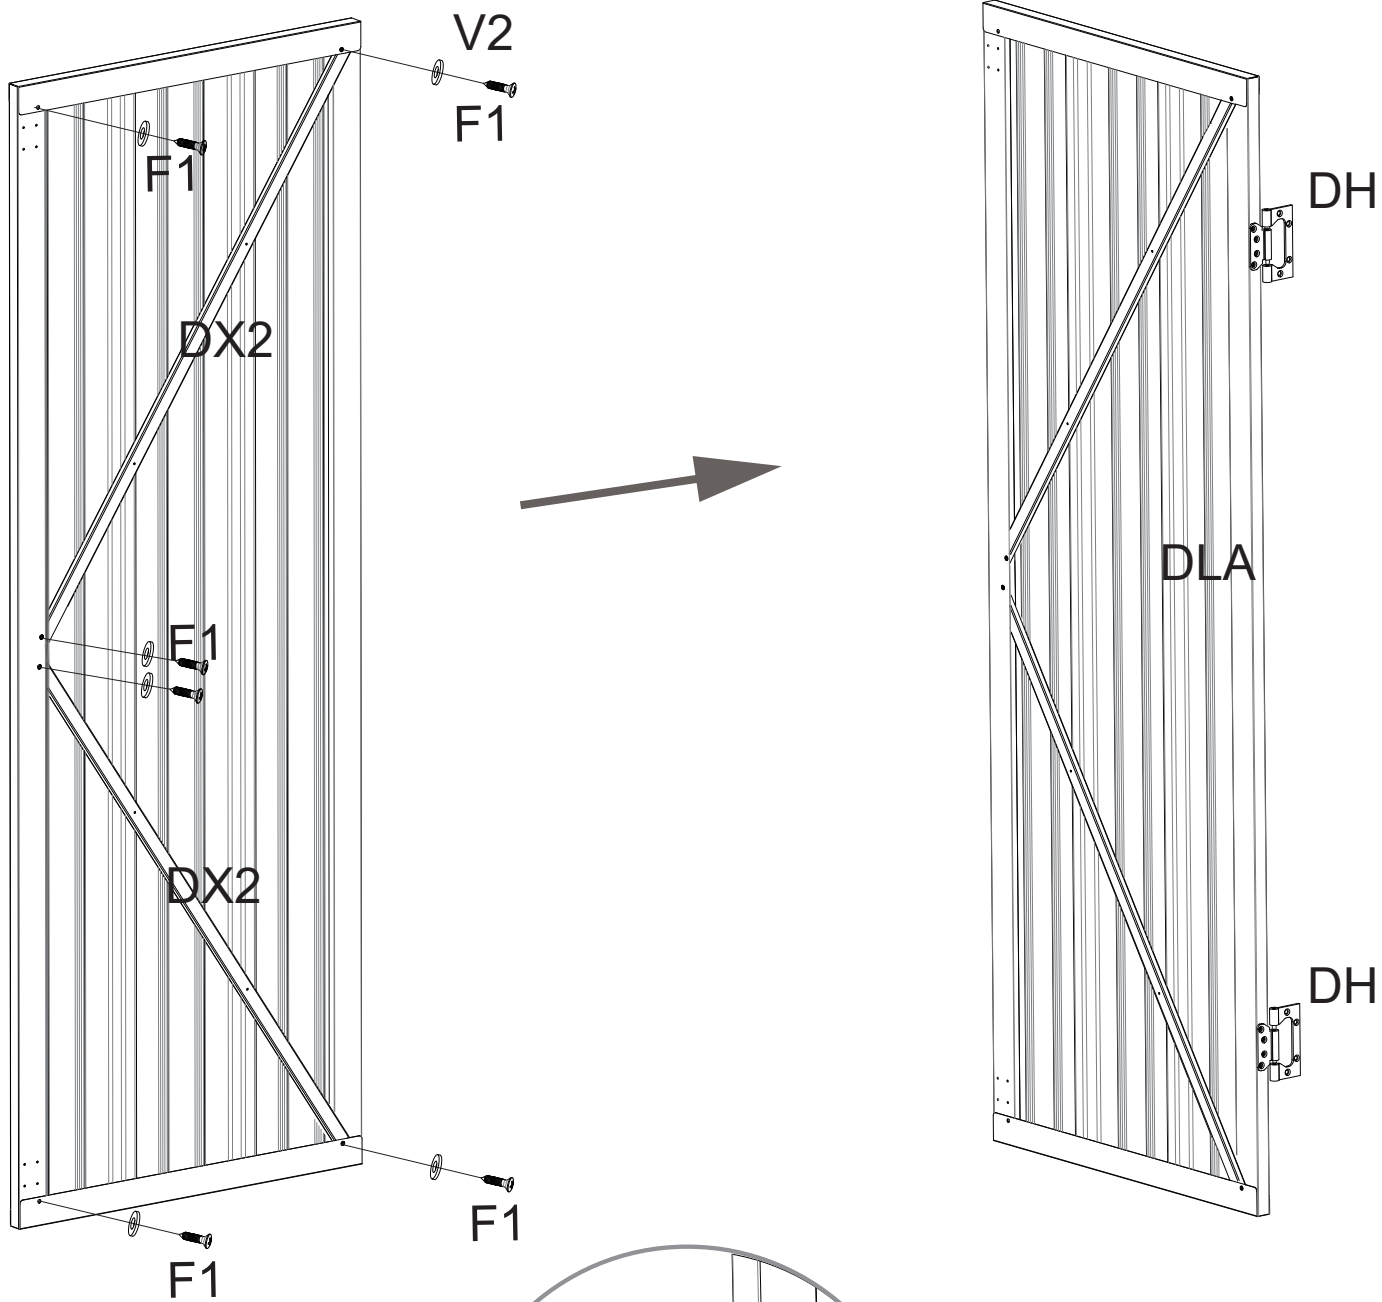


X2

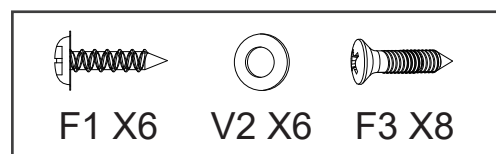


STEP 55

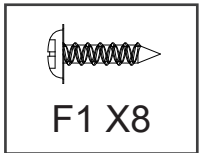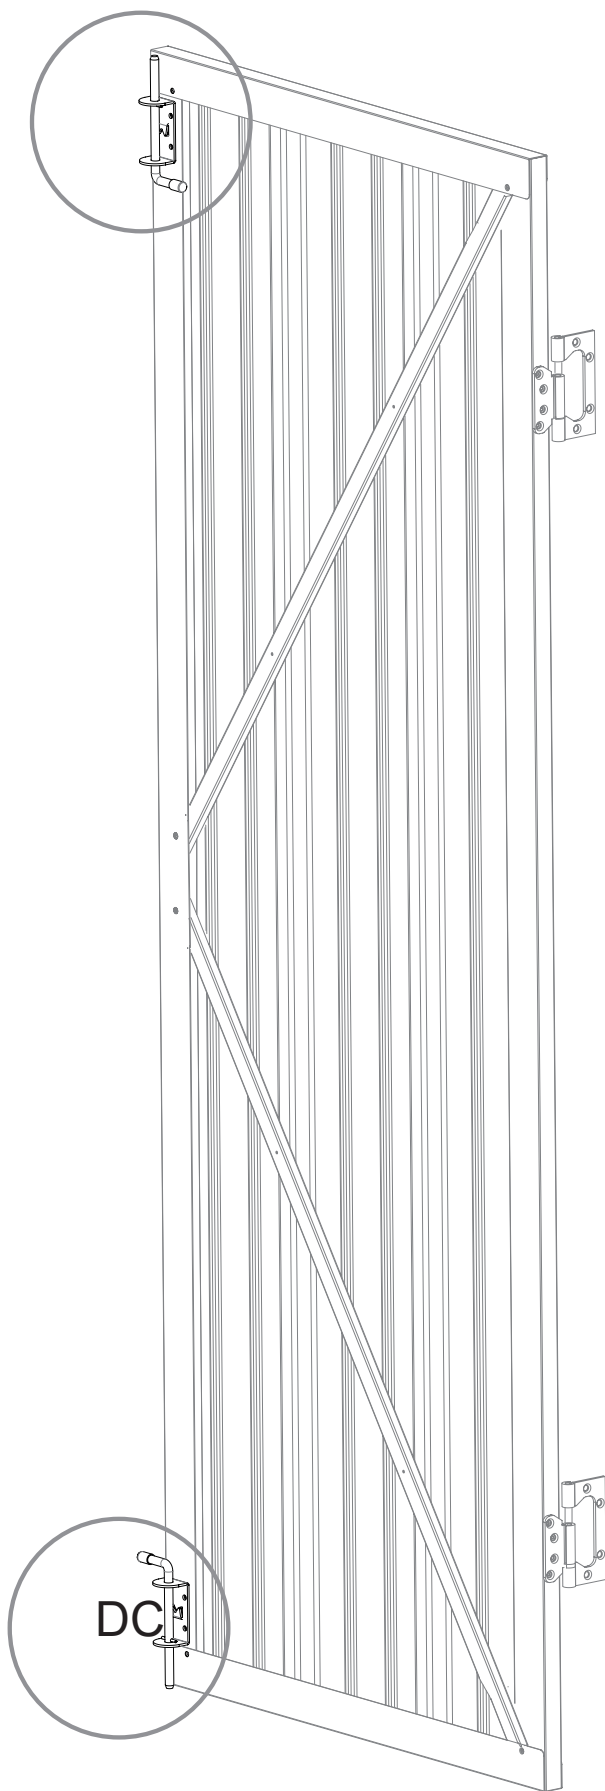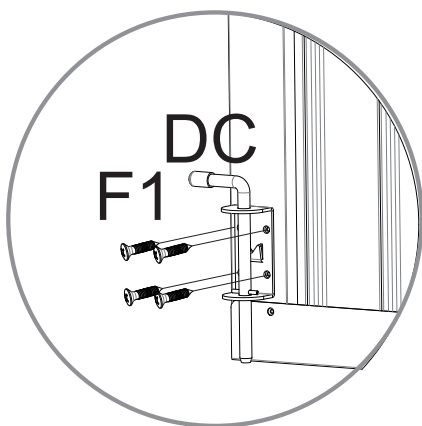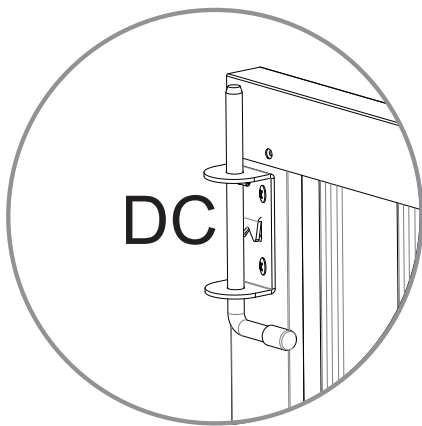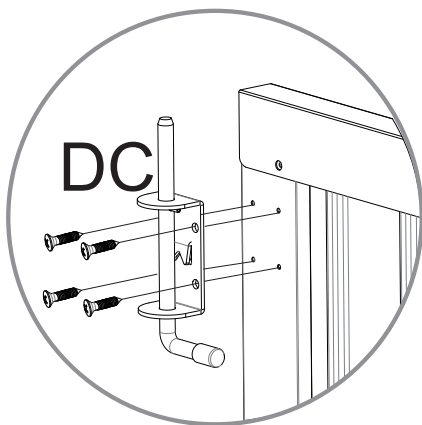

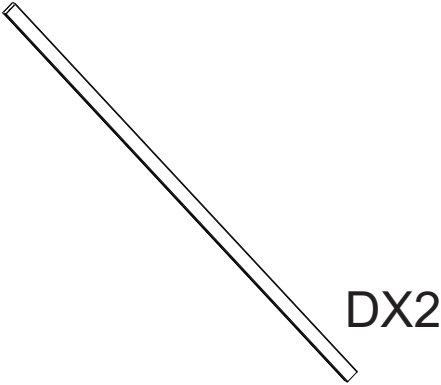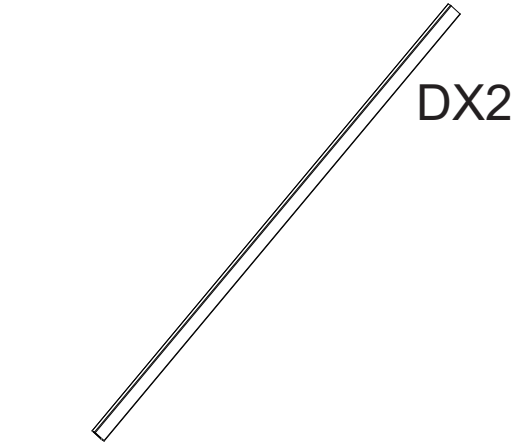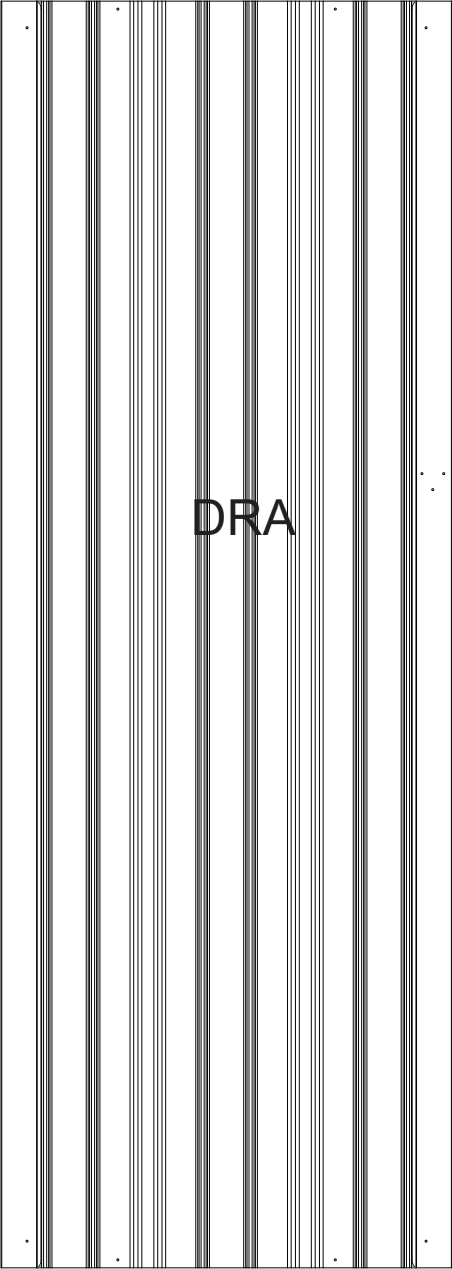


STEP 57


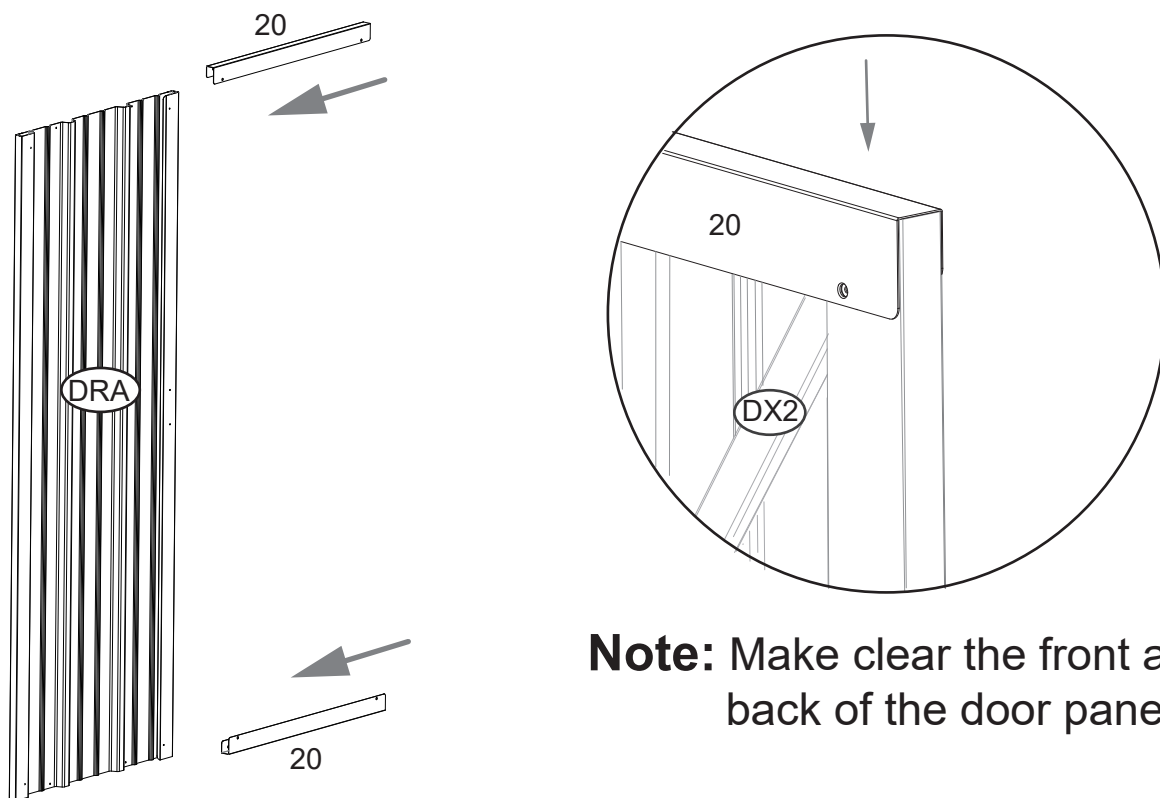


Note: Make clear the front and back of the door panel.


STEP 58

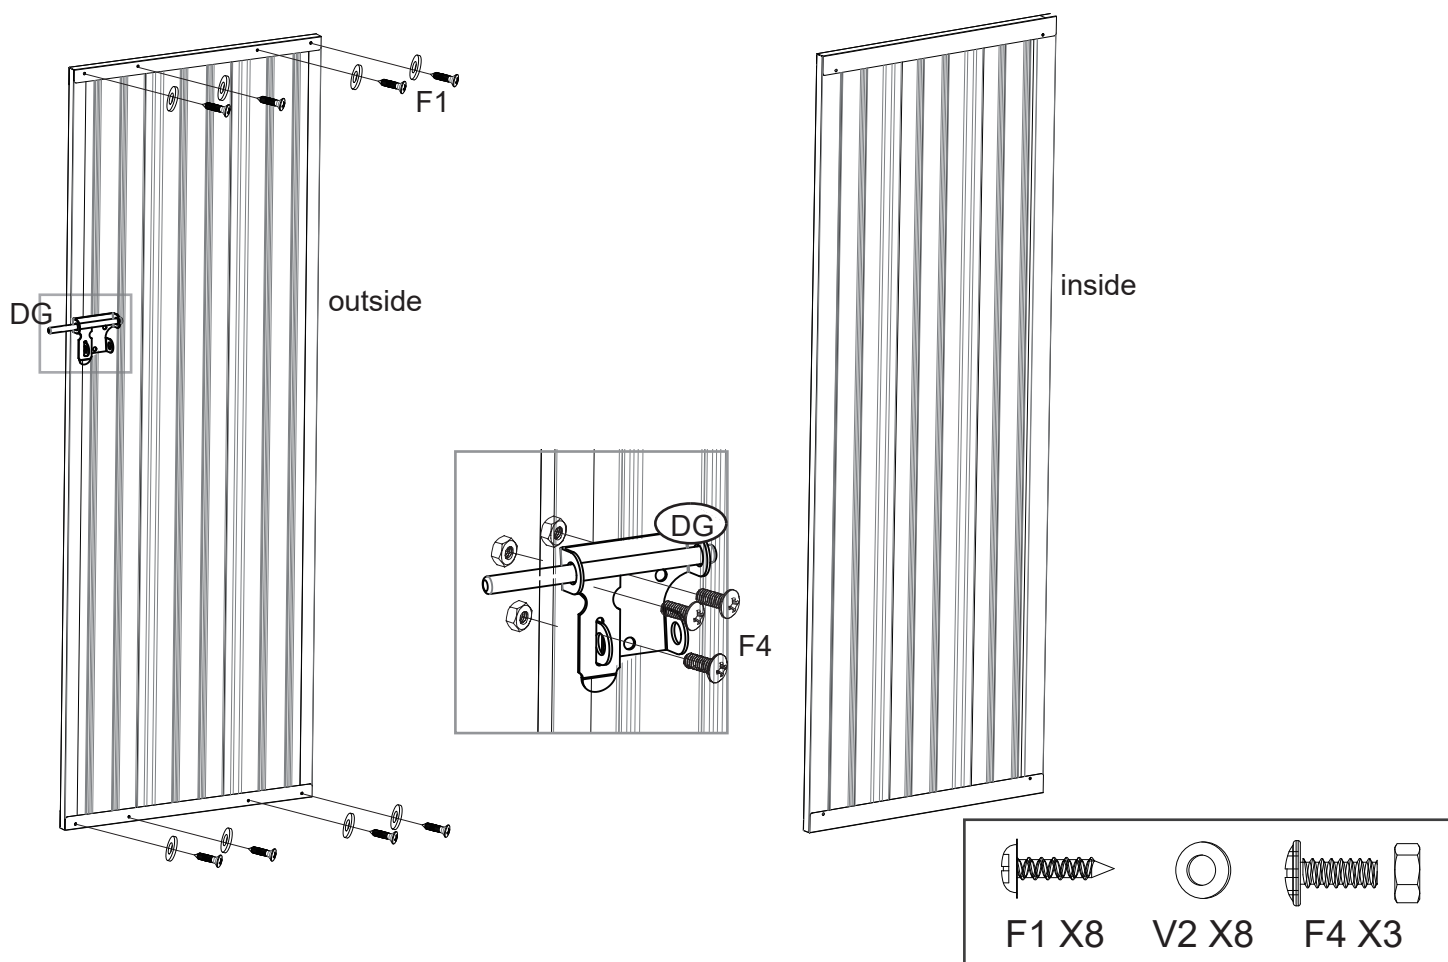



STEP 59

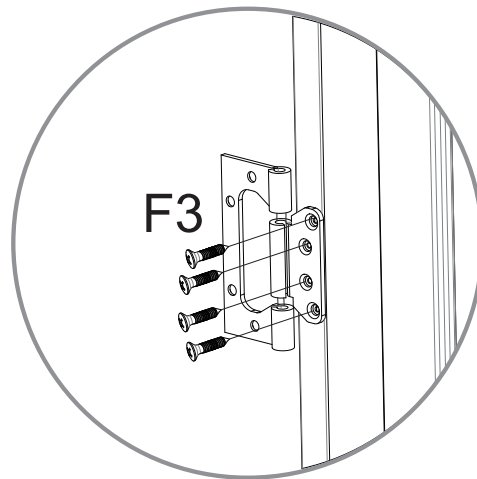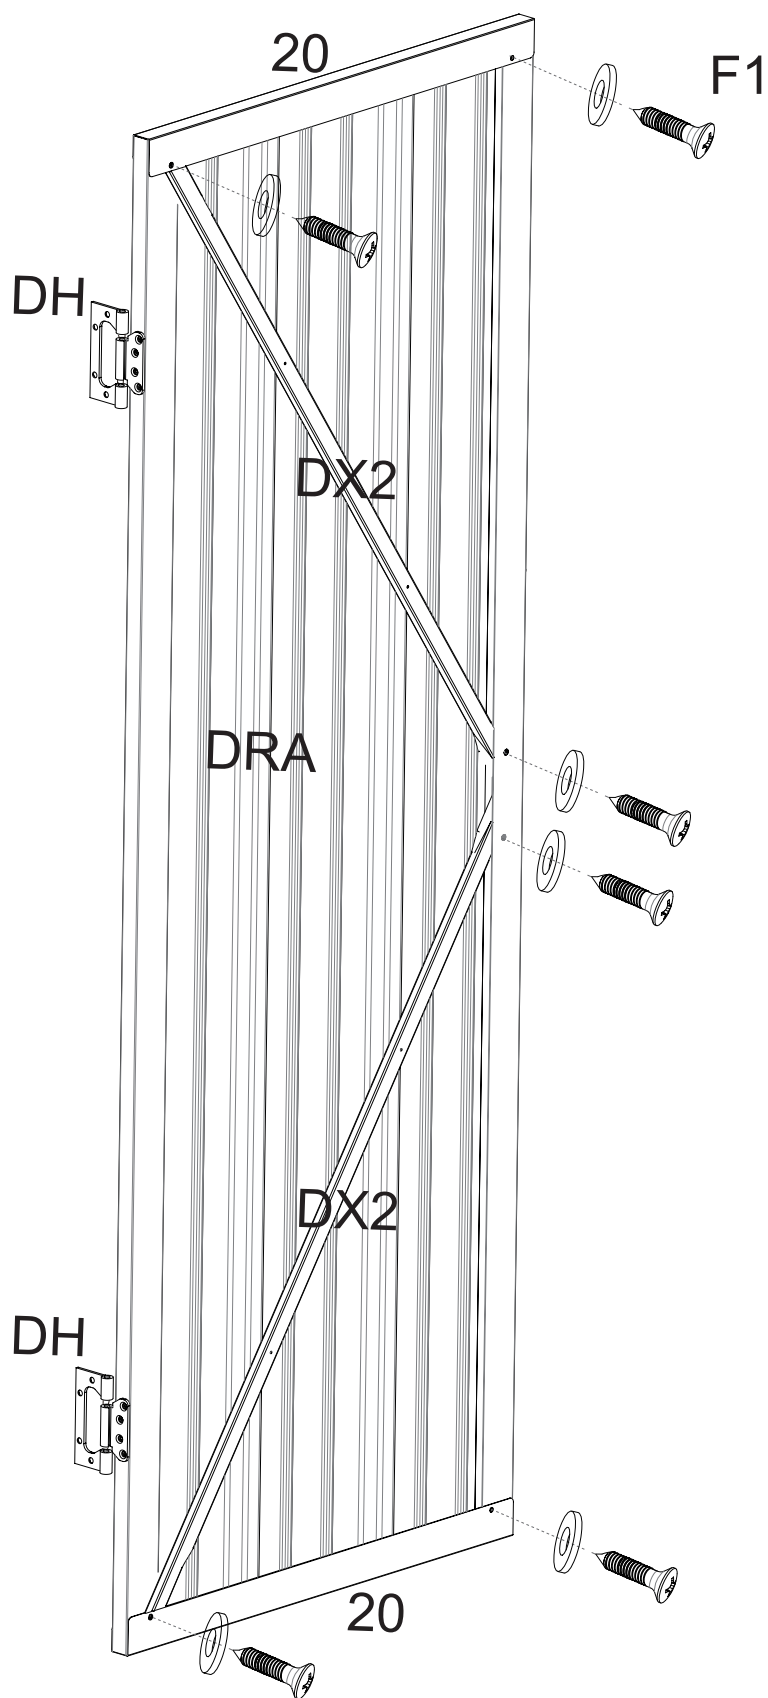


X2

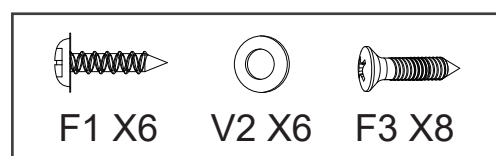


STEP 60

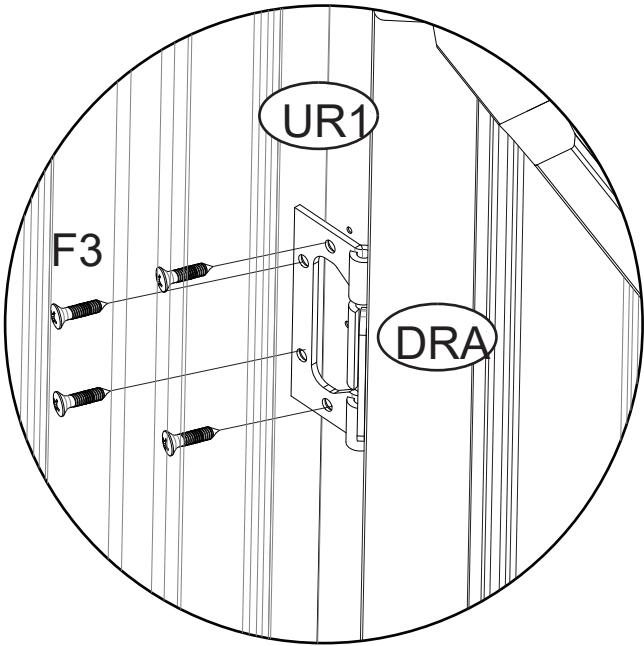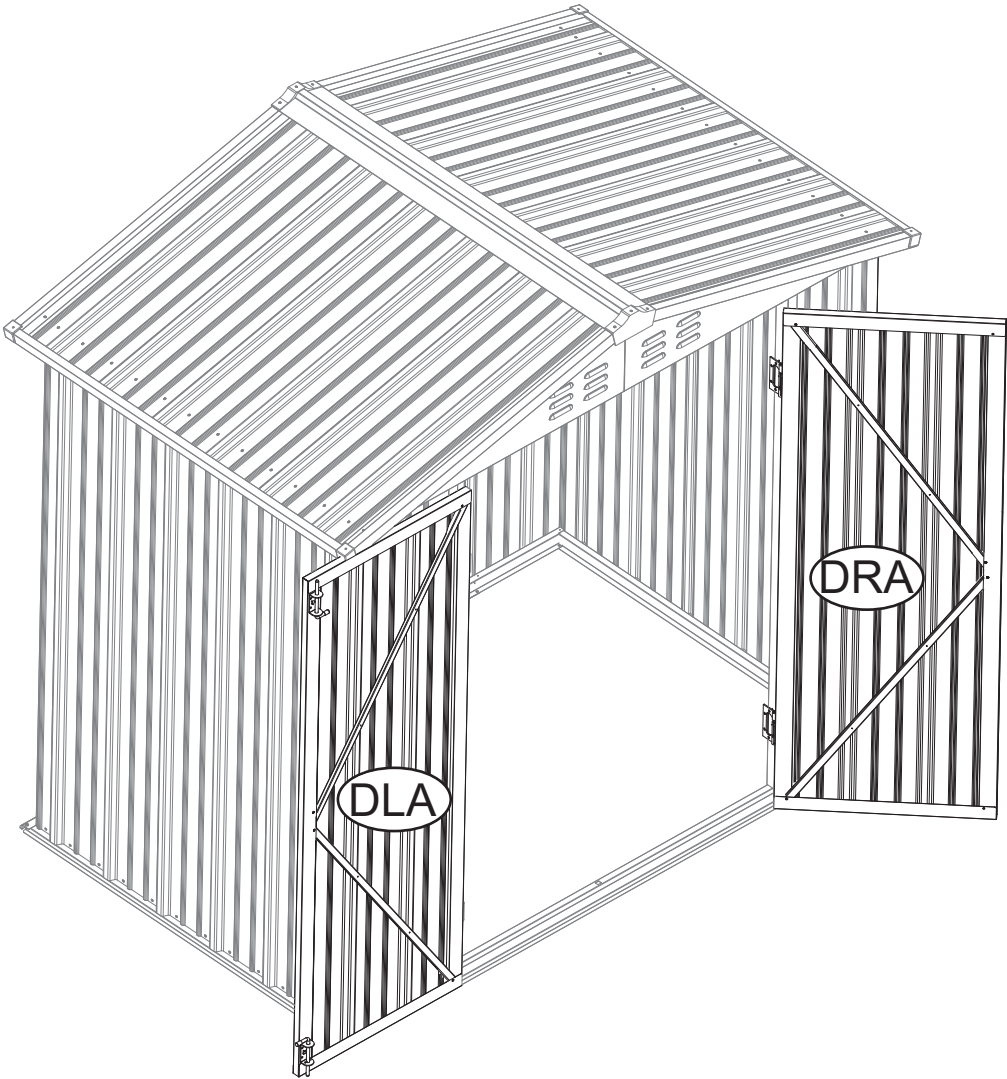

X4

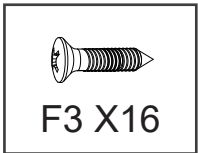

STEP 61

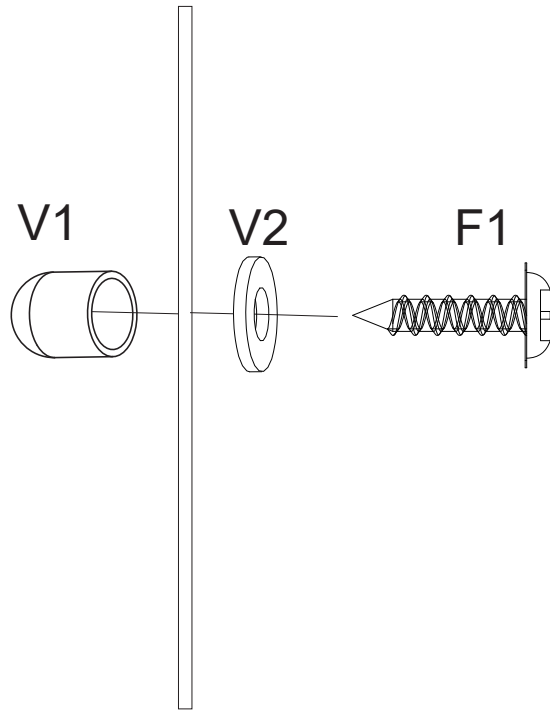


Put it on the screw tip to prevent injury.



V1 X50

FINISH

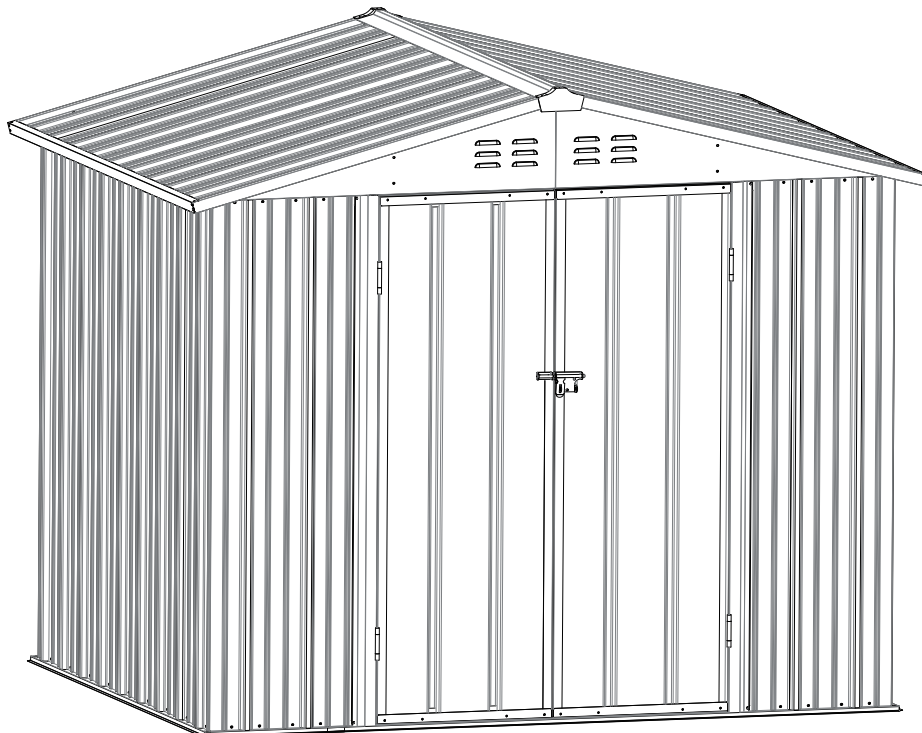

CARE & SAFETY

- Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. Must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.