


INSTALLATION TIPS VINYL MOULDING & TRIM



Sawing/Cutting:

- Use standard woodworking equipment for most applications
- If using a power miter saw, a carbide-toothed blade with 80 teeth or more is recommended

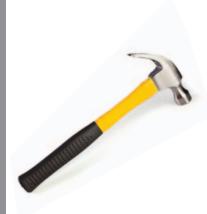

Nailing:

- Use 6d and 8d galvanized nails
- Place nails 12" on center, approximately 3/4" from each edge
- Pre-drilling is required at temperatures of 40° F or below
- Veranda moulding can also be installed using a pneumatic nailer, with stainless steel or painted head screws or with construction grade adhesives



Gluing:

- To reduce or eliminate open joints, pipe glue or PVC pipe cement is recommended
- Temperature variations will cause PVC moulding to expand and contract



Painting:

- Veranda moulding with factory-applied Readi-Finish® requires no painting
- Oil based or latex paints can be used to achieve custom finishes
- For darker custom colors (colors that fall within the lightness (L) value of 56 to 0, with 100 being white and 0 being black), the use of heatreflective paint is recommended



- Veranda moulding can be cleaned using any of the recommended household cleaners listed below; however, glass cleaner has been shown to be best at keeping the finish intact
- Recommended cleaners: Windex, 409 Glass and Surface Cleaner, Spic & Span Cinch, Fantastik All Purpose, etc.
- Apply the cleaning solution and immediately wipe dry for best results
- Avoid harsh cleaners with glycol ethers, ethanol type solvents and/or isopropyl alcohol as they can soften the PVC finish if left on for several minutes

BASIC & DECORATIVE SOLUTIONS VINYL MOULDING & TRIM

- Lifetime No Rot® material constructed from 100% Cellular Vinyl PVC®
- Moisture and termite proof
- Low maintenance, easy to clean
- Prefinished, no painting required
- 10 year factory finish warranty

Decorative Exterior Mouldings



2598 9/16" x 1-9/16"

Parting Bead



2599 11/16" x 1-5/8"





Quarter Round



Quarter Round

2024 1/2" x 1/2"

Trimplank 1x2

5/8" x 1-1/2'





7719 1-1/8" x 1-1/8"



Colonial Casing



2355 11/16" x 2-1/4"

Trimplank 1x4

3/4" x 3-1/2"

Trimplank 5/4x4

7482 1" x 3-1/2"



7527 9/16" x 3-1/4"

Trimplank 1x6

3/4" x 5-1/2"

Trimplank 5/4x6

7483 1" x 5-1/2"

Trimplank® PVC Boards

2046 5/16" x 3/4"











Trimplank 1x10 7440 3/4" x 9-1/4"




Trimplank 2x2

1-1/2" x 1-1/2"

Trimplank 1x12 7439 3/4" x 11-1/4"



Trimplank 5/4x4 7482 1" x 3-1/2"



7483 1" x 5-1/2" 2709 5/16" x 5-13/16"

Window and Door Trim



Trimplank 1x8

7312 3/4" x 7-1/4"

Brick Mould 2448 1-1/4" x 2"











2449 11/16" x 1-5/8"



Brick Mould

7371 1-1/4" x 2"

7117 1-1/4" x 5-1/4"



7118 1-5/16" x 1-3/8"

Fluted Casing

1" x 3-1/2'

Garage Door Trim System



Garage Door Stop

RB3 Casing





Brick Mould



Jamb



2497 11/16" x 5-13/16" 2709 5/16" x 5-13/16" **Ceiling and Wall Solutions**



3/8" x 5-1/2"











Door Frame System

Exterior Planking Quarter Round



Door Frame Set 7181 1-1/4" x 4-9/16"



7137 1-1/4" x 2"



Brick Mould Set Brick Mould 2448 1-1/4" x 2"





