


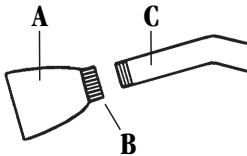

Instructions

Tools Required: Adjustable Pliers, Pipe Sealing Tape

1. Remove old Shower Head (A) by unthreading Nut (B) connecting Shower Head (A) to Shower Arm (C).
2. Remove any old pipe sealing tape or grease and oil from the threads on the Shower Arm (C). Clean and dry thoroughly.
3. Wrap new pipe sealing tape around threads (going in the direction of the threads), overlapping 1/2" width.
4. Thread new shower head onto Shower Arm (C). Hand tighten and inspect for leaks.



Instrucciones

Herramientas requeridas: alicates ajustables, cintas para roscas de tubos

1. Remover la cabeza de ducha usada (A), desenroscando la tuerca (B) que conecta la cabeza de ducha (A) al brazo de ducha (C).
2. Limpiar toda cinta para rosca, grasa o aceite de la rosca del brazo de ducha (C). Secar bien.
3. Poner nueva cinta en la rosca (en el sentido de la rosca) con un traslape de 1/2".
4. Enroscar la nueva cabeza de ducha en el brazo de ducha (C). Ajustar a mano y comprobar si hay fugas.