



INSTALLATION INSTRUCTIONS


1. Disconnect power supply before beginning installation of connector.
2. Strip wire(s) insulation back 1" and be sure the bare wire is straightened. If using stranded wire, twist the strands together in uniform fashion.

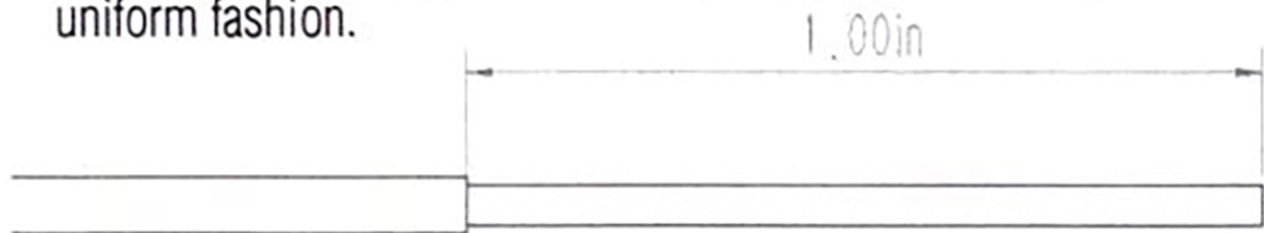

3. Align the indexing tabs on connector to ensure proper connector alignment during wire insertion.

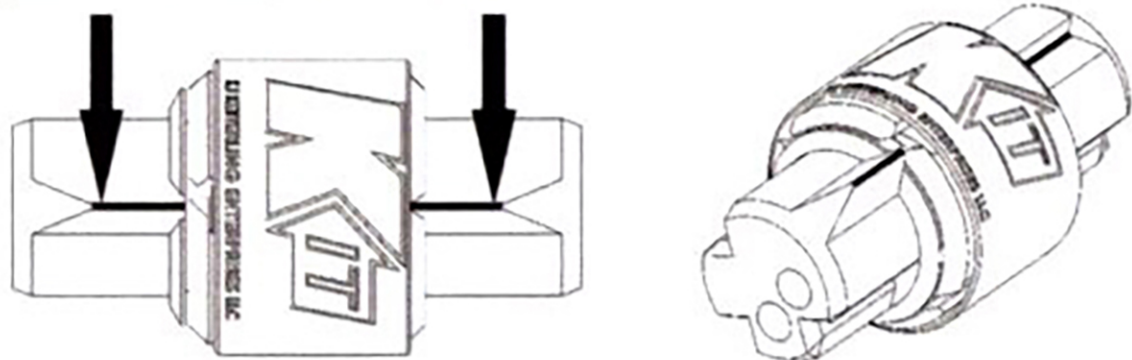

4. Insert stripped wires into opposing ends of connector. When properly inserted the wires insulation will be inserted into the housing approximately 1/4".

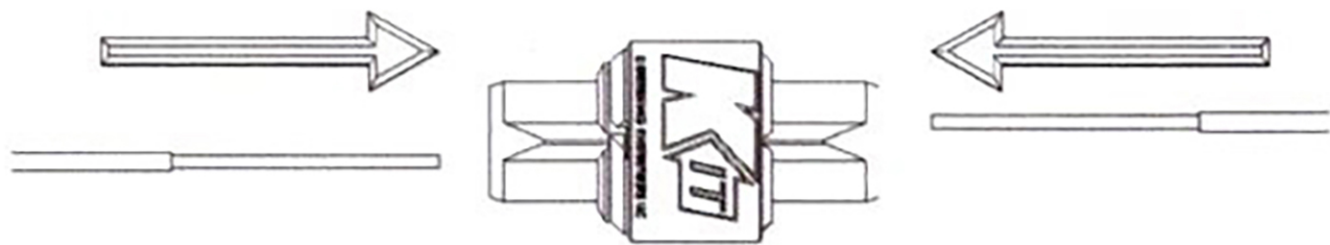

5. Twist right hand end clockwise 1/2 twist, left hand counter-clockwise 1/2 twist then right hand end 1/2 twist to complete connection.

