

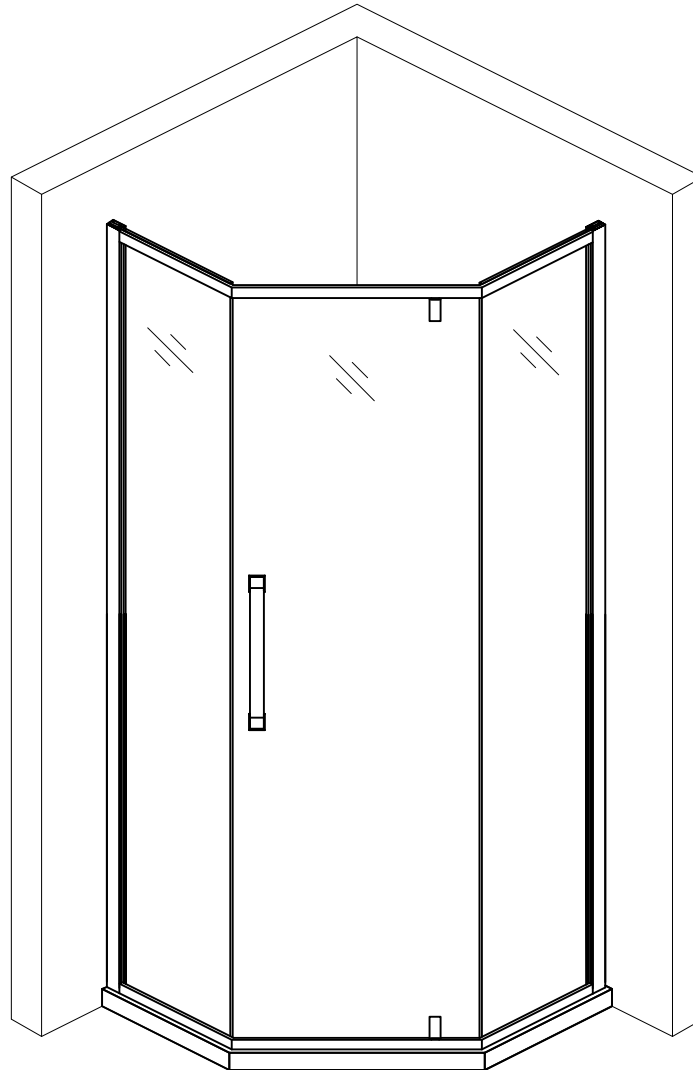
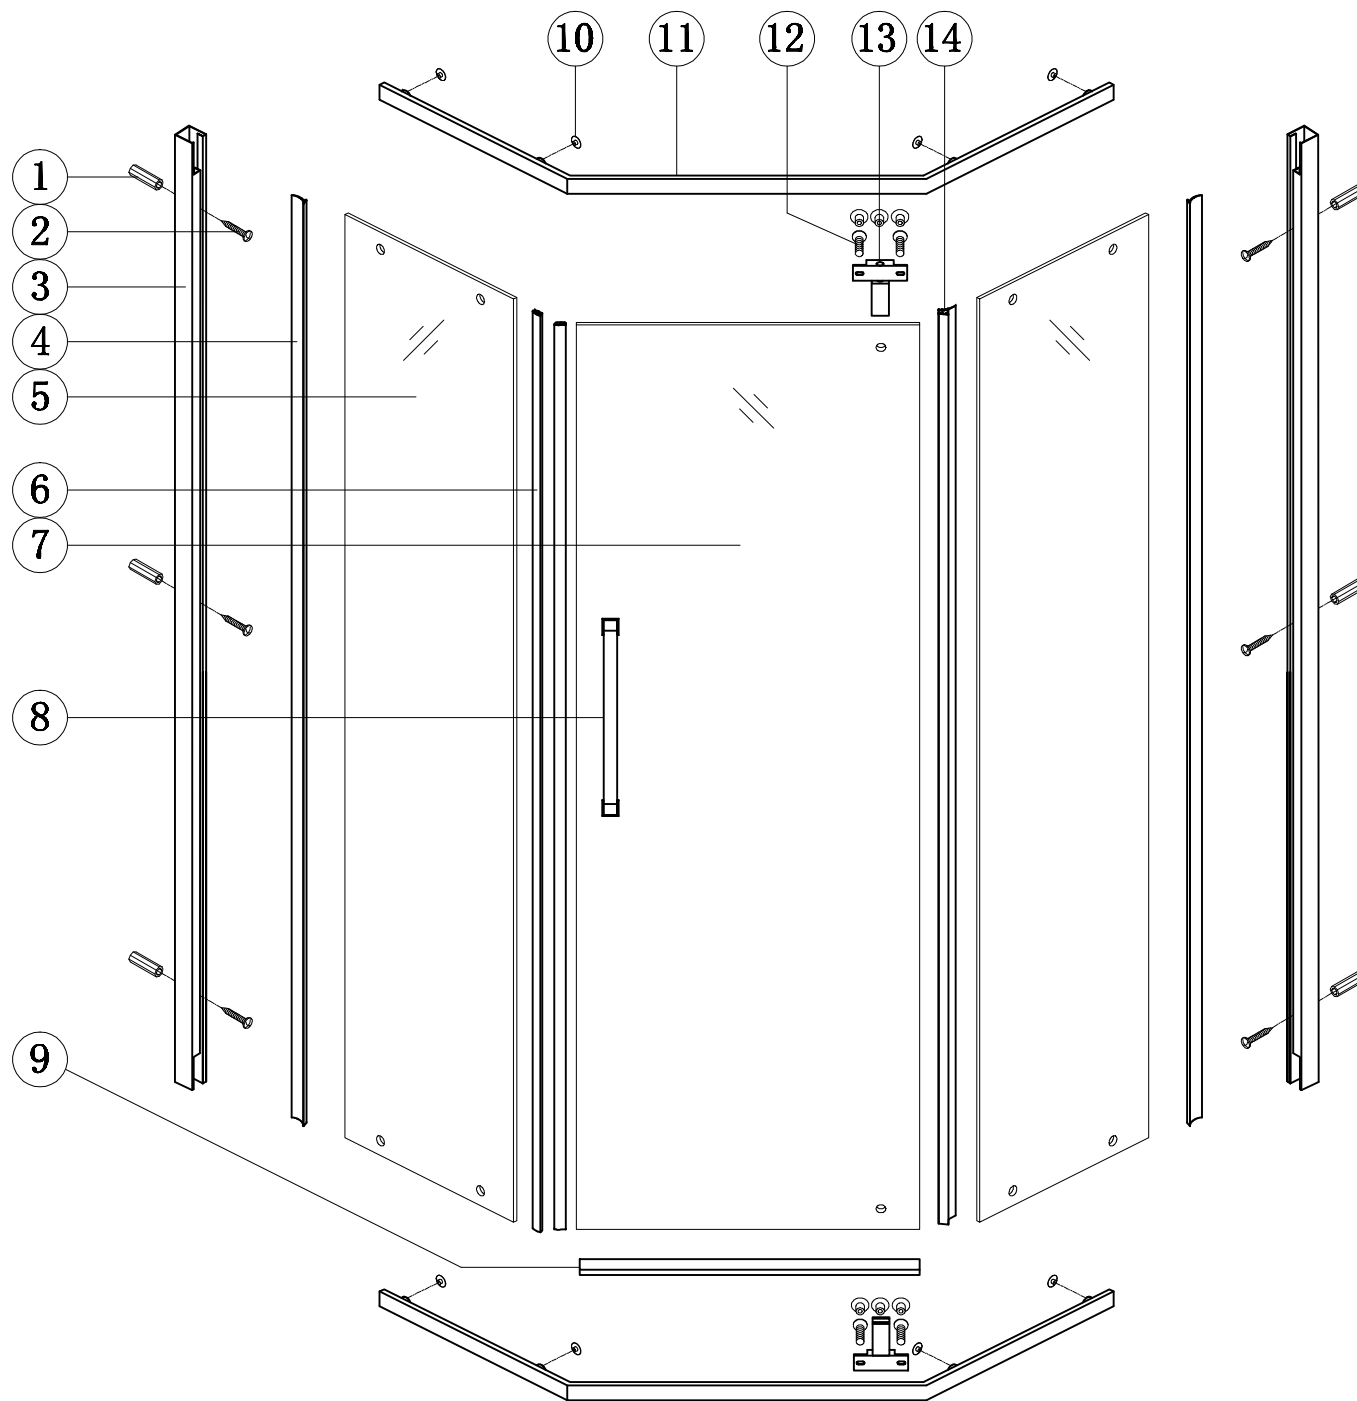



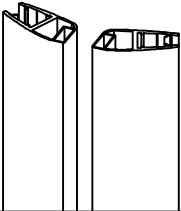
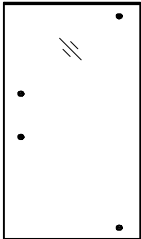
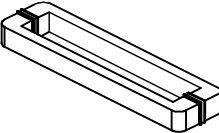


WM3B31-1


INSTALLATION MANUAL

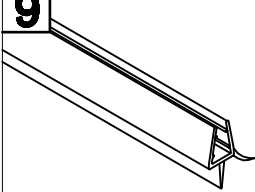



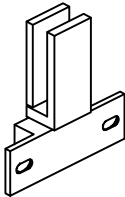


1  Ø6x30 6Pcs	2  ST4x30 6Pcs	3  2Pcs	4  1830mm 2Pcs	5  2Pcs
6  1772mm 1Pair	7  1Pc	8  1Pc	9  1Pc	10  14Pcs
11  2Pcs	12  M6x12 4Pcs	13  2Pcs	14  1760mm 1Pc	Tools:







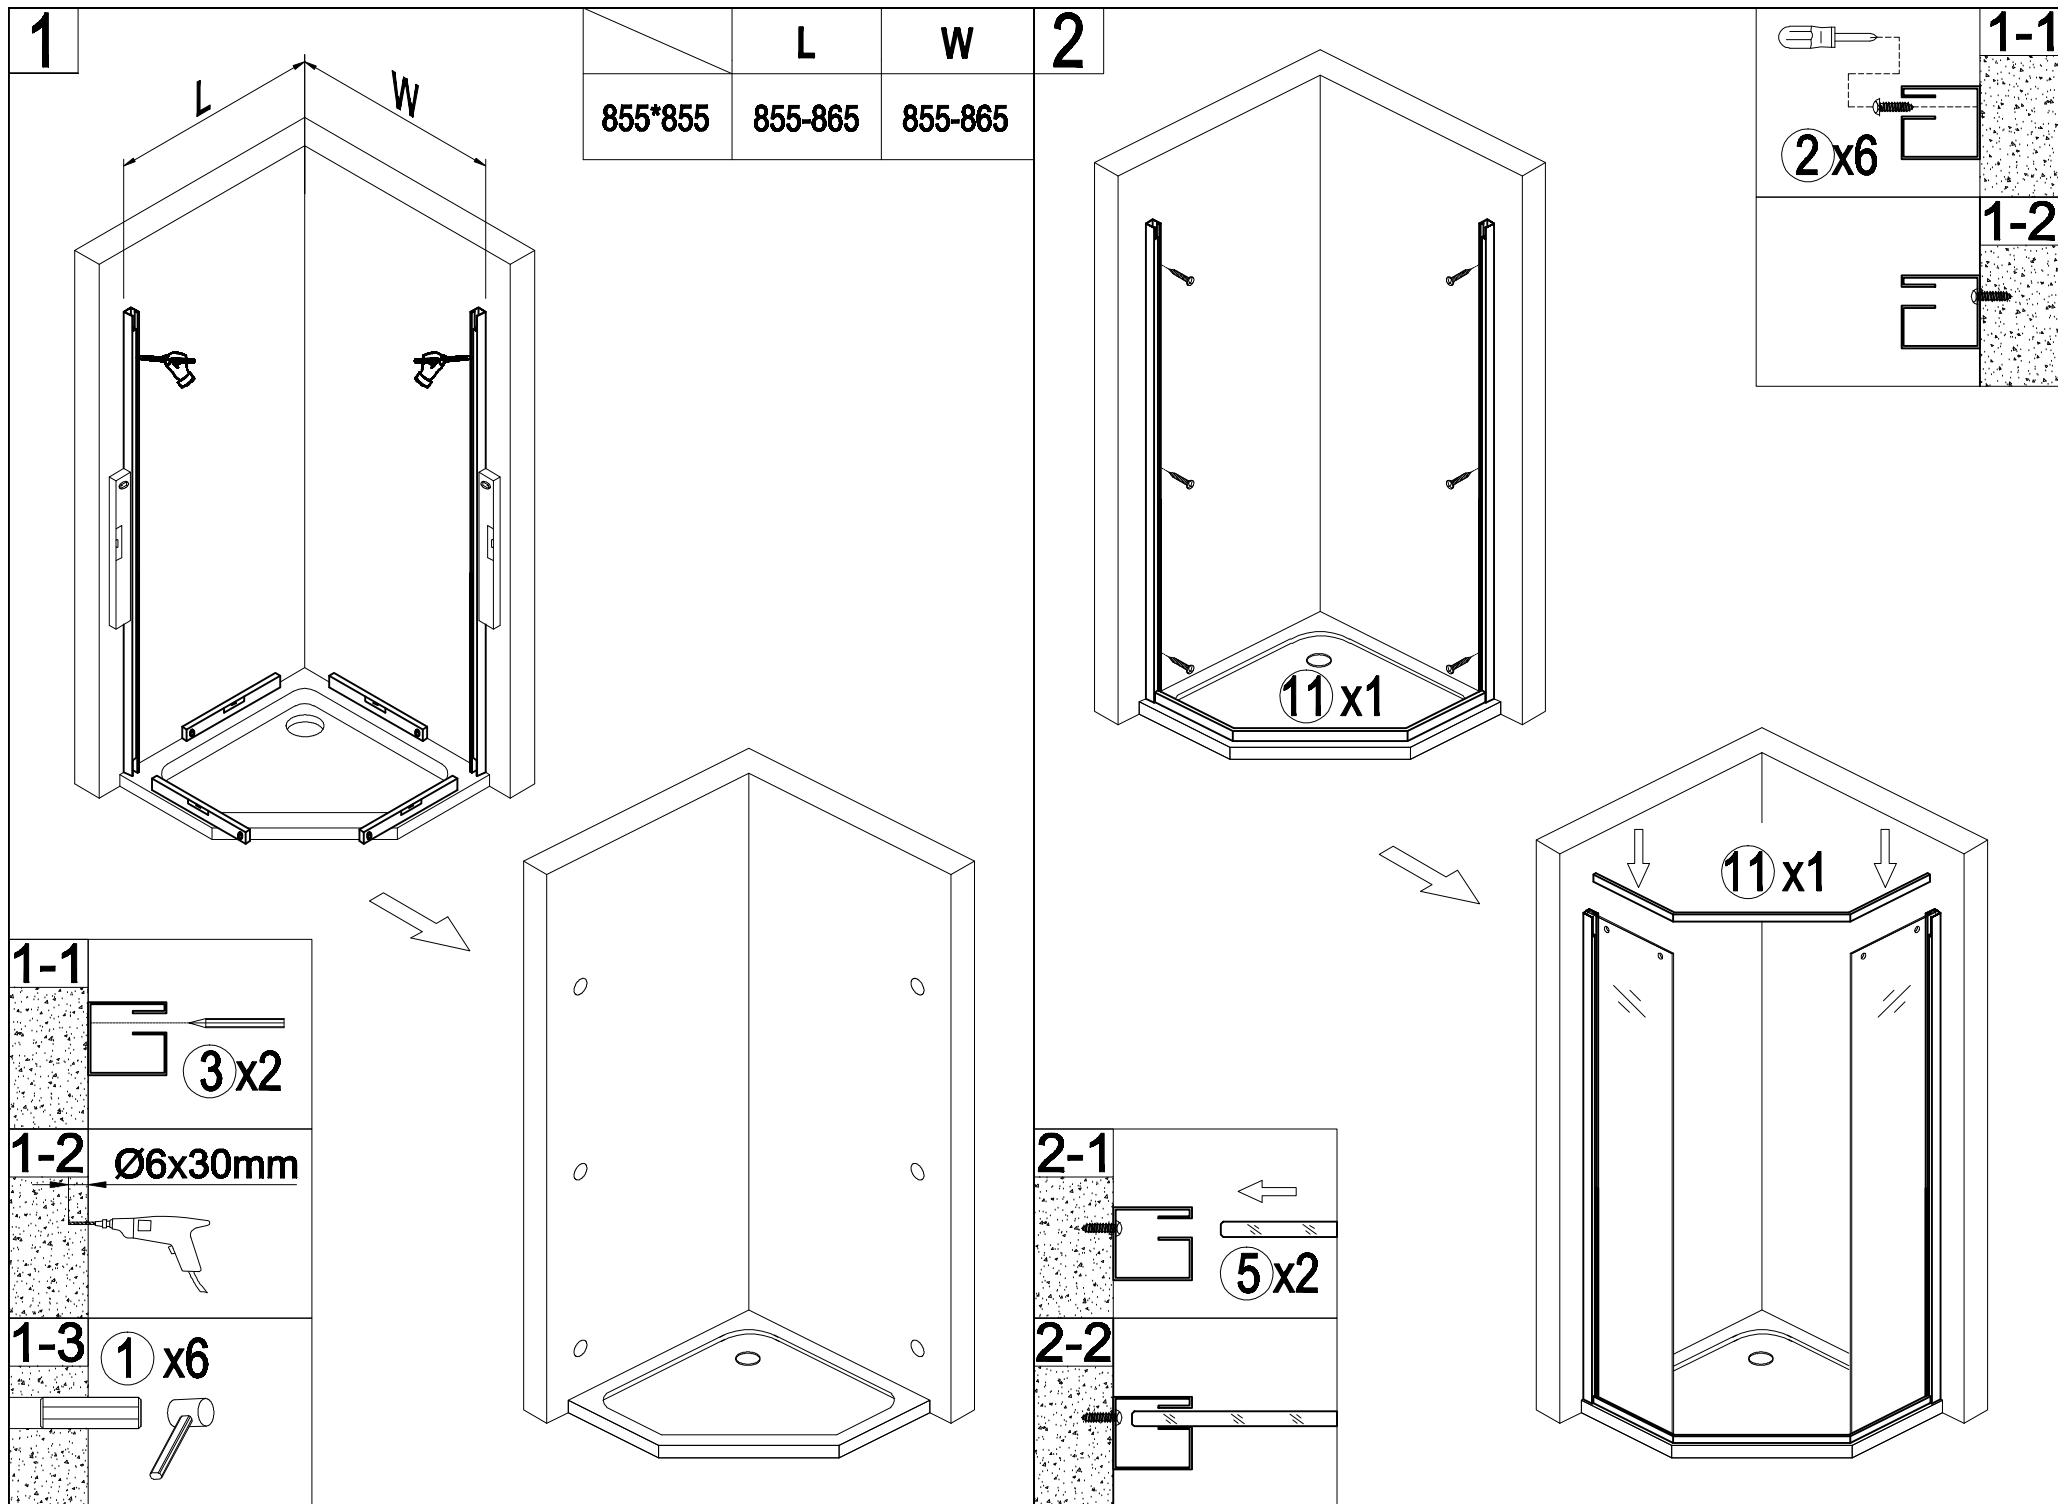



3

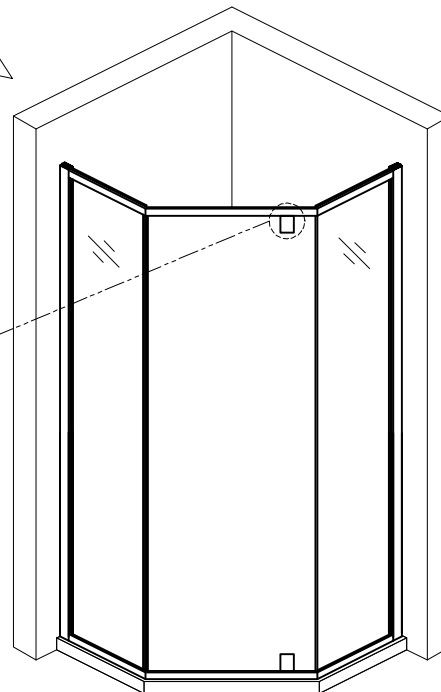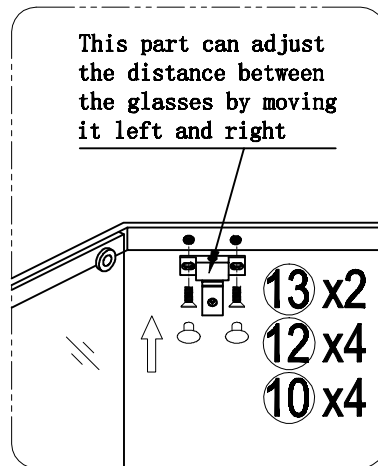

4

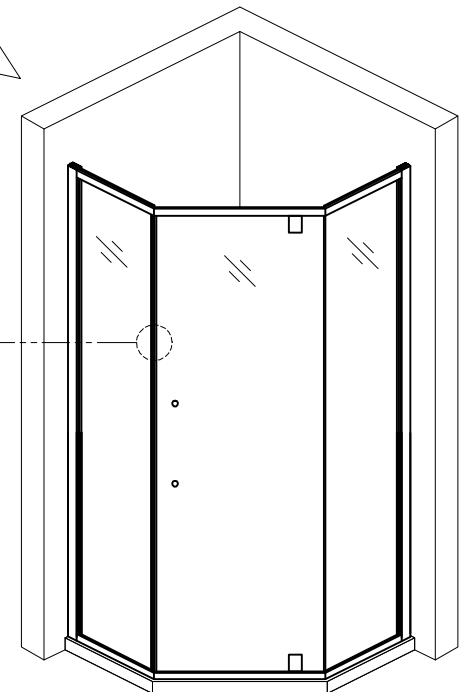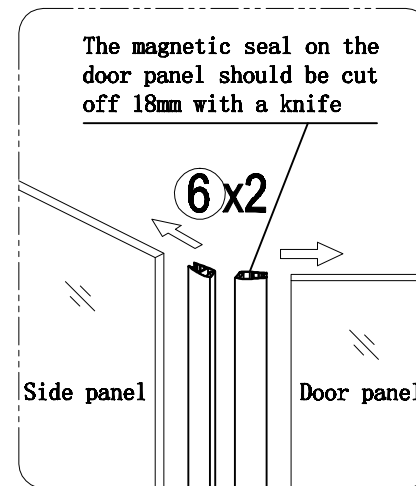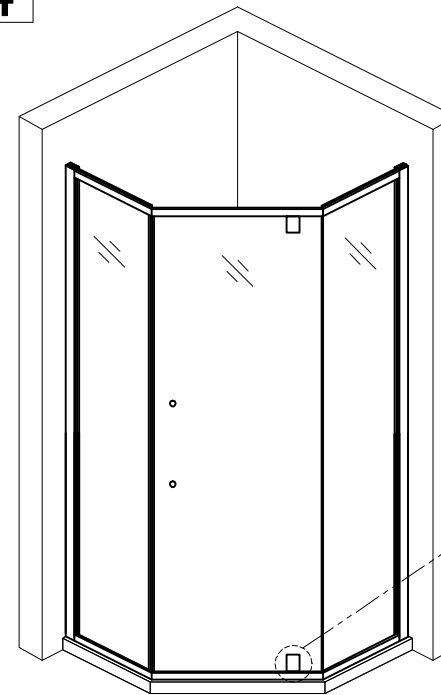

5

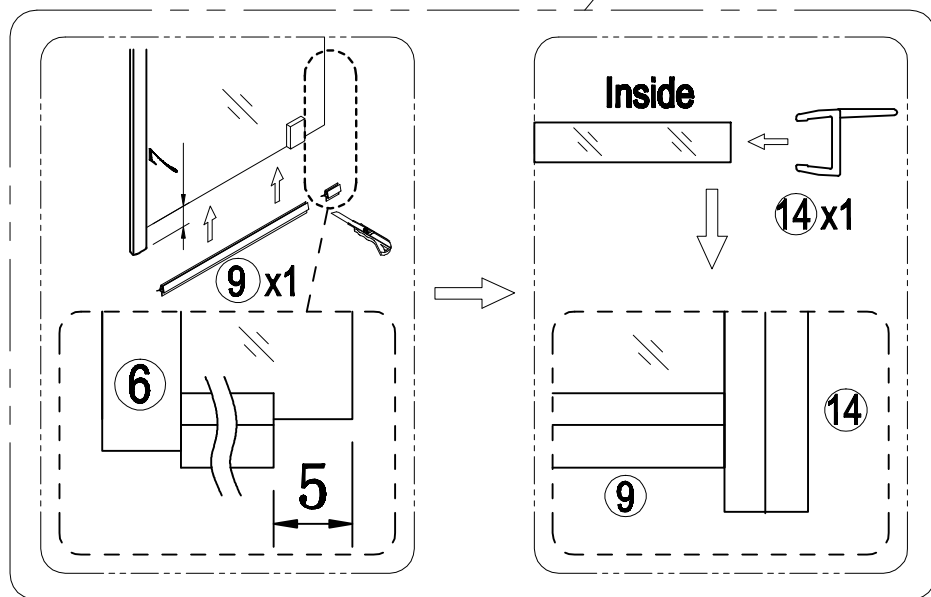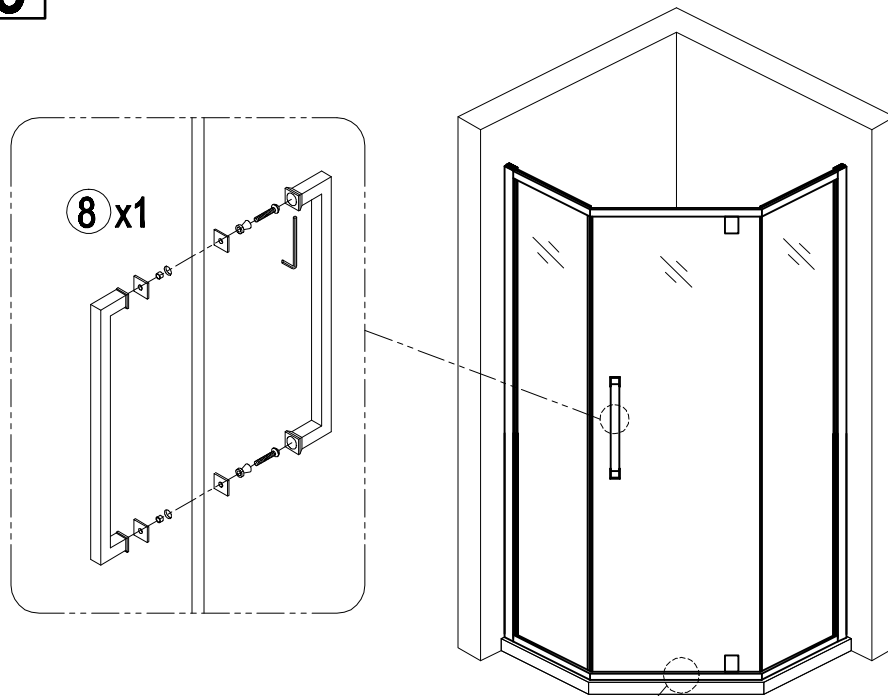

6

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

