


Measuring Guide For Adjustable Sliding Panels


Choose a Mount Type : Inside Mount or Outside Mount

Inside Mount


window treatments are installed inside the window casing.

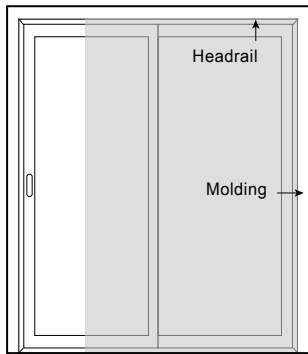


Inside Mount Panel

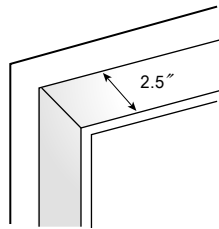

Depth

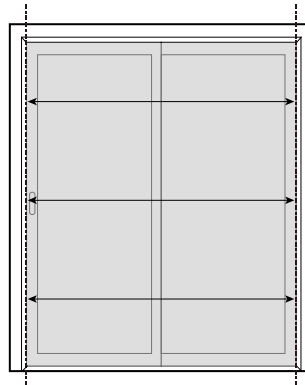

Width

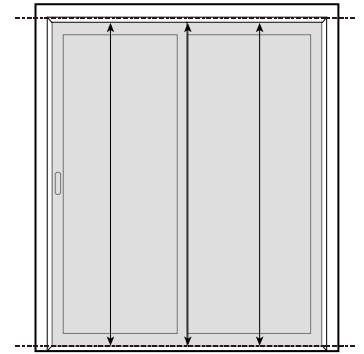


Height


1. Measure Depth : Minimum 2.5 inch depth needed
2. Measure Width : Measure the width of the window from the top of the opening to the sill in 3 places. Record the narrowest measurement.
3. Measure Height : Measure the exact height in three different places from top edge of opening to top of sill. Record the narrowest measurement.

Outside Mount


window treatments are installed outside the window casing.

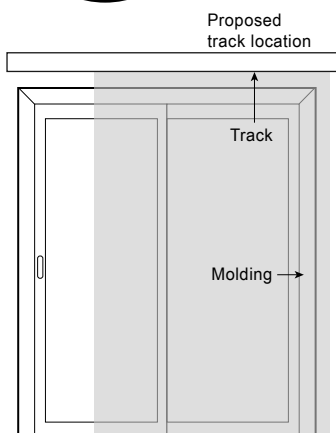


Outside Mount Panel

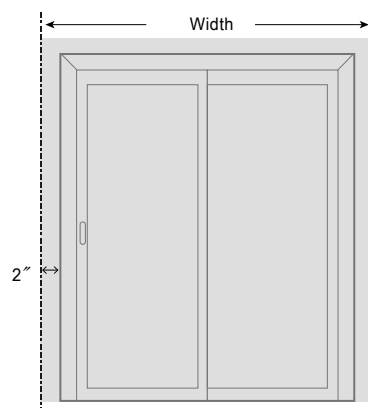

Width

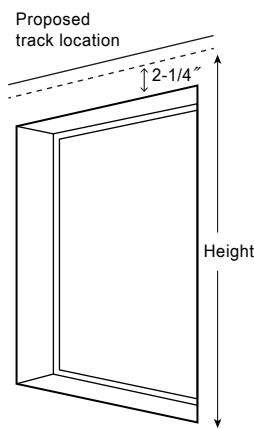

Headrail Location

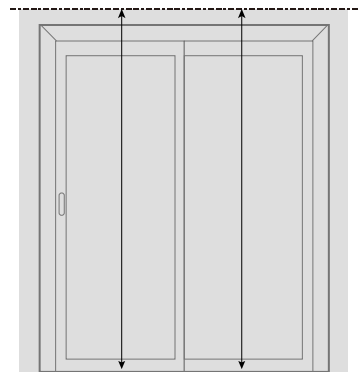

Height

1. Measure Width : Measure the exact width of window, including the frame/molding if there is one. Add 2" for each side (4" total overlap) to ensure light control and privacy.
2. Determine Track Location : Determine track mounting position and mark the spot.
3. Measure Height : Measure the exact height of window from top edge of molding to bottom edge, or to top of sill if there is one. Add at least 2-1/4" to allow for adequate mounting area above the window.