


SUV

Made in Thailand exclusively for The Home Depot by Houseworks, Ltd.
2388 Pleasantdale Road, Atlanta, GA 30340 • 71145 • Thailand 0221

Contents:

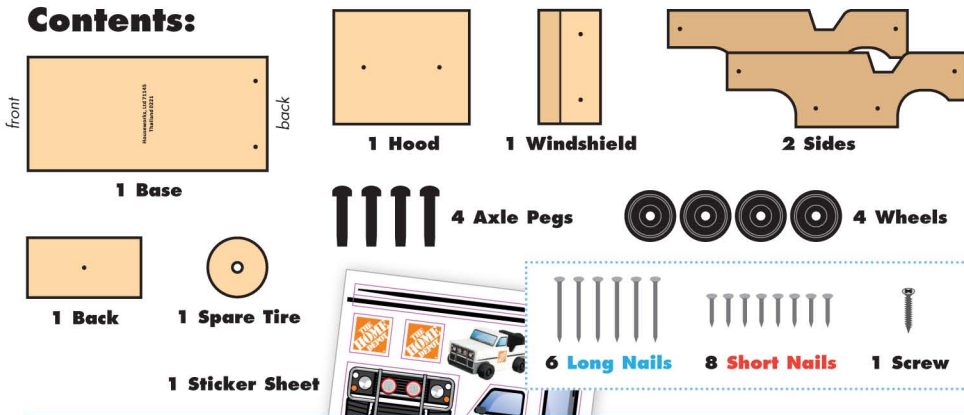


ALSO NEEDED:

- Fine Sandpaper
- Wood Glue
- Hammer
- #2 Phillips Screwdriver

Assembly:

Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

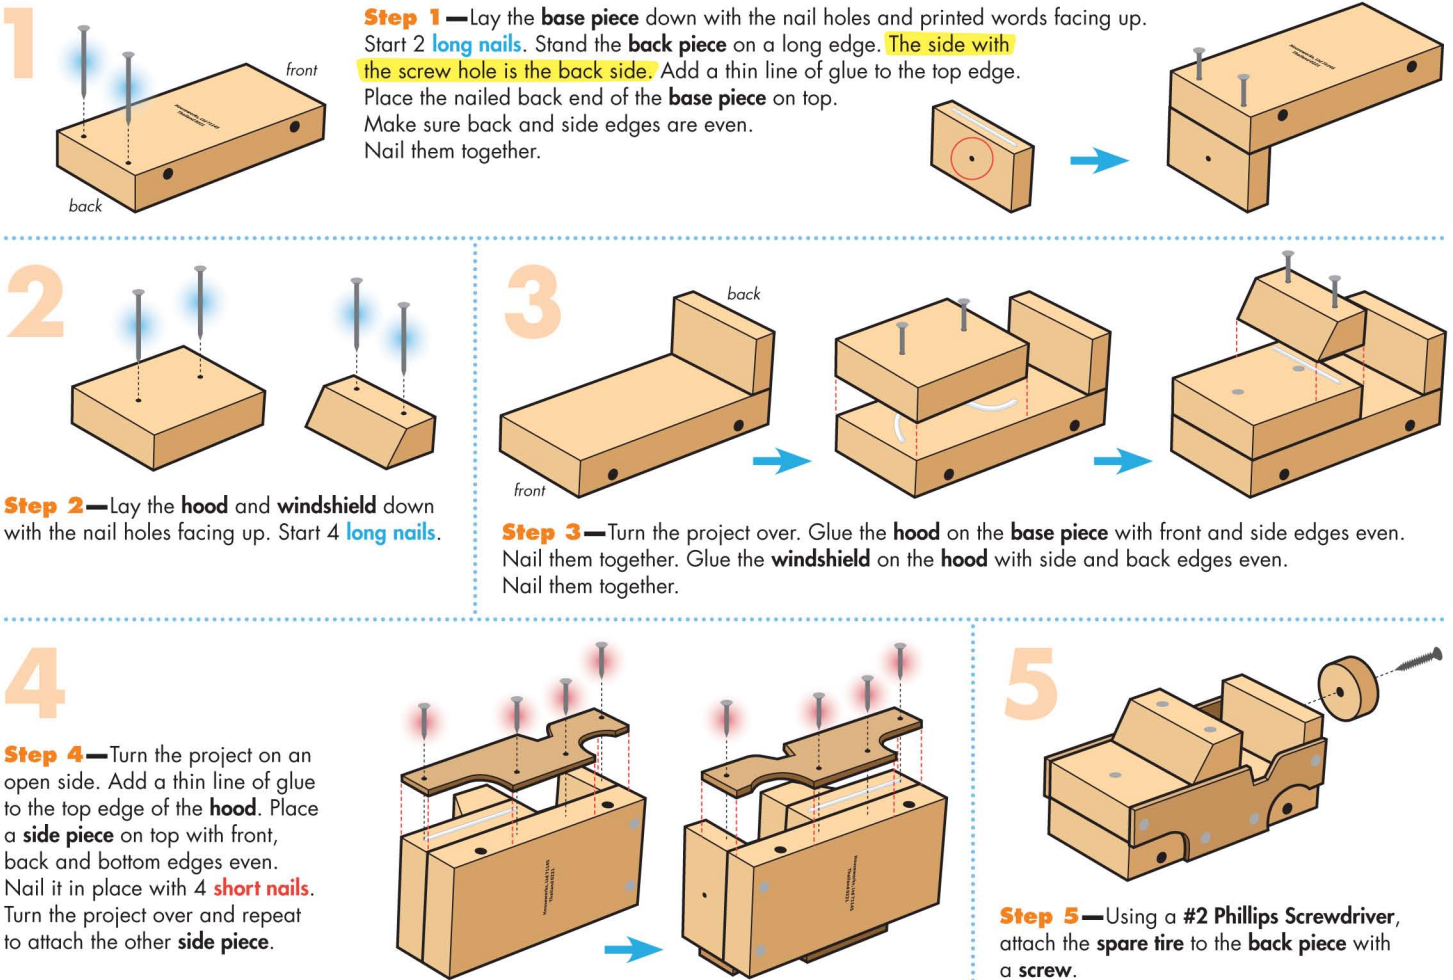

Attention: If you are painting the project, **DO NOT** paint inside or around the peg holes. Painting inside or around the peg holes make it difficult to insert axle pegs. Allow the paint to dry completely.

Step 6—Slide an axle peg through each wheel. Put a dot of glue on the end of each axle peg and insert them into the peg holes. Tap with a hammer if necessary. Add the stickers as shown.

(Ver el dorso para instrucciones en español.)

TSCA TITLE VI Compliant

