



INSTALLATION INSTRUCTIONS FOR 1" BATHROOM TOWEL HANGER ROD


CEILING MOUNTED:

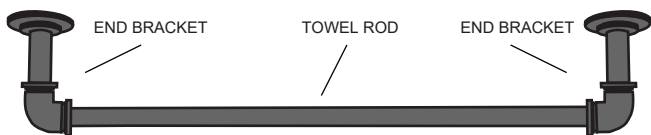

WALL MOUNTED:




- 1 Place brackets against wall/ceiling at desired locations. Mark screw holes with a pencil. Be sure marks are level across opening.

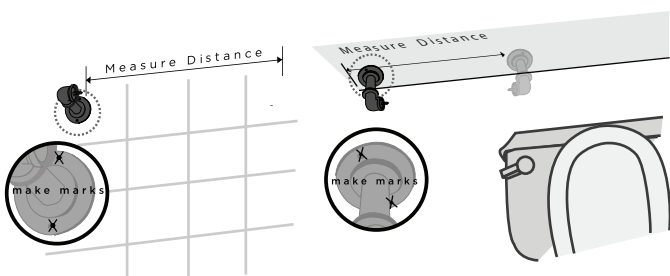


- 2 If screws are going directly into wood trim or wall/ceiling studs, drill a 1/8" pilot hole at pencil marks. If mounting on tile, mark the holes over a strip of masking tape, and use a diamond tip drill bit with toggle masonry anchors. If screwing into drywall, follow drywall anchor instructions at the bottom of the page.



- 3 Screw-on towel rod to the end brackets by rotating the rod until it locks in place.

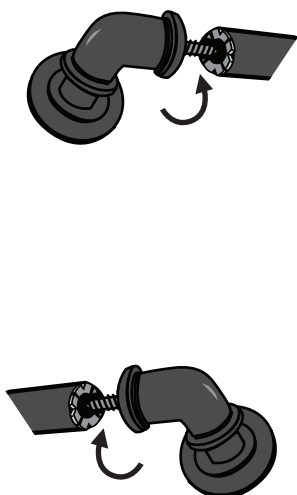

- 4 Place completed towel rod against wall or ceiling over your drilled holes. Insert screws through holes in end brackets, and tighten screws until you feel increased resistance.

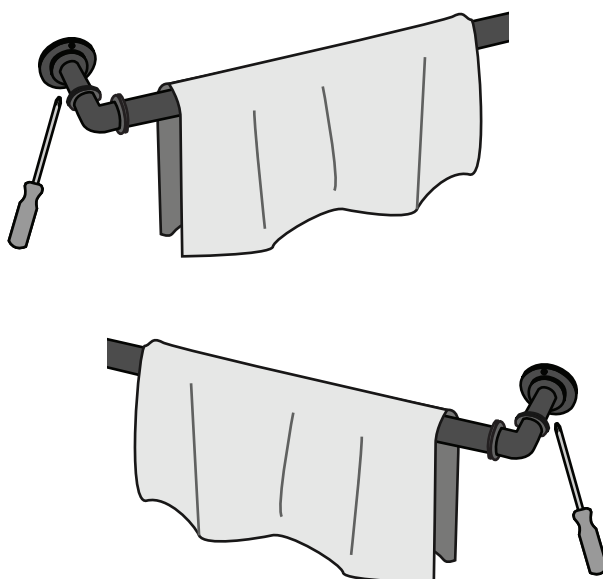

DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.