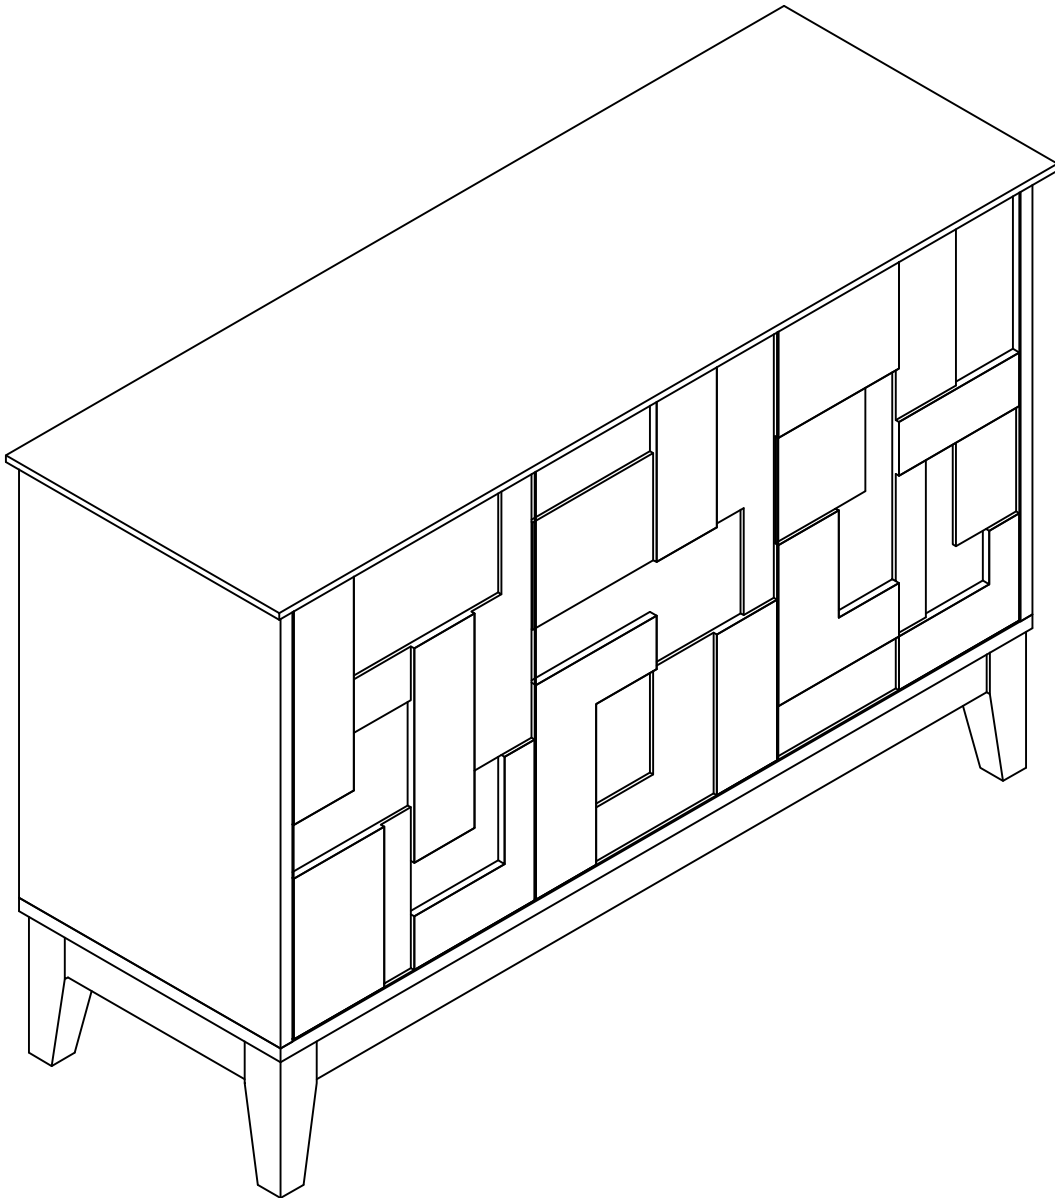


HULALA

H O M E



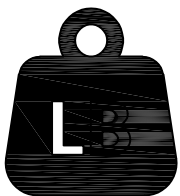
ITEM NO.SBYL1000

NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

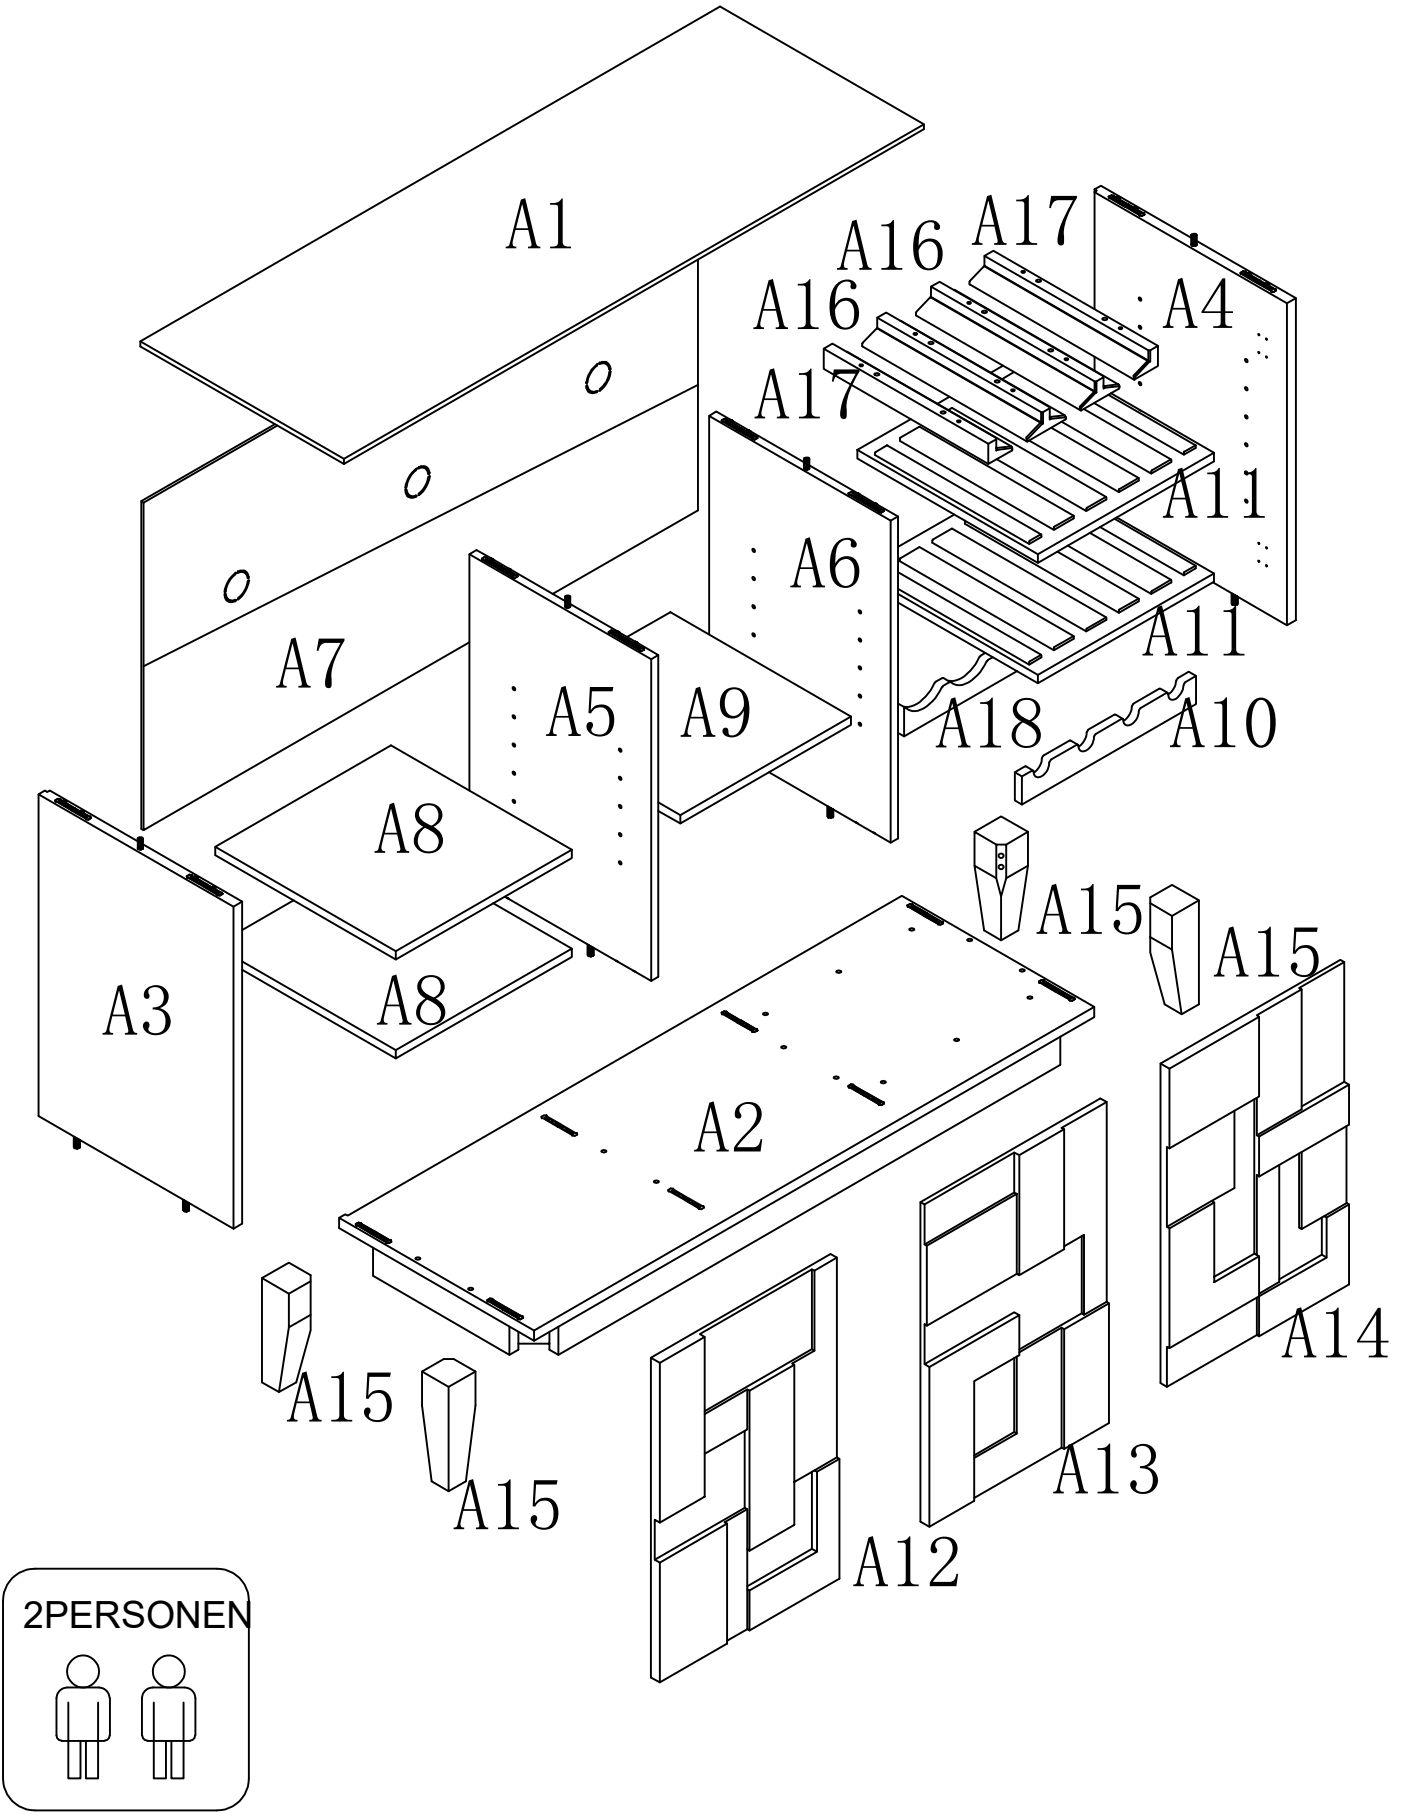
- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner.
Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



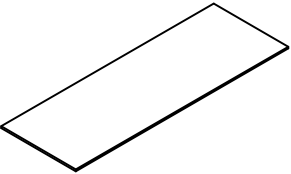
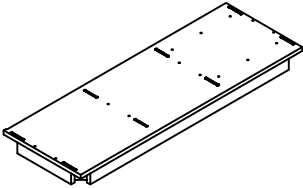
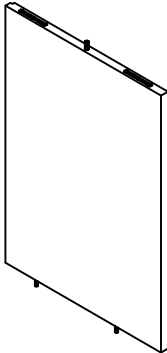
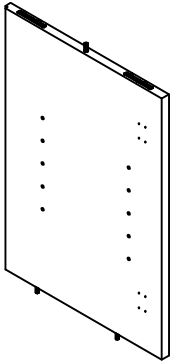
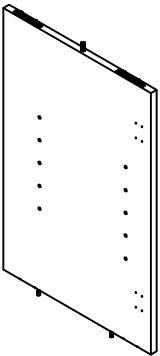
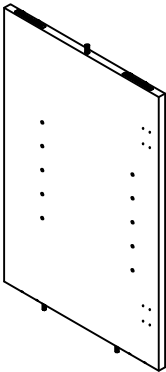
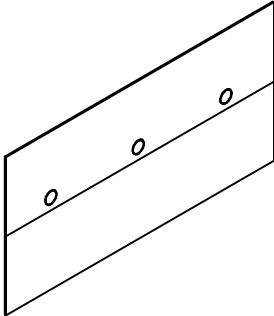
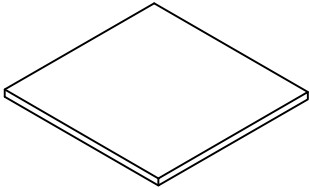
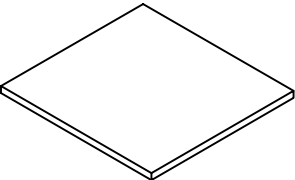
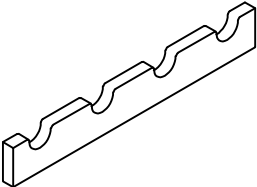
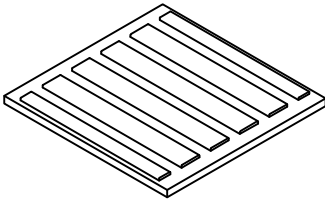
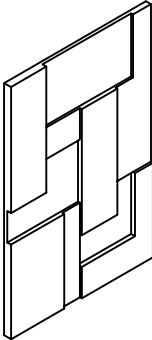
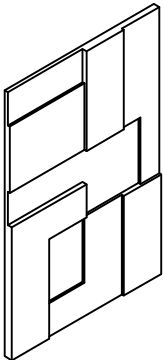
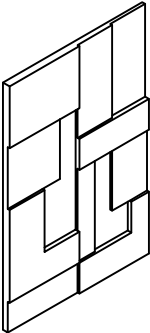

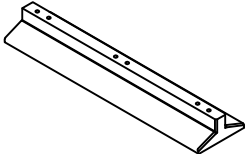
Weight Limitation

150 LBS

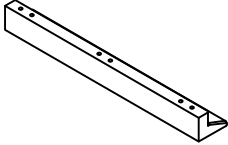
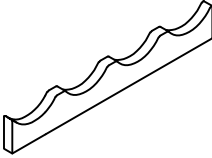

EXPLOSIVE VIEW






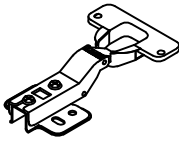
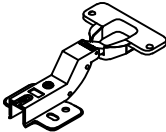












PARTS LIST

<div>A1</div> <div>x1</div> <div></div>	<div>A2</div> <div>x1</div> <div></div>	<div>A3</div> <div>x1</div> <div></div>	<div>A4</div> <div>x1</div> <div></div>
<div>A5</div> <div>x1</div> <div></div>	<div>A6</div> <div>x1</div> <div></div>	<div>A7</div> <div>x1</div> <div></div>	<div>A8</div> <div>x2</div> <div></div>
<div>A9</div> <div>x1</div> <div></div>	<div>A10</div> <div>x1</div> <div></div>	<div>A11</div> <div>x2</div> <div></div>	<div>A12</div> <div>x1</div> <div></div>
<div>A13</div> <div>x1</div> <div></div>	<div>A14</div> <div>x1</div> <div></div>	<div>A15</div> <div>x4</div> <div></div>	<div>A16</div> <div>x2</div> <div></div>



PARTS LIST

A17	x2	A18	x1	A19	x1
					







HARDWARE LIST

B1	x42	B2	x20	B3	x3	B4	x2	B5	x4	B6	x8
											
										Ø4*38mm	
B7	x8	B8	x8	B9	x4	B10	x12	B11	x8	B12	x8
											
Ø3*15mm		Ø6*50mm				Ø8*30mm		Ø3*15mm		Ø8*30mm	
B13	x4	B14	x4	B15	x2	B16	x40	B20	x4		
											
						Ø3*15mm					


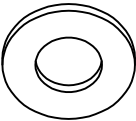

TOOL LIST

B17	x1	B18	x1
			

HARDWARE SPARE LIST

B1	x4	B2	x2	B6	x1	B7	x1	B8	x1	B10	x1
											
				Ø4*38mm		Ø3*15mm		Ø6*50mm		Ø8*30mm	

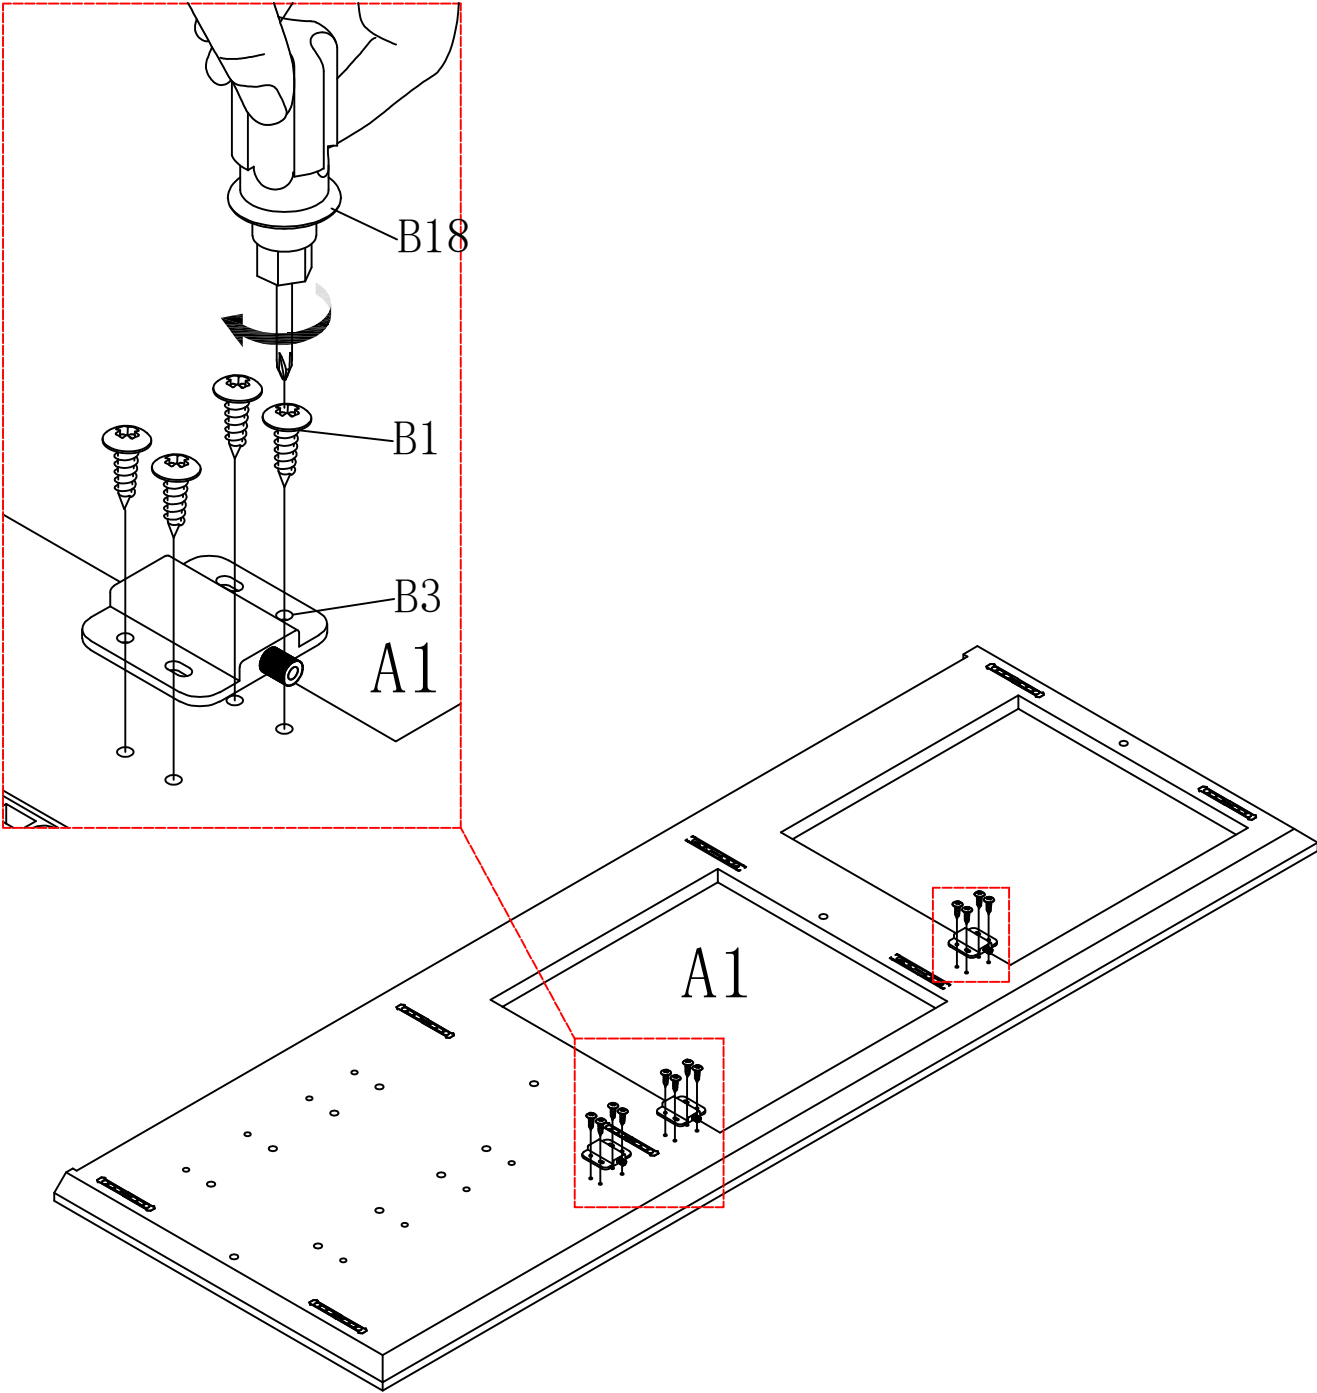
HARDWARE SPARE LIST




B11	x1	B12	x1	B16	x4
					
Ø3*15mm		Ø8*30mm		Ø3*15mm	

ASSEMBLY INSTRUCTIONS

STEP-1

1. Use screw B1 to attach magnetic catch B3 to the corresponding hole of top panel(A), tighten screw with screwdriver B18.

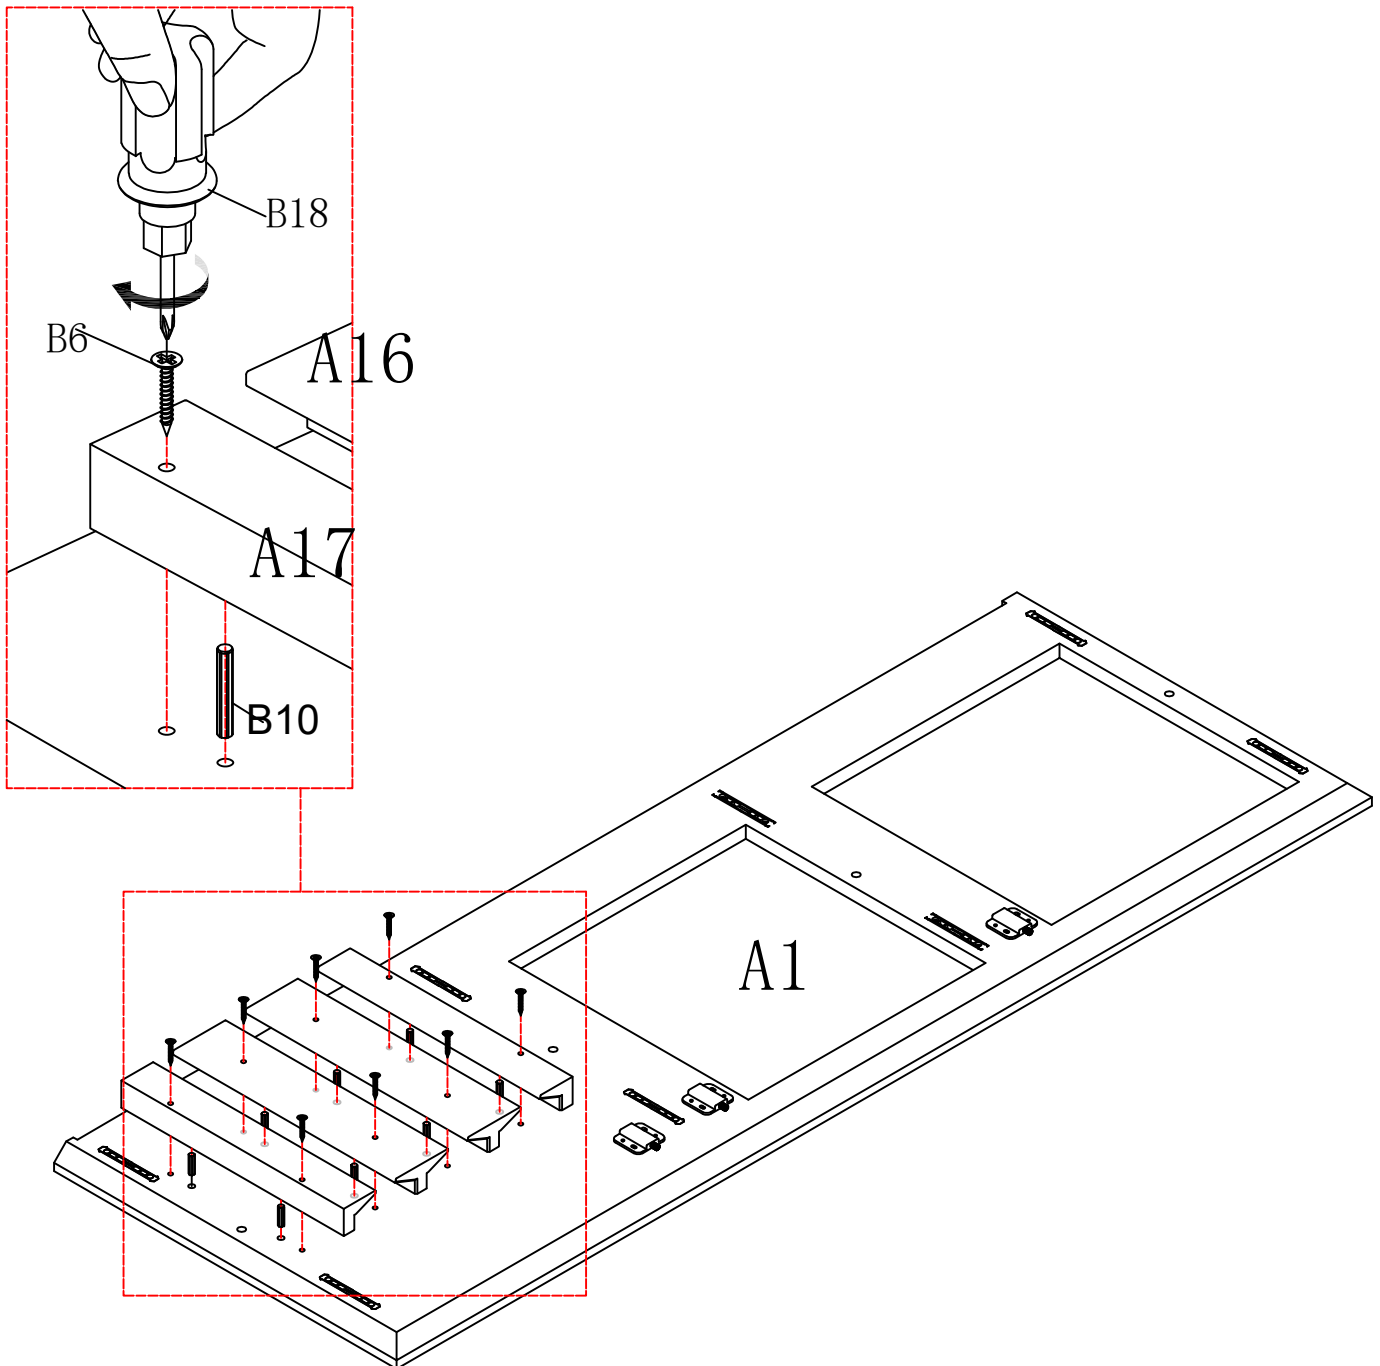





B1	x12	B3	x3	B18	x1
					

ASSEMBLY INSTRUCTIONS

STEP-2

1.connect part(A16/A17) to top panel (A1) with screw B6 and wood dowel B10, tight screw with screwdriver B18

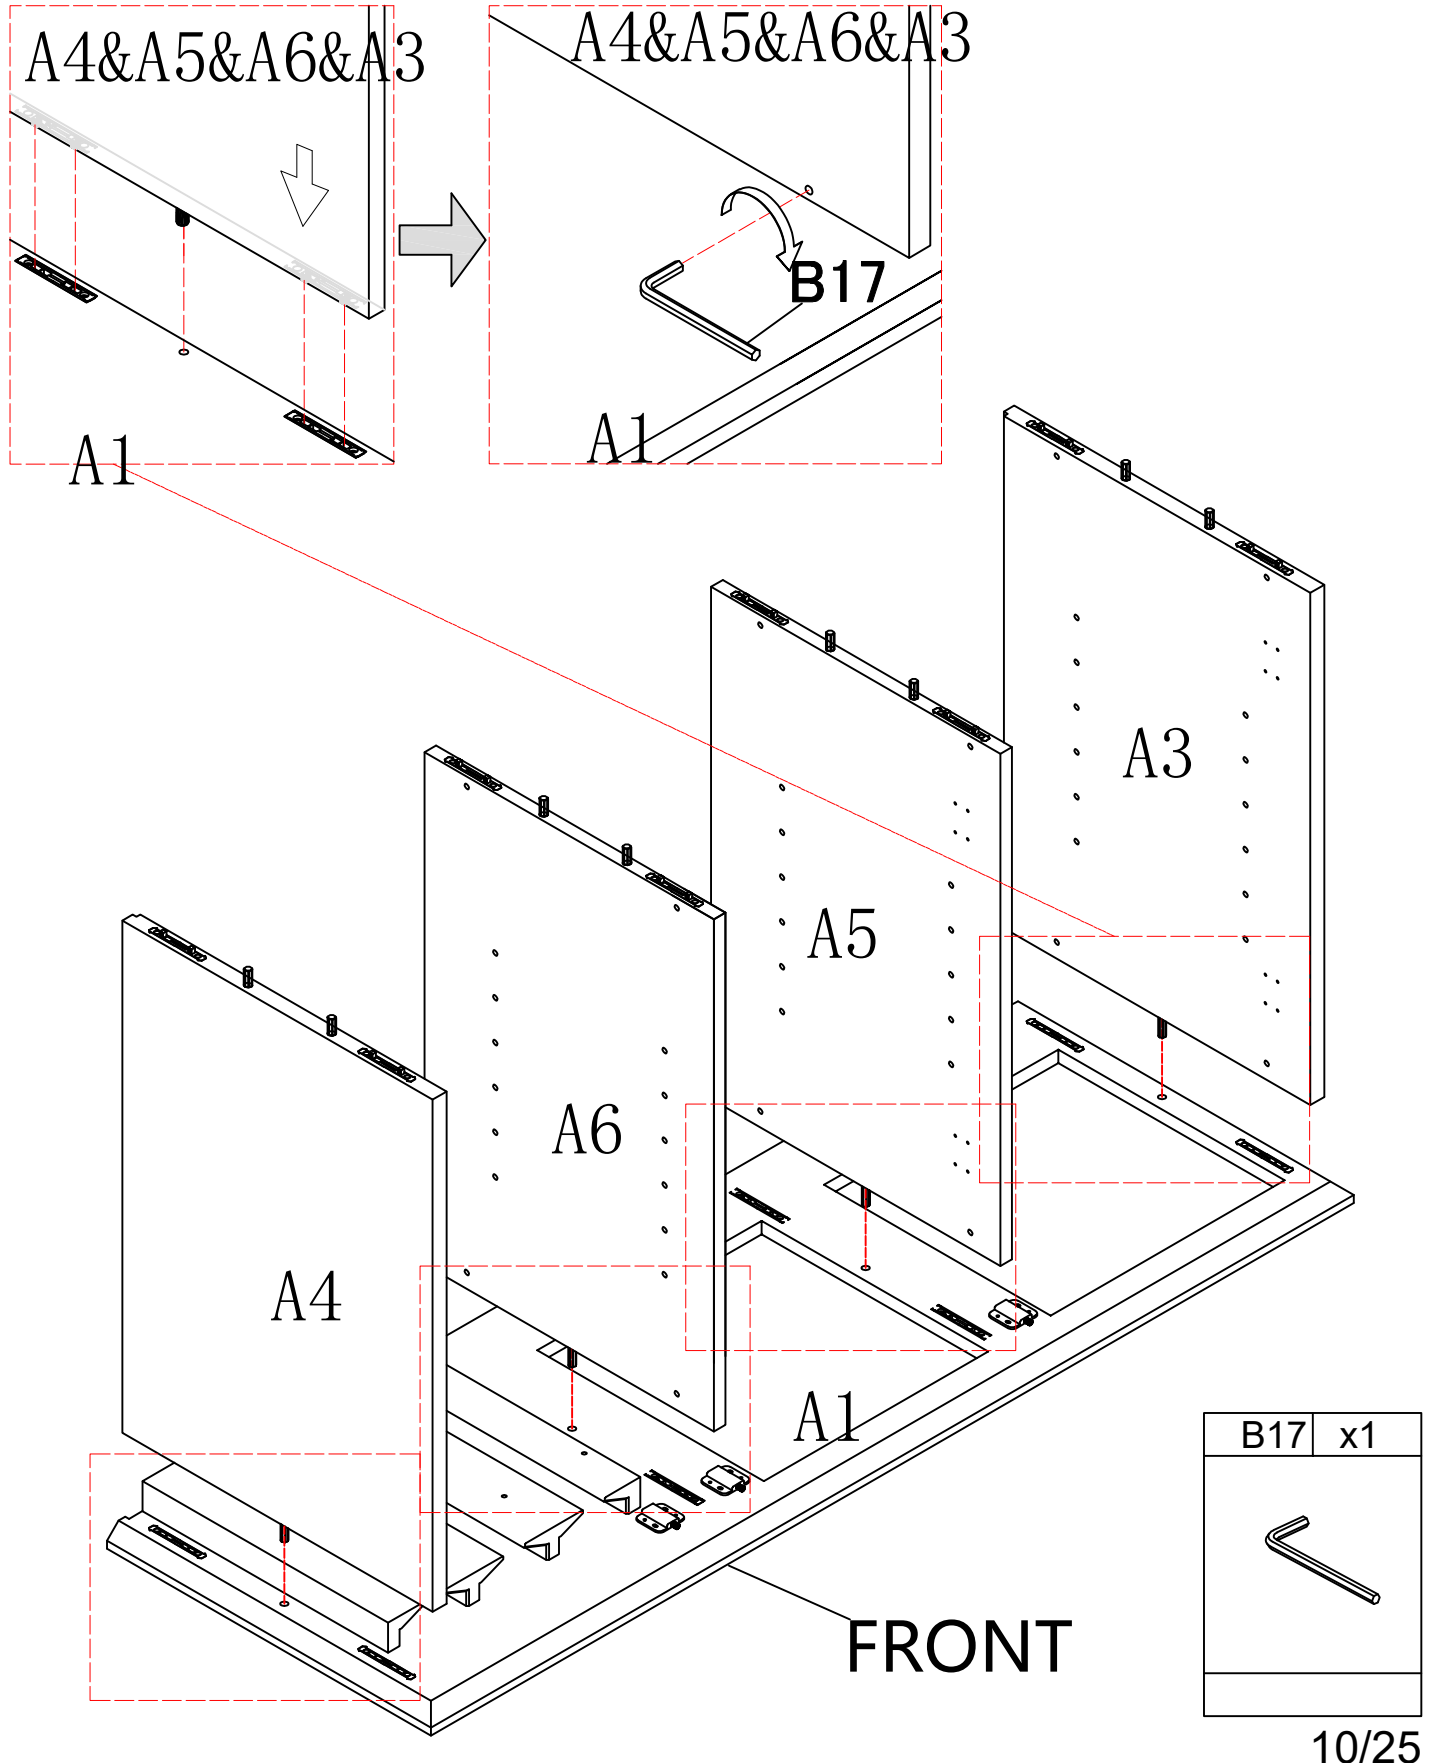


B6	x8	B10	x8	B18	x1
					
Ø4*38mm		Ø8*30mm			

ASSEMBLY INSTRUCTIONS

STEP-3

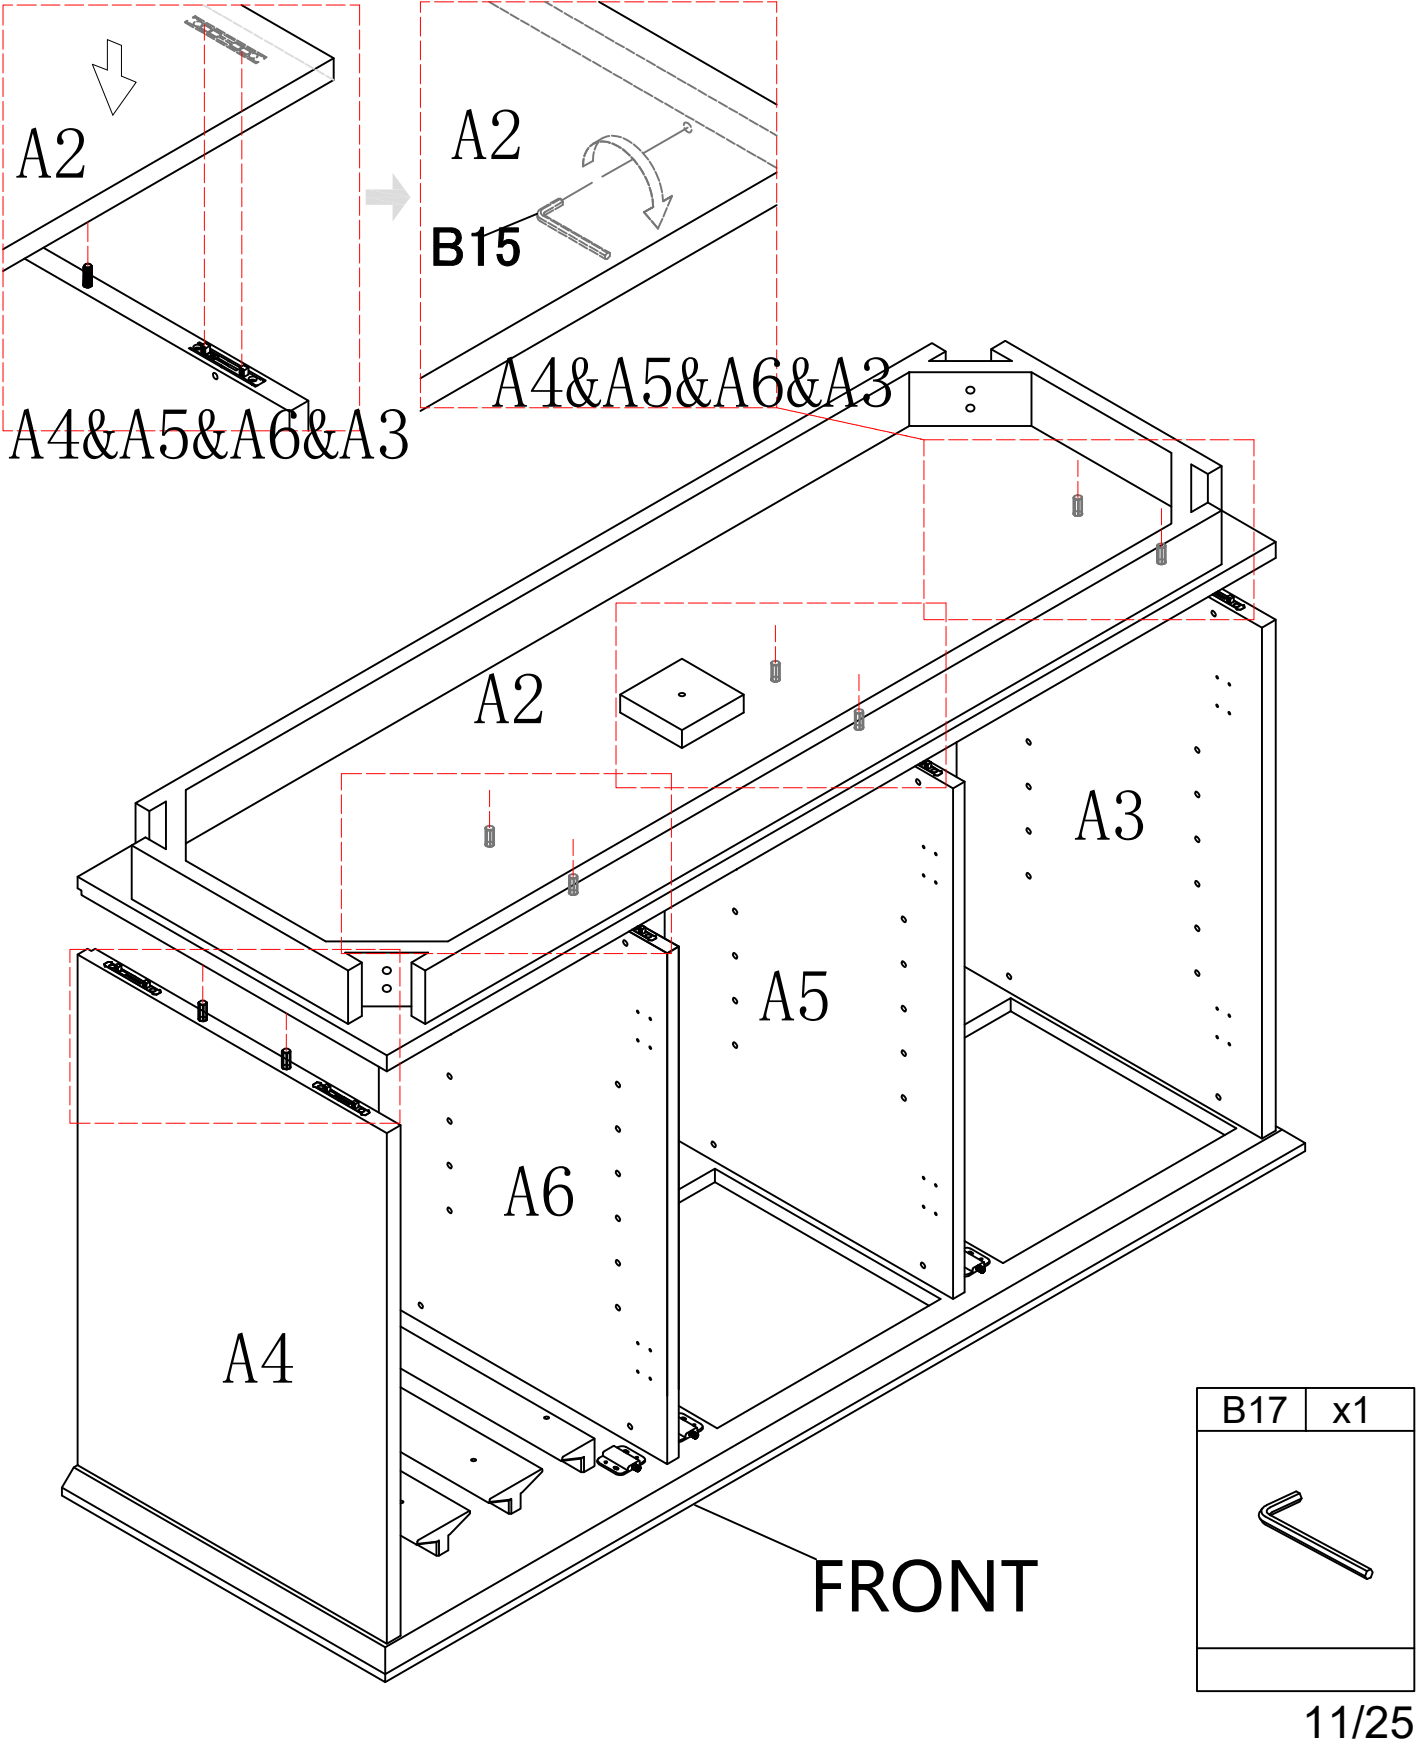
1. insert part(A3/A4/A5/A6) to top panel (A1), make sure all holes aligned, tight it with allen wrench (B17).



ASSEMBLY INSTRUCTIONS

STEP-4

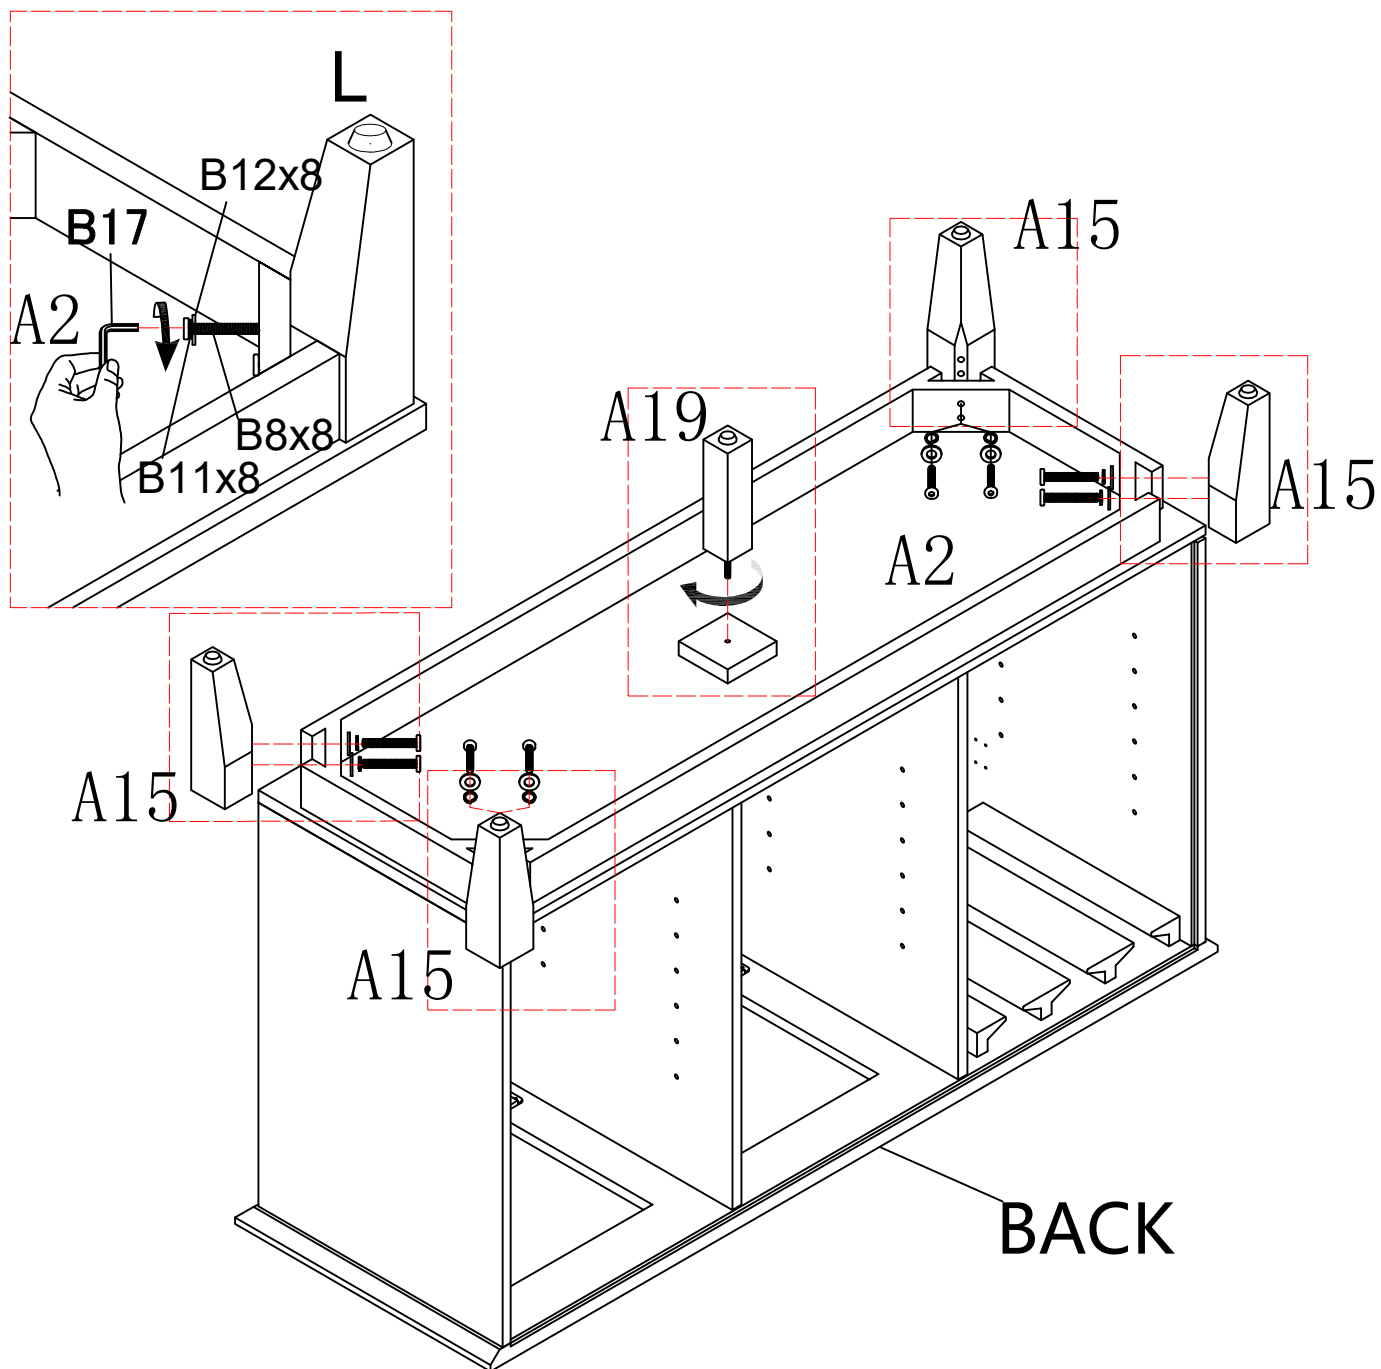
1.Insert bottom panel (A2) to pre-assembled unit at step 3, make sure all holes aligned , tight it with allen wrench B17.







ASSEMBLY INSTRUCTIONS

STEP-5

1. attach leg (A15) to bottom panel (A12) with bolt B8, spring washer B11 and flat washer B12, tight bolt with allen wrench B17.
2. attach leg (A19) to bottom panel with hand.

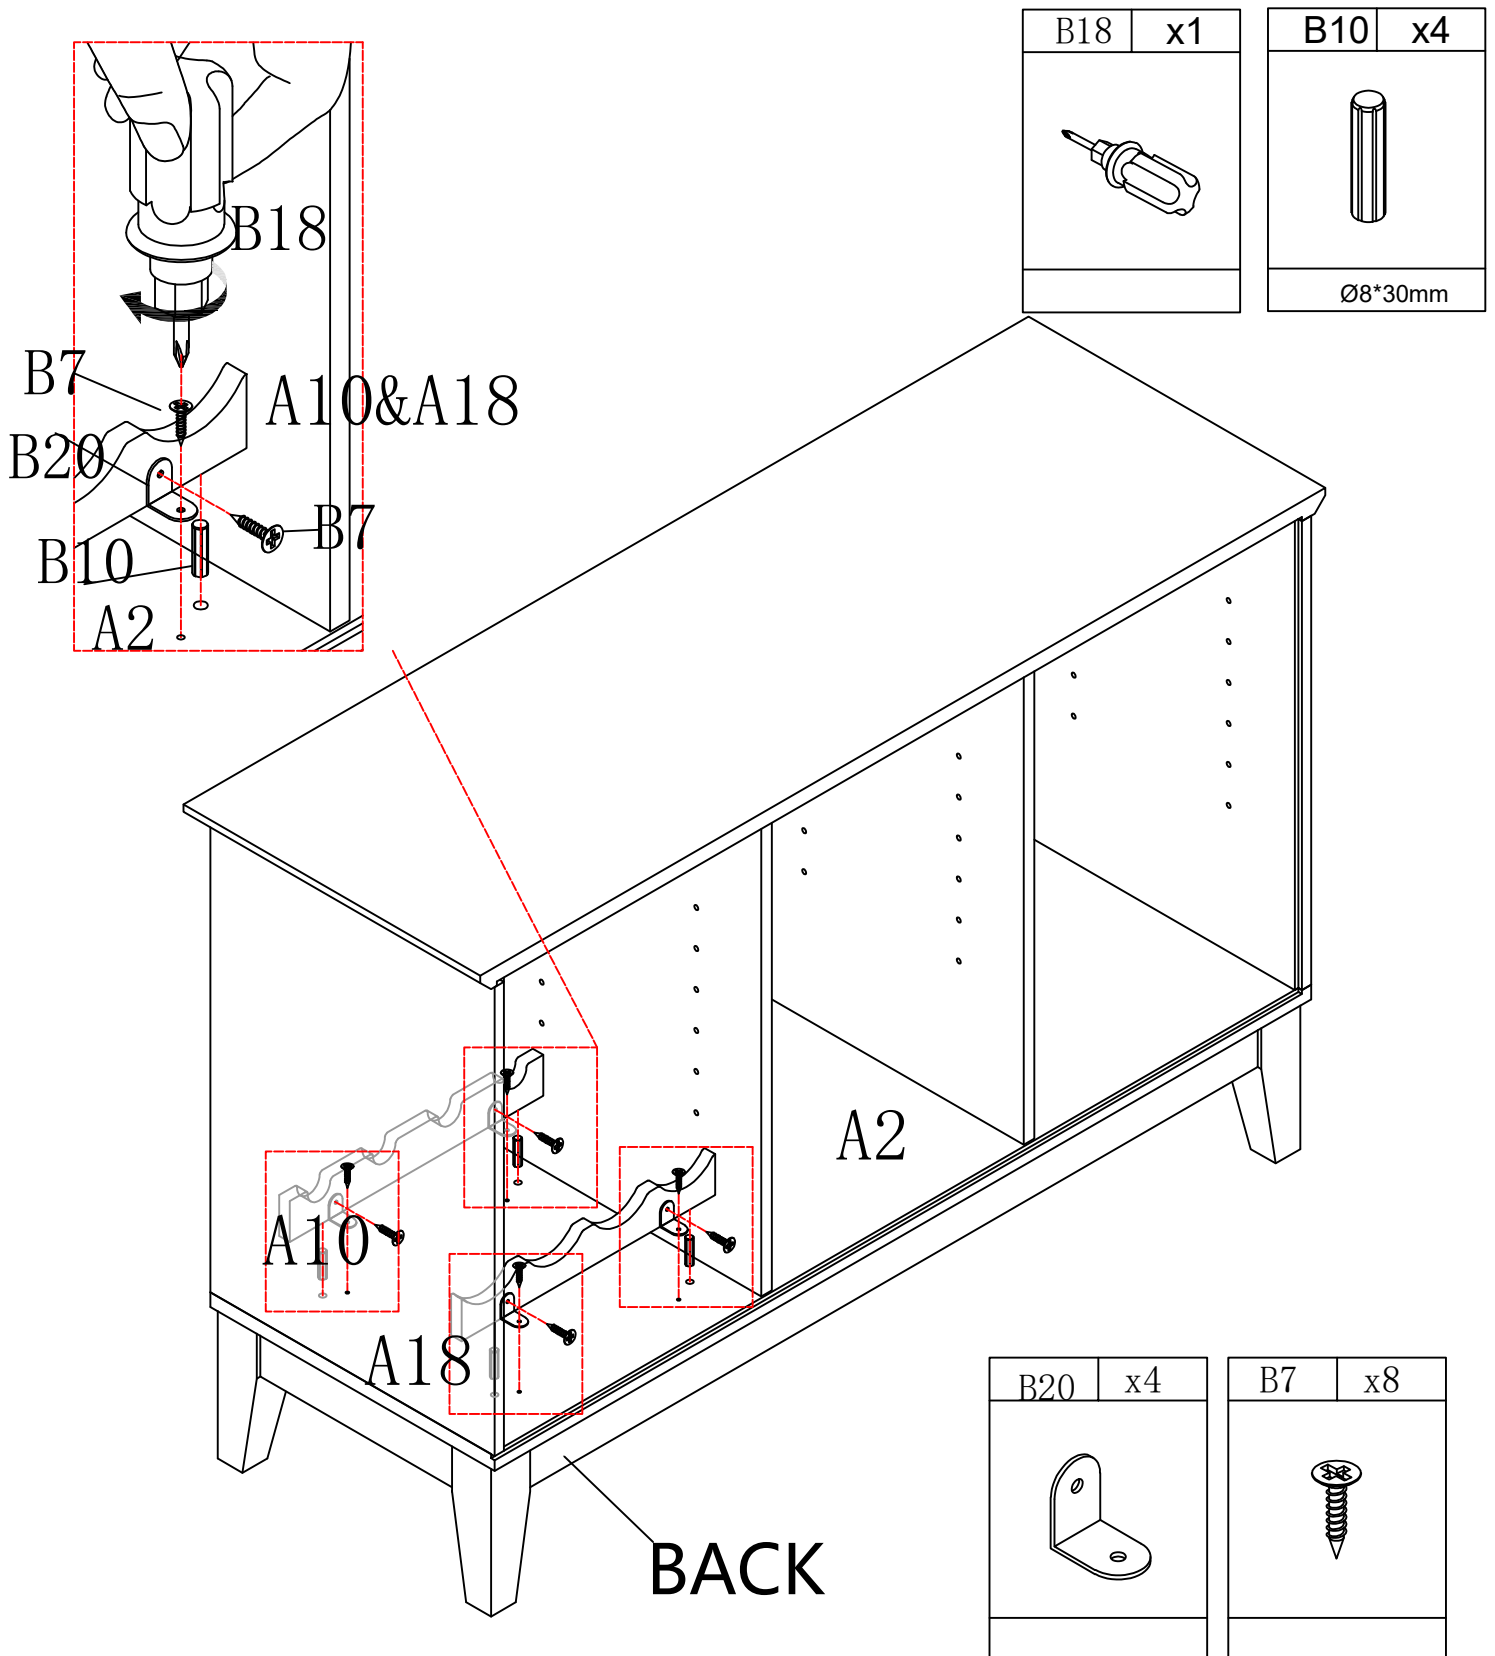


B11	x8	B8	x8	B12	x8	B17	x1
							
		Ø6*50mm					

ASSEMBLY INSTRUCTIONS

STEP-6

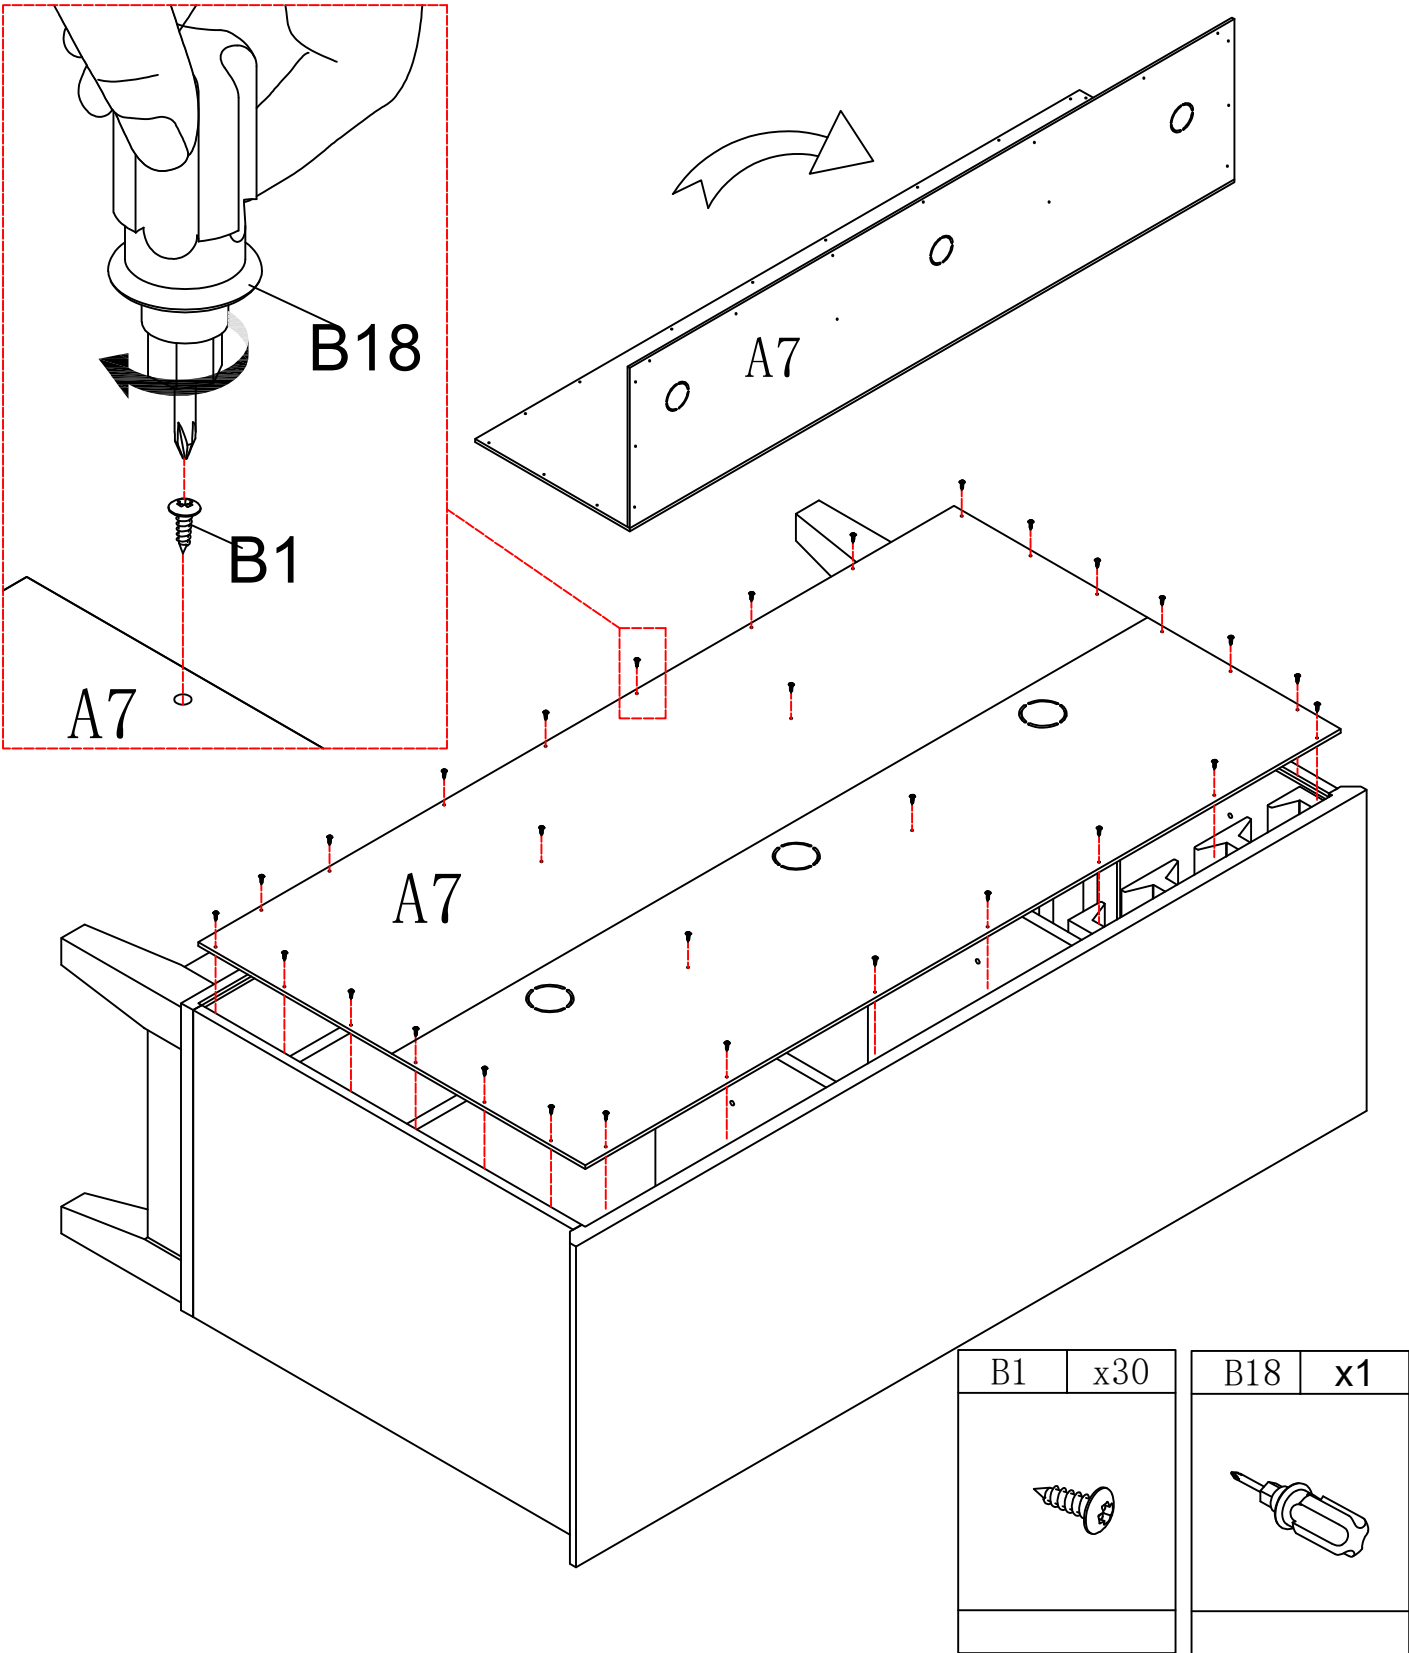
1. attach part (A10/A18) to bottom panel (A2) with wood dowel B10 and part B20 and part B7. tight part B7 with screwdriver B18.



ASSEMBLY INSTRUCTIONS

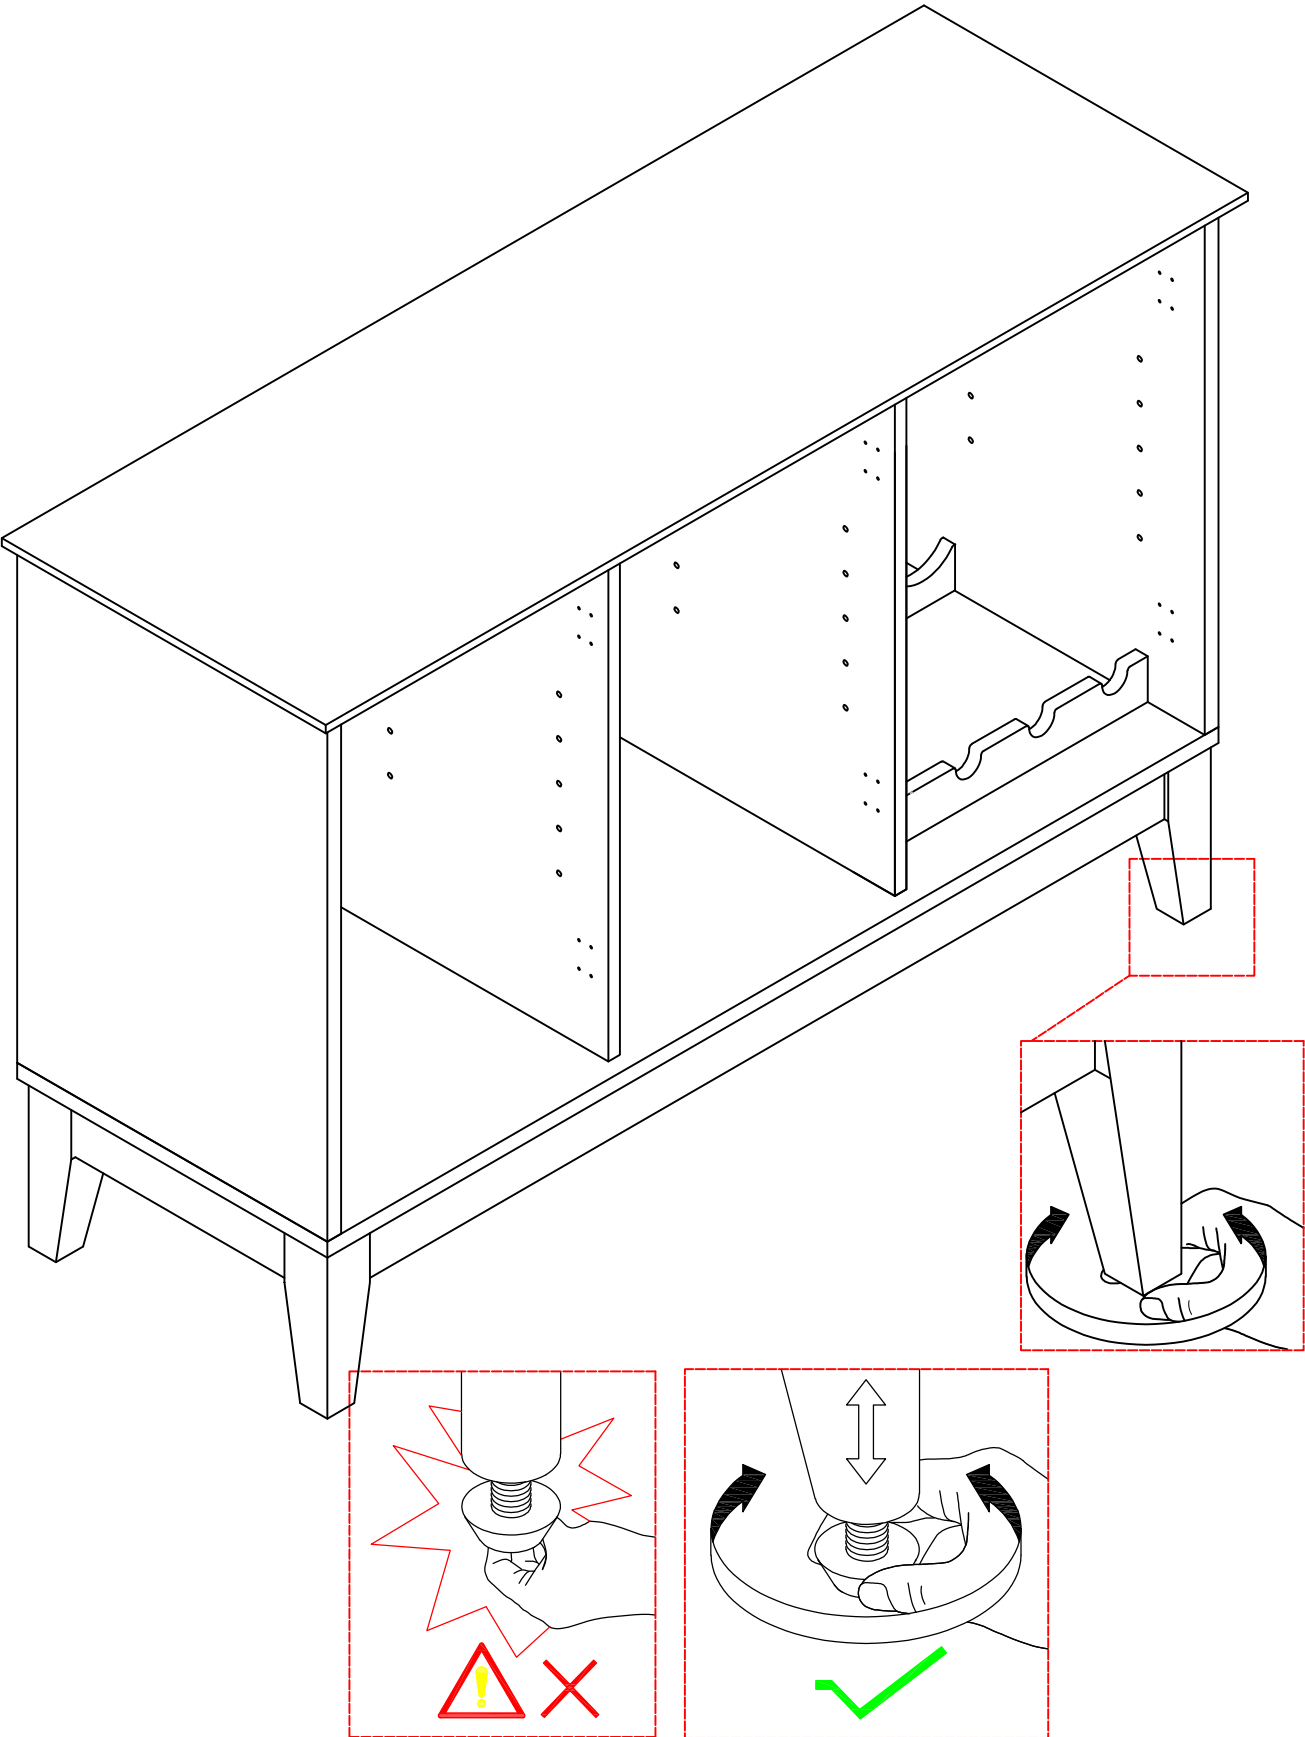
STEP-7

1.open back panel A7. connect back panel to pre-assembled unit at step 6 with screw B1, tight screw with screwdriver B18.



ASSEMBLY INSTRUCTIONS

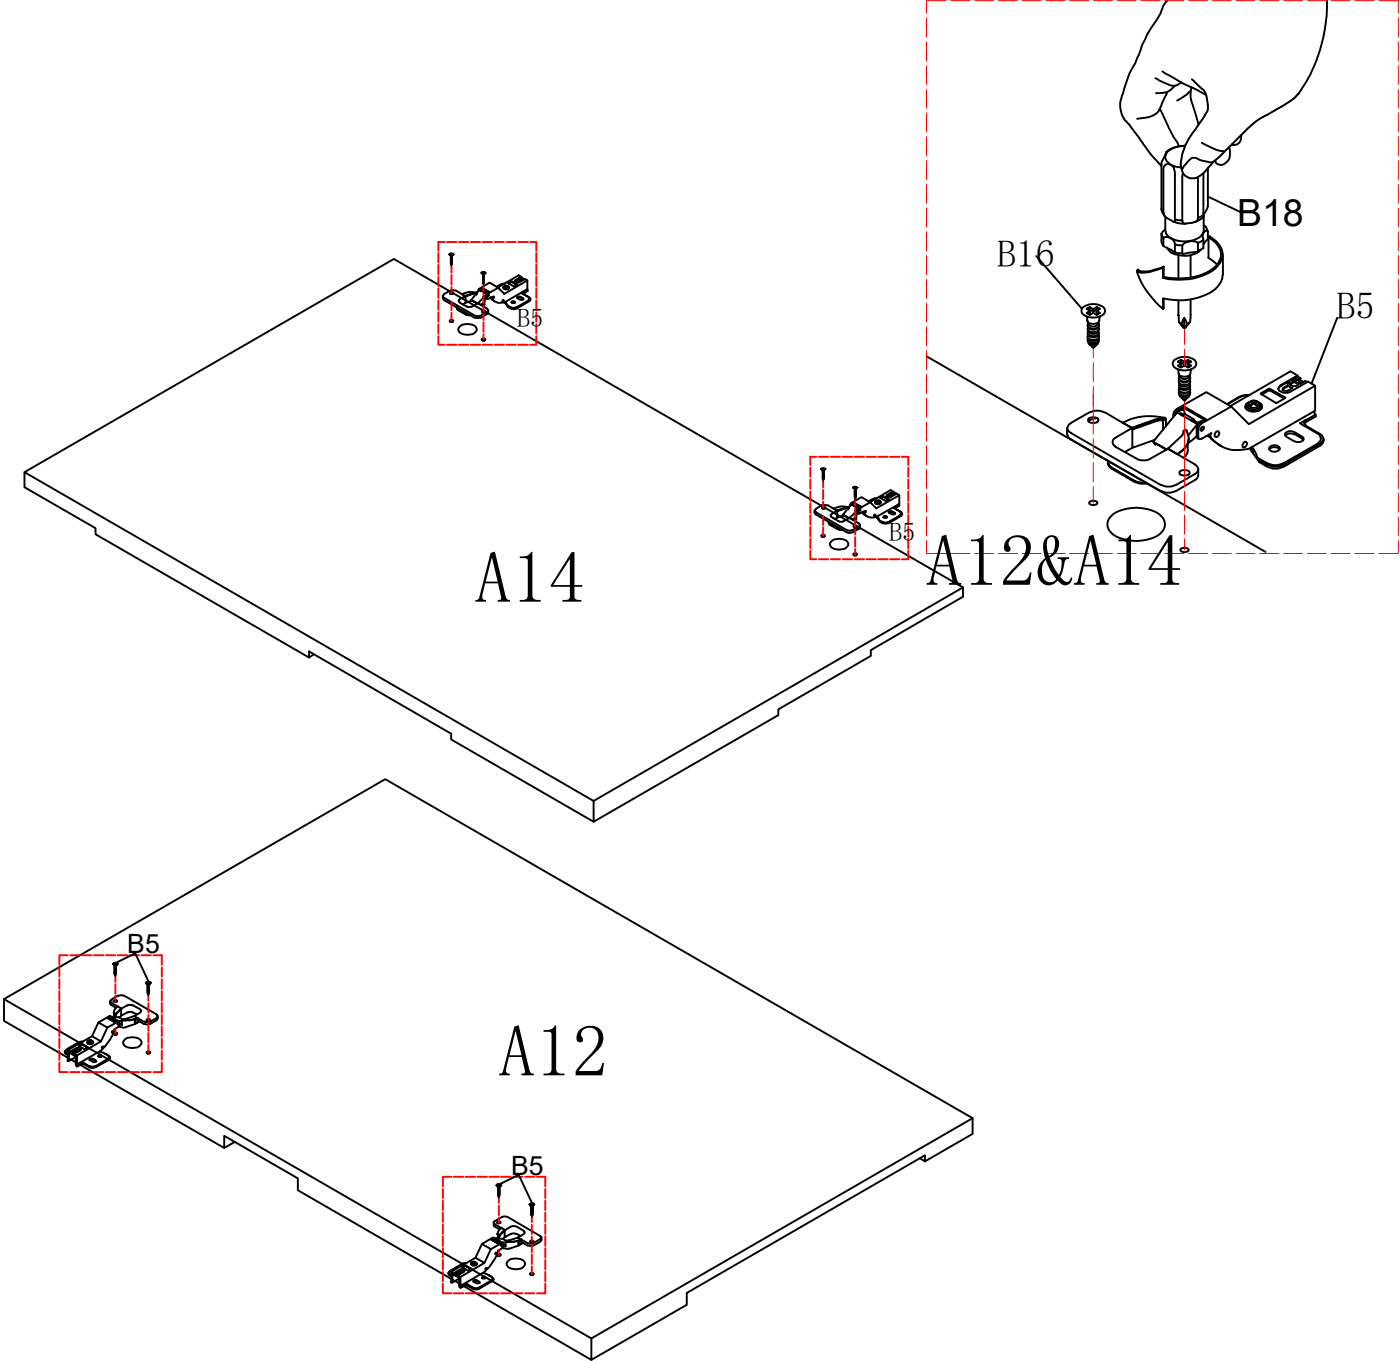
STEP-8

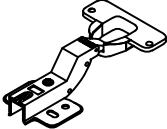




ASSEMBLY INSTRUCTIONS

STEP-9

1.connect part B5 to door(A14/A12) with screw B16, tight screw with screwdriver B18.

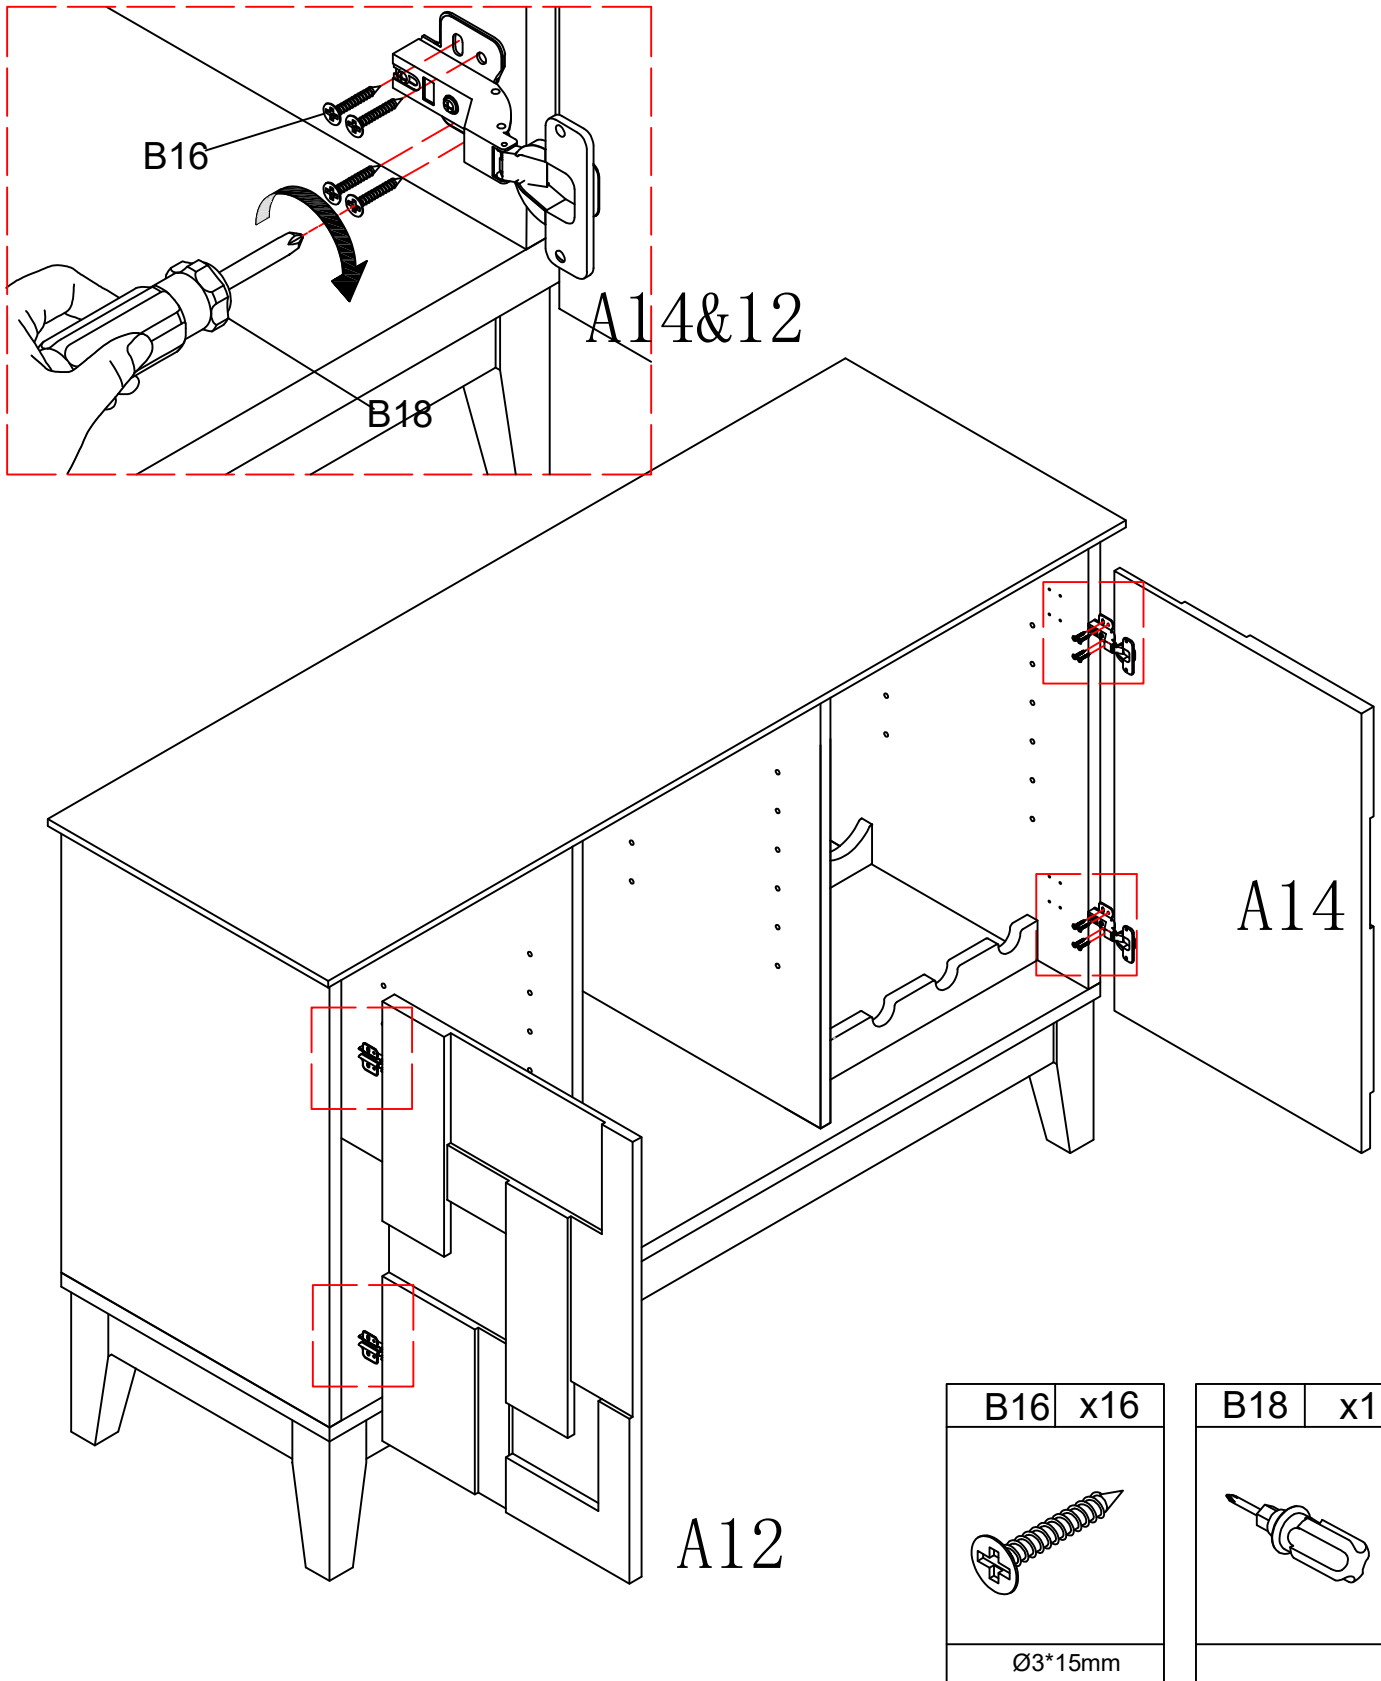



B5	x4	B16	x8	B18	x1
					
		Ø3*15mm			


ASSEMBLY INSTRUCTIONS

STEP-10

1. Connect door (A14/A12) to pre-assembled unit at step 8 with screw B16, tight screw with screwdriver B18 .



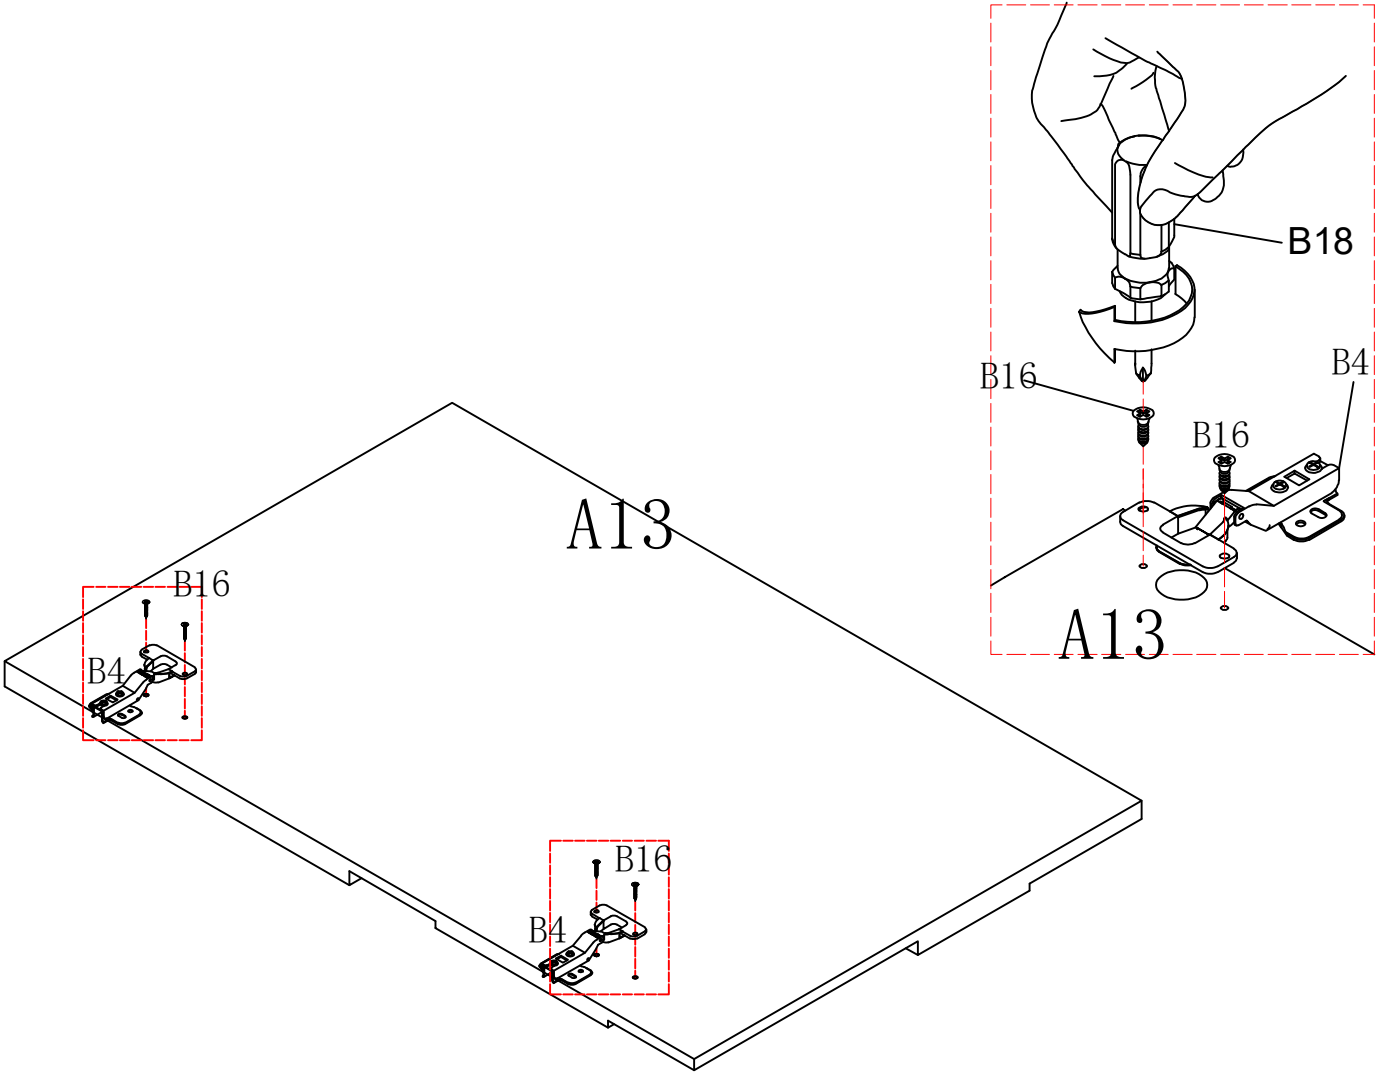
B16	x16
	
Ø3*15mm	

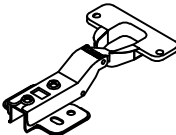
B18	x1
	


ASSEMBLY INSTRUCTIONS


STEP-11

1.Connect B4 to door A13 with screw B16, tight screw with screwdriver B18.



B4	x2
	

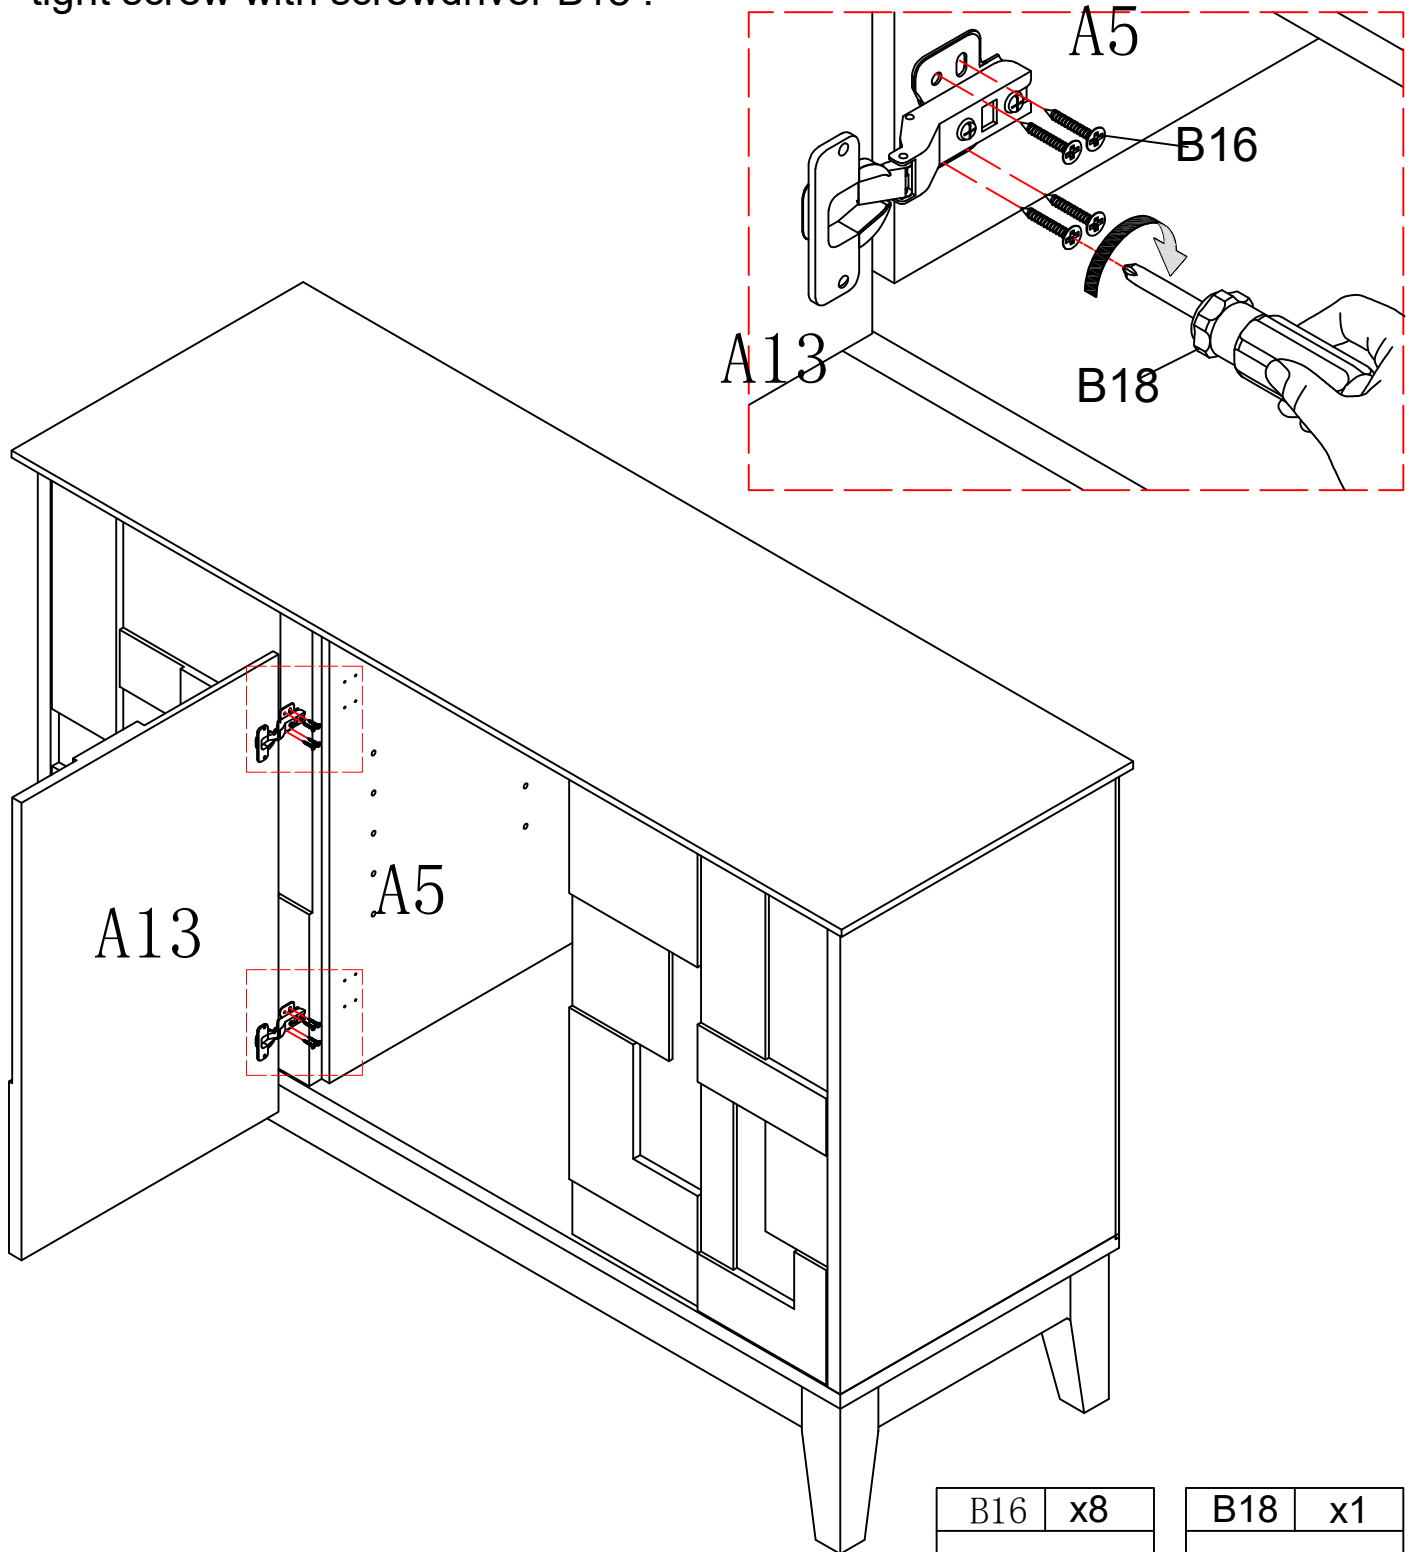
B16	x4
	
Ø3*15mm	


B18	x1
	


ASSEMBLY INSTRUCTIONS

STEP-12

1. Connect door (A13) to pre-assembled unit at step 10 with screw B16, tight screw with screwdriver B18 .



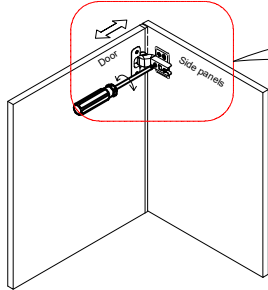
B16	x8
	
Ø3*15mm	

B18	x1
	

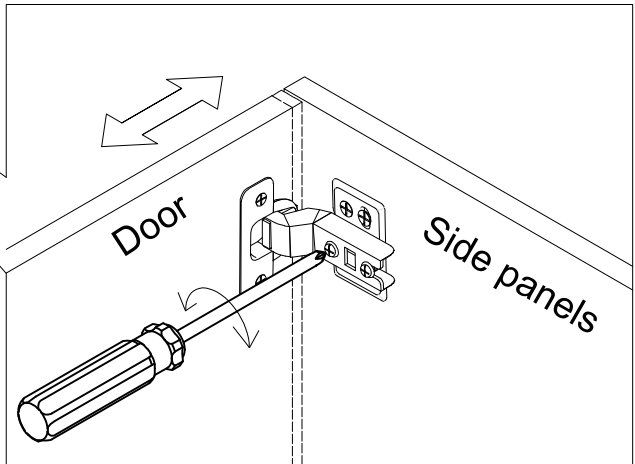
ASSEMBLY INSTRUCTIONS

STEP-13

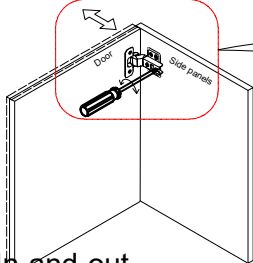
Concealed hinges are three-way adjustable:



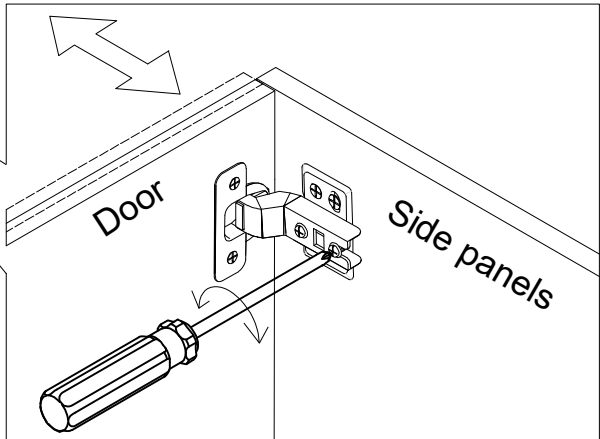
Horizontal
by screw adjustment!



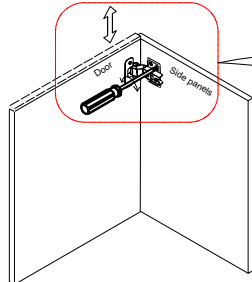
Concealed hinges are three-way adjustable:



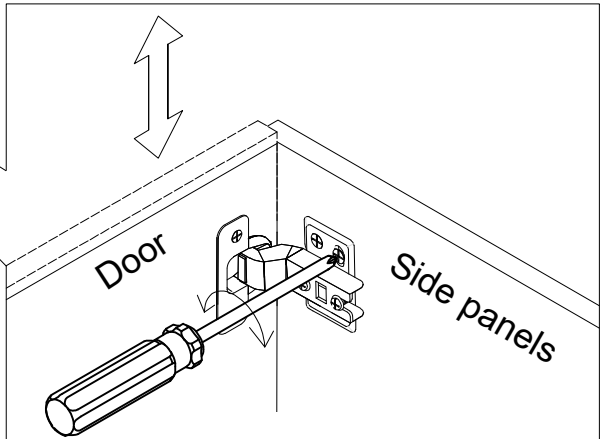
In-and-out
by loosening the hinge arm
mounting screw or via cam
adjustment!



Concealed hinges are three-way adjustable:



Vertical via slots in
the mounting plate
or via cam
adjustment!



Video for door adjustment

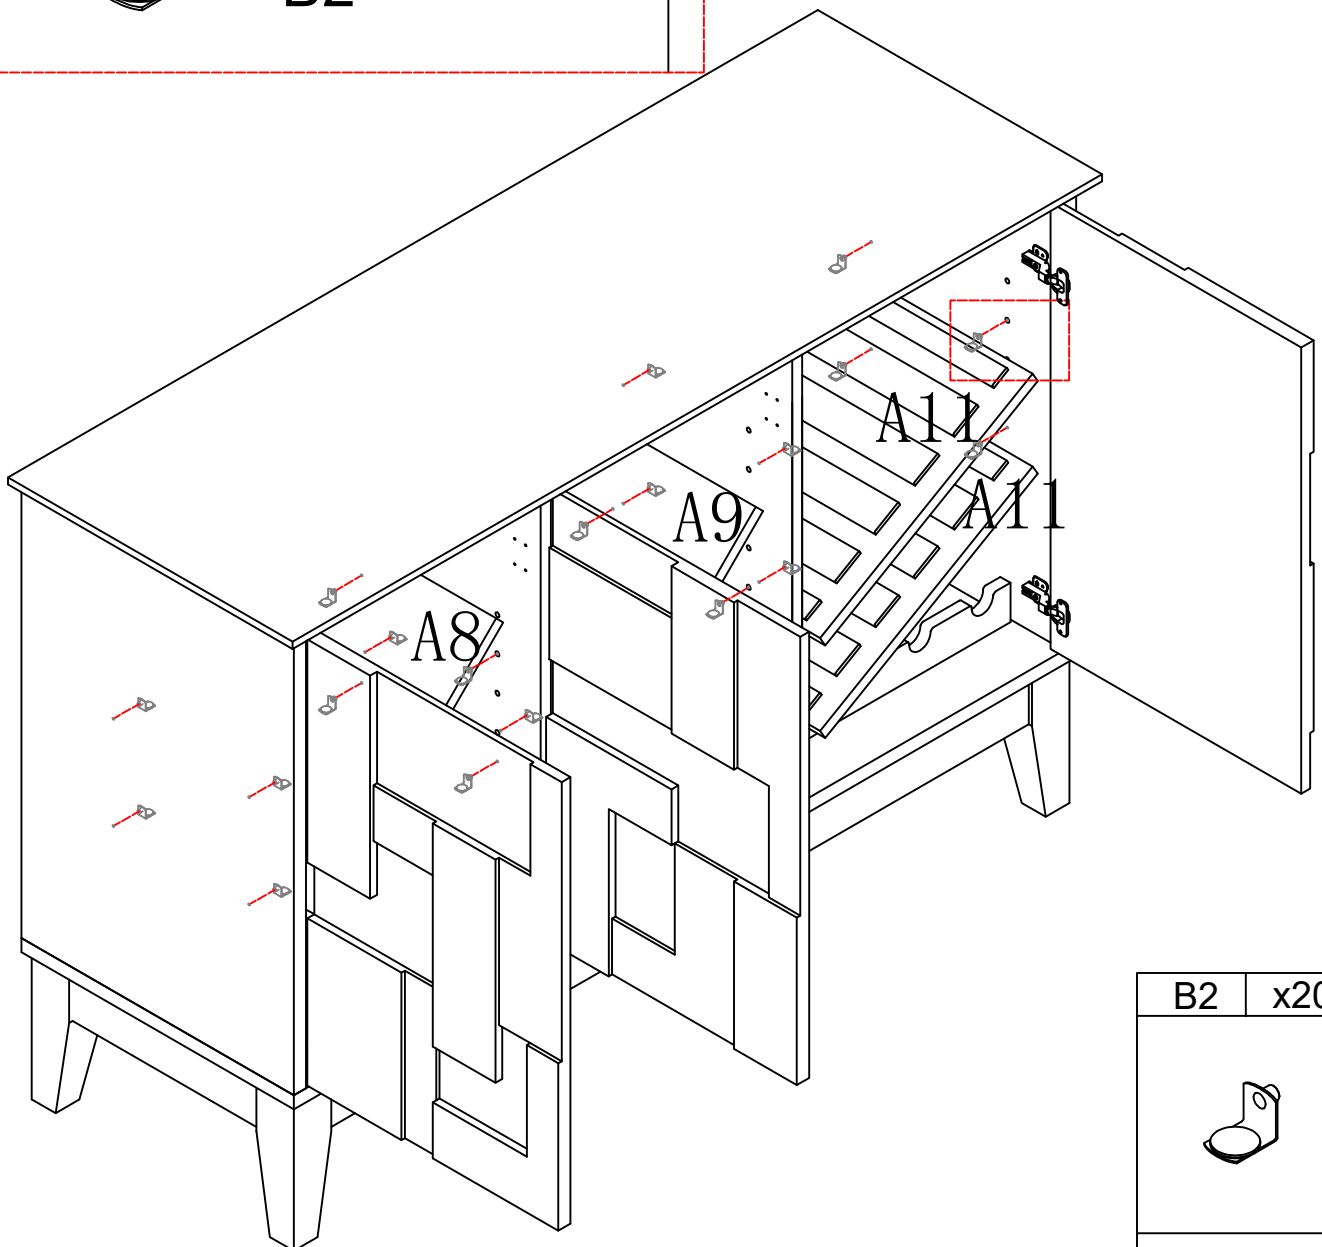
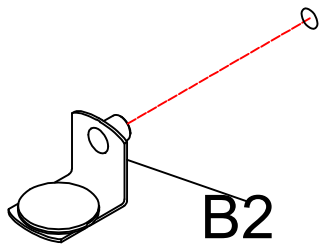
Hinge adjustment method


ASSEMBLY INSTRUCTIONS

STEP-14


1. Insert shelf holder B2 into the corresponding hole of pre-assembled unit at step 12 and attach part (A8/A9/A11) to it.


Shelf holder can be adjusted up or down




B2	x20
	

ASSEMBLY INSTRUCTIONS

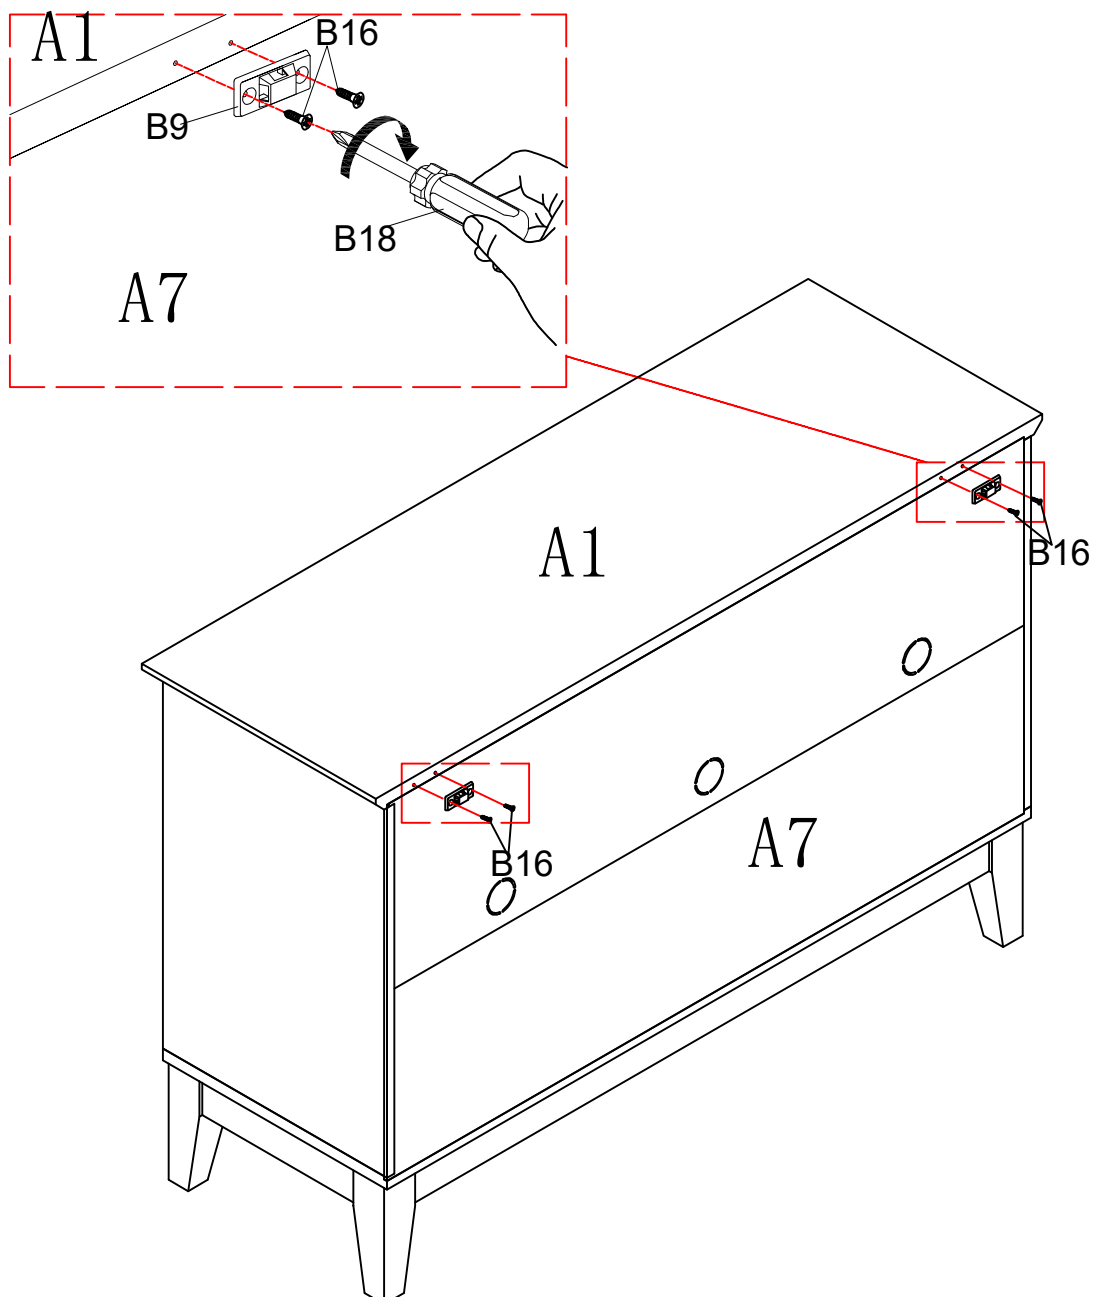
B16	x4
	
Ø3.5*14MM	

B9	x2
	





B18	x1
	

STEP-15

1. Use screw B16 to attach part B9 to preassembly unit at step 15, tighten screws with screwdriver B18.

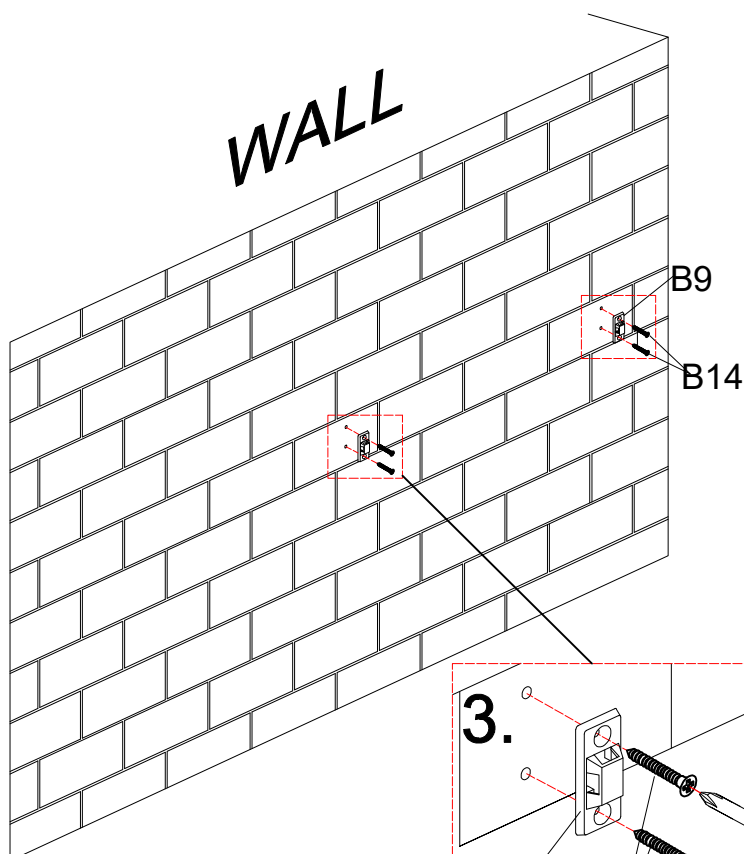


ASSEMBLY INSTRUCTIONS

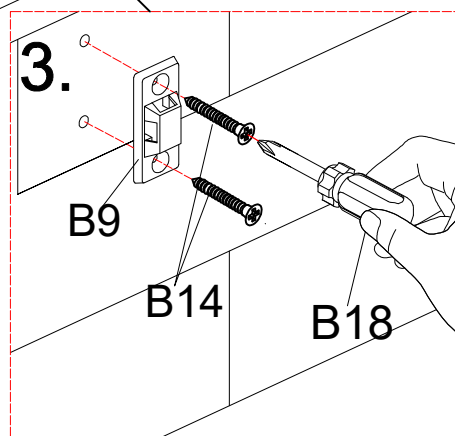
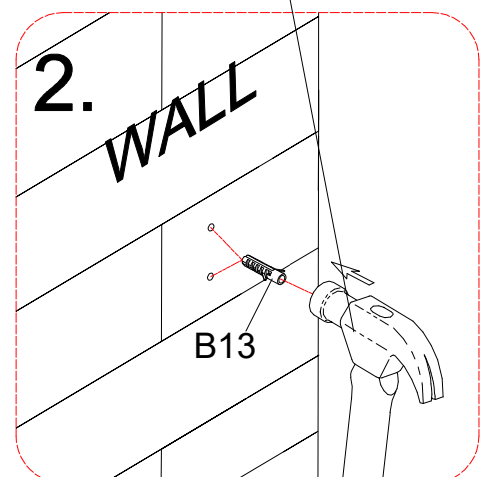
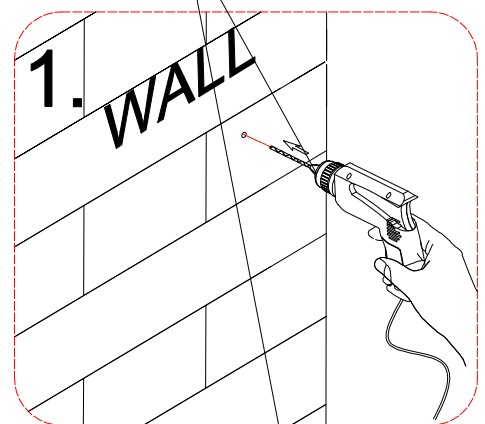
B13	x4	B9	x2	B14	x4	B18	x1
							

STEP-16

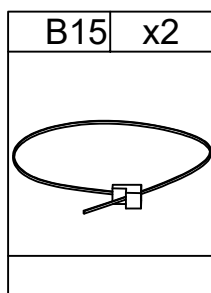
1. Mark the position on the wall, that corresponds to the location of bracket B9 on the back of top panel (A1); Drill and insert the expandable screw B13 by hammer.
2. Assemble the bracket B13 to the wall. Align the hole in the bracket B9 with the expandable screw B13, use screw B4 to attach it, tighten screw B14 with screwdriver B18.



NOT PROVIDED

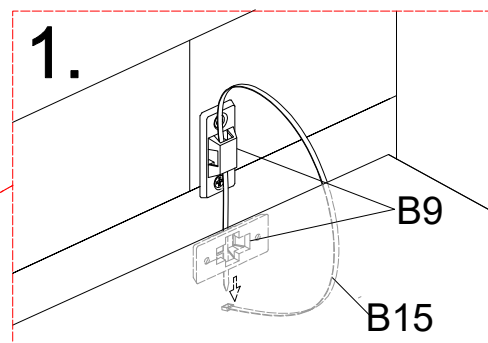
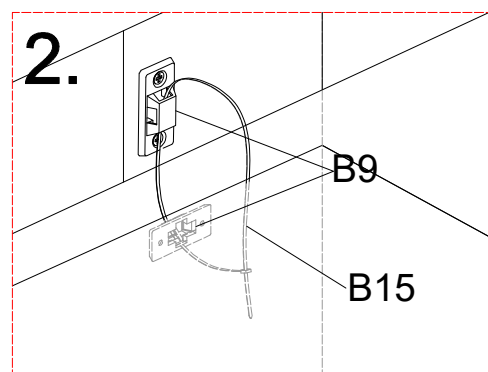
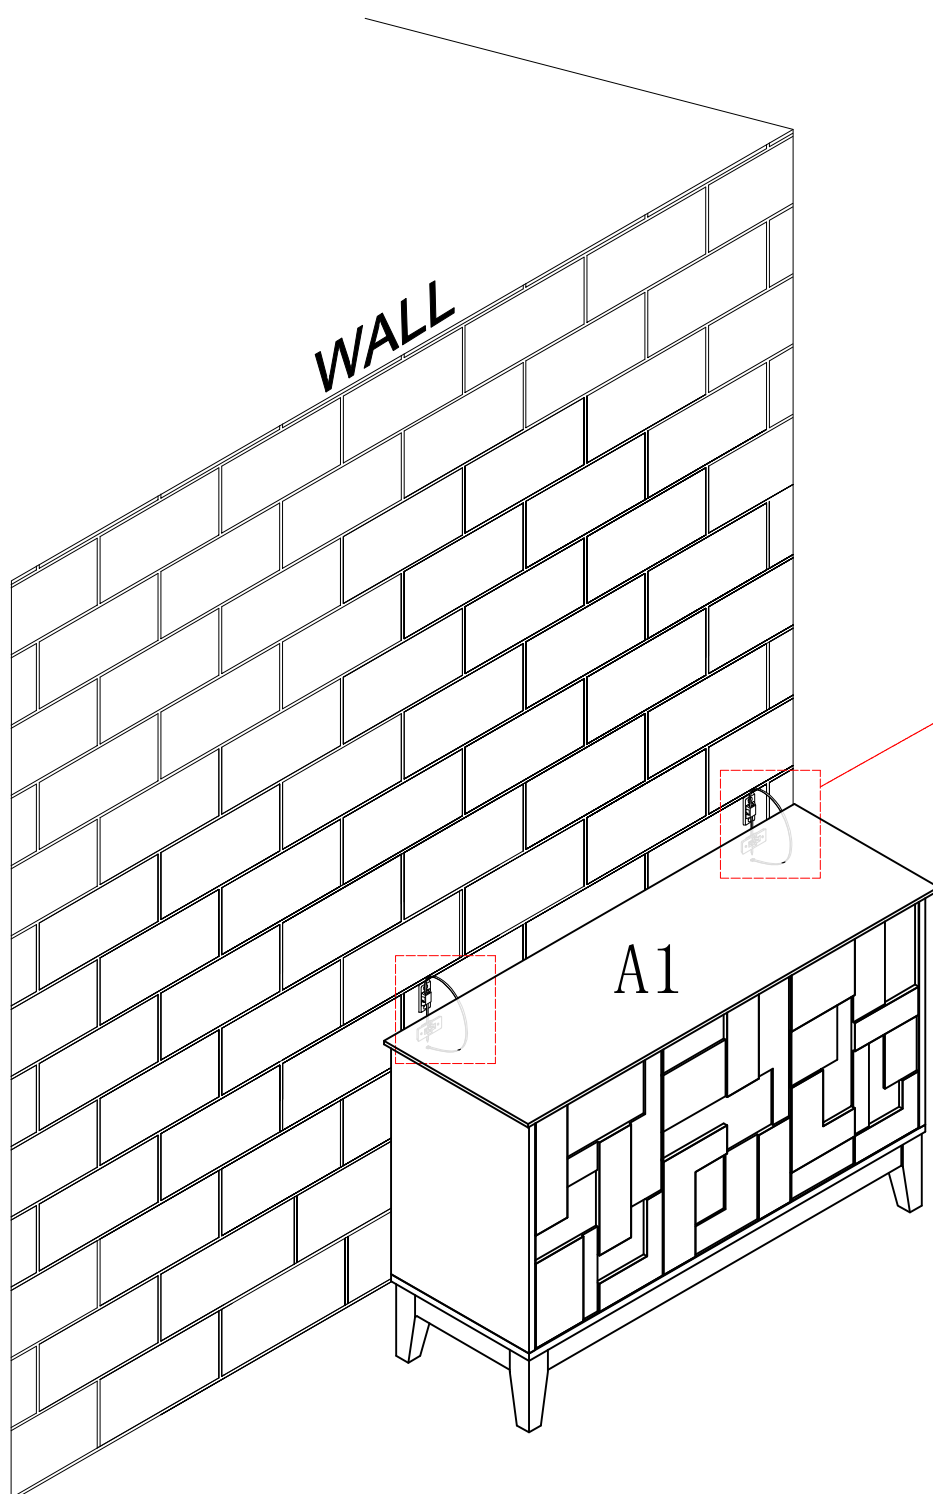


ASSEMBLY INSTRUCTIONS



STEP-17

3. Let the plastic belt B15 pass through bracket B9 and pull tightly.



WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com
For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!