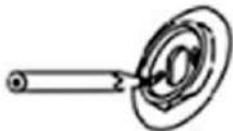
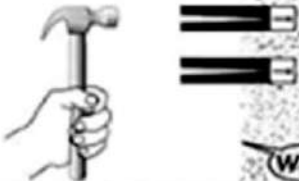
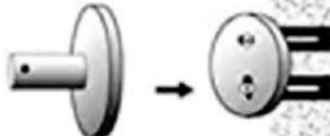


Drill Install Instruction

STEP 1		Put The Pedestal Off. Mark The Mounting Point On The Wall.
STEP 2		Drill Mounting Holes On The Wall
STEP 3		Hit Plastic Screw Holders To Rhe Holes
STEP 4		Use Cross Screwdriver Tight The Screws To Fix The Mounting Bracket
STEP 5		Hang The Main Body To The Mounting Bracket
STEP 6		Tight Fixation Screw With Inner Hexagon Spanner