






Modern Accent Armchair


Instruction Manual

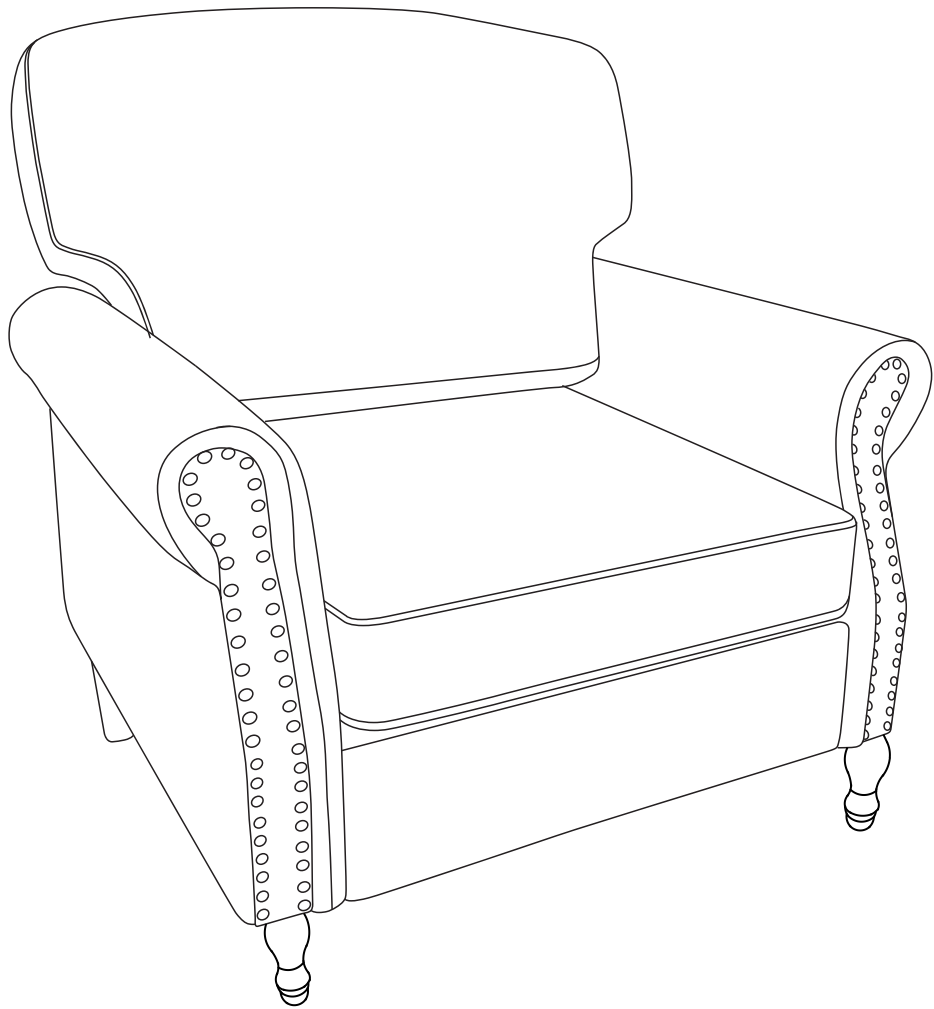

Contact: TYuecustomerservice@outlook.com


Please keep this instruction manual for future reference.

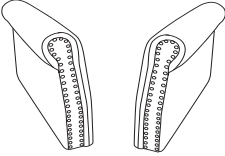A×1  Back Cushion	B×1  Seat Cushion	C×1  Backrest
D×1  Seat Panel	E×1  Chair Plate	F×2  Armrests
G × 2  Back Legs	H × 2  Front Legs	I × 10  Screws
J × 1  M6 Wrench		

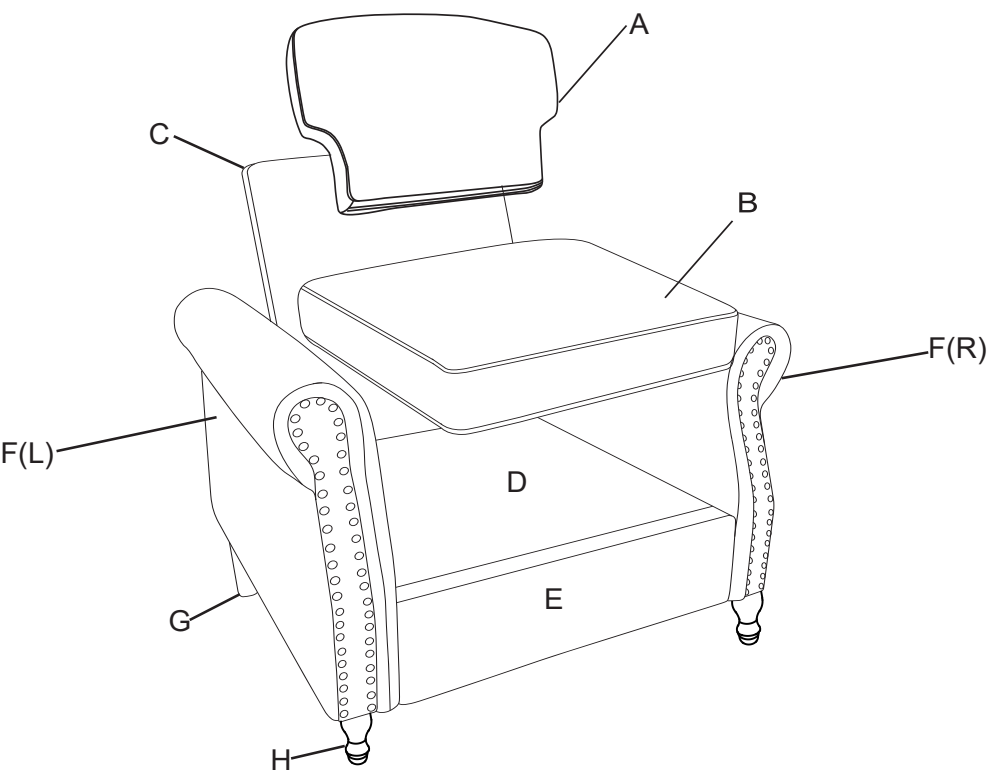


Step 1

Tighten the chair back legs (G) and front legs (H) to the bottom holes of the 2 armrests (F).

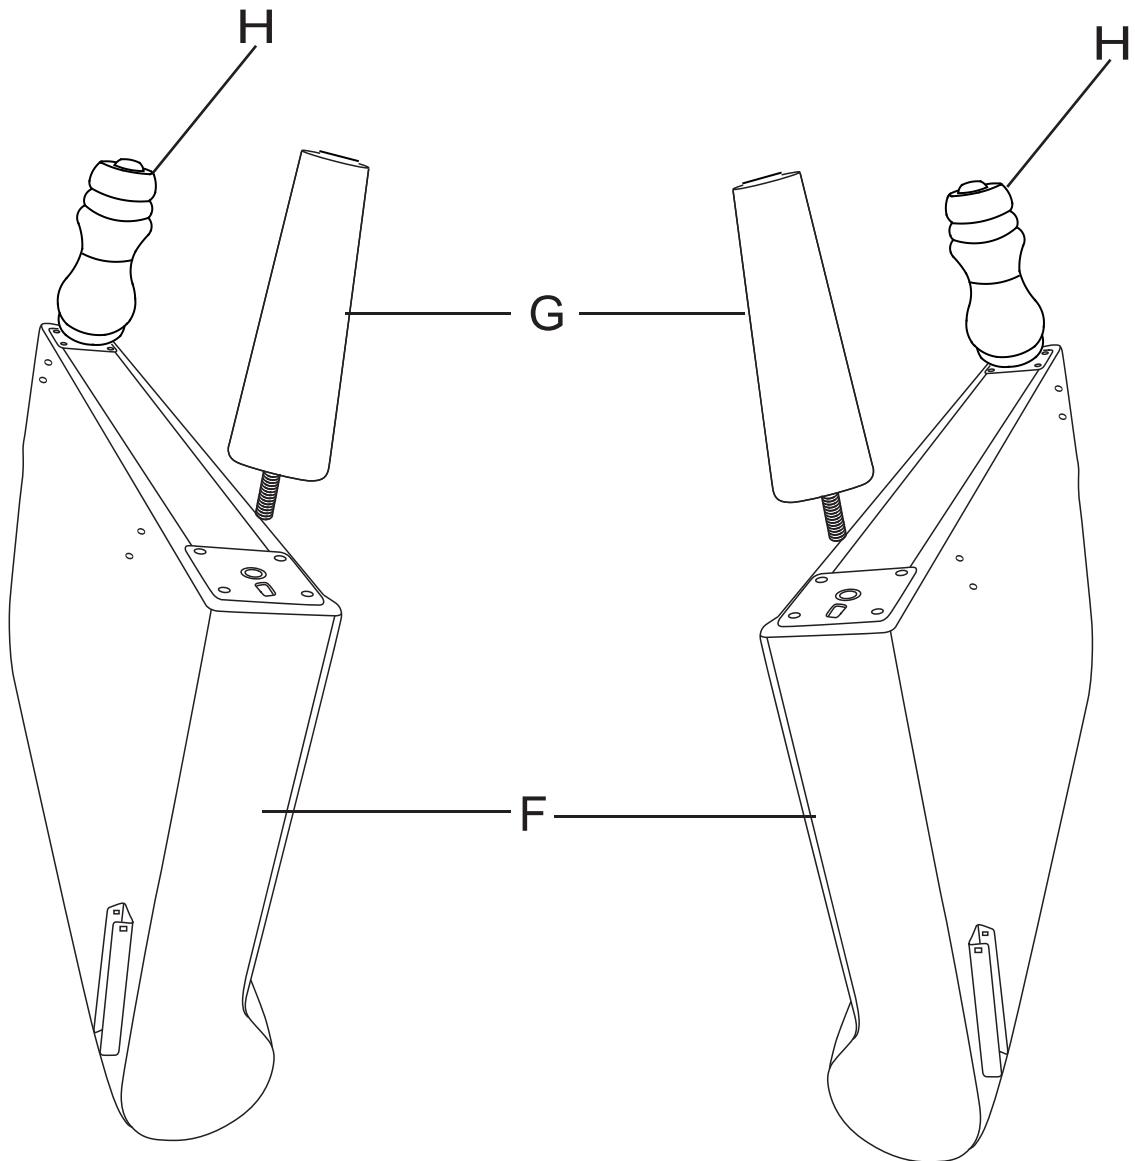


Step 2

Slide the backrest (C) into the metal tracks on the 2 armrests (F) as below.

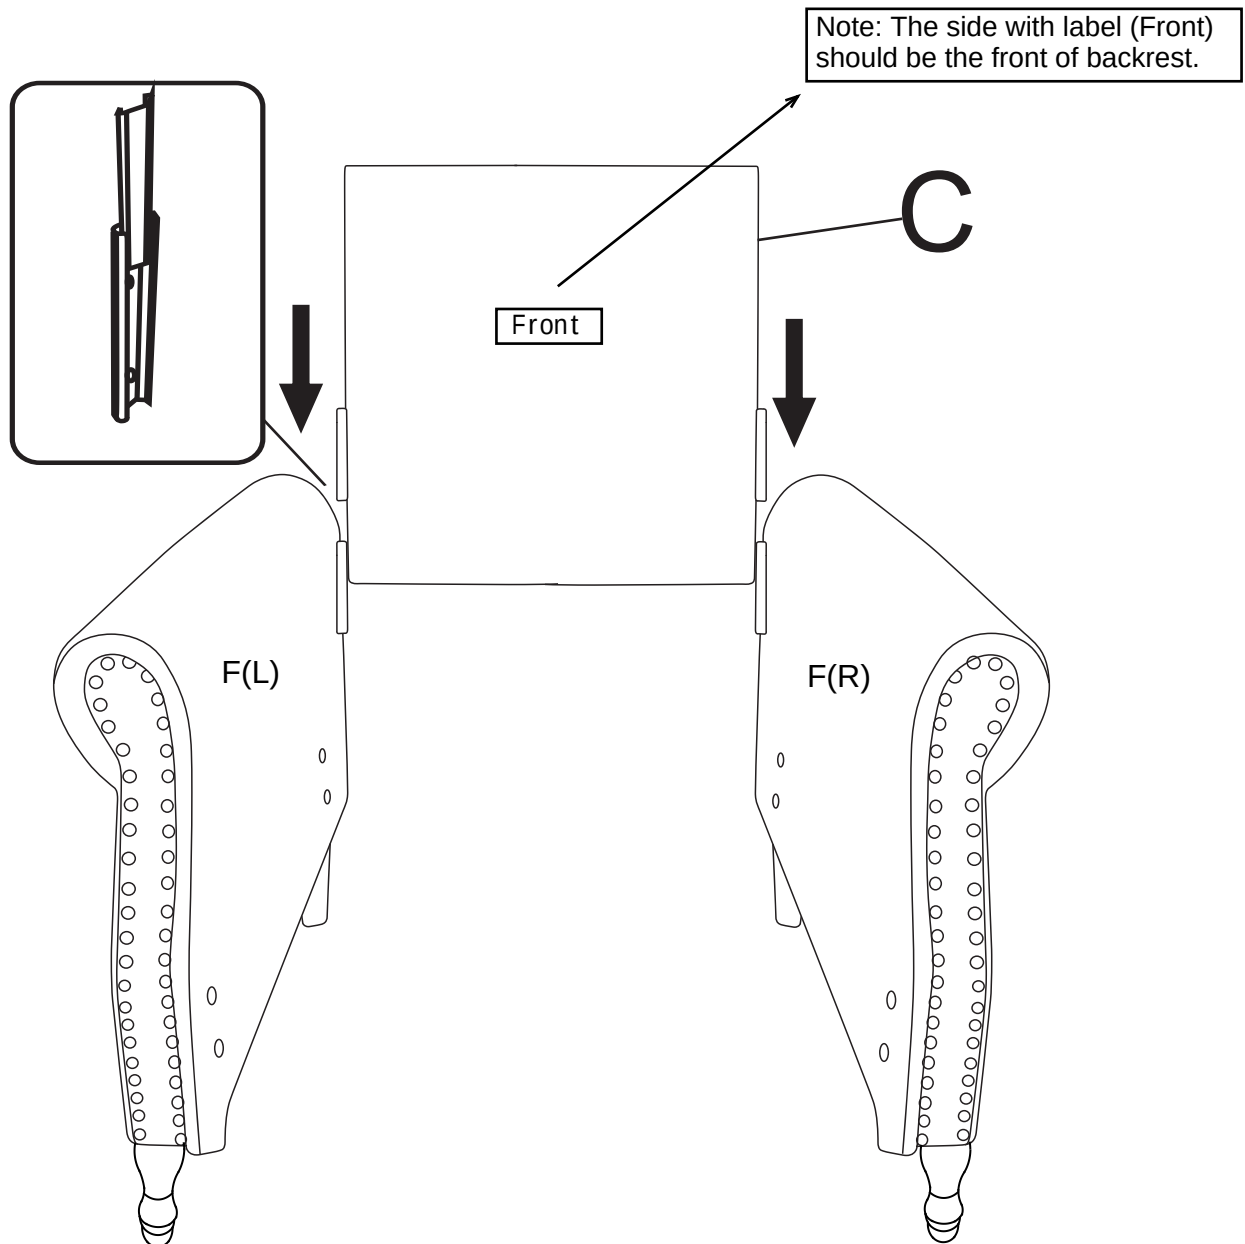

Step 3


Secure the chair plate (E) to the seat panel (D) with 2 screws (I) by using allen wrench (J).

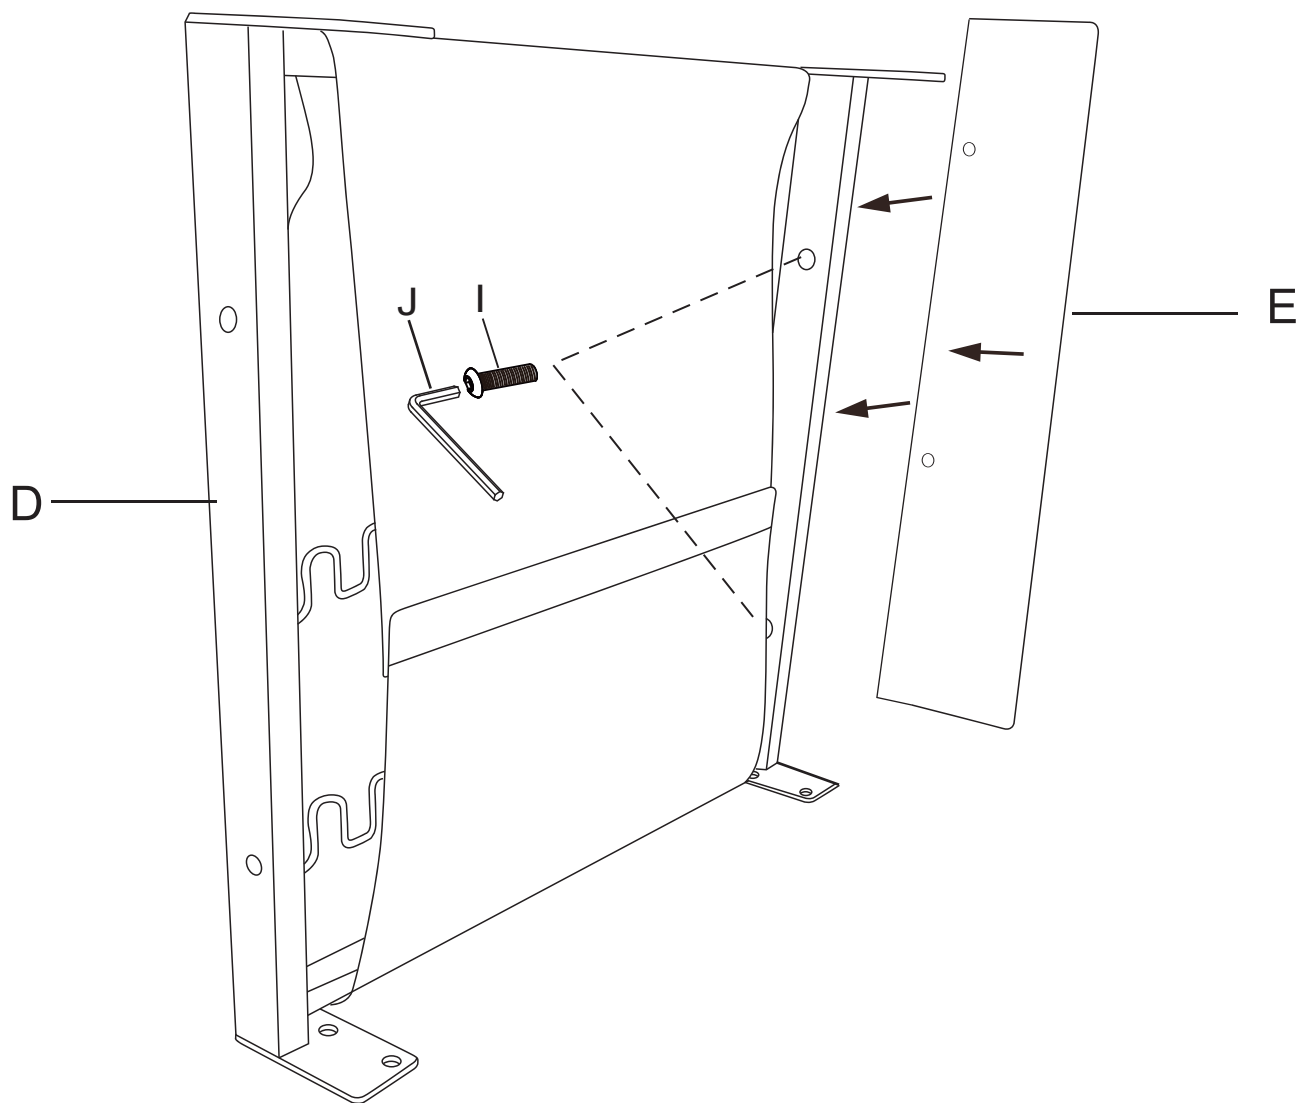

Step 4

Secure the component E&D (Step 3) to the 2 armrests (F) as below. Find the 4 holes (a) and 4 holes (b) on both sides of armrests. Use allen wrench (J) to twist 4 screws into holes (a) to 50%, then twist 4 screws into holes (b) to 50%. Lastly, fully tighten all the screws to 100% once them are fixed well!



Note: Do not fully tighten all the screws until all of them are fixed well.

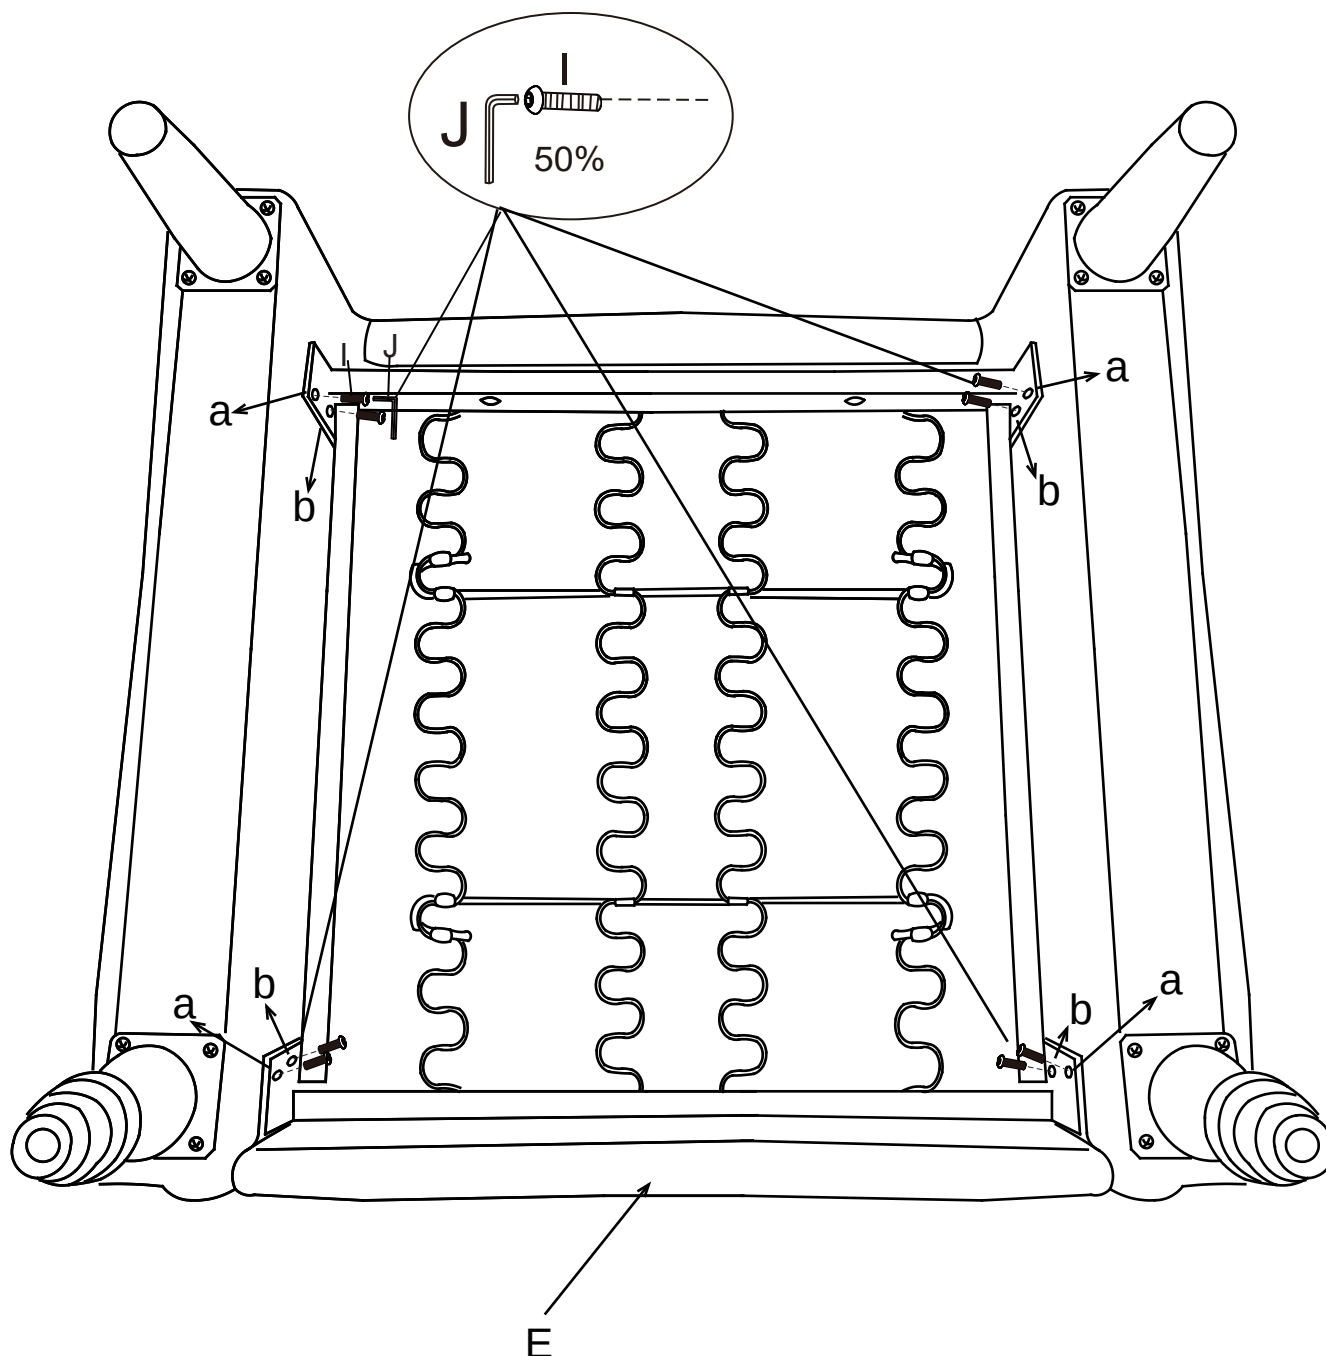

Step 5



Take the seat cushion (B) out of the plastic packaging.

Pat the cushion softly, let it stand for 30 minutes until fluffy and then put it on the seat of chair.

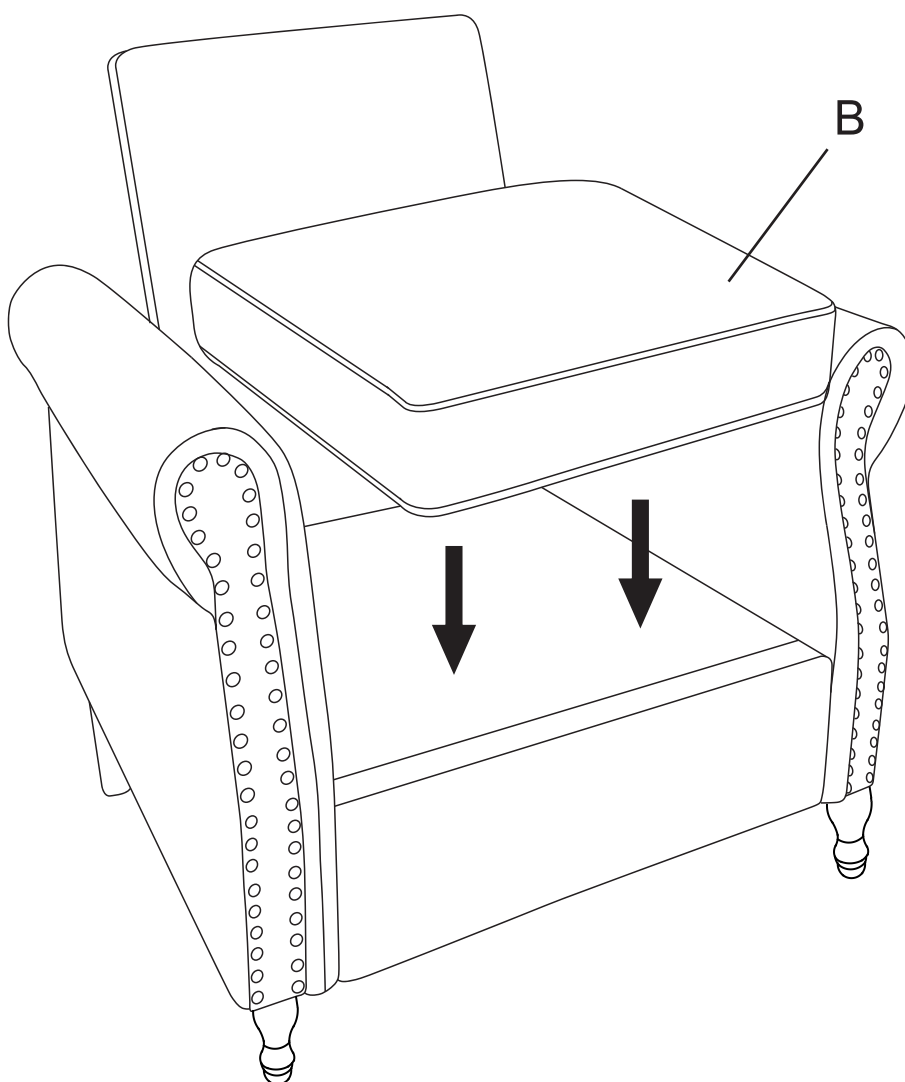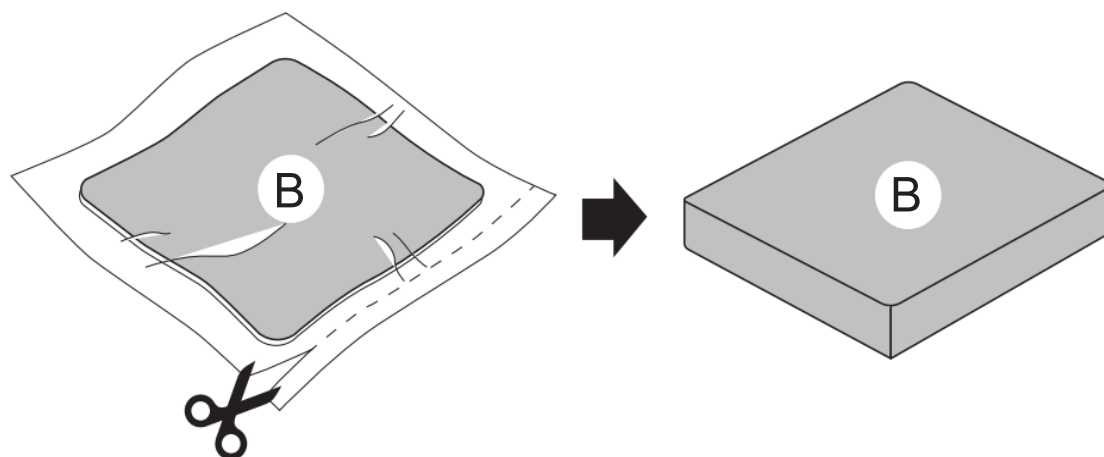

Step 6

Take the back cushion (A) out of the plastic packaging.
Pat the cushion softly, let it stand for 30 minutes until fluffy and then
put it on the back of chair.

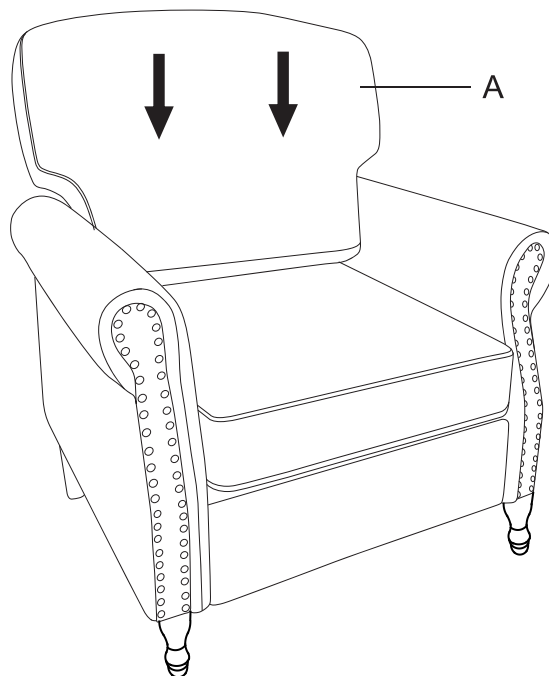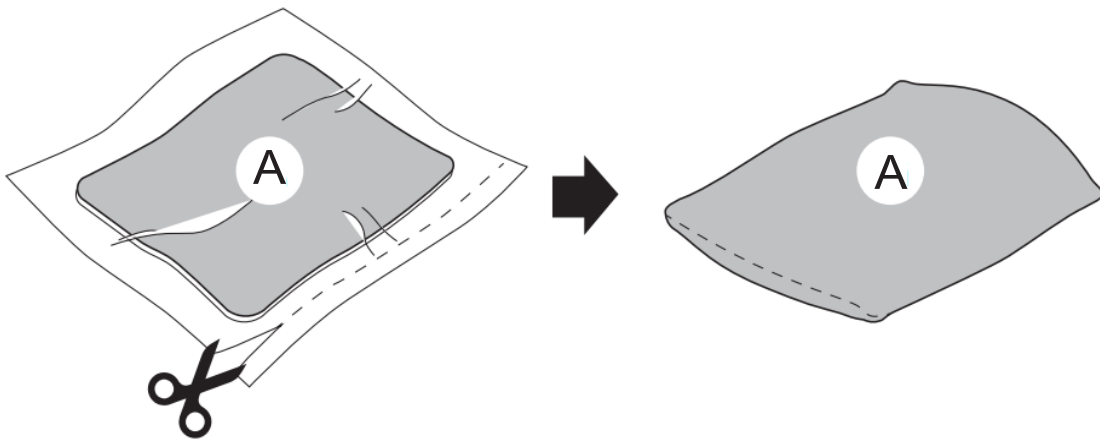

Step 7

Twist the foot pads to adjust the balance of the chair until it keeps horizontal and steady.

Chair is ready for use now!

