











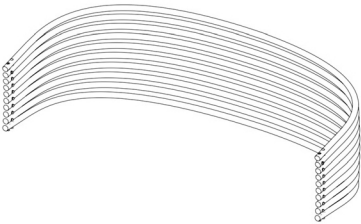
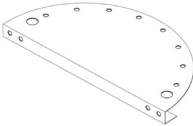
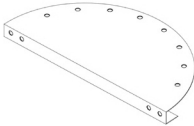
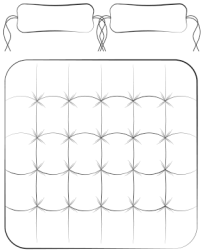

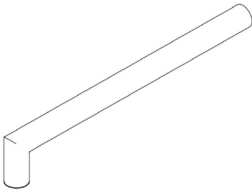
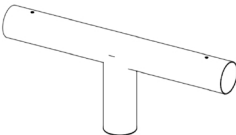

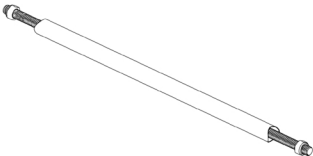



PLEASE READ BEFORE INSTALLING

- MORE THAN TWO ADULTS WILL HAVE A BETTER INSTALLATION EXPERIENCE
- PLEASE NOTE THE PRE INSTALLED ACCESSORIES (**#6 / #11 / #12**) NEED TO BE REMOVED FIRST PLEASE COLLECT THEM INTO OUR PASTIC BAG TO PREVENT LOSS
- PLEASE CHECK **TOP SIDE** AND **BOTTOM SIDE** OF THE **PART #A** FIRST, IT WILL BETTER TO HELP YOU TO INSTALL THE **PART#B** AND **PART #C** CORRECTLY
- IF YOU HAVING THE **#11** AND **#12 REMOVE STEP**, WE SUGGEST YOU CAN JUST REMOVE THE SCREWS ONLY AND KEEP THE NUTS IN THE HOLE WILL HAVE A BETTER INSTALLATION EXPERIENCE








<div>1</div> <div>M 4</div> <div>  </div> <div>X2</div>	<div>2</div> <div>M 6</div> <div>  </div> <div>X1</div>	<div>3</div> <div>  </div> <div>X1</div>	<div>4</div> <div>  </div> <div>X2</div>	<div>5</div> <div>M 8 X 50MM</div> <div>  </div> <div>X4</div>	<div>6</div> <div>M 8 X 20MM SCREWED NITO PART#E</div> <div>  </div> <div>X4</div>	<div>7</div> <div>  </div> <div>X4</div>
<div>8</div> <div>  </div> <div>X2</div>	<div>9</div> <div>  </div> <div>X2</div>	<div>10</div> <div>  </div> <div>X2</div>	<div>11</div> <div>M 6 X 15MM</div> <div>  </div> <div>SCREWED NITO PART#A</div> <div>X16</div>	<div>12</div> <div>M 6 X 25MM</div> <div>  </div> <div>X8</div>		
<div>A</div> <div>  </div> <div>X1</div>	<div>B</div> <div>  </div> <div>using in PART#A TOP SIDE</div> <div>X1</div>	<div>C</div> <div>  </div> <div>using in PART#A BOTTOM SIDE</div> <div>X1</div>	<div>AA</div> <div>  </div> <div>X1</div>			
<div>D</div> <div>  </div> <div>X2</div>	<div>E</div> <div>  </div> <div>X4</div>	<div>F</div> <div>  </div> <div>X1</div>	<div>H</div> <div>  </div> <div>X2</div>	<div>I</div> <div>  </div> <div>X1</div>		

1

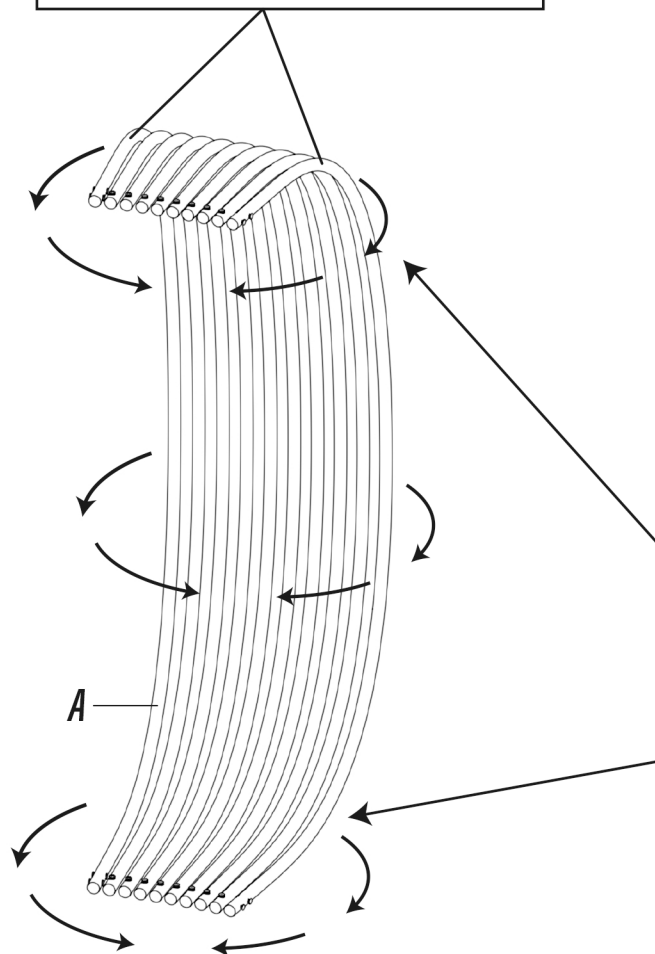
NO#13 screws using for this 2 outside rods
Please confirm the TOP side & BOTTOM side first



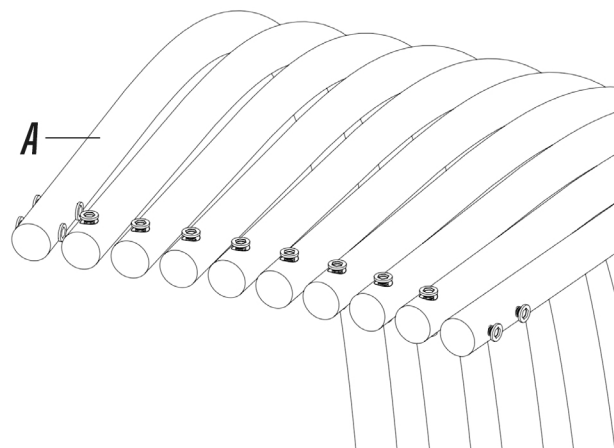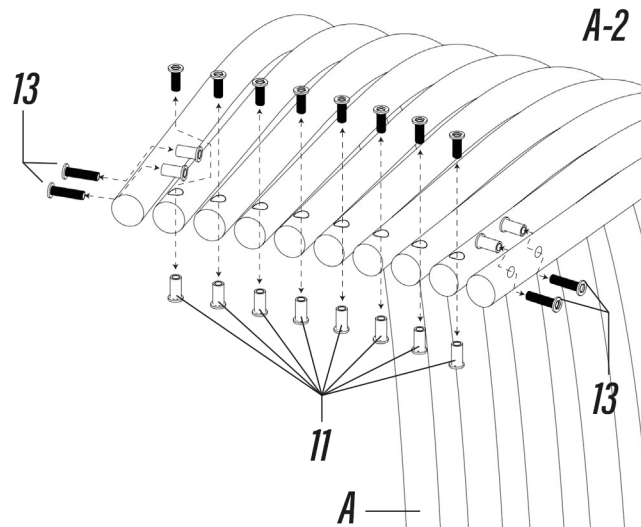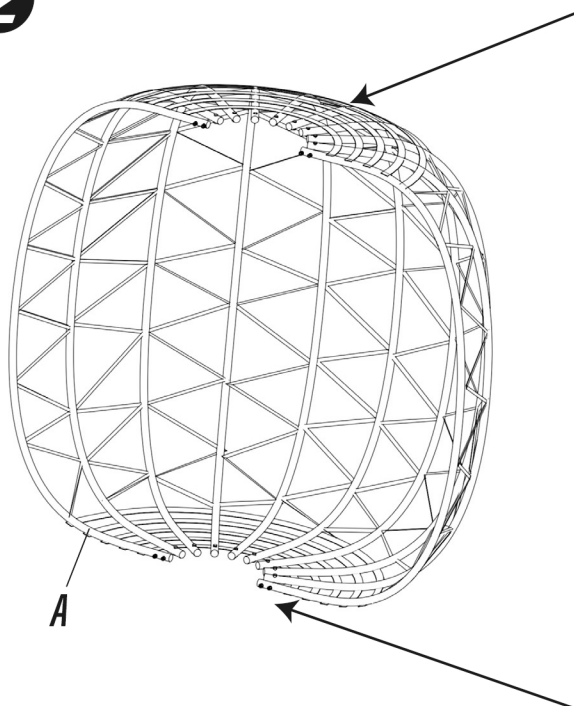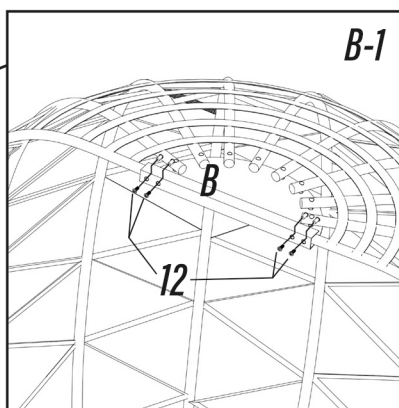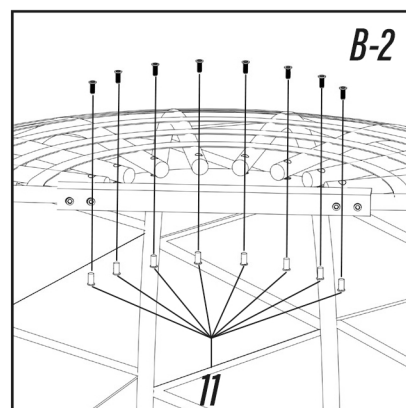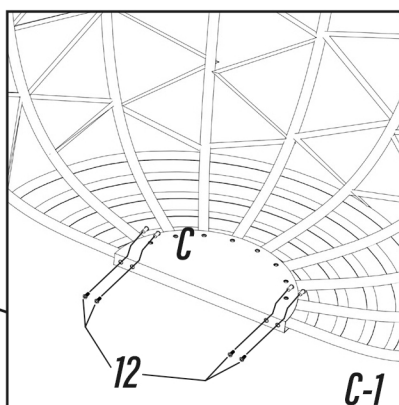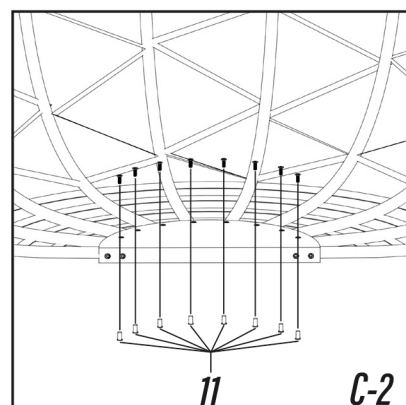
REMOVE THE SCREWS KEEP THE NUTS IN THE HOLE

A-1**A-2****2****B-1****B-2****C-1****C-2**

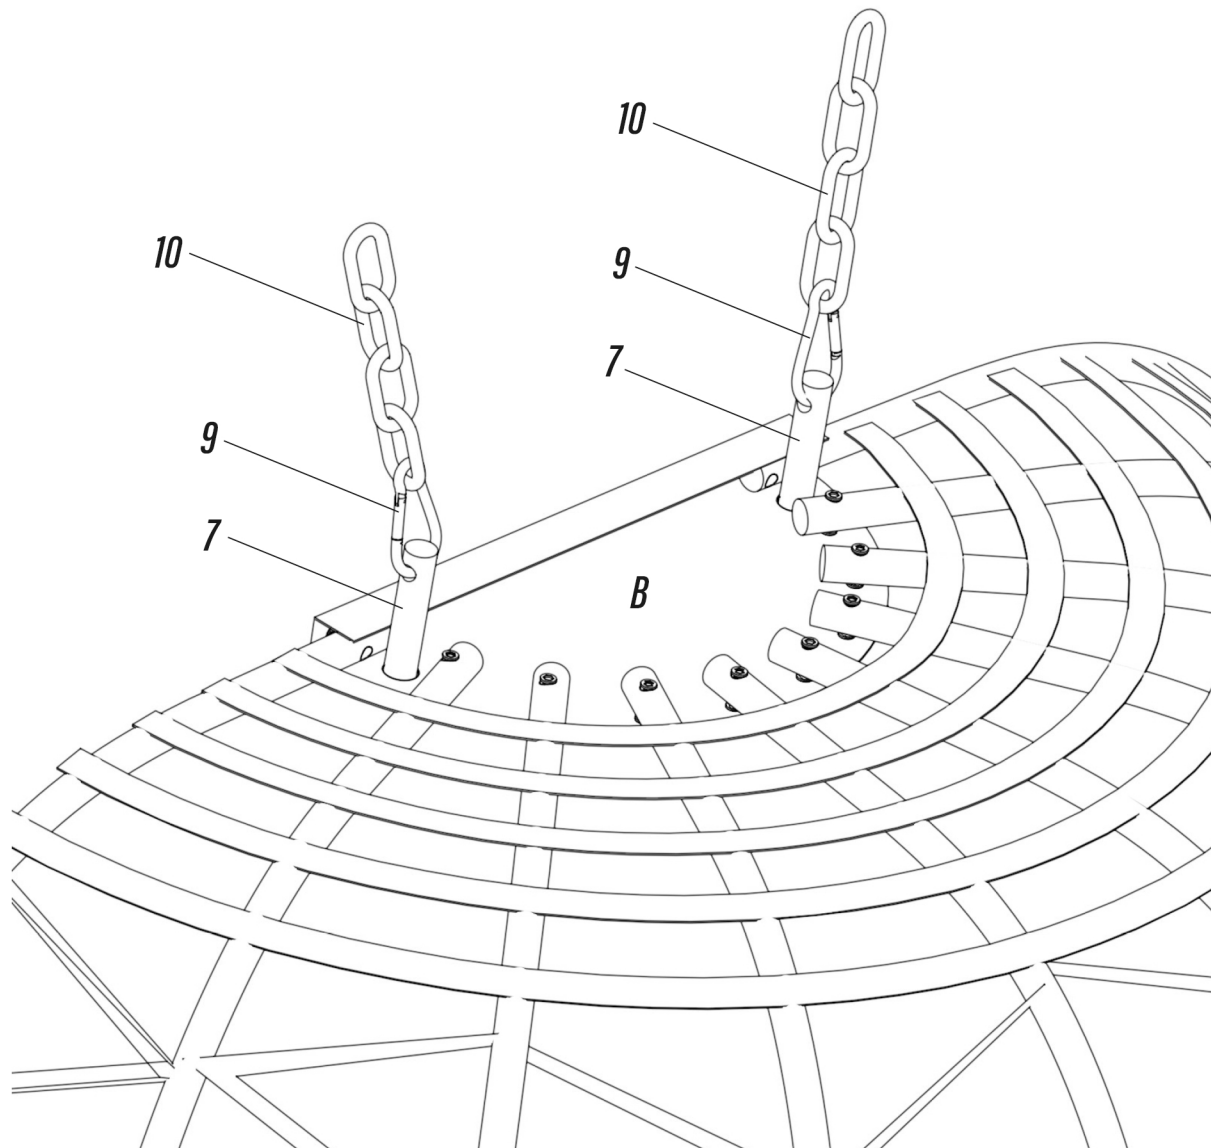
3




4

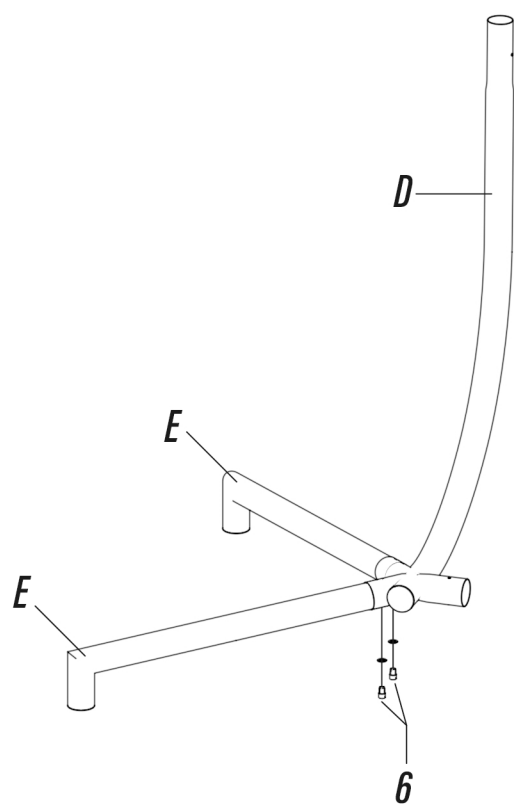

5

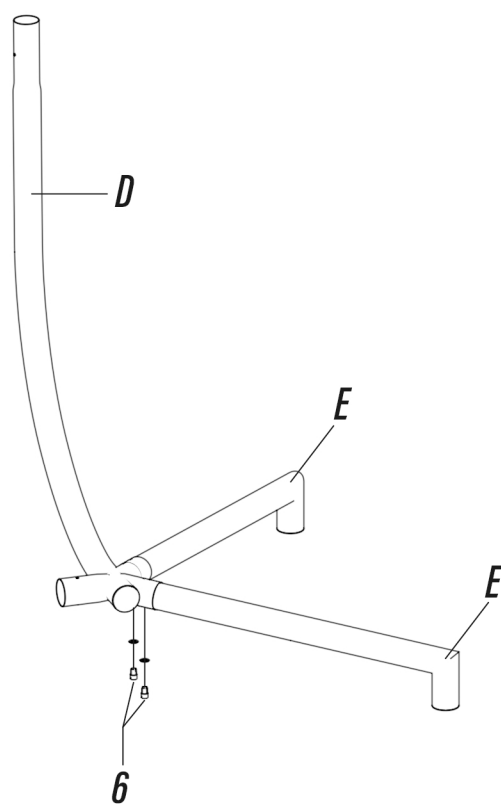


6

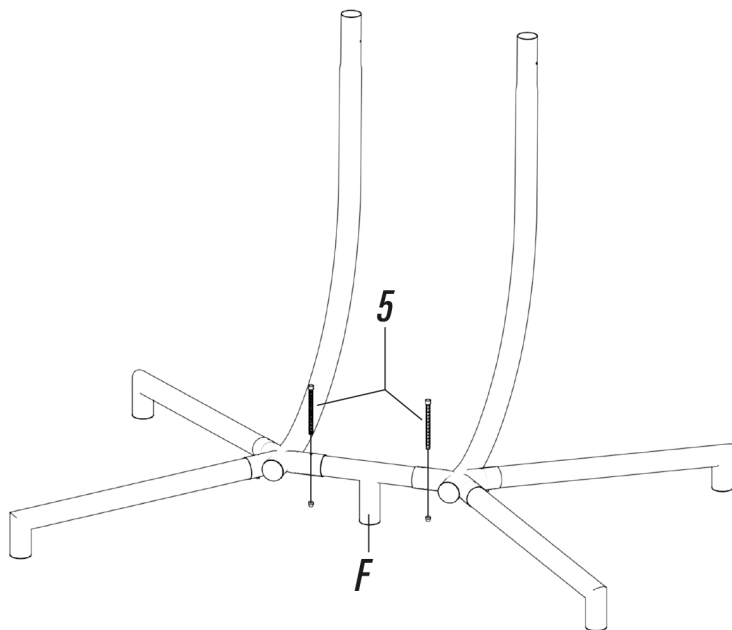


7

Important

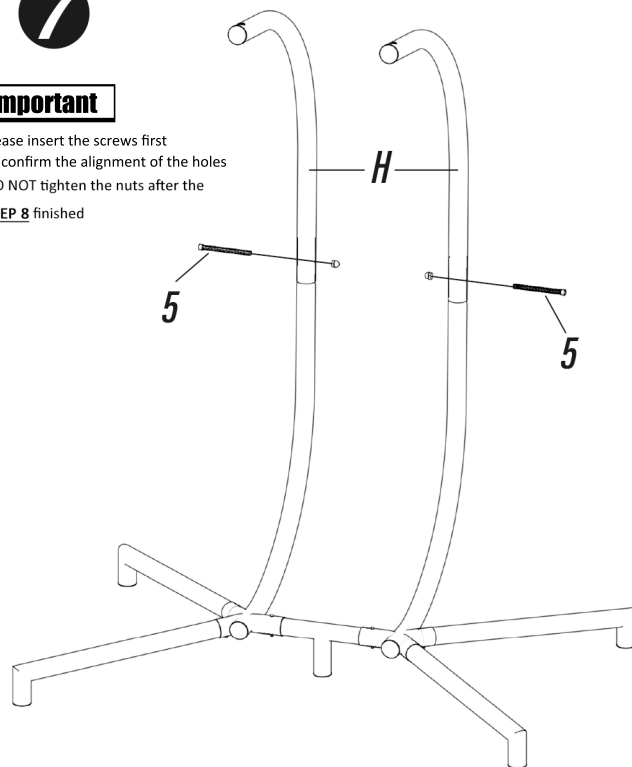Please insert the screws first
to confirm the alignment of the holes
DO NOT tighten the nuts after the
STEP 8 finished



8

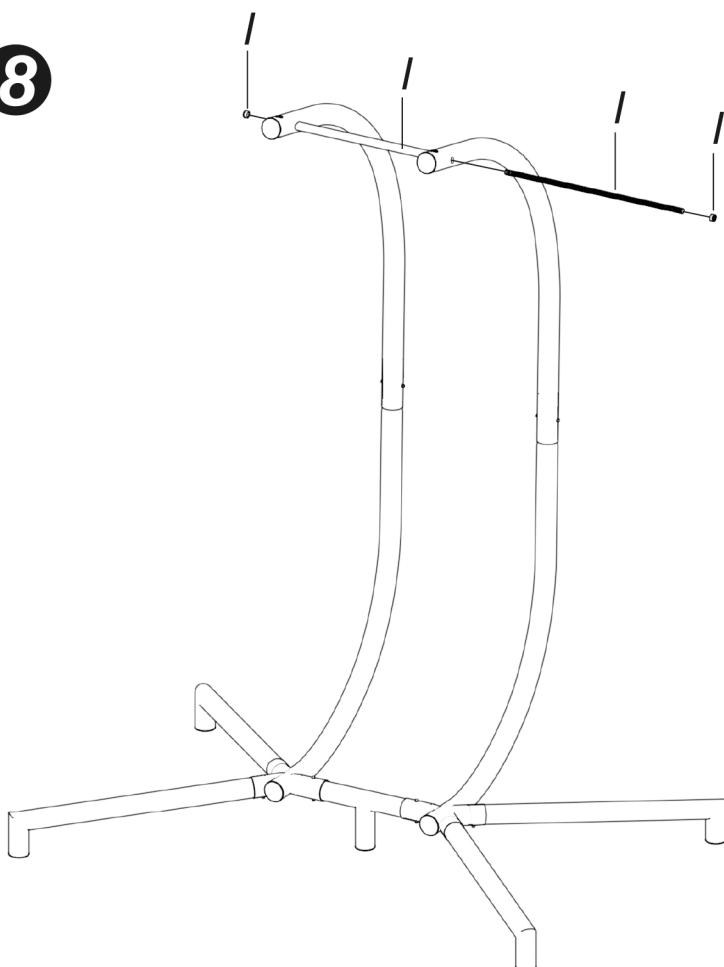

9

