

# BRACKET FOR 1-INCH METAL RODS

## Package Includes:

1 bracket



Installation hardware

## Installation Instructions:

Place bracket on the wall in desired position and mark the location with a pencil.

Brackets should be placed approximately 1 ½" from the end of your drapery rod to allow for finials. It is advisable to use a level to determine the vertical position of each bracket so that drapery will hang evenly

1. Drill hole into drywall large enough to fit anchor snugly. Screw anchor into hole.
2. Mount brackets using the enclosed screws. Mount the brackets with the set screw on the bottom of the hole for the rod.

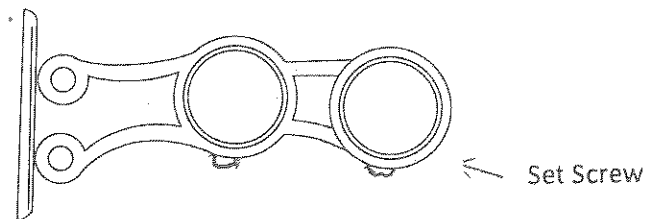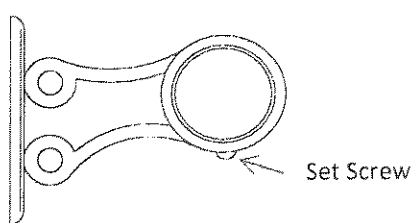

Tighten set screws in brackets to ensure rod will remain in place and not slide back and forth.