
Page 1 of 3

F09B601 & F09B605 & F09B609 CHAIR DO THIS TWO TIMES


A1	C	Left Arm Rest	1PC
A2	C	Right Arm Rest	1PC
В		Seat Back	1PC
С		Seat Base	1PC
D		M6 x 18 Socket Head Cap Screw	8PCS
Е		M6 x 40 Socket Head Cap Screw	4PCS
F	0	Washer	12PCS
G		adjusting knob	2PCS
Η		Linkage Rod	1PC

Attach right arm rest (A2) to seat base (C) using M6 x 18 socket head cap screw (D) and washer (F) as shown. Attach right arm rest (A2) to seat back (B) using M6 x 40 socket head cap screw (D) and washer (F) as shown.

Loose attach all connections at the beginning, adjust alignments then fully tighten all joints

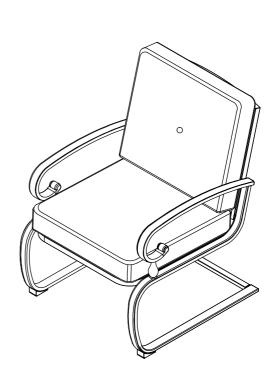

J		Allen Key	1PC
K	·	Back Cushion	1PC
L		Seat Cushion	1PC

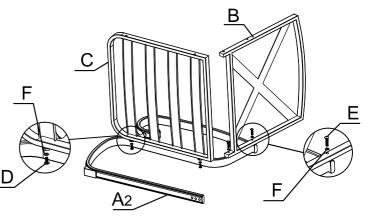


F09B601 & F09B605 & F09B609 CHAIR

DO THIS TWO TIMES


(2)

(3)

Attach left arm rest (A1) to seat base (C) using M6 x 18 socket head cap screw (D) and washer (F) as shown. Attach right arm rest (A1) to seat back (B) using M6 x 40 socket head cap screw (D) and washer (F) as shown.

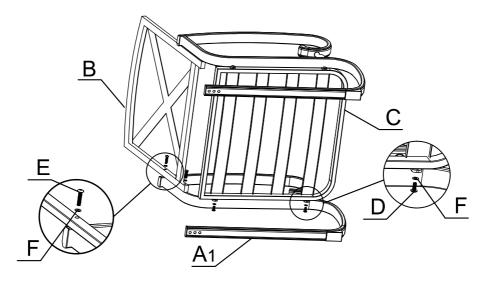

Attach left arm rest (A1) to Linkage Rod (H) using M6*18 socket head cap screw (D) and washer (F) as shown. twist the adjusting knob (G) after screws is tight as shown.

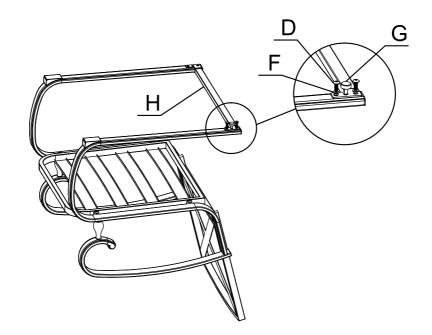

Loose attach all connections at the beginning, adjust alignments then fully tighten all joints

F09B601 & F09B605 & F09B609

COFFEE TABLE

PART LIST	FIGURE	QUANTITY	DESCRIPTION	
A		1 PC	TABLE TOP	
В		4 PCS	LEG	
С	\bigcirc	1 PC	LEG CONNECTOR	
D		12 PCS	BOLT (M6*25)	
E	0	12 PCS	FLAT WASHER	
F		1 PC	ALLEN WRENCH	
STEP 1 A. PLACE TABLE TOP (A) U PROTECTED SURFACE. B. ATTACH LEGS (B) TO TA WASHER (E) AND BOLT (D NOT TIGHTEN COMPLETEI	NBLE TOP (A) WITH FLAT) USING ALLEN WRENCH (F). DO	D E A C C C		
	TOR (C) TO LEG (B) WITH FLAT D) USING ALLEN WRENCH (F). ETELY.			
(F).				