
## **INSTALLATION GUIDE**

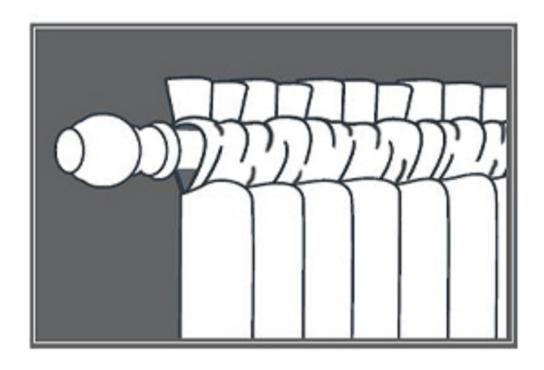

- Detatch finial from rods and apply window treatment.
- Reattache the finial and styler your window treatment.