

RECTORSEAL






A CSW Industrials Company

INSTALLATION INSTRUCTIONS

WBB300/WBB500 Wall Brackets

PRODUCT CODES **87733/87735**


Includes:

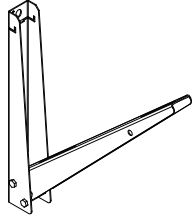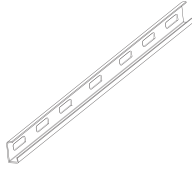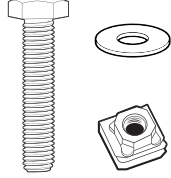Bracket Arm (x2)	Crossbar (x1)	Rubber Mount (x4)	8x80mm Lag Screw (x6)	10mm Concrete Anchor (x6)	1" Bolt (x4) Clip Nut (x4)
					

Instructions:


STEP 1

Extend bracket arms.

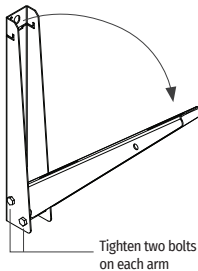


STEP 2

Level and attach crossbar with two lag screws or anchors provided (substitute other fastener types where appropriate). Slide extended bracket arms onto crossbar.

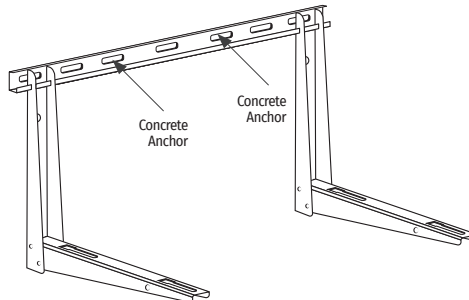


STEP 3

Insert clear clip/nut into mounting key hole from below arm. Attach rubber mount through key hole, aligning center hole with clip/nut. Repeat and slide all four mounts to the center of their respective slots.

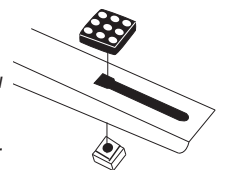


STEP 4

Unscrew rubber stand-offs on the back of each arm as needed to level both arms.

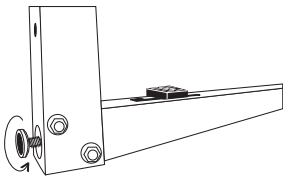


STEP 5

Position arms to accommodate equipment measurements and tighten set screws. Use remaining lag screws or anchors to secure bracket arms.

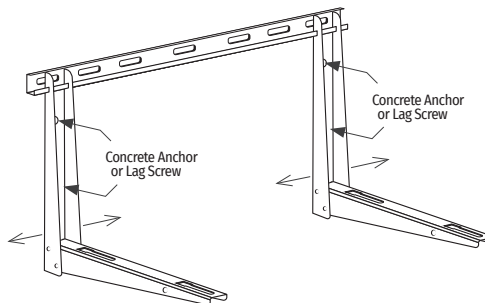

STEP 6

Position mounts to accommodate equipment measurements. Place condenser on mounts aligning holes in feet with center hole in mounts. Attach using 4 provided bolts.

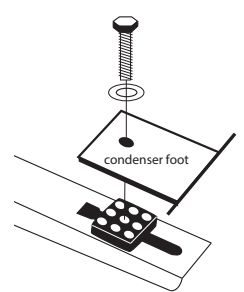

Limited Warranty



For more information on our product limited warranty, visit RectorSeal.com

Manufactured by

RectorSeal, LLC

2601 Spenwick Drive • Houston, TX 77055, USA • 800-231-3345 • Fax 800-441-0051 • rectorseal.com

A CSW Industrials Company. RectorSeal, the logos and other trademarks are property of RectorSeal, LLC, its affiliates or its licensors and are protected by copyright, trademark and other intellectual property laws, and may not be used without permission. RectorSeal reserves the right to change specifications without prior notice. ©2022 RectorSeal. All rights reserved. R50899-0422