


Let's build the

Jenny Side Table

SKU 34505

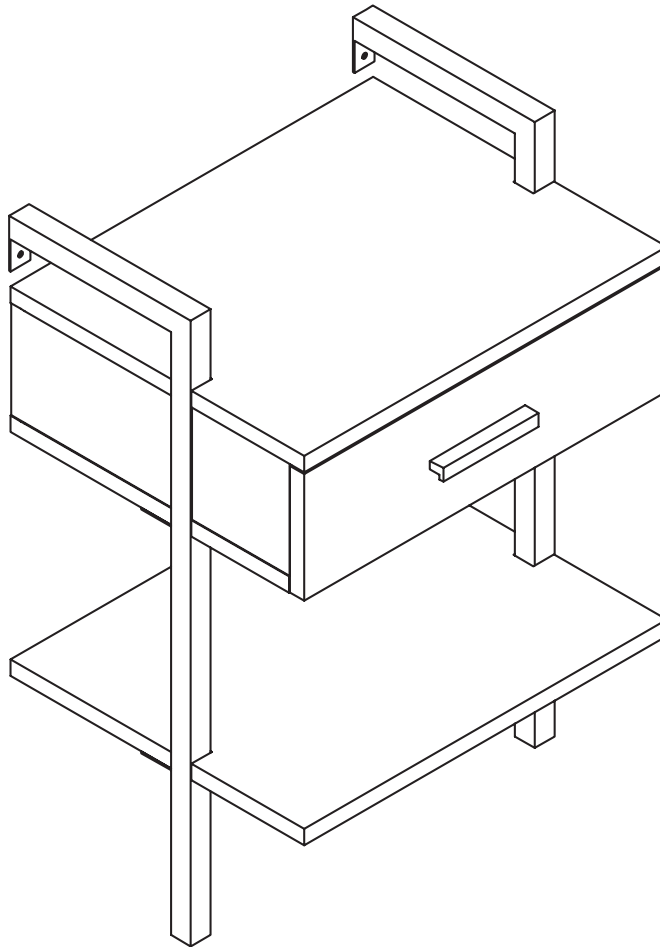

Scan me!

Inspiration
Digital Instructions
Free Lifetime Warranty

nathan james

22-0111

Ok, let's get rolling

This should be easy, just follow our instructions and you will be back to Netflix in no time.

Estimated time for assembly



What you need

- Some of your favourite bubbly or your preferred relaxant
- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver
- Drill with 1/4" and/or 5/16" drill bits

Weight Limitation



Toll-free at 1-866-619-1004
Help@nathanjames.com
Nathanjames.com/help

What's included


Description	Qty
A Top Panel	1
B Bottom Panel	1
C Shelf Panel	1
D Left Side Panel	1
E Left Side Panel	1
F Right Side Panel	1
G Right Side Panel	1
H Back Panel	1
J Drawer Bottom Panel	1
L Drawer Back Panel	1
M Drawer Front Panel	1
N Left Drawer Side Panel	1
O Right Side Drawer Panel	1
P Metal Frame	2

Scan me!


Inspiration
Digital Instructions
Free Lifetime Warranty




The goods

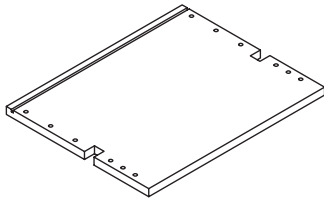


A

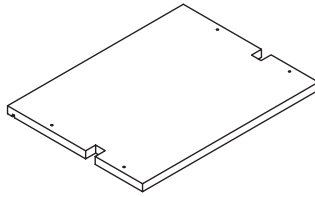


B

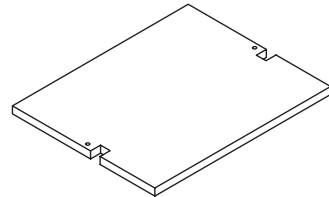


C

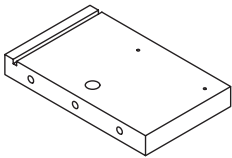


D

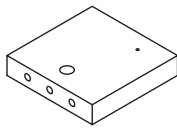


E

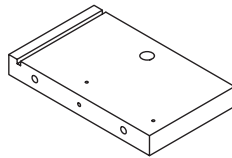


F

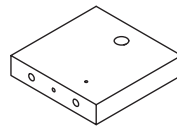


G

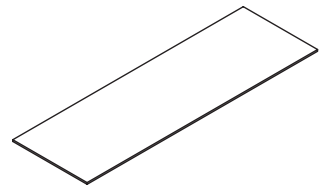


H

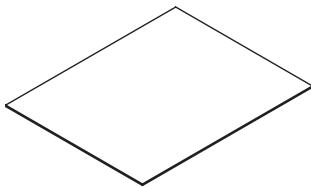


J

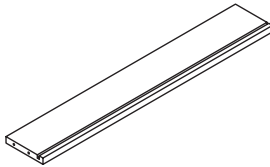


L

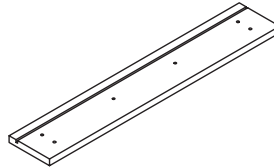


M

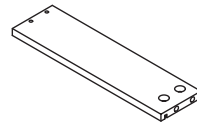

N

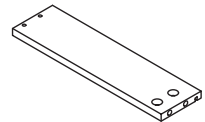

O

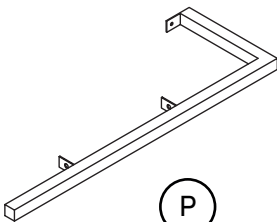

P

IMPORTANT




1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.



What's included

Description		Qty
1	M6*15 mm Bolt	4
2	Cam Bolt	8
3	Cam Lock	8
4	Wooden Dowel	16
5	Handle	1
6	M4.2*40 mm Screw	8
7	M4*23 mm Bolt	2
8	M3.5*12 mm Screw	12
9	M4.2*32 mm Screw for Non-drywall Anchor	2
10	M4.2*50 mm Screw for Drywall Anchor	2
11	Non-drywall Anchor	2
12	Drywall Anchor	2
13	Plastic Pad	4
14	Allen Key	1
15	Drawer Runner Set	1

The goods

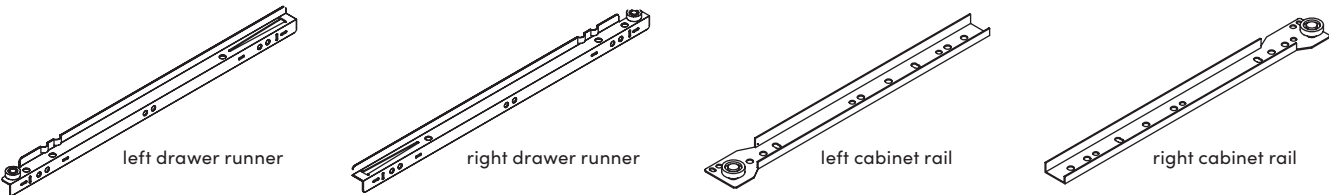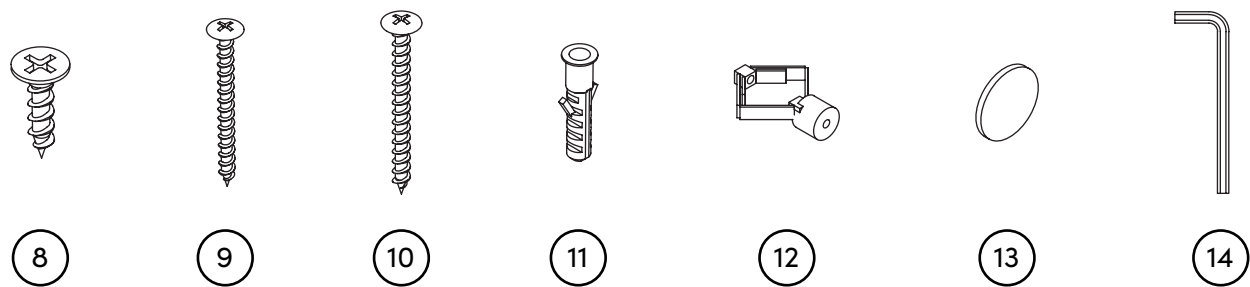
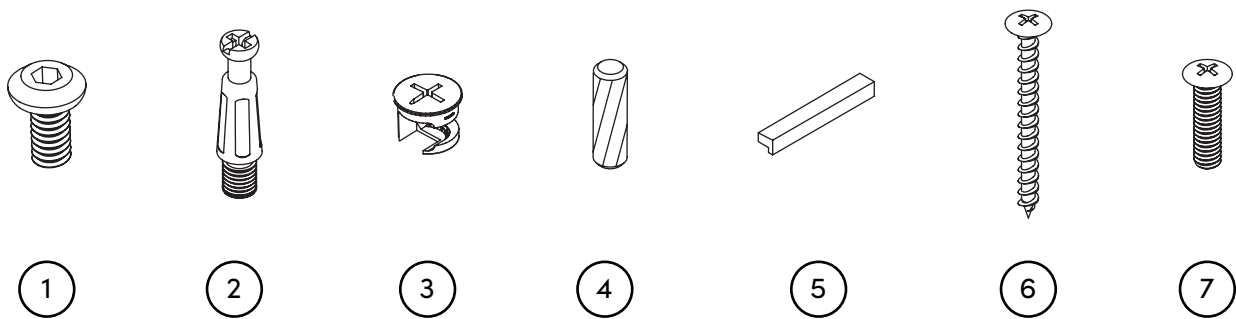


15




Step 1

Let's get this thing fired up! We'll start with the Cam Locks (2) and Wooden Dowels (4). Insert the Wooden Dowels (4) into the sides of the Left Side Panels (D)(E) and Right Side Panels (F)(G). Screw the Cam Bolts (2) into the Top Panel (A) and Drawer Front Panel (M).

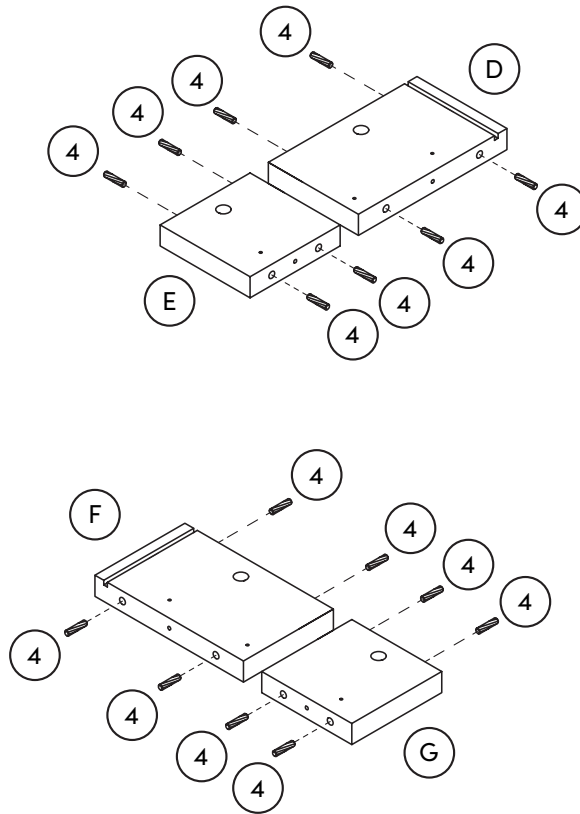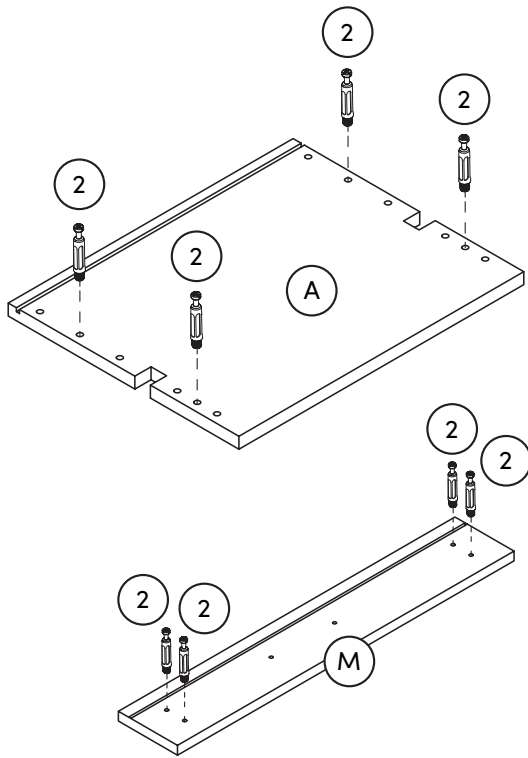

Step 2

Now let's put those pieces together! Align the Left Side Panels (D)(E) and the Right Side Panels (F)(G) on top of the Top Panel (A). The Cam Bolts you inserted in the last step should align with the holes in the side panels. Use Cam Locks (3) to secure the panels in place.

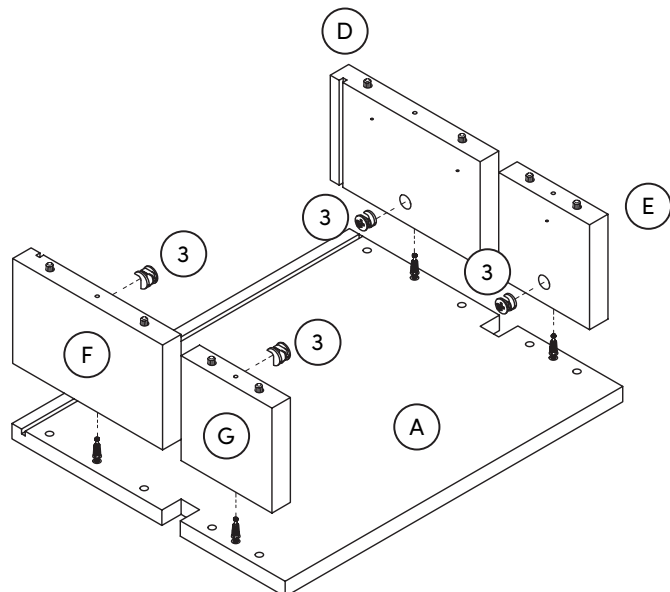





Step 3

Now it's time to assemble the Cabinet Rails (15).




We'll be using the rails labeled CL and CR.

Attach the CL rail using M3.5*12 mm Screws (8).

Be sure that the wheel of the rail is facing the front of the cabinet. Repeat this process for the CR rail, again ensuring the wheel of the rail is facing the front of the cabinet.

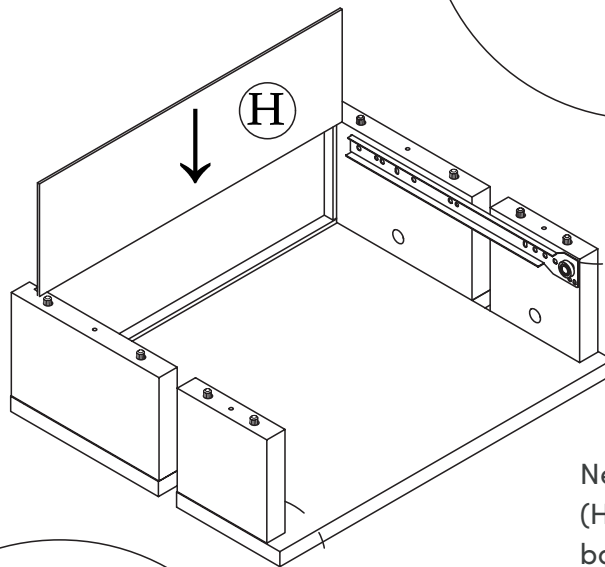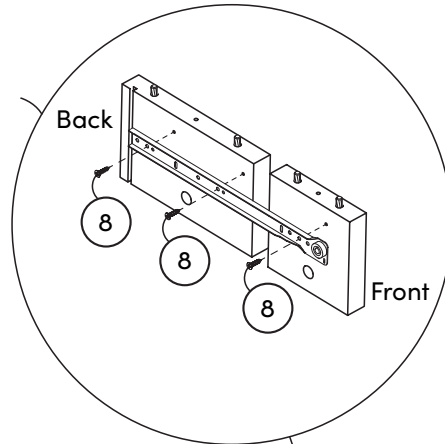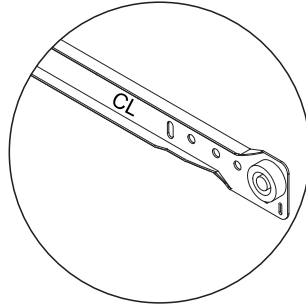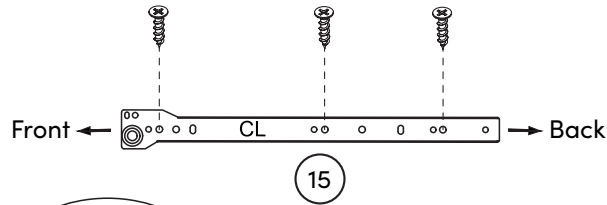


Next, slide the Back Panel (H) into the groove in the back of the cabinet.

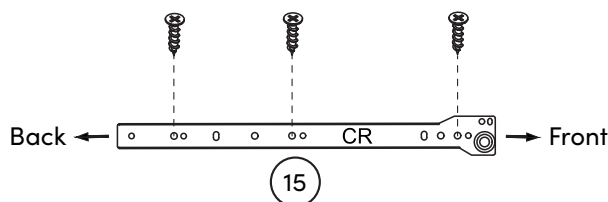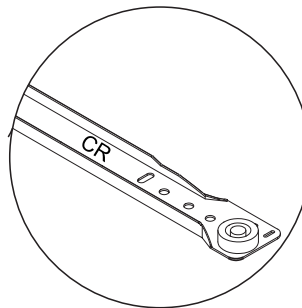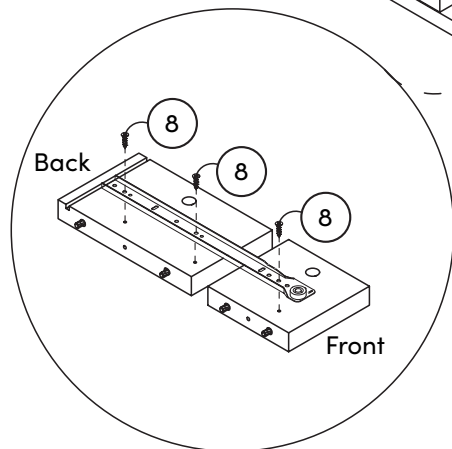


Step 4

Attach the Bottom Panel (B) to the cabinet you built in the previous steps with M4.2*40 mm Screws (6).

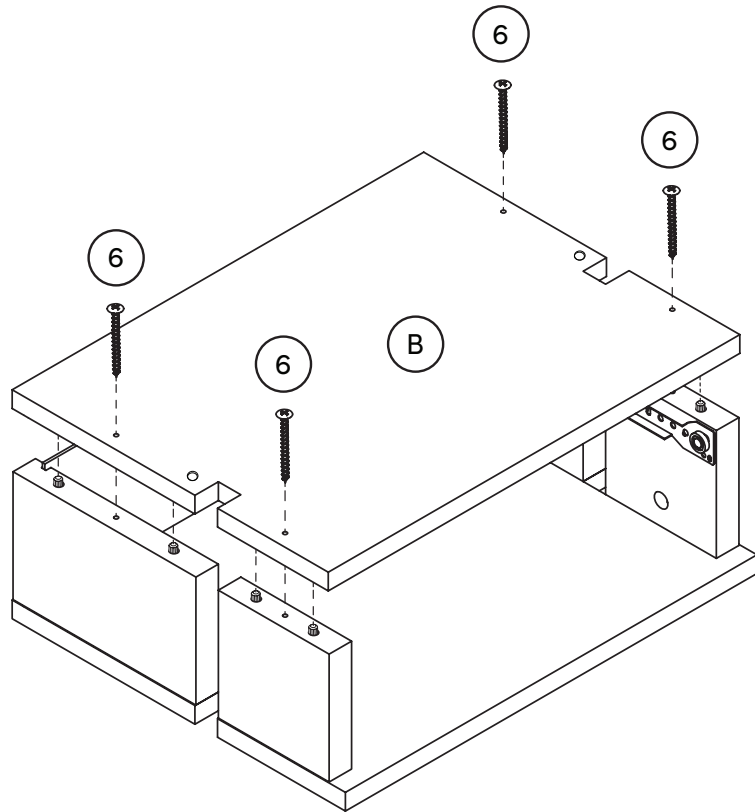


Step 5

You're doing great! Now it's time to start on the drawer. Attach the Left Drawer Side Panel (N) and the Right Drawer Side Panel (O) to the Drawer Back Panel (L) using M4.2*40 mm Screws (6).

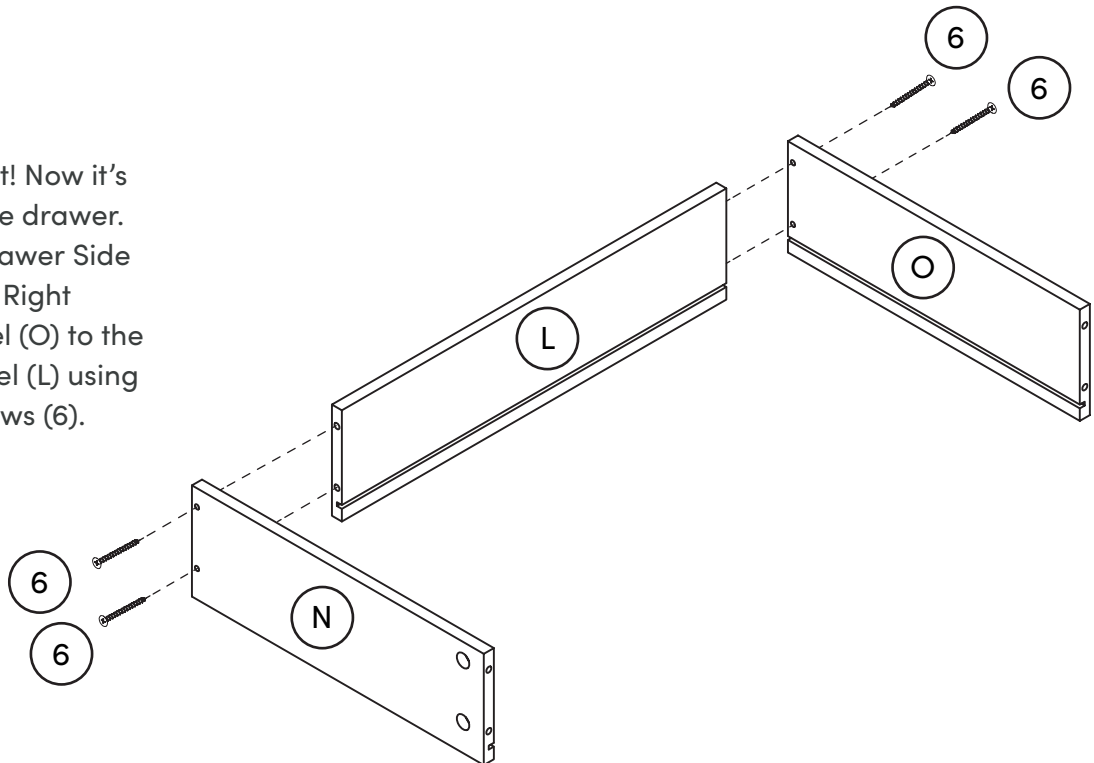


Step 6

Slide the Drawer Bottom Panel (J) into the drawer base you created in the last step.

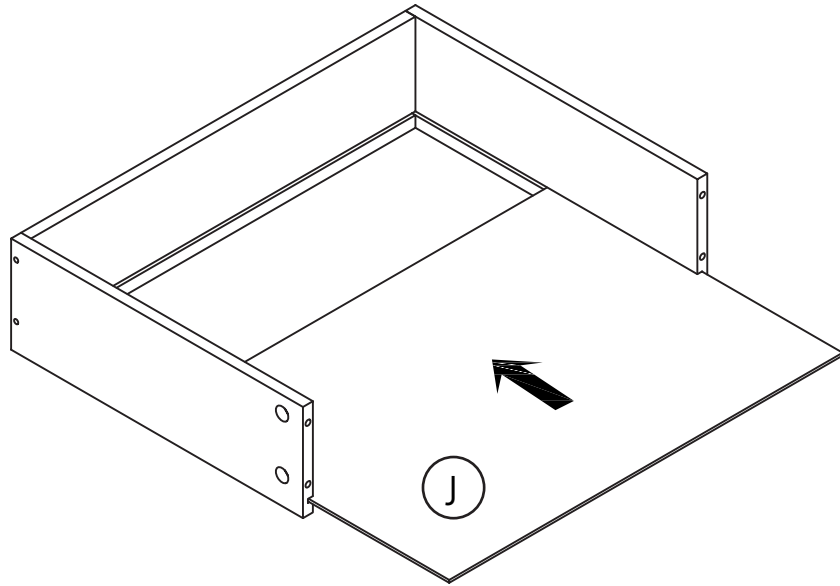


Step 7

Time to finish up this drawer. Attach the Handle (5) to the Drawer Front Panel (M) with M4*23 mm Bolts (7). Next, attach the Drawer Front Panel (M) and lock into place with Cam Locks (3).

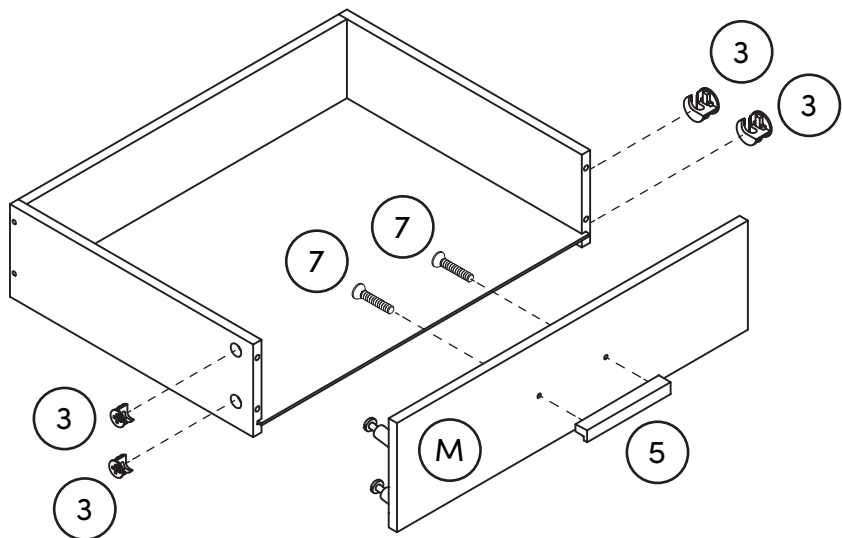


Step 8

Time to attach the Drawer Runners (15). We'll be attaching the runners labeled DL and DR. Attach DL underneath the drawer on the left side with M3.5*12 mm Screws (8). Be sure the wheel of the rail is facing the back of the drawer. Repeat this process with the right side rail labeled DR.

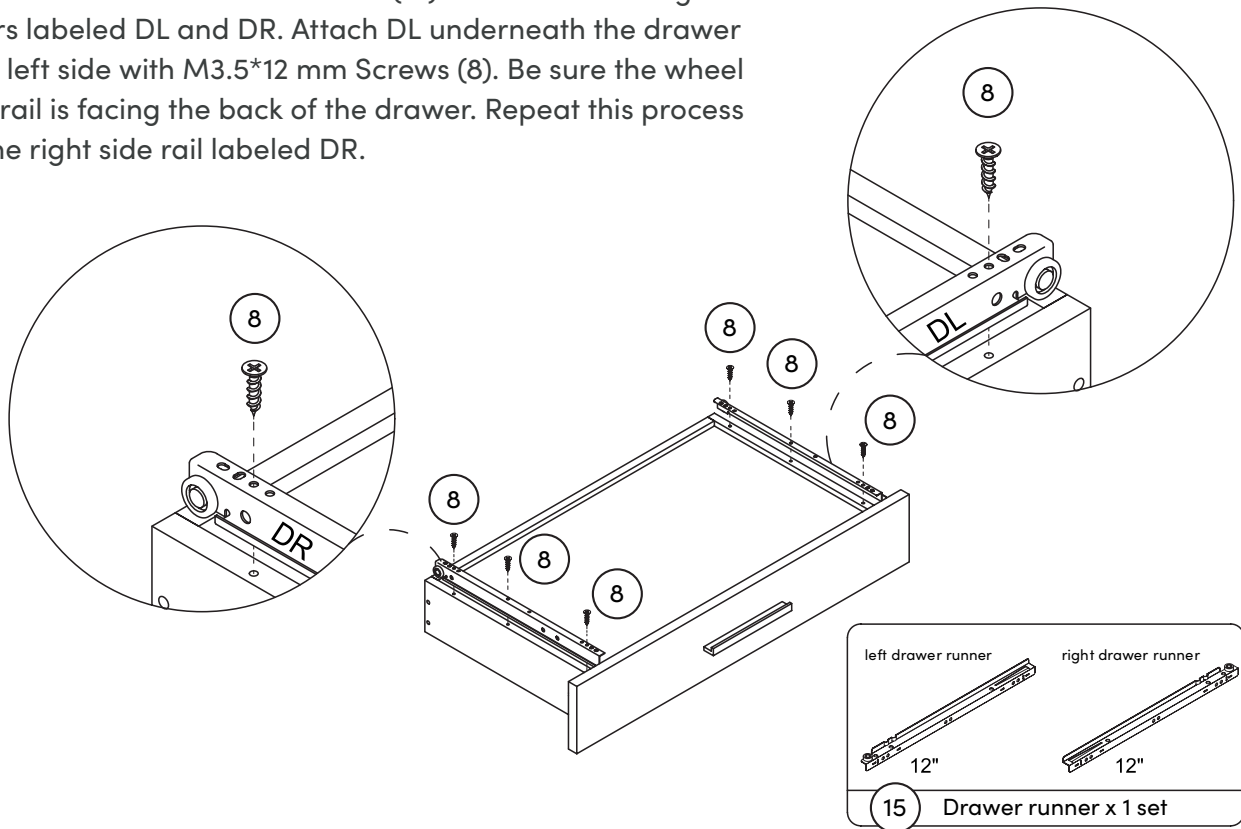


Step 9

You're almost done! Now would be a good time to order a pizza to enjoy with your new side table. Attach the Metal Frames (P) to the bottom of the Bottom Panel (B) and Shelf Panel (C) with M6*15 mm Bolts (1). Use the Allen Key (14) to tighten bolts.

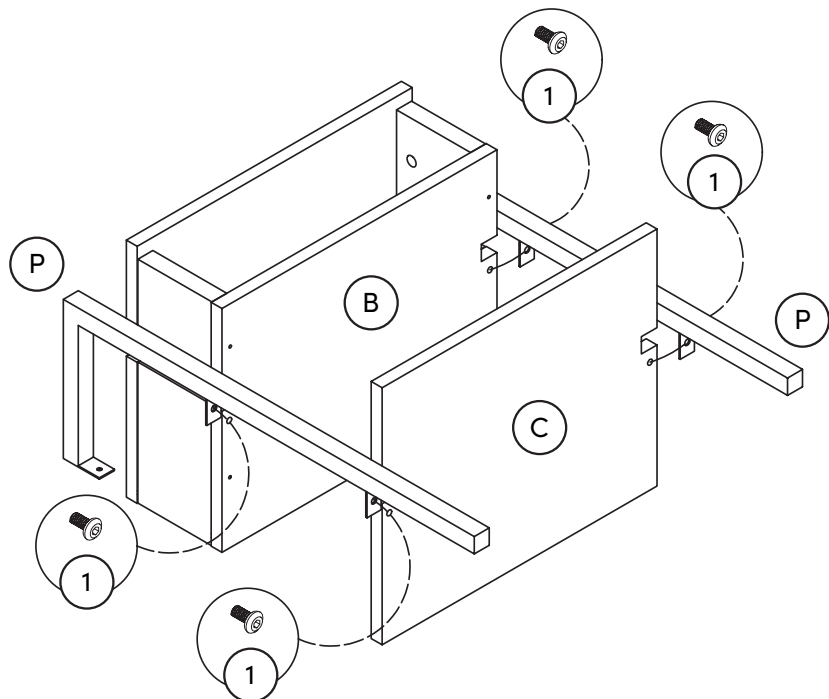


Step 10

Slide the completed drawer into the cabinet.

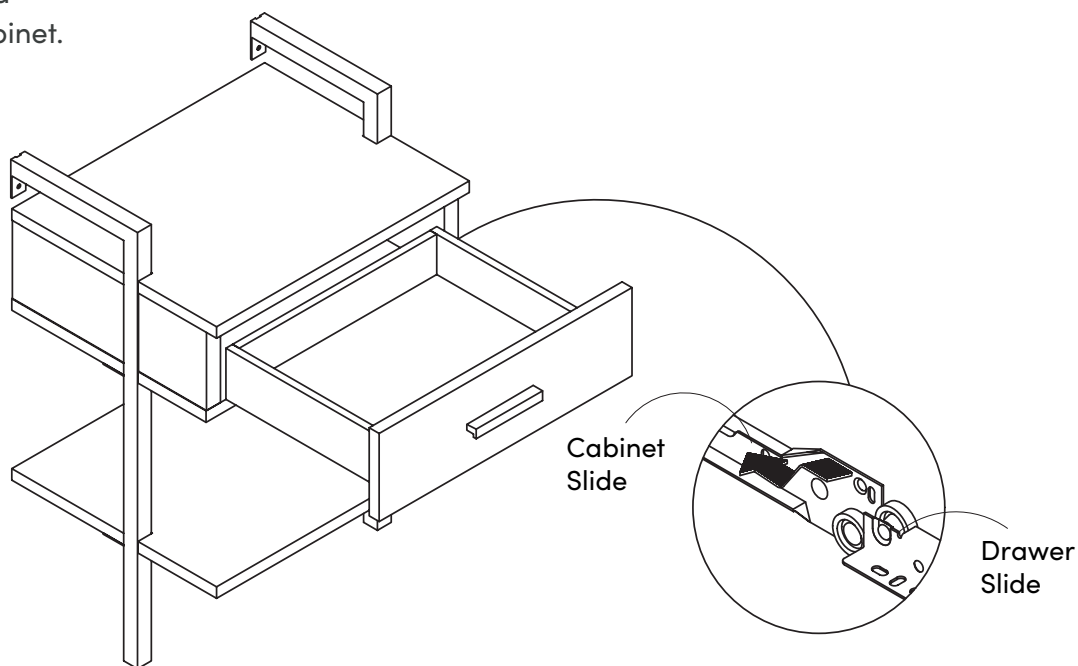


Step 11

Attach Plastic Pads (13) to each corner of the back of the drawer.

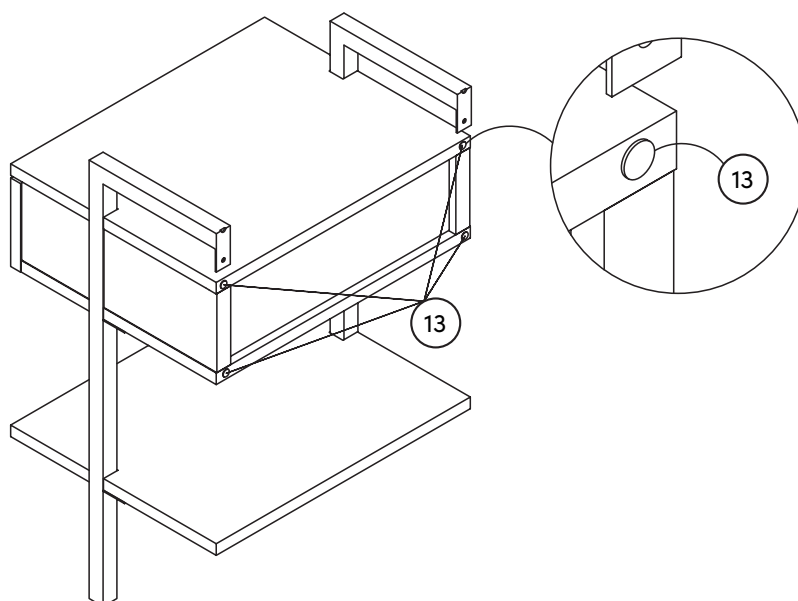

Step 12

You made it to the last step! We're so proud of you. Time to attach this baby to the wall! We'll be using screws and anchors to secure it. See the following pages for detailed instructions on how to do this.

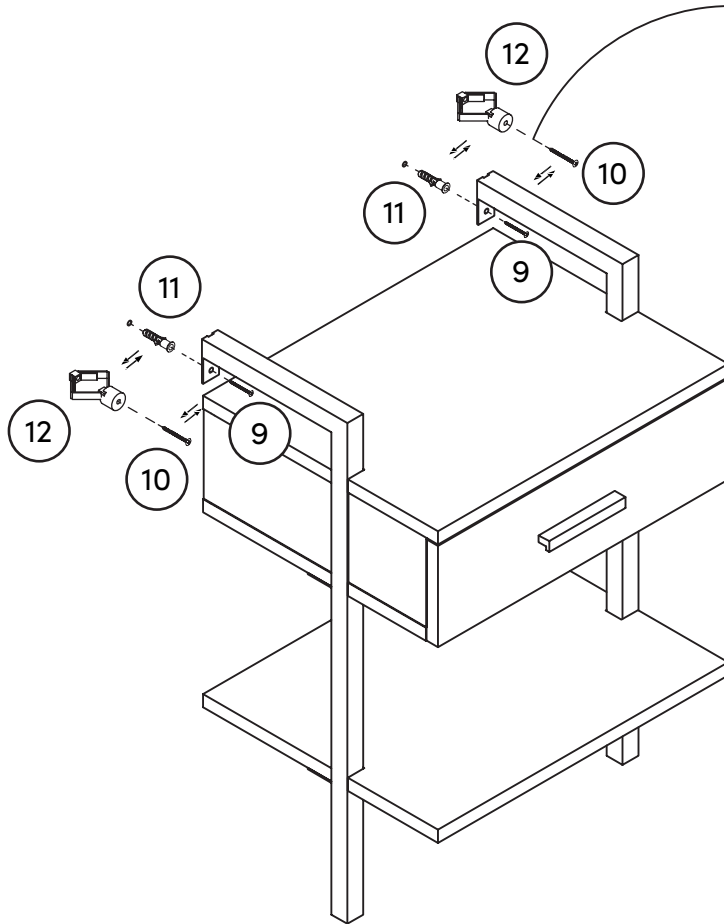

Please note...

Parts 9 & 11 are for non-drywall applications. Parts 10 & 12 are for drywall applications.

See following pages for more detailed instructions.




Step 12 (cont.)

Non-drywall application


Mark it

Chose your desired location on the wall, have your friend hold the table in place and use a pencil to mark where the anchors will go.

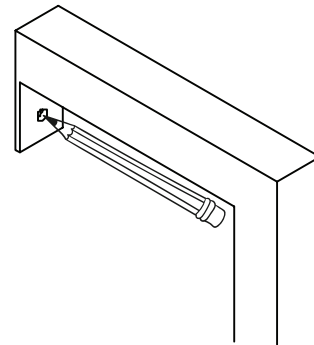

1/4" Drill bit


Move the table to the side and following the marks you just made, with a 1/4" drill bit, drill 2 holes into the wall.

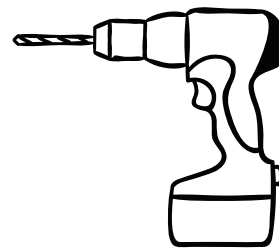

Insert the anchors


Go ahead and tap the wall anchors into place in the new holes that you just drilled.

If you're feeling strong, just go ahead and push it in.

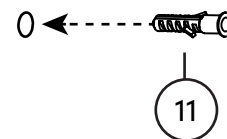

All about the angle

Insert 1 screw through each metal bracket and into the wall anchor. Tilt your phillips head screwdriver, and secure but do not over tighten.

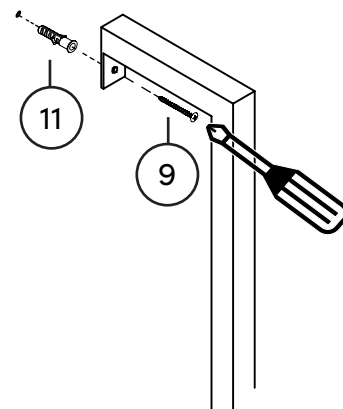


Step 12 (cont.)

Drywall application


Mark it

Chose your desired location on the wall, have your friend hold the table in place and use a pencil to mark where the anchors will go.

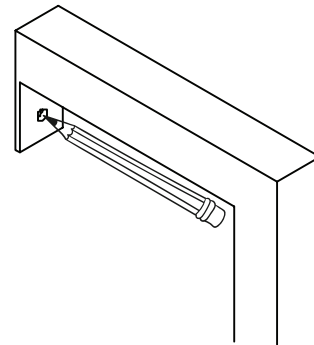

5/16" Drill bit


Move the table to the side and following the marks you just made, with a 5/16" drill bit, drill 2 holes into the wall.

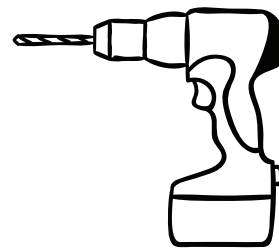

Insert the anchors


Go ahead and tap the wall anchors into place in the new holes that you just drilled.

If you're feeling strong, just go ahead and push it in.

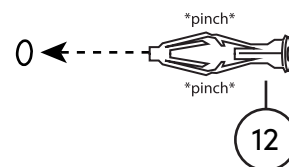


All about the angle

Insert 1 screw through each metal bracket and into the wall anchor. Tilt your phillips head screwdriver, and secure but do not over tighten.

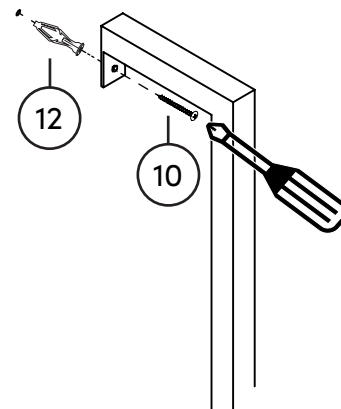


Step 12 (cont.)


How to use drywall anchors

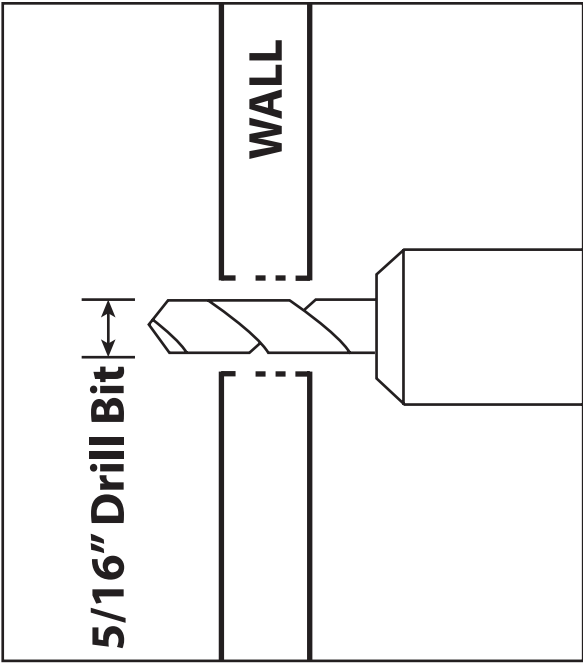


1. Drill hole with 5/16" bit

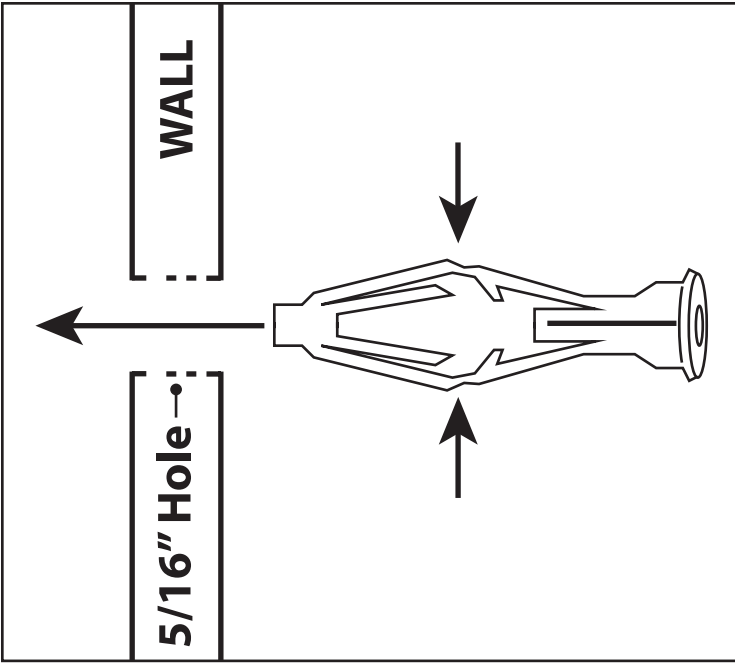

2. Pinch and insert

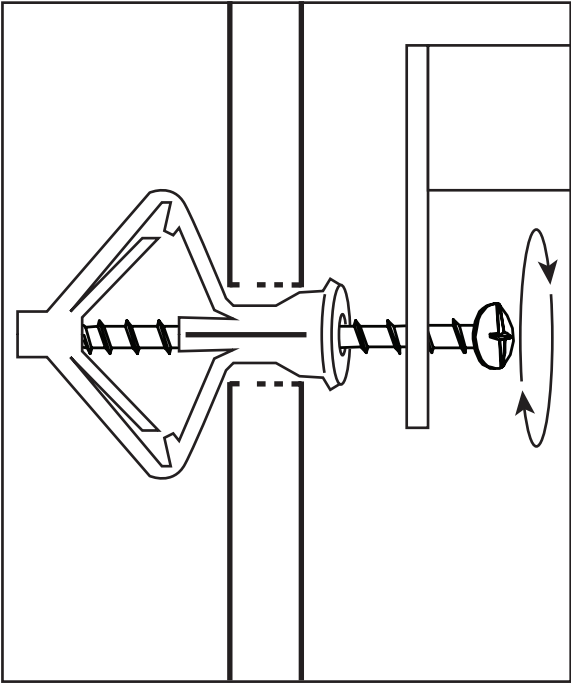

3. Begin tightening

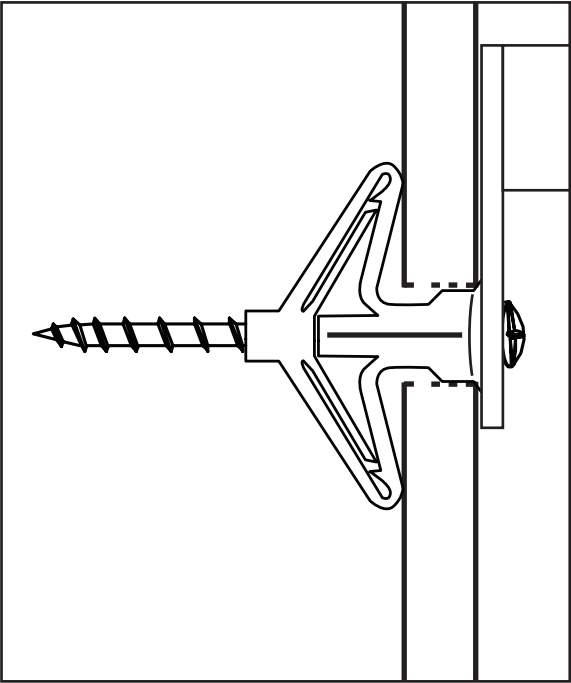

4. Tighten to 100%



No heartburn, when we handle the return

Give us a call **1-866-619-1004** or shoot us a message
at **help@nathanjames.com** we will issue you a free
replacement with **zero hassle**.

Our way



Give us a call



Replacement



You

Their way



Re-package item



Schedule pick up



Track package



Replacement



You

We really don't want you to go through the hassle of re-packaging your item
and sending it back, because let's be honest...nobody has time for that.



Safety first, fun later

We want your Jenny Side Table to last as long as possible, so we recommend that you tighten the screws 2 weeks after assembly and for added safety check the tightness of all screws every 2 months.

For proper care and treatment of fabric & metal please check our website at NathanJames.com/products

Safe use of this product starts with you.

Use this side table responsibly with the primary concern for your safety. Follow assembly instructions carefully and inspect product upon receipt and each use.

Nathan James and its parent companies cannot be held legally responsible for any injuries or death resulted from failure to follow instructions or improper use of this product.

Do not modify the structure of this product in any way.

Our products have been tested to meet specific safety measures as they were originally intended to be sold. Any modifications will present the risk of creating significant safety issues which NJ will not be responsible for.

Proper use

- | | |
|---------------|--|
| DO NOT | use for commercial purposes |
| DO NOT | place on uneven floor or surface |
| DO NOT | use as a step stool or stand on table |
| DO NOT | leave spilled liquid on table top |
| DO NOT | put hot serving liquid directly on table top |
| DO NOT | use table if damaged or broken |
| DO NOT | make temporary repairs |
| DO NOT | use outdoors |



We are only in business if you're happy

For starters, thanks for being you.

☎ Toll-free at 1-866-619-1004


✉ Help@nathanjames.com

🌐 NathanJames.com/help

We do our best to ensure your furniture arrives without any problems, but occasionally mistakes happen—as humans we are imperfect beings. In the event that a part is damaged or missing, we will be more than happy to provide you with replacement part(s) for free.

Warranty

This product comes with a lifetime warranty from the date of purchase. Please use your phone to scan the QR code to register your product or visit <https://goo.gl/i9dk3q>

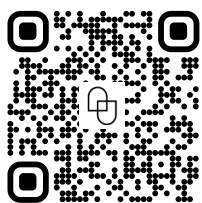

Did we do alright? Please spread the love!

If you are happy with your product, tell your friends and family about us or even better leave us a review online. Spreading the word gives us the opportunity to make more people happy and keep our prices low for your next purchase.

Brooklyn Burdon

Founder, Nathan James