

Kit Includes:

72" Powerwire Prewired PowerOutlet | 12" Powerwire Prewired PowerInlet
Pre-wired PowerConnectors | 72" PowerConnect Supply Cord | Template



PowerOUT



PowerIN



Tools for Installation

Not Included



Stud Finder



Level



Drywall Saw



Flat-Blade



Caution - Risk of Fire - Do Not Install Power Supply Cord Within the Wall Cavity
WARNING - Risk of Fire and Shock, Do Not Connect this Box to any Other Circuits or Outlets.
This kit is rated to 15AMP 125Volt use only

Do not install this product near water, example, near a sink, tub, shower, swimming pool or laundry area.

Manufacturer is not liable for damages due to improper installation methods not followed herein.

This product does not have built-in electronic circuitry for surge protection or A/C filtering.

It is recommended that this product be connected to a quality surge-protector/power conditioner for equipment protection.

Disclaimer. HD-Products, Inc. the Manufacturer, it's agents, suppliers, and affiliates, shall not be liable for any damages, not limited to; misuse, acts of nature, verbal and written expression and improper installation. Improper installation is determined such to include, not limited to, non-code compliant installation, product modifications, alterations, adjustments, and substitutions of components or materials.

Limited 2-year Warranty from Manufactures Defects: Limited Two Year product warranty against manufacturer's defects.

HD-Products, Inc., intent to make this manual accurate and complete. However, HD-Products, Inc., makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. HD-Products, Inc., makes no representation of warranty, expressed or implied, regarding the information contained herein.

HD-Products, Inc./LLC. PowerBridge Solution 3869 Norwood Dr. Littleton, CO 80125 USA
Customer Service: 855-755-9838 info@powerbridgesolution.com www.PowerBridge1.com

Part No. ONECK913 ©2013 All Rights Reserved Patent Pending



So Simple... You can do this!™

Step 1 Location - Wall Cutout

PowerOUT - Determine TV wall mount bracket location.


Align between wall framing studs.

Use stud finder to determine in-wall obstructions between framing both VERTICALLY and HORIZONTALLY.

Install in any direction, right/left, horizontal or vertical below, above, next to TV wall bracket.

PowerIN - Align with upper PowerOUT within same stud-bay no more than 60" apart.

Install within 60" from an existing power outlet or power-surge device.

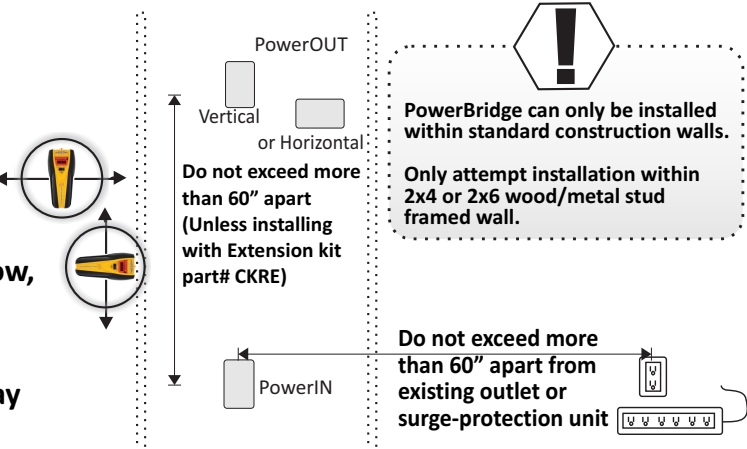

Use supplied template sheet to mark area to cut out from drywall.

Use a level to maintain proper alignment.

Carefully use drywall saw or utility knife to cut along outside of line.



Need to extend the length?
Part# CKRE Extension Kit available
www.PowerBridgeSolution.com/CKRE.html

Warning! If insulation exists, remove or push completely away from the openings to allow proper flush mounting.