

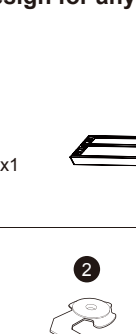


Adjustable Sliding Panel System Instructions

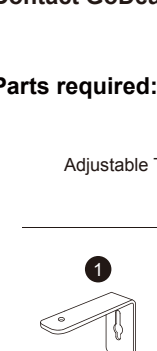


Installation Video

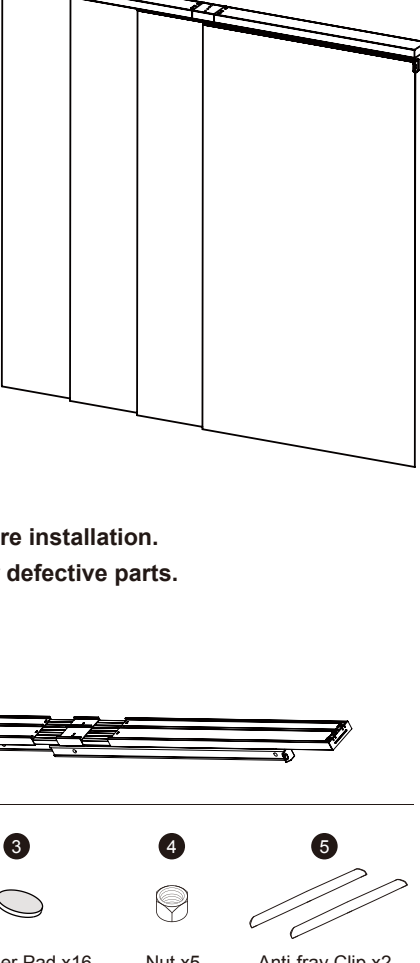

Please check all items in the package before installation.
Contact GoDear Design for any missing or defective parts.

Parts required:

Adjustable Track x1

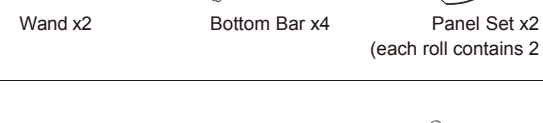

1



"L" Bracket x5
(for wall mount)

2



Mounting Bracket x5

3



Bumper Pad x16

4




Nut x5

5




Anti-fray Clip x2

6

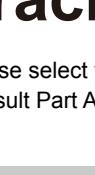


"L" Bracket
Connector Screw x5

7

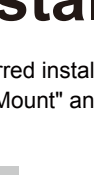

Wall Anchor x10

8

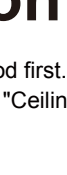


Bracket Screw x10

9




Set Screw x12

10

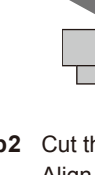


Slice x4

11

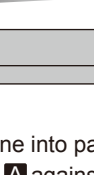


Wand x2

12

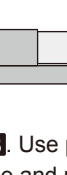

Bottom Bar x4

13

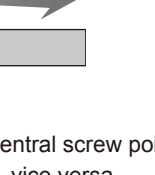

Panel Set x2
(each roll contains 2 panels)


Screw Marker



Measuring Cardboard x1

Allen Wrench x1

Optional Tools

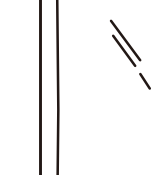

Drill



Screw Driver



Hammer



Tape Measure




Level



Pliers



Scissors

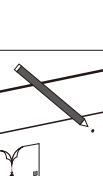


Ladder

Track Installation Steps



Please select your preferred installation method first.
Consult Part A for "Wall Mount" and Part B for "Ceiling Mount."

A) Wall Mount (Please turn to the next page for ceiling mount)

Step1 Please adjust the width to the desired size (maximum 86")
DO NOT overextend the track to prevent part separation.

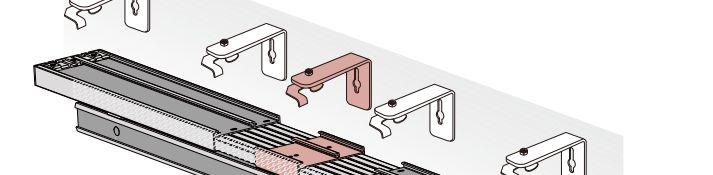


Step2 Cut the dotted line into parts **A** and **B**. Use part **B** to mark the central screw point.
Align cardboard **A** against the left side and mark 2 screw points, vice versa.

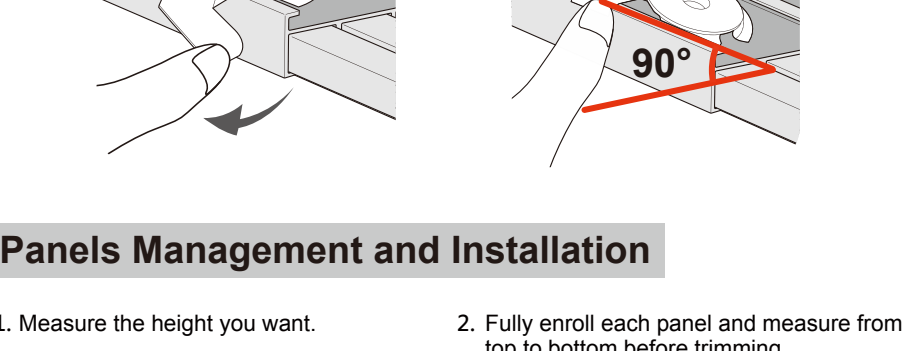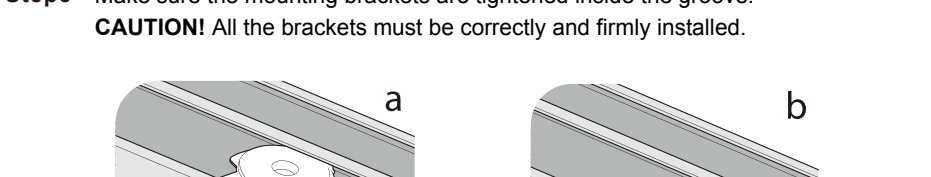


Step3 Tighten the mounting bracket and L bracket to the wall.
Make sure the mounting surface is flat with a minimum 2.5" of bracket height.




Step4 Lock the **MIDDLE** bracket inside the groove first and then lock the other 4 brackets.
We recommend additional hands to finish this step.

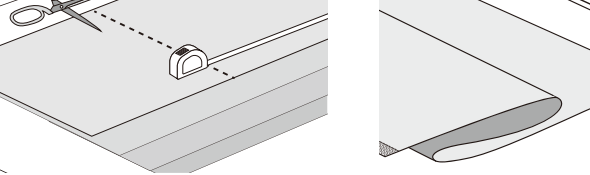

Step5 Make sure the mounting brackets are tightened inside the groove.
CAUTION! All the brackets must be correctly and firmly installed.

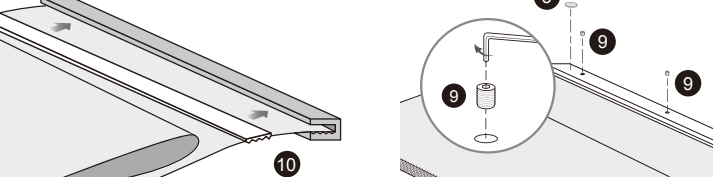

Step6 Make sure the mounting brackets are tightened inside the groove.
CAUTION! All the brackets must be correctly and firmly installed.

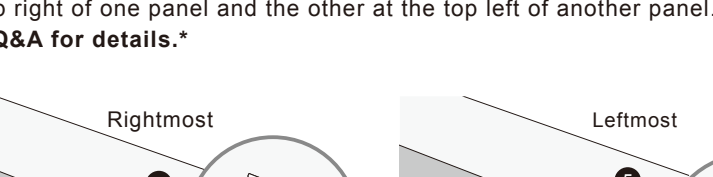


Panels Management and Installation

1. Measure the height you want.




2. Fully enroll each panel and measure from top to bottom before trimming.

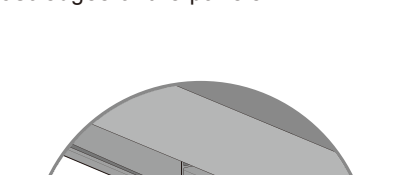


3. Trim the panels' length as you desire.




4. Insert the panels into the bottom bars on a flat surface.

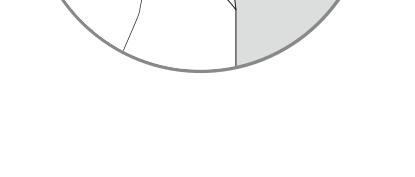

5. Place the slices inside the bottom bars.

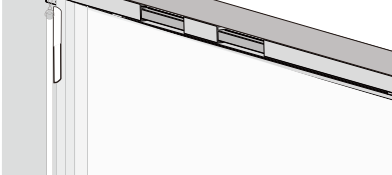

6. Use the Allen wrench to secure the set screws, and attach 4 bumper pads to the front and back of the bottom bars.

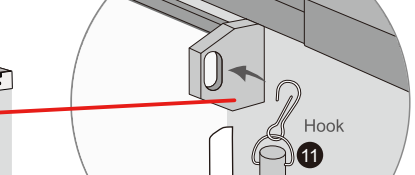


Anti-fray clips


7. Install 2 anti-fray clips on two panels while they are laid flat. Place one clip at the top right of one panel and the other at the top left of another panel.
See Q&A for details.




8. Attach the panels to the track using the hook and loop, ensuring that the clips are positioned at the **leftmost** and **rightmost** edges of the panels.

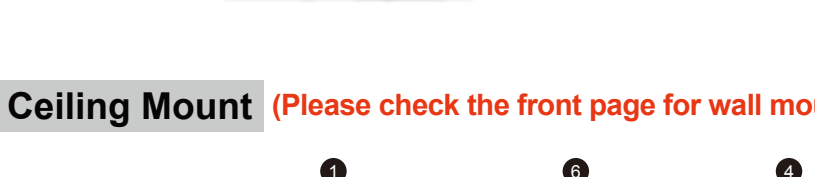

9. Hook the 2 wands to the leading and ending rails.

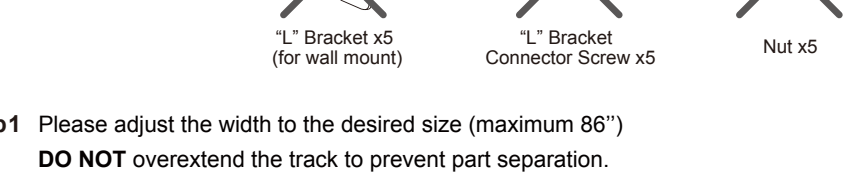


Tips Use wands to open and close the sliding panels by 45 degrees.

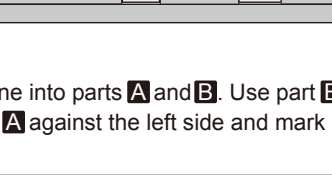


B) Ceiling Mount (Please check the front page for wall mounting)



Parts not required for ceiling mount.

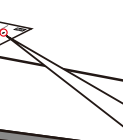


Step1 Please adjust the width to the desired size (maximum 86")
DO NOT overextend the track to prevent part separation.

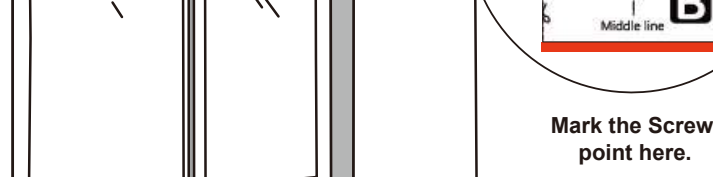


Step2 Cut the dotted line into parts **A** and **B**. Use part **B** to mark the central screw point.
Align cardboard **A** against the left side and mark 2 screw points, vice versa.

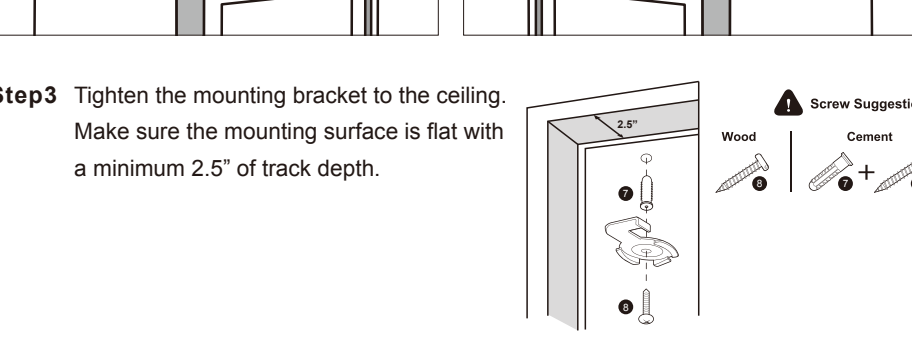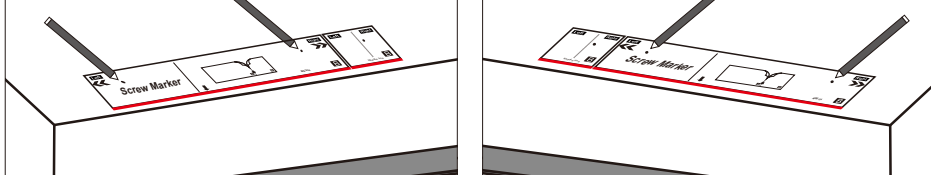


Step3 Tighten the mounting bracket to the ceiling.
Make sure the mounting surface is flat with a minimum 2.5" of track depth.

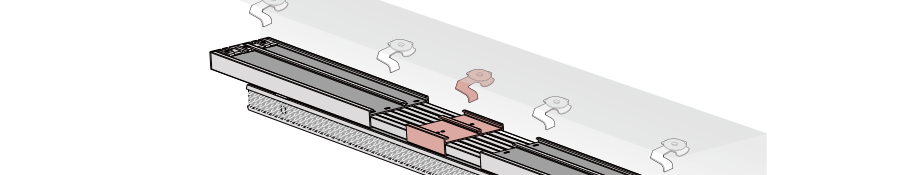


Step4 Lock the **MIDDLE** bracket inside the groove first and then lock the other 4 brackets.
We recommend additional hands to finish this step.

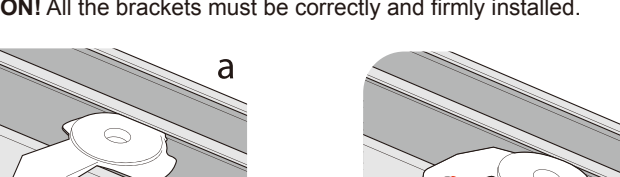

Step5 Make sure the mounting brackets are tightened inside the groove.
CAUTION! All the brackets must be correctly and firmly installed.

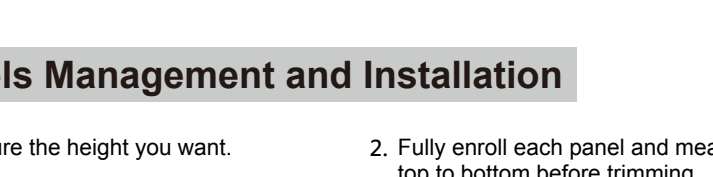


Step6 Make sure the mounting brackets are tightened inside the groove.
CAUTION! All the brackets must be correctly and firmly installed.

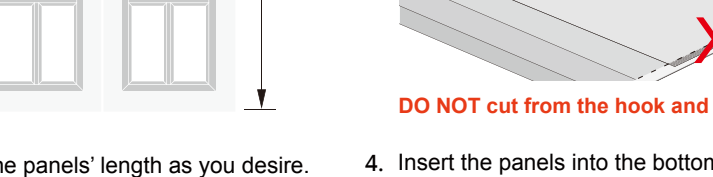


Panels Management and Installation


1. Measure the height you want.

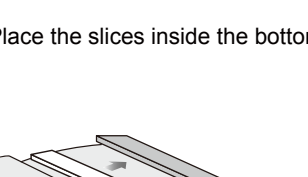

2. Fully enroll each panel and measure from top to bottom before trimming.

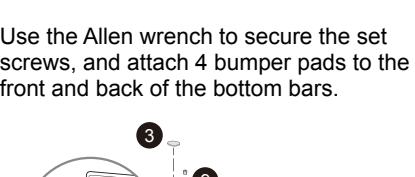


3. Trim the panels' length as you desire.

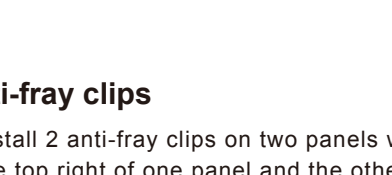


4. Insert the panels into the bottom bars on a flat surface.



5. Place the slices inside the bottom bars.

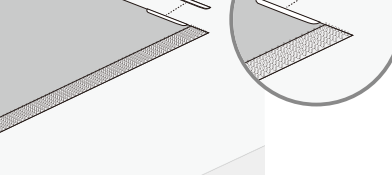


6. Use the Allen wrench to secure the set screws, and attach 4 bumper pads to the front and back of the bottom bars.

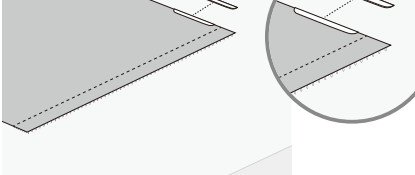


Anti-fray clips


7. Install 2 anti-fray clips on two panels while they are laid flat. Place one clip at the top right of one panel and the other at the top left of another panel.
See Q&A for details.

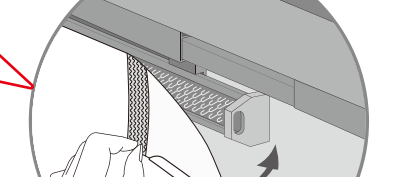

8. Attach the panels to the track using the hook and loop, ensuring that the clips are positioned at the **leftmost** and **rightmost** edges of the panels.

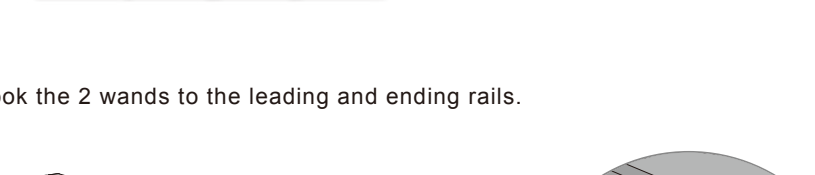

9. Hook the 2 wands to the leading and ending rails.

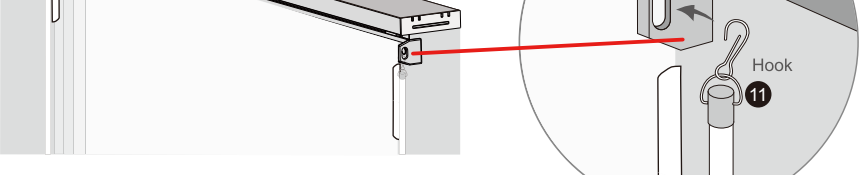


Tips Use wands to open and close the sliding panels by 45 degrees.




Instructions Q&A

1. Tips for installing the anti-fray clips:


a. Place two credit cards (or similar items) into the clips.

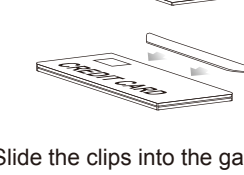

b. Spread the cards apart to open a gap.

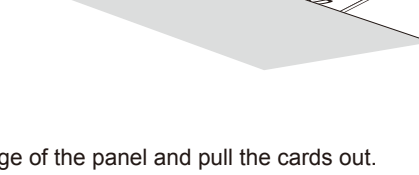


c. Slide the clips into the gap over the edge of the panel and pull the cards out.

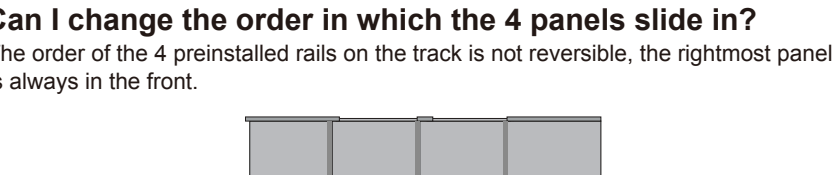


2. Can I change the order in which the 4 panels slide in?

The order of the 4 preinstalled rails on the track is not reversible, the rightmost panel is always in the front.

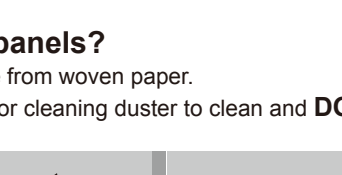

3. How to clean the panels?

The sliding panel is made from woven paper.
Please use the dry towel or cleaning duster to clean and **DO NOT** wash them.

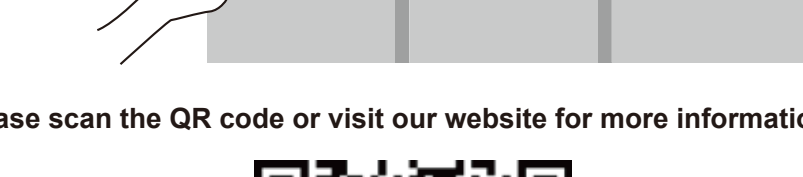

Please scan the QR code or visit our website for more information.

