ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH SLIDE



WF301737/WF301738

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safely precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.


Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 54" WIDE ON UPPER. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY, CA, 91748.) dealers

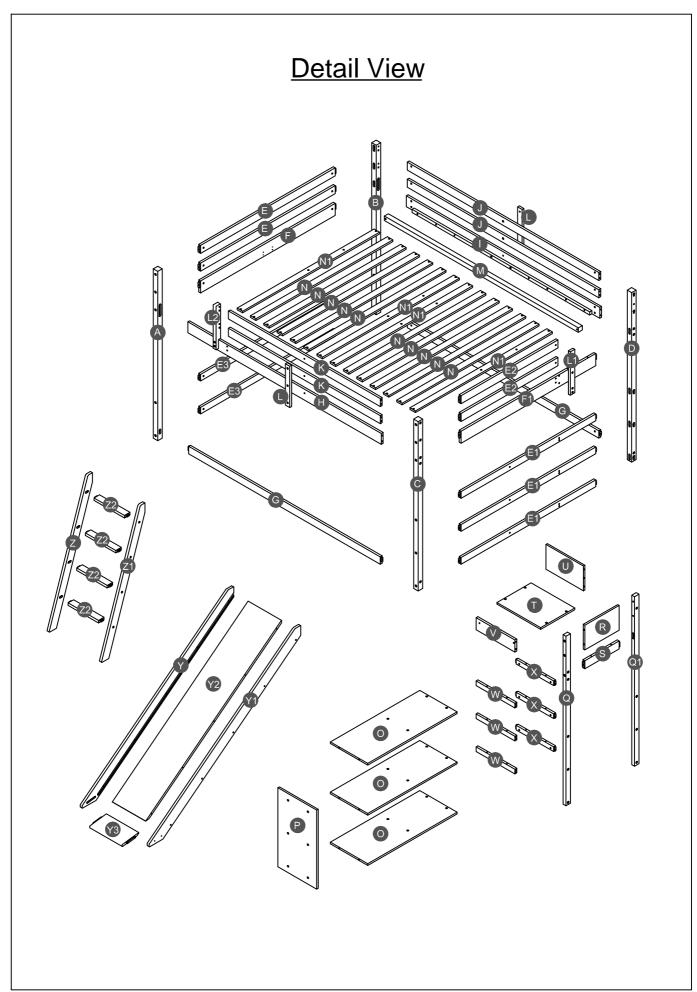

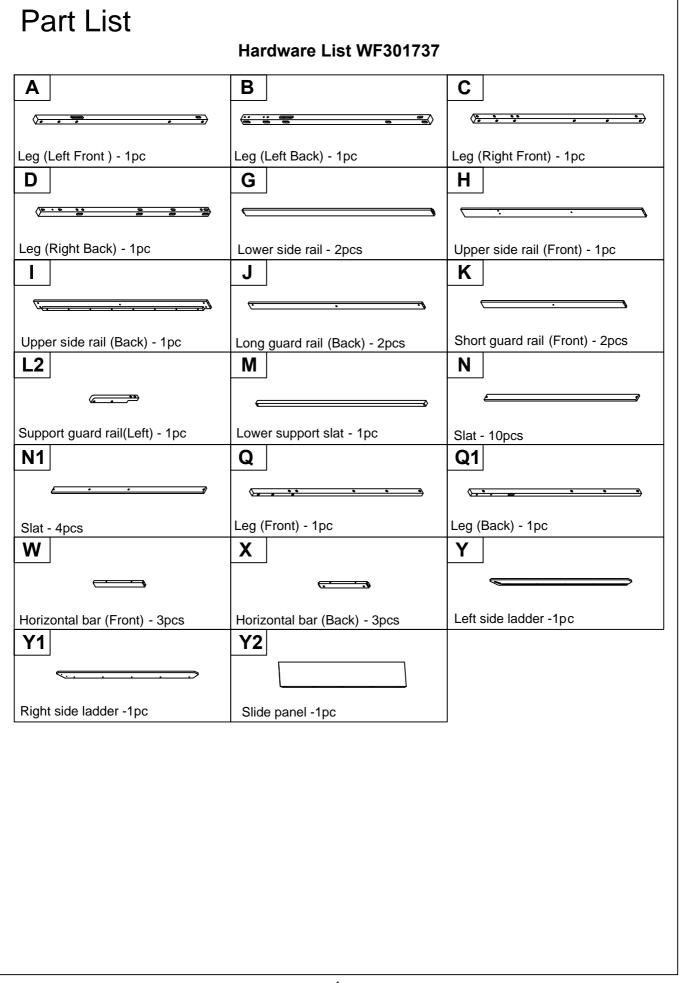


Part List WF301738 **E2** Ε **E1** Horizontal bar HB - 2pcs Horizontal bar FB - 3pcs Horizontal bar FB - 2pcs **E3** Horizontal bar HB - 2pcs Horizontal bar HB - 1pc Horizontal bar FB - 1pc L1 ••• Vertical guard rail - 2pcs Vertical guard rail - 1pc Shelf panel - 3pcs R S Upper side panel - 1pc Side panel (Front) - 1pc Upper horizontal bar - 1pc U T Upper step ladder panel -1pc Upper back panel - 1pc Upper horizontal bar (Front) - 1pc Ζ **Z**1 **Y3** Ladder (Left) - 1pc Slide base support -1pc Ladder (Right) - 1pc **Z2** Step ladder - 4pcs

Hardware List WF301737


T T	Г
2	3
	(a))
(Ø15)1/4"*100mm	(Ø15)1/4"*80mm
Hex-Head bolts (18pcs)	Hex-Head bolts (32pcs)
5	6
(Ø12)1/4"*60mm	(Ø12)1/4"*40mm
Hex-Head bolts (22pcs)	Hex-Head bolts (4pcs)
	9
(Ø12)1/4"*30mm	1/4"*15 (9.5mm)
Hex-Head bolts (10pcs)	Horizontal-Hole bolts (81pcs)
11	12
	(†)mmm>
	Ø4*30mm
	Wood screws (36pcs)
14	15 0 <u>/////</u>)
(Ø13)1/4"*14mm	Ø10*40mm
Connect bolt (2pcs)	Wood dowel (8pcs)
17	18
142*18*2mm	Ø1/4"*14mm
Hooks (2pcs)	Flat washer (14pcs)
20	21
Ø4*19mm	Ø3.5*15mm
Wood screws (6pcs)	Wood screws (12pcs)
23	
21*21*17*1.7mm	
Metal bracket (2pcs)	
	(Ø15)1/4"*100mm Hex-Head bolts (18pcs) 5 (Ø12)1/4"*60mm Hex-Head bolts (22pcs) 8 (Ø12)1/4"*30mm Hex-Head bolts (10pcs) 11 (Ø12)1/4"*40mm Wood screw bolts (16pcs) 14 (Ø13)1/4"*14mm Connect bolt (2pcs) 17 142*18*2mm Hooks (2pcs) 20 Ø4*19mm Wood screws (6pcs) 23


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)








PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

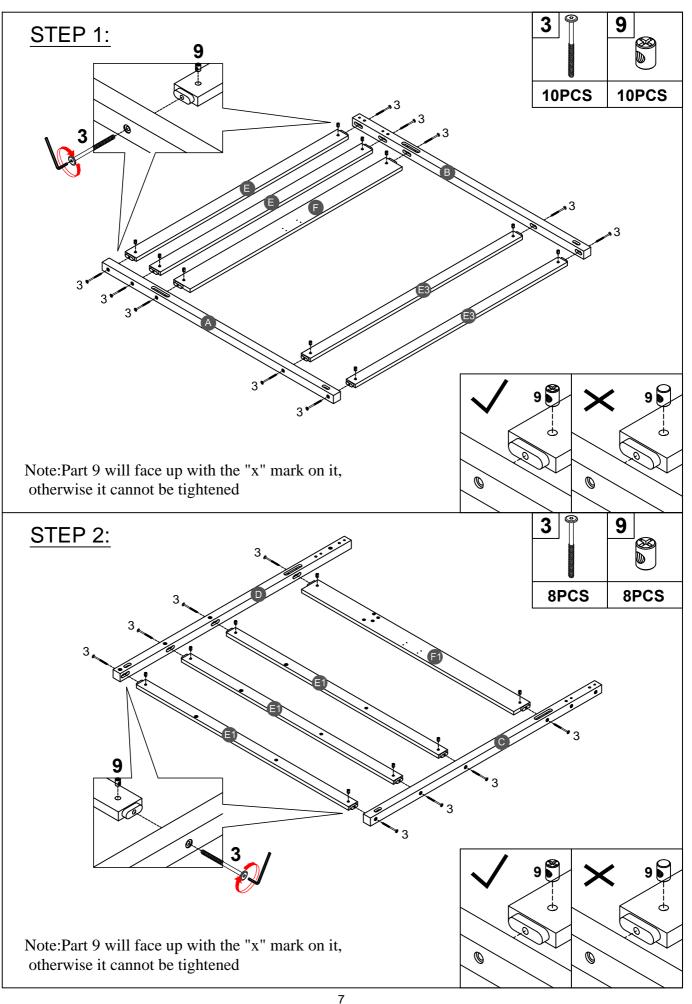


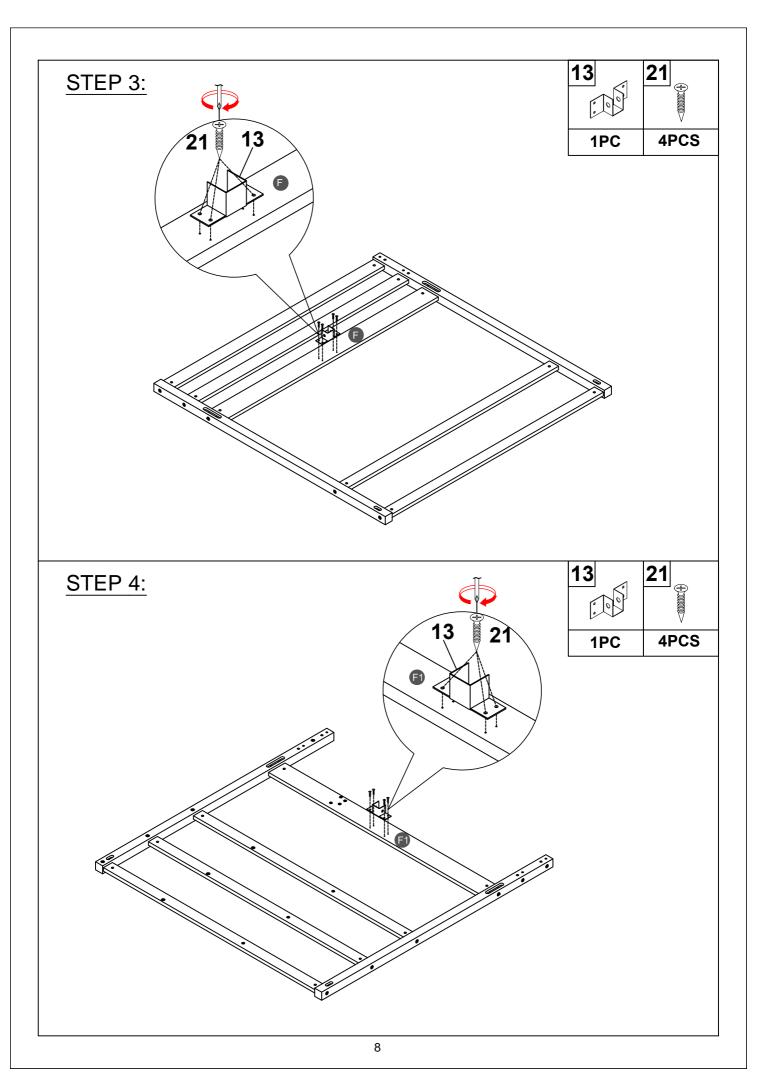


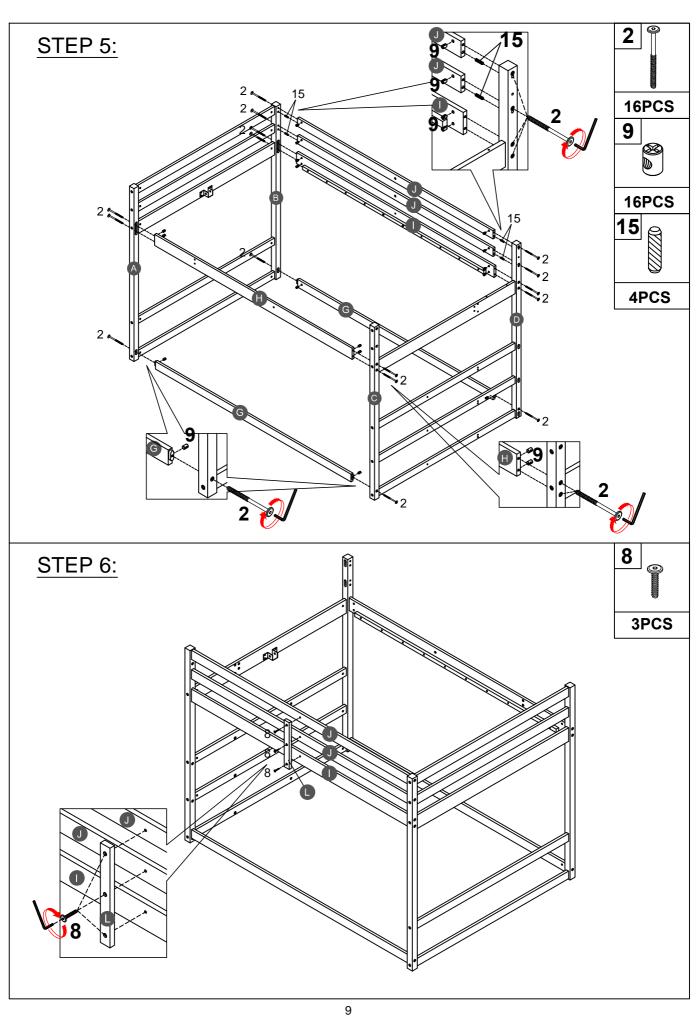


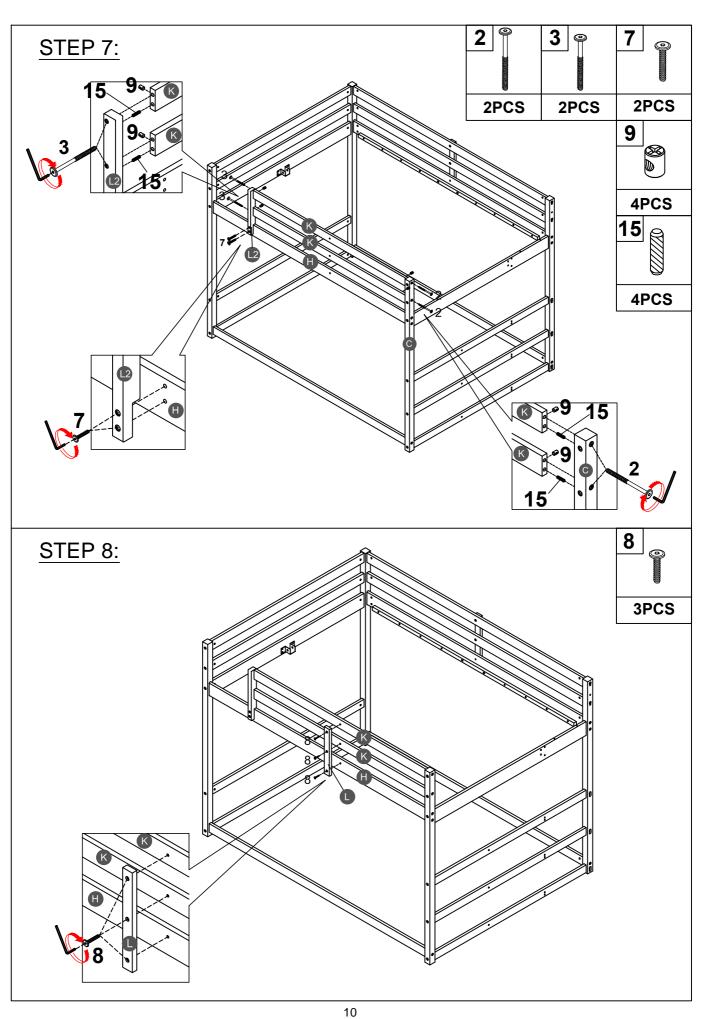


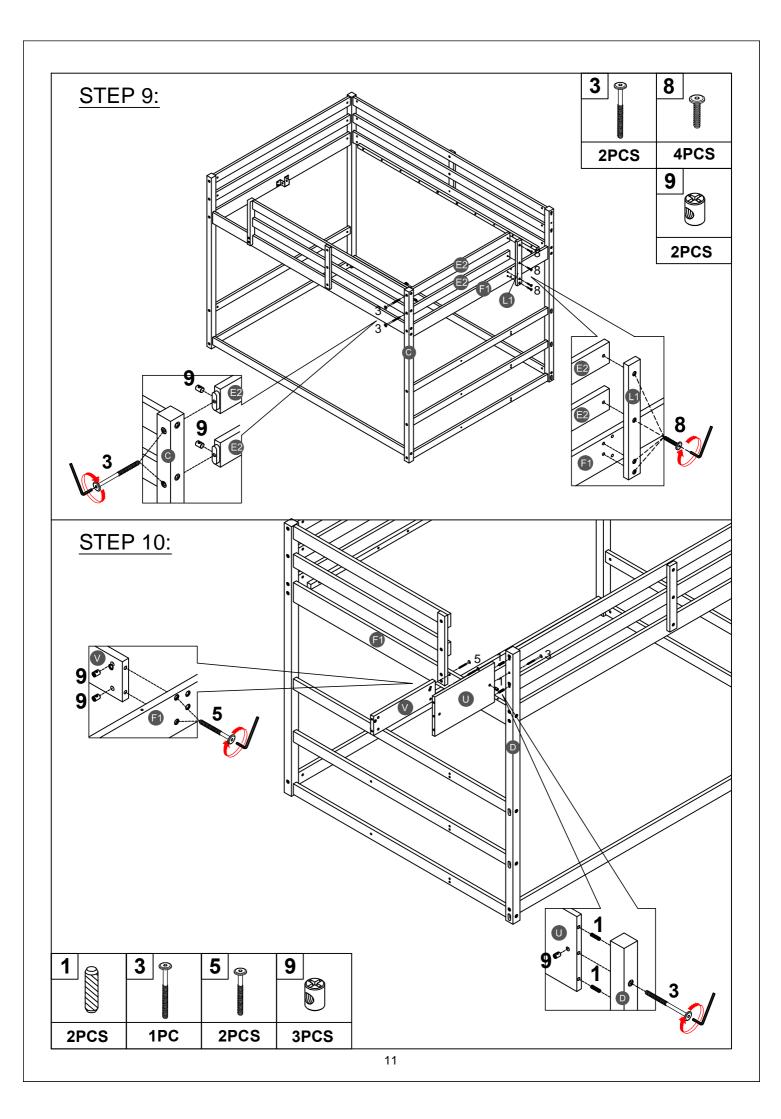


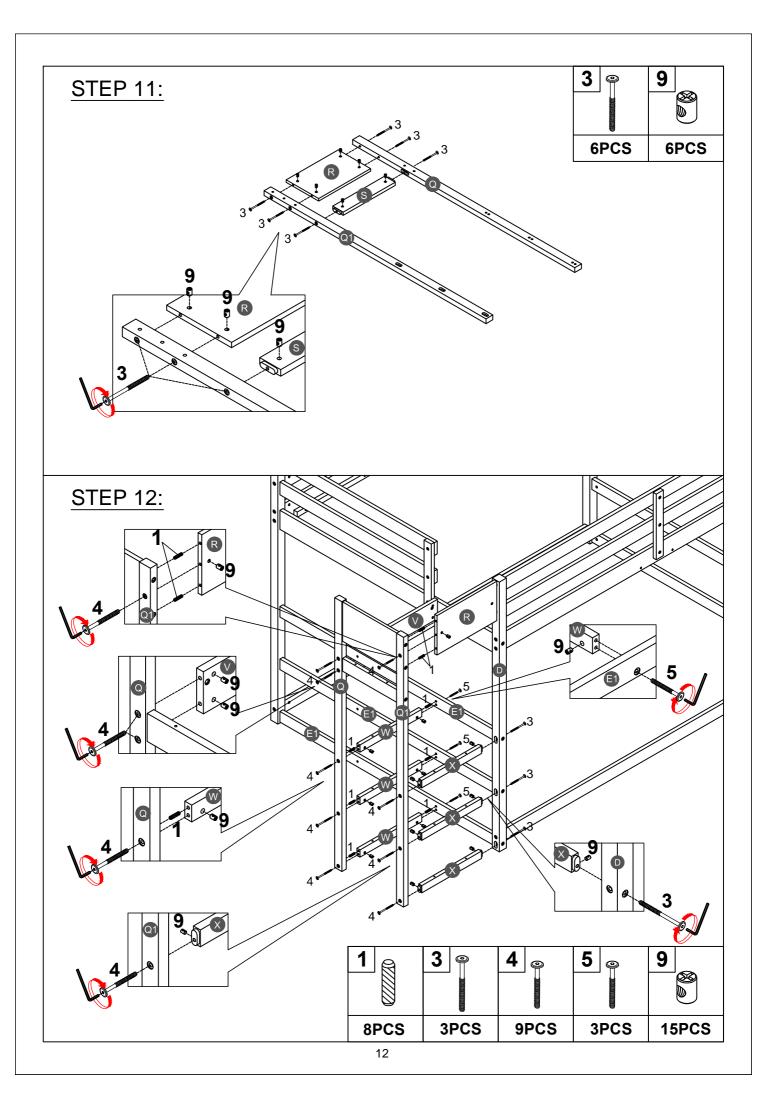


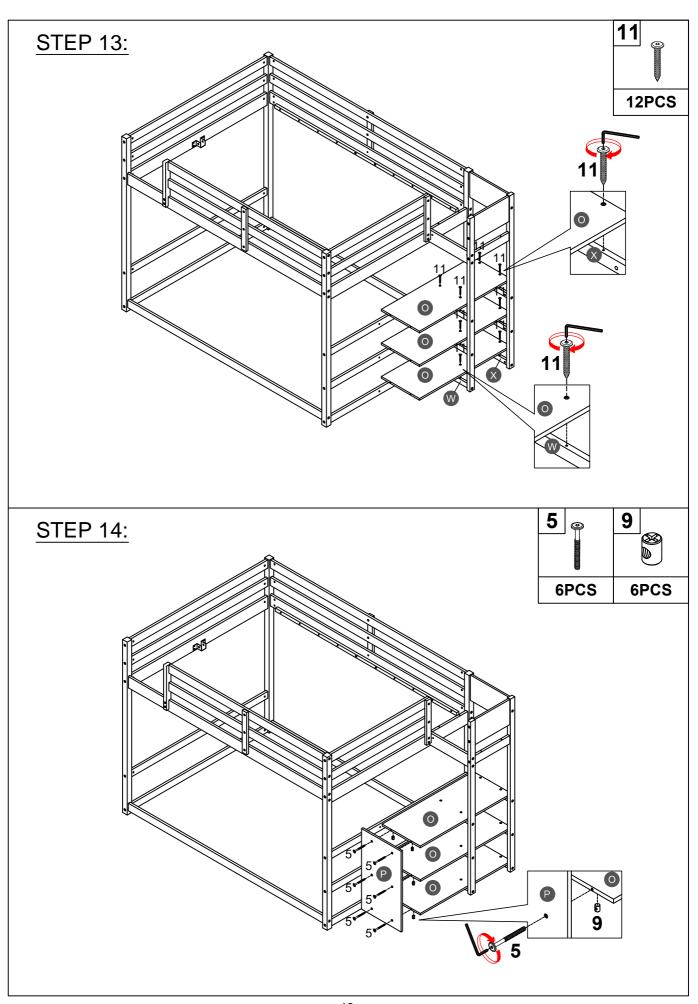


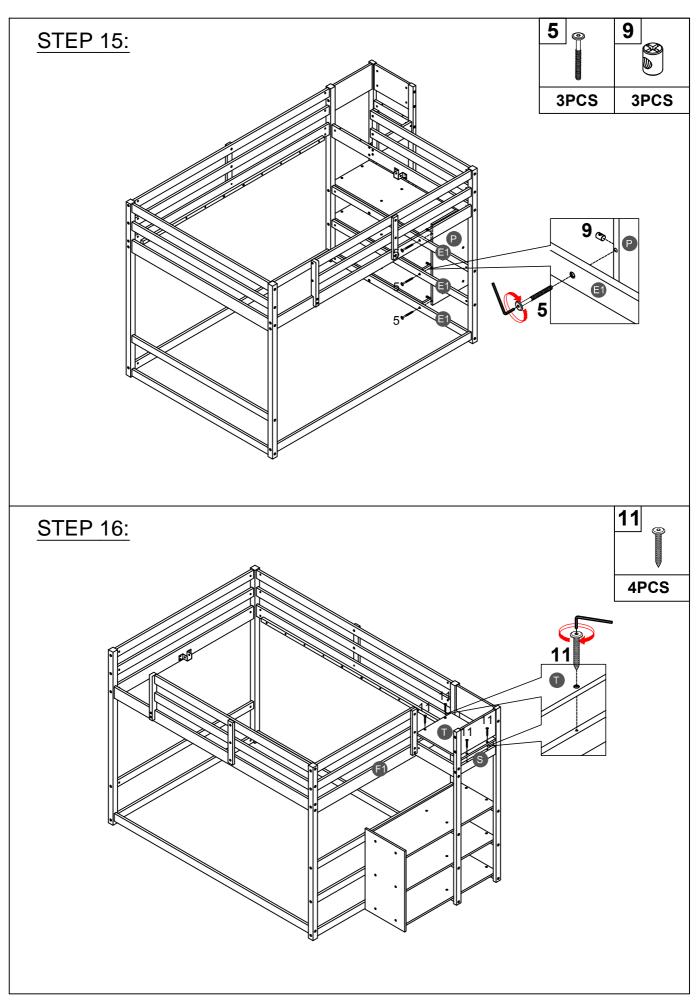

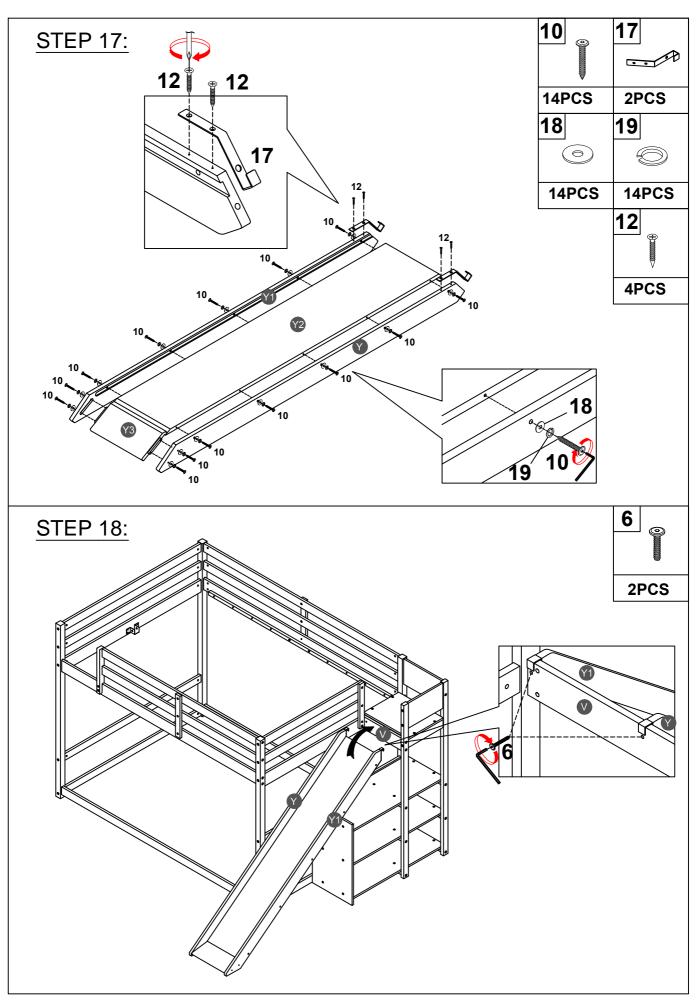

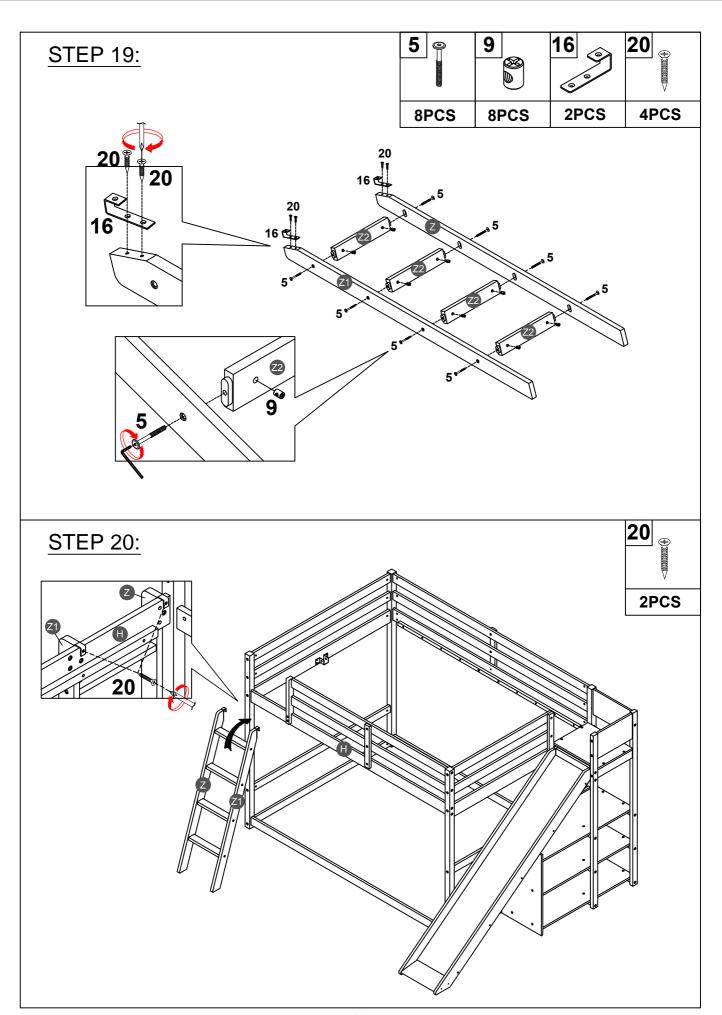

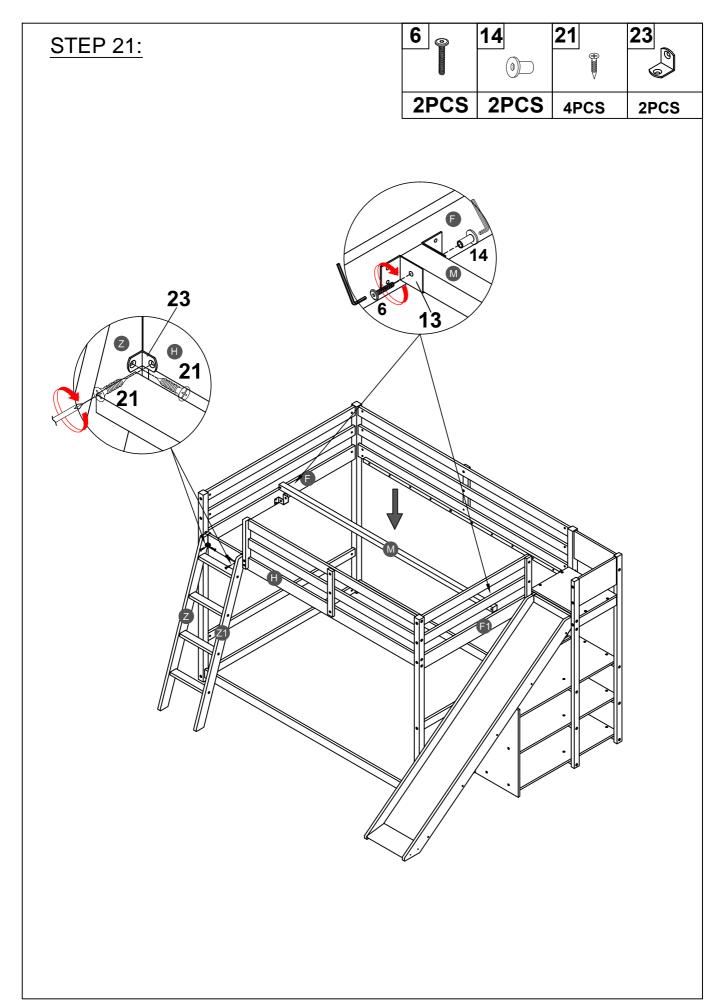

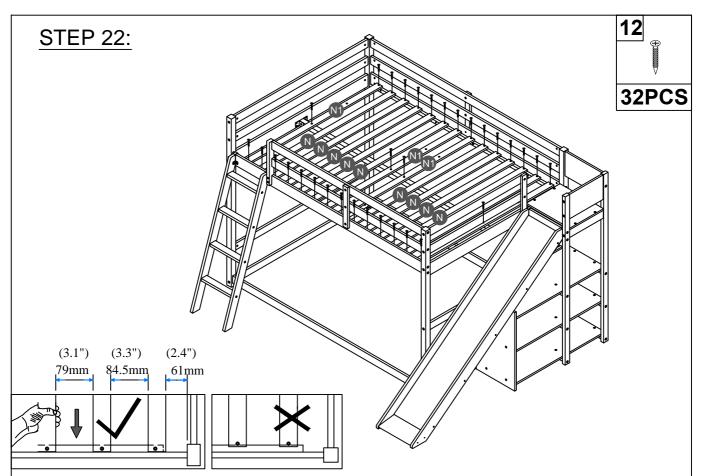

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

