


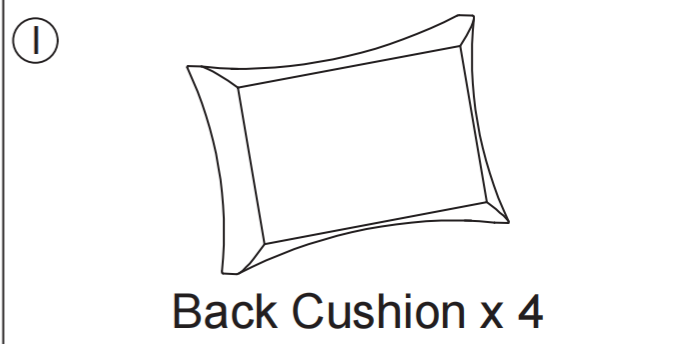
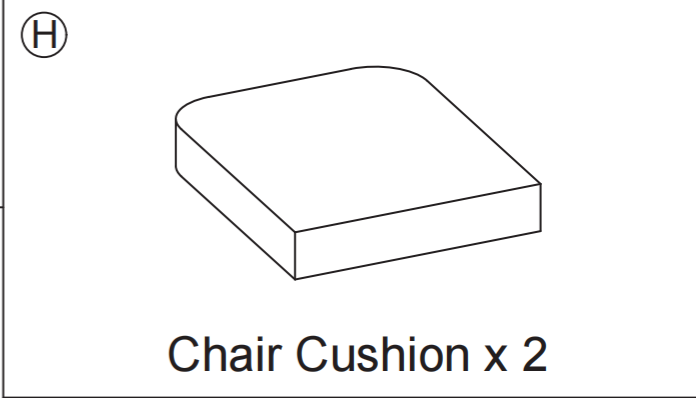
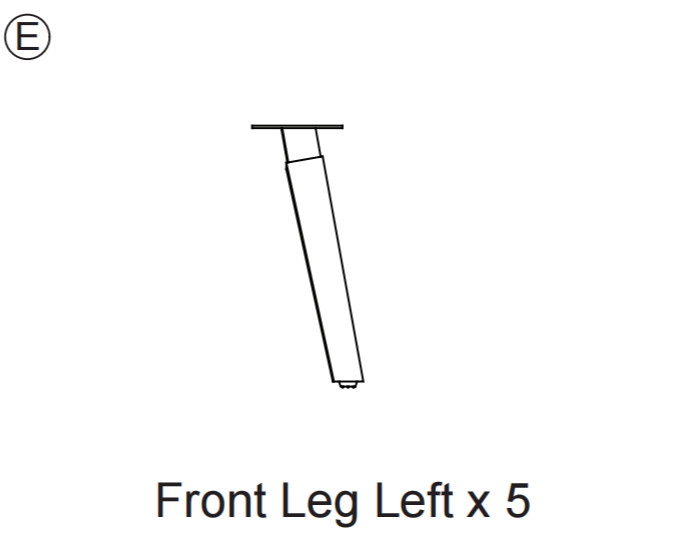
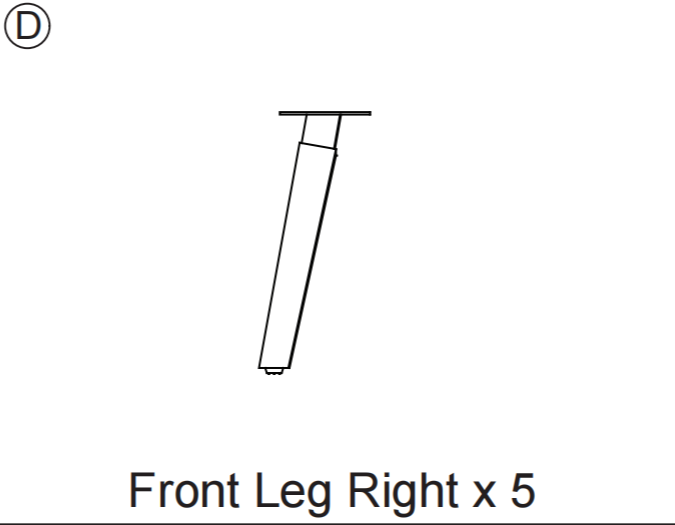
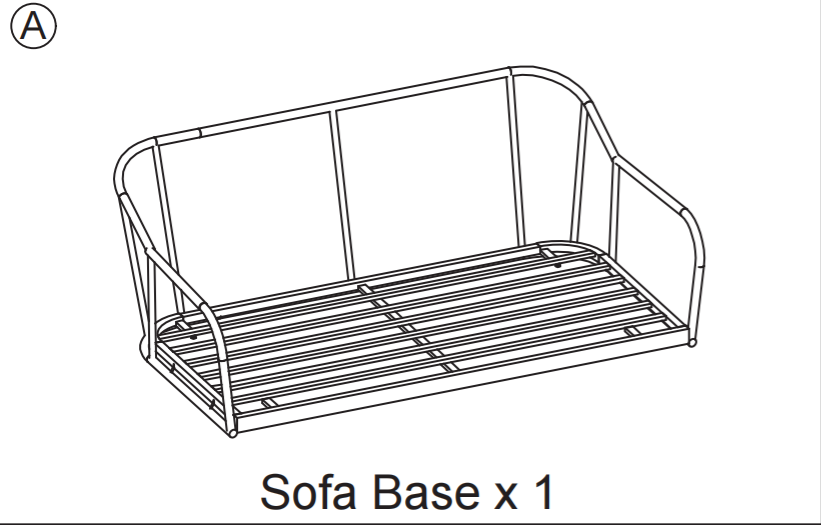
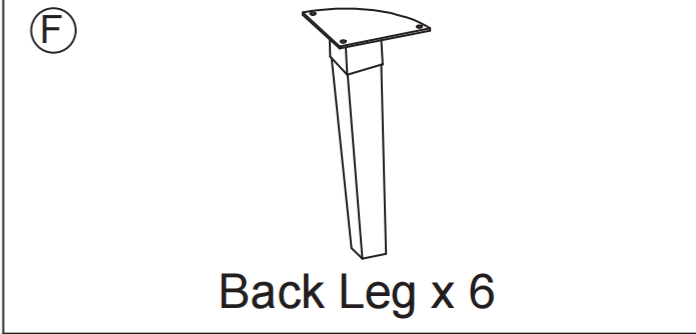
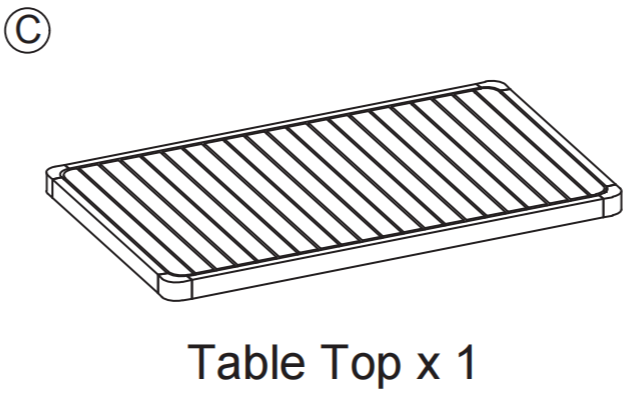
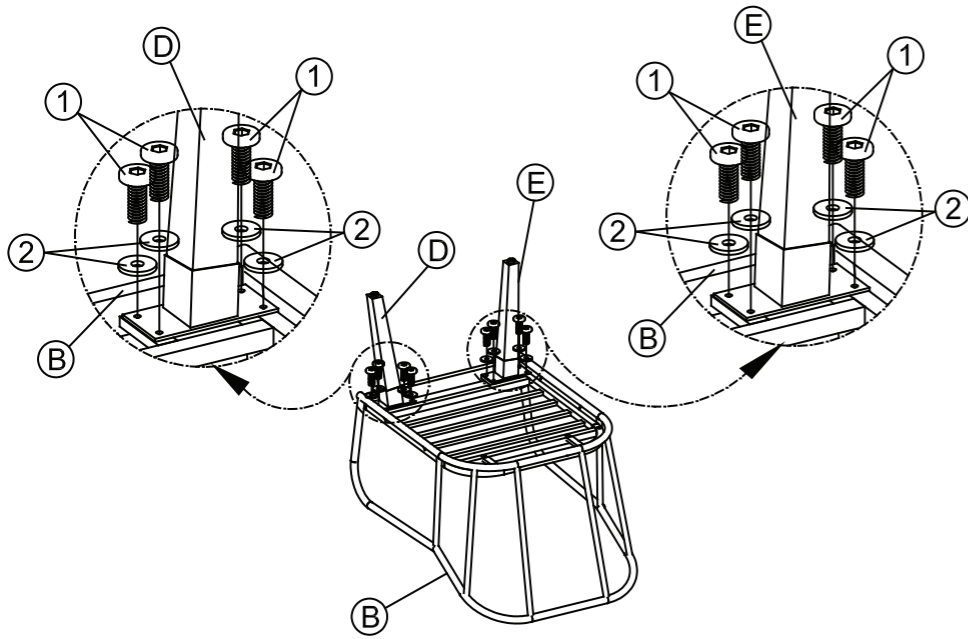


SKU: KS-OC005/KS-OC006

ASSEMBLY INSTRUCTION


No	Hardware	Fig	Q.ty
①	Bolt M6 x 15mm		58
②	Washer M6x 16x1 (Iron)		58
③	Allen Key M4 x 80mm		2






STEP 1

X2

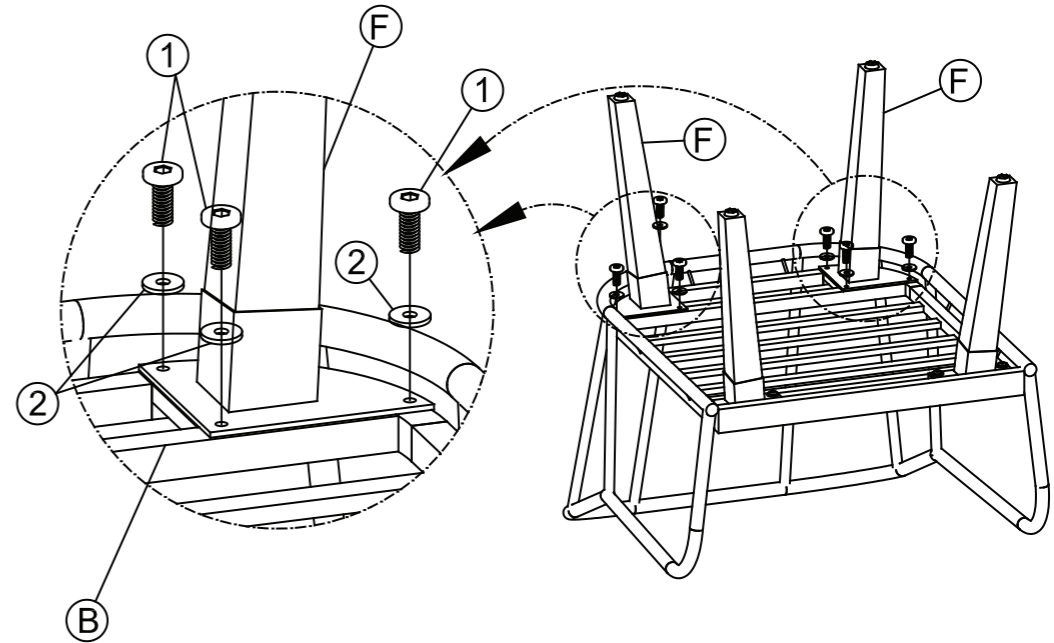


STEP 2

X2

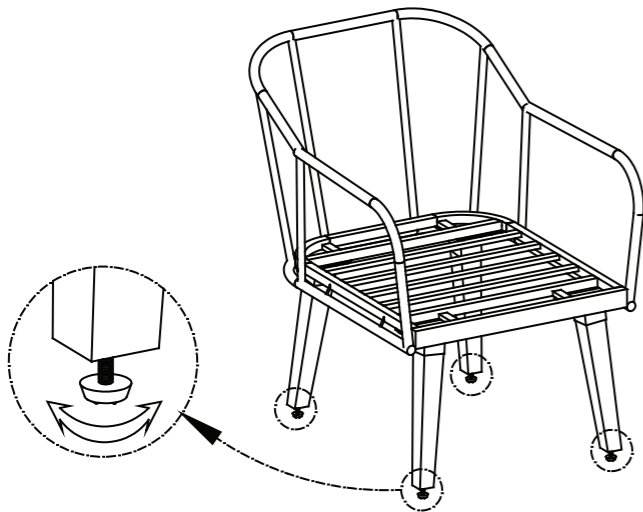

STEP 3


X2

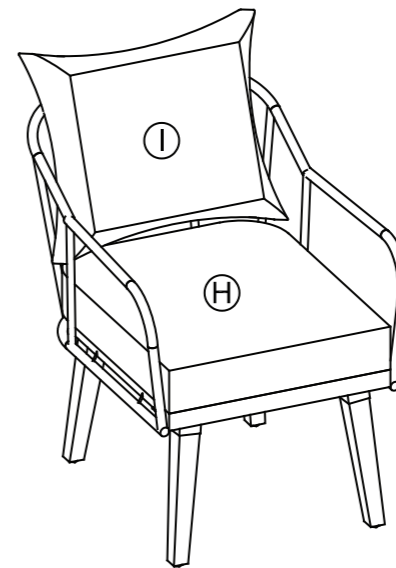


STEP 4

OK


X2

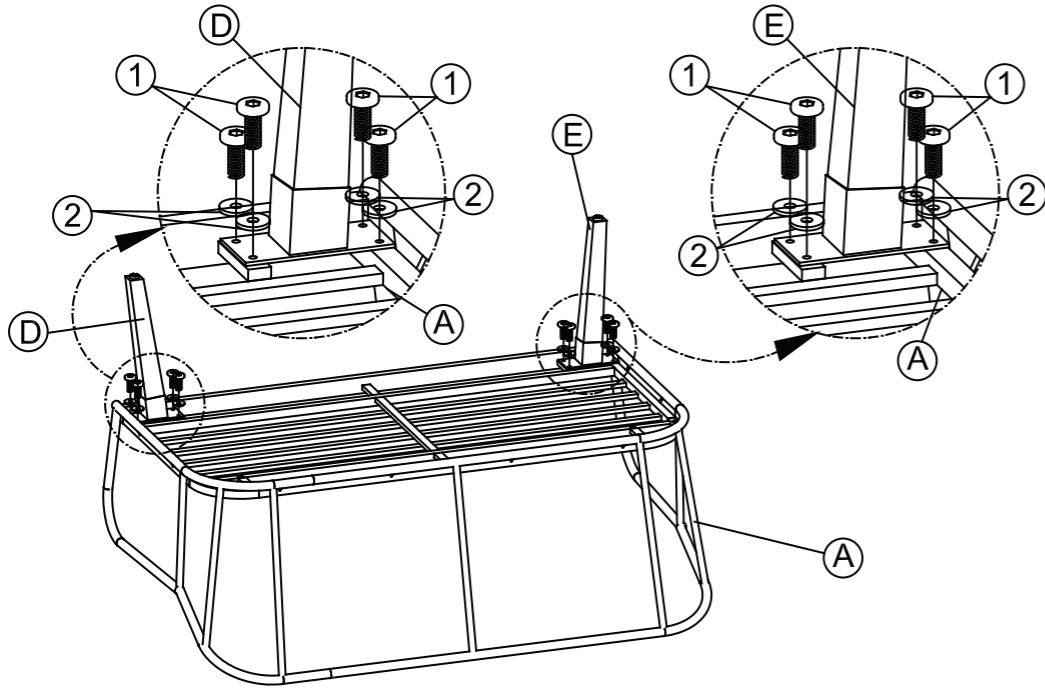


STEP 5

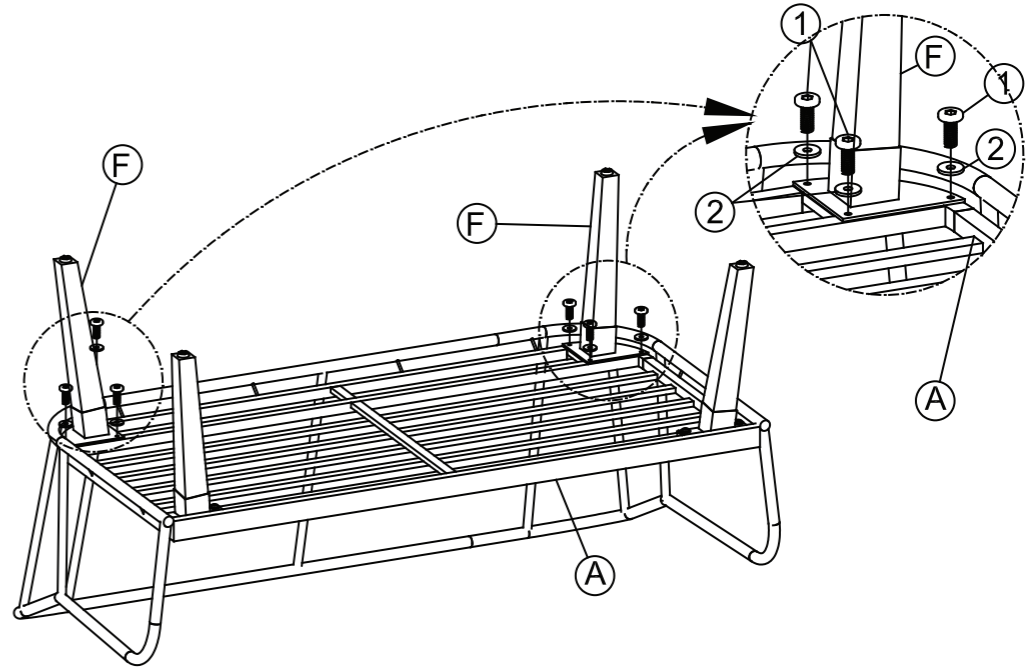

STEP 6

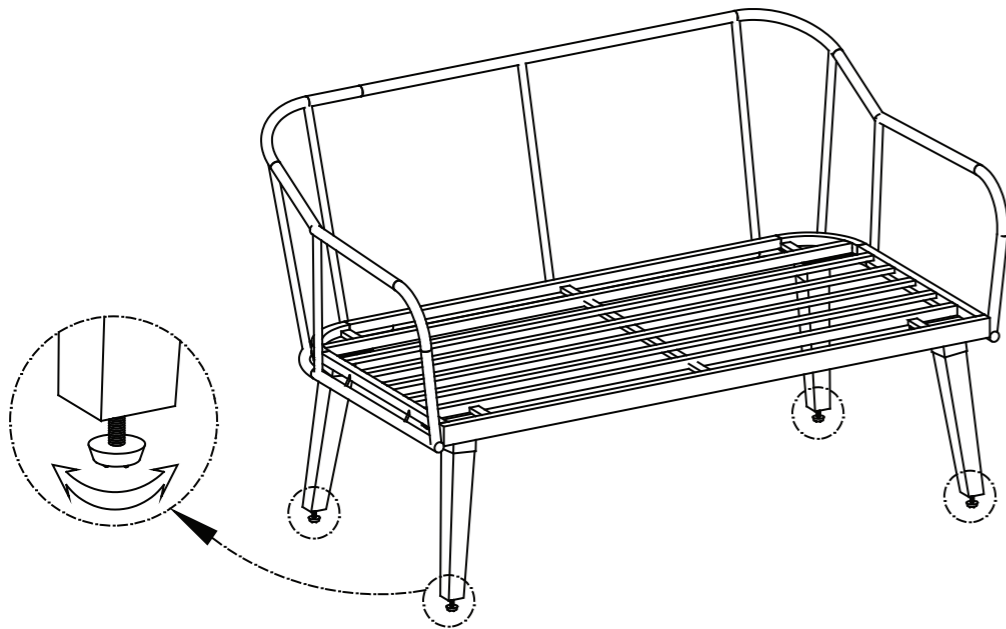


STEP 7

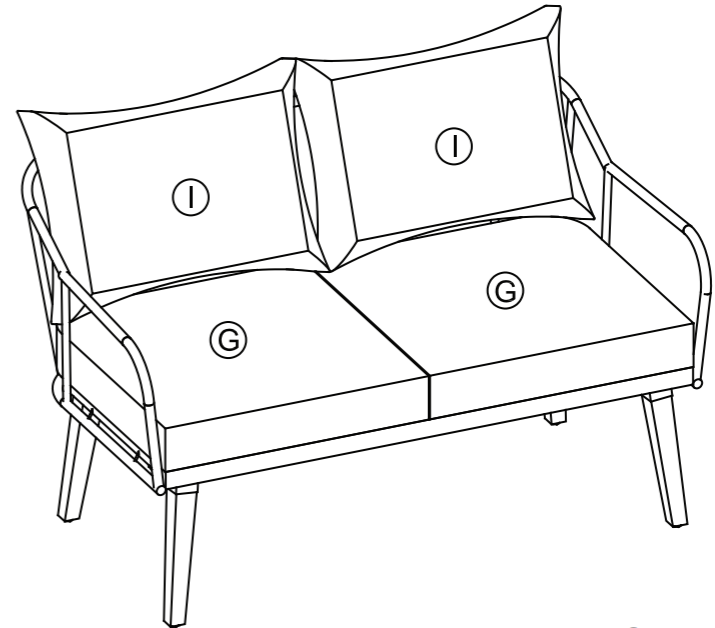


STEP 8


OK

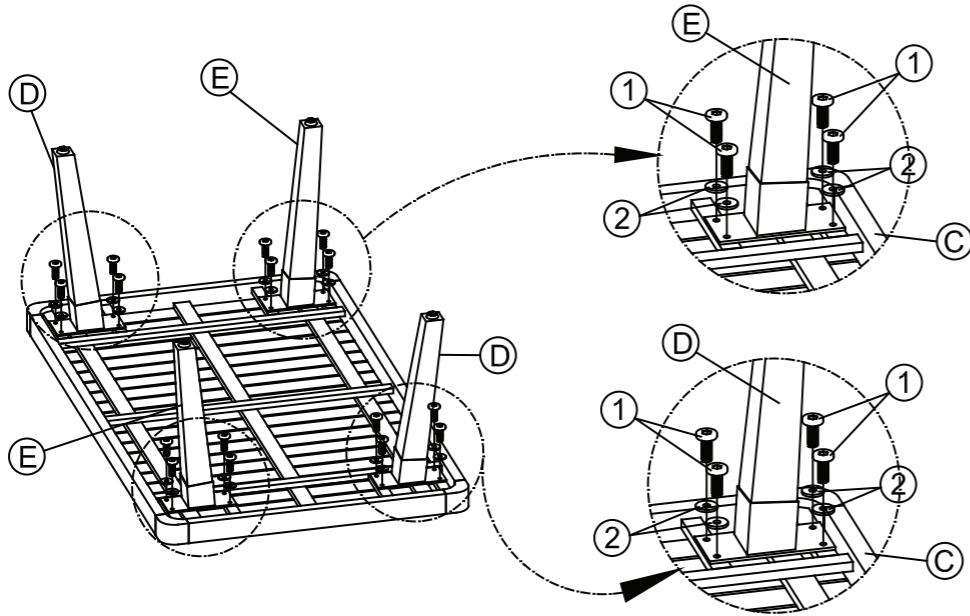

STEP 9

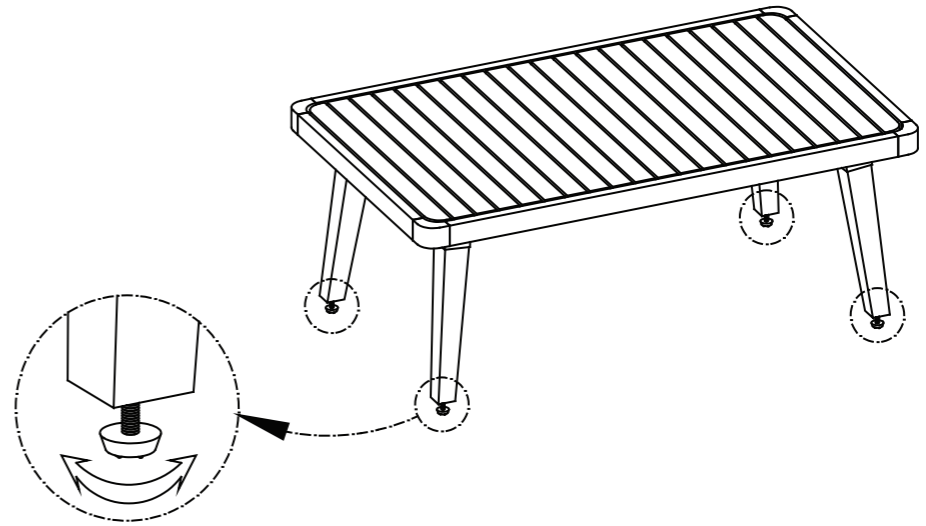

STEP 10

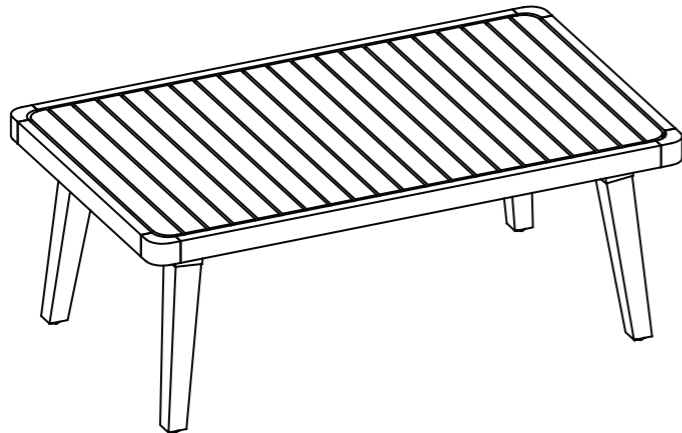

STEP 11



STEP 12