

Cordless Roll-Ups Installation Instructions


Please read the instruction sheet carefully before installing your new blind.

Package Includes:

- One Roll-Up Blind
- Hanging Hooks
- Strap Fasteners

Tools Needed:

- Tape Measure
- Drill
- 1/16" Drill Bit
- Pliers
- Pencil

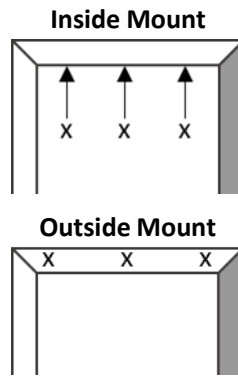

Please refer to chart for the amount of fasteners included per size.

Sizes	# of Straps Fasteners
30", 36" & 48"	2
60" & 72"	3
96" & 120"	4

Blind Installation:

1. Before installing, make sure blind is fully rolled up and secured. For easier installation, do not remove shrink wrap packaging ties until finished.
2. Position blind: Mark location for the screws. Make sure your marks for the screw holes are level or at least the same distance from the top of the window. For best accuracy, measure the distance with a tape measure.
3. Install Hooks: Drill 1/16" pilot holes at the X marks. Insert hooks and tighten. If necessary, use pliers to tighten.
4. Hang the Blind: Simply hook the mounting eyelets over the hanging hooks.

Strap Fasteners Installation:

It is very important to only attach the strap fasteners to the thick thread lines of the blind.

1. Roll up the blind to the desired height. It is recommend to roll blind from the center. (Figure 1)
2. Hook one end of the strap fastener to the lower portion of the roll. (Figure 2)
3. Hook the other end of the fastener to the thread on the front side of the blind. (Figure 3)
4. Repeat until all strap fasteners are secure and level.

As an alternate hanging method, the blind can be reversed rolled (rolled inwards) and the strap fasteners would be hooked from the backside of the blind.

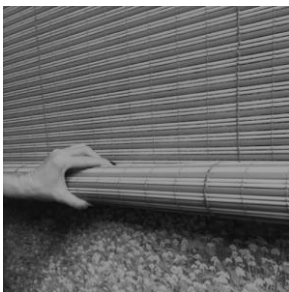


Figure 1



Figure 2

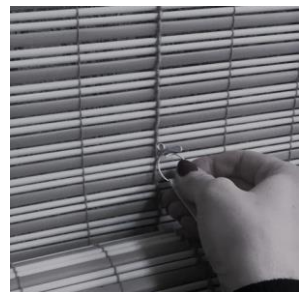


Figure 3



Achim's Family of Home Furnishings

www.achimonline.com

Brooklyn, NY 11215