


Item: MALB3B

Assembly Instructions



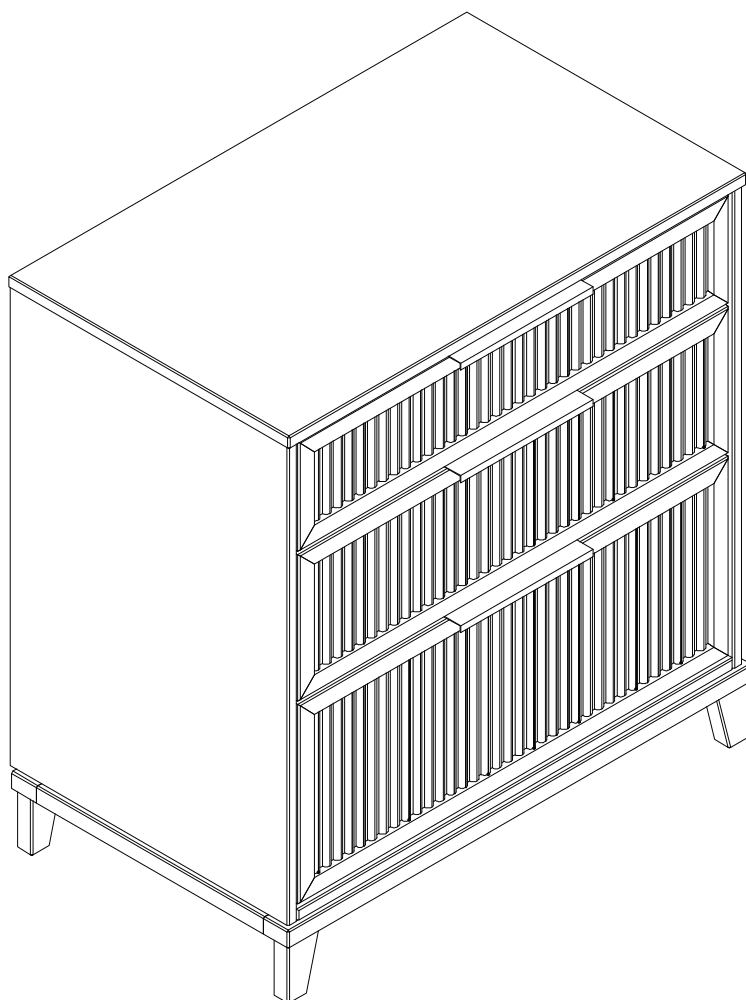


Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkerediton.com


Revised 08/23-V-1

General assembly guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A hammer, a Phillips head screwdriver and a Tape measure are required for the assembly of this product.

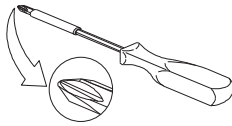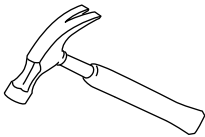



- VI. Power tools should not be used to assemble this product.

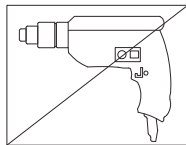

Parts List

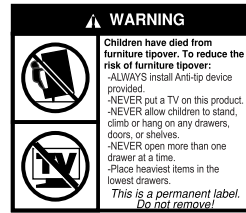







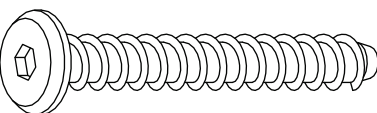

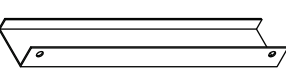
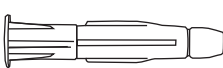


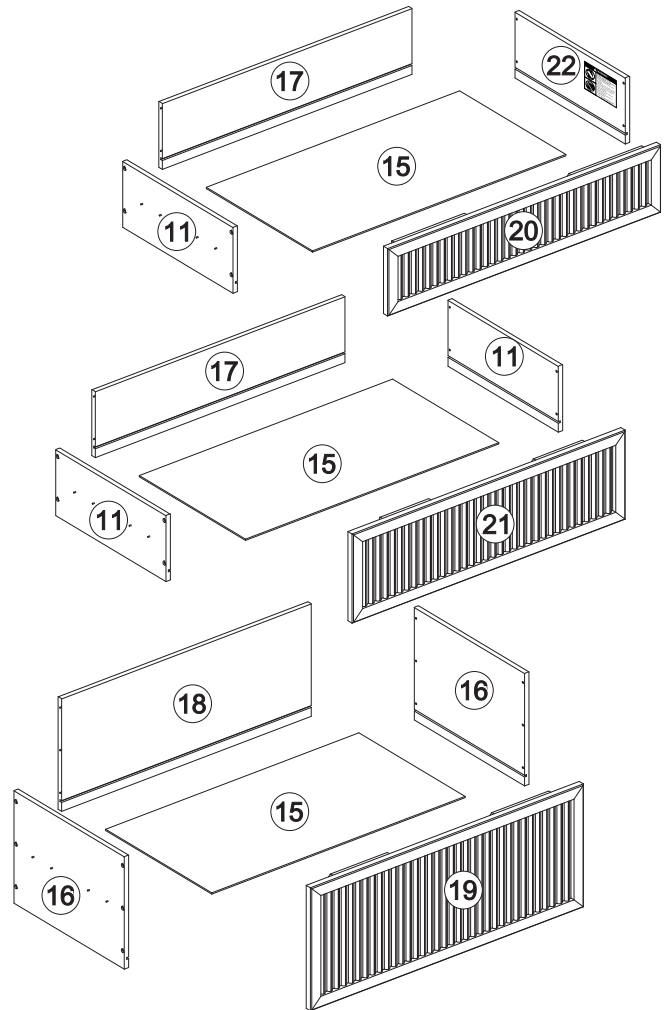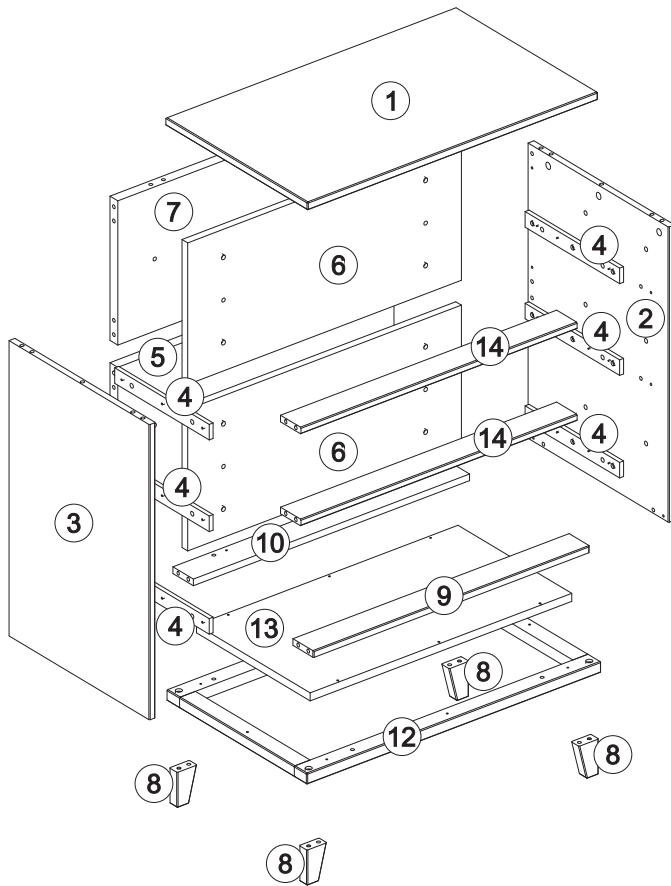

The side drawer with WARNING LABEL, should be mounted in highest drawer.




Part #	Part #	Qty
1	Top panel	01 pcs
2	Right side panel	01 pcs
3	Left side panel	01 pcs
4	Sliding support	06 pcs
5	Bottom back panel	01 pcs
6	Anti-tipping panel	02 pcs
7	Top back panel	01 pcs
8	Foot	04 pcs
9	Bottom front rail	01 pcs
10	Bottom back rail	01 pcs
11	Drawer side	03 pcs

Part #	Part #	Qty
12	Bottom frame	01 pcs
13	Anti-tipping bottom	01 pcs
14	Rail	02 pcs
15	Drawer bottom	03 pcs
16	Bottom drawer side	02 pcs
17	Drawer back	02 pcs
18	Bottom drawer back	01 pcs
19	Bottom drawer front	01 pcs
20	Topper drawer front	01 pcs
21	Middle drawer front	01 pcs
22	Drawer side with label	01 pcs

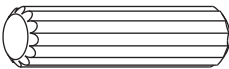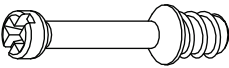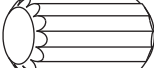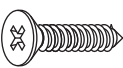Hardware List

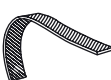
A		ø8*30mm	Wooden dowel	37 pcs
B		ø15*30mm	Cam bolt	25 pcs
C		ø10*20mm	Screw	12 pcs
D		ø3,0*12mm	Screw	24 pcs
E		ø3,5*16mm	Screw	37 pcs
F		ø15*10mm	Cam lock	25 pcs
G		ø7*50mm	Bolt	04 pcs
H		ø3,5*25mm	Screw	53 pcs
I		212*36mm	Drawer handle	03 pcs
J			Plastic bush	01 pc
K		250mm	Slide	06 pcs
L			Hex key	01 pc
M			Wall ancor	01 pc
N			Washer	02 pcs

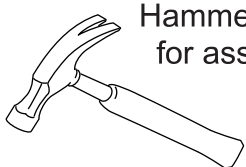

Hammer recommended
for assembly (not included)




Philips head screwdriver required
for assembly (not included)

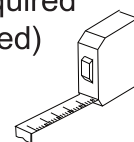

Tape measure
required
for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

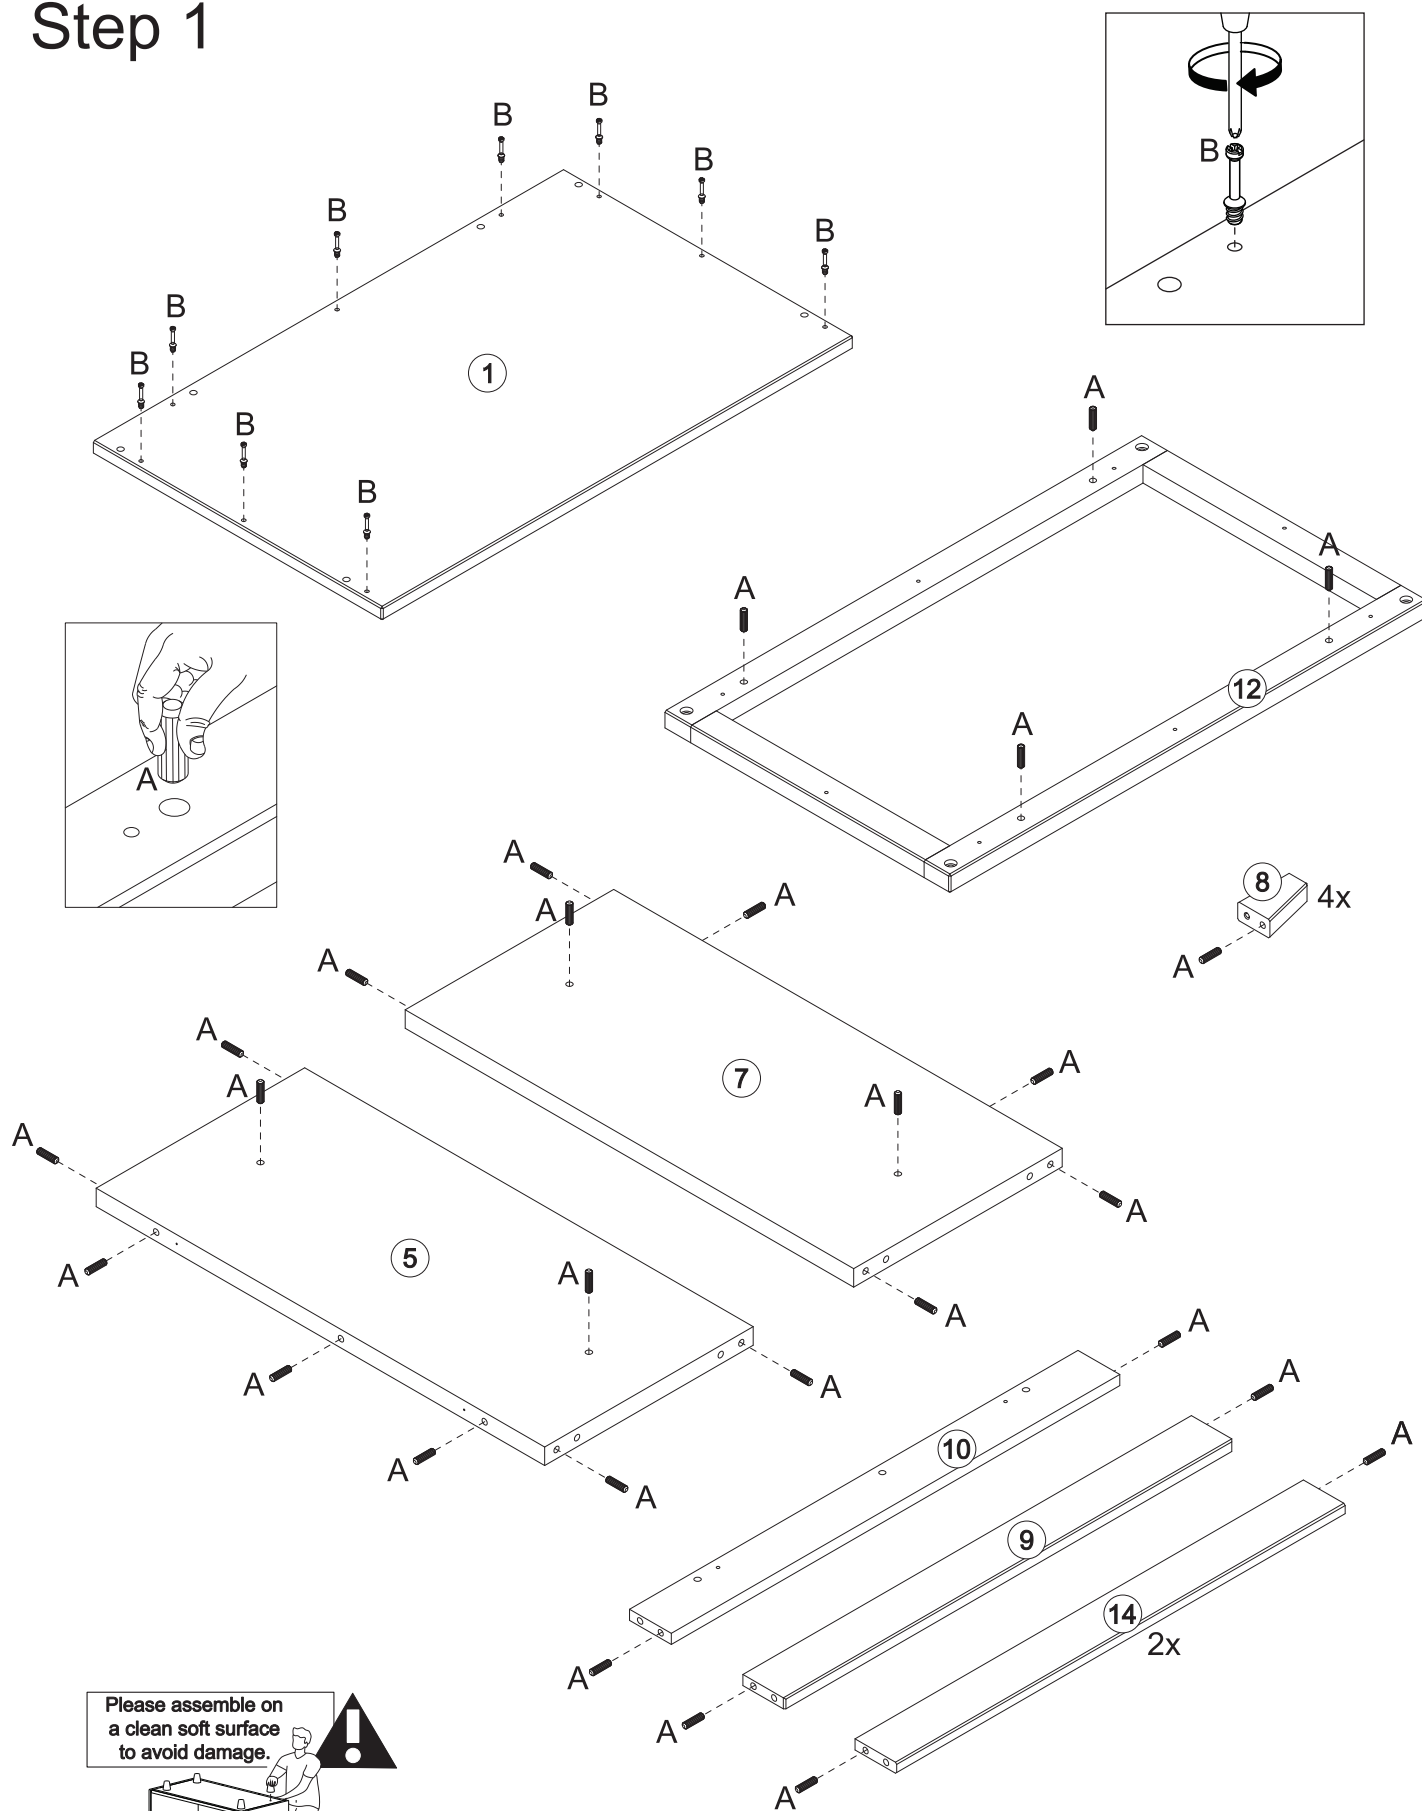


Please assemble on a clean soft surface to avoid damage.





Insert wood dowel (A) into parts 5, 7, 8, 9, 10, 12 and 14.
Fix the Cam bolt (B) in part 1 using a phillips head screwdriver.

A		33 ø8*30mm
B		09 Cam bolt


Step 2

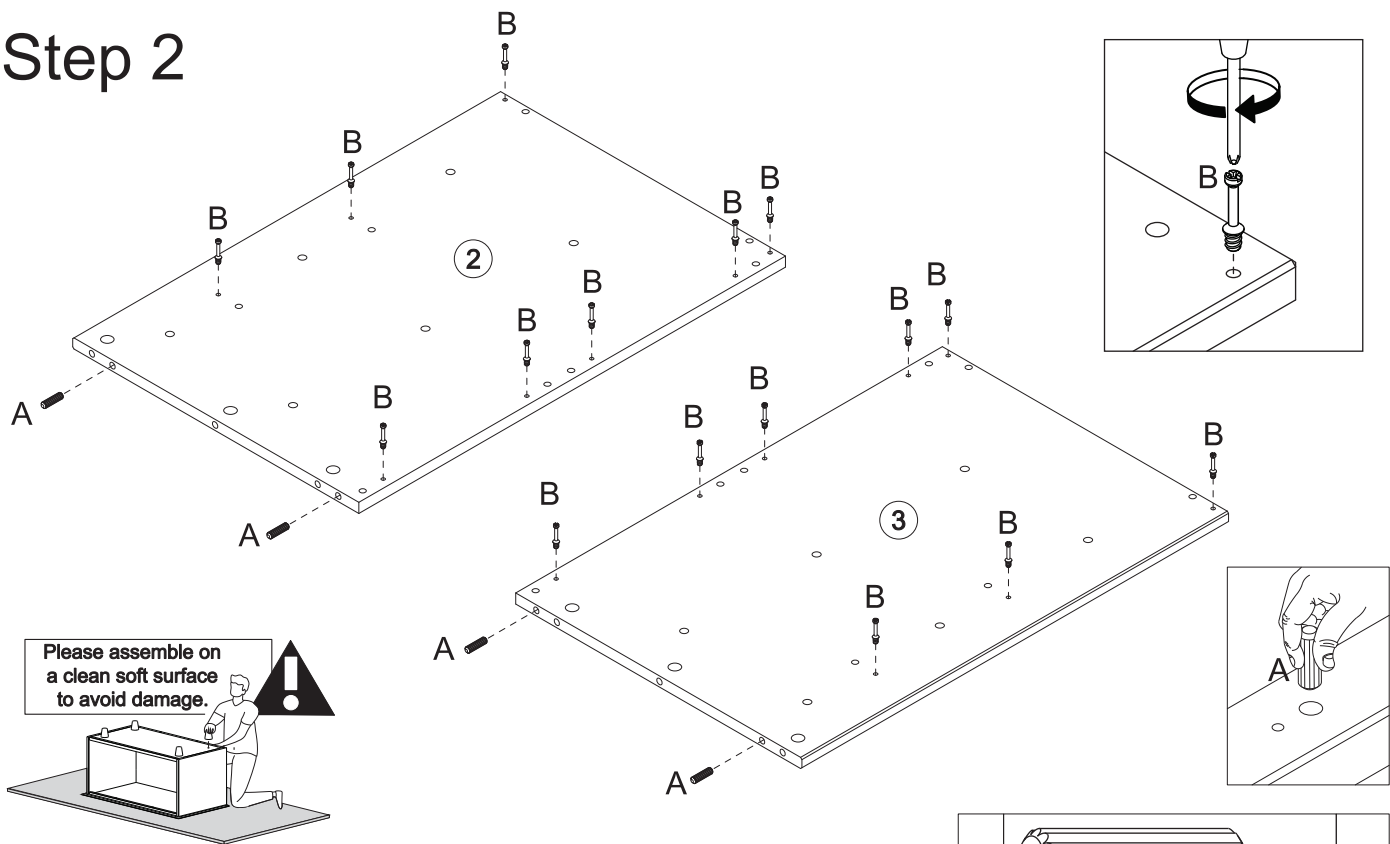



Insert wood dowel (A) into parts 2 and 3.
Fix the Cam bolt (B) into parts 2 and 3 using a Phillips head screwdriver.

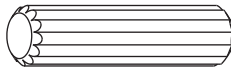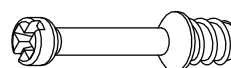A		04
B		16

Step 3


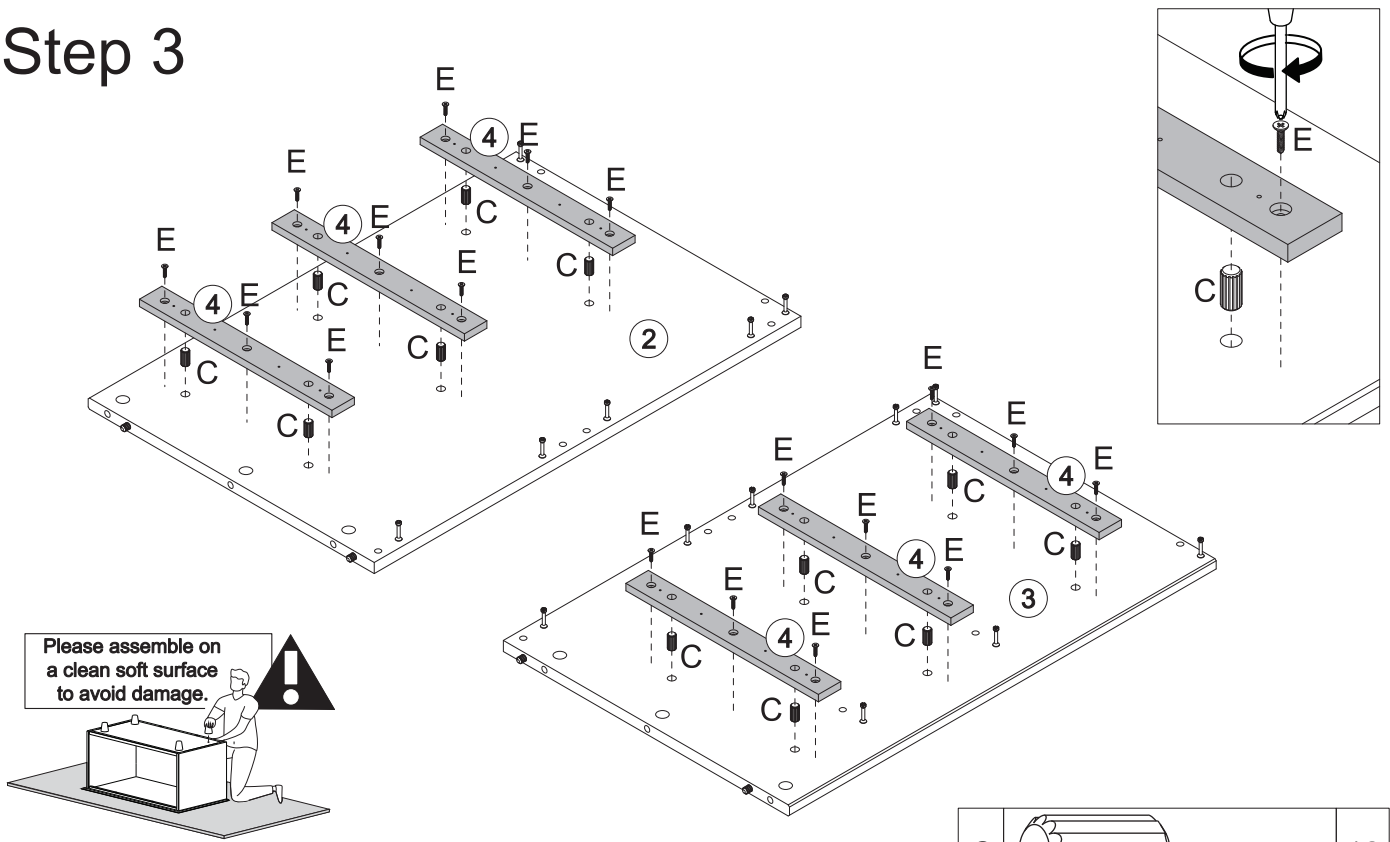


Insert wood dowel (C) into parts 2 and 3 and fix the sliding support 4 with screws (E) using a Phillips head screwdriver.

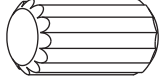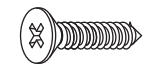C		12
E		18

Step 4

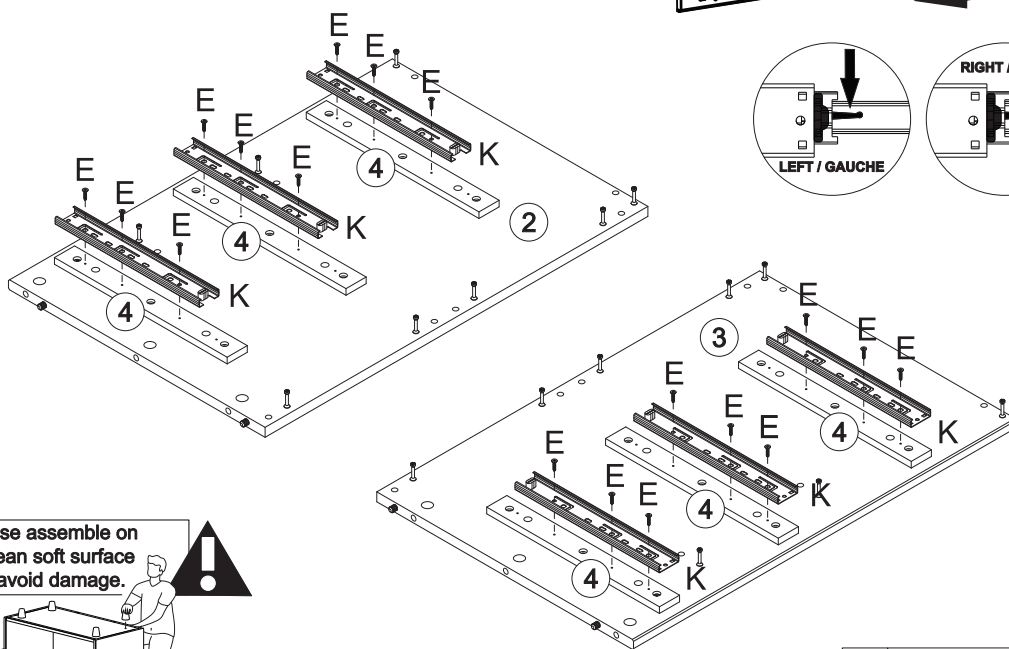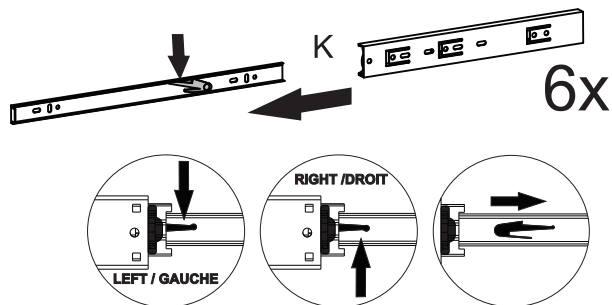

Separate parts (K) by pressing the down button




Please assemble on a clean soft surface to avoid damage.




Fix the External slide (K) in parts 2 and 3 with the screws (E) using a Phillips head screwdriver.

K	 External slide	06
E	 Screw 3,5x16mm	18


Step 5

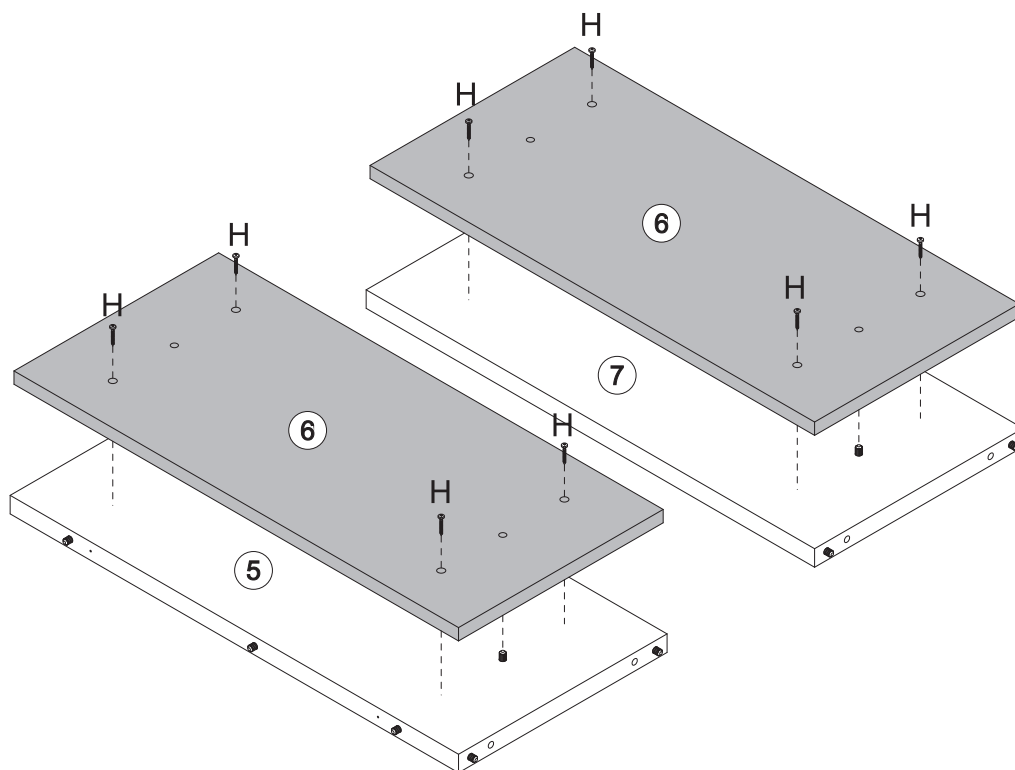


Secure the anti-tip panel 6 to parts 5 and 7 with the screw (H) using a Phillips head screwdriver.

H	 Screw 3,5x25mm	08
---	---	----



Step 6

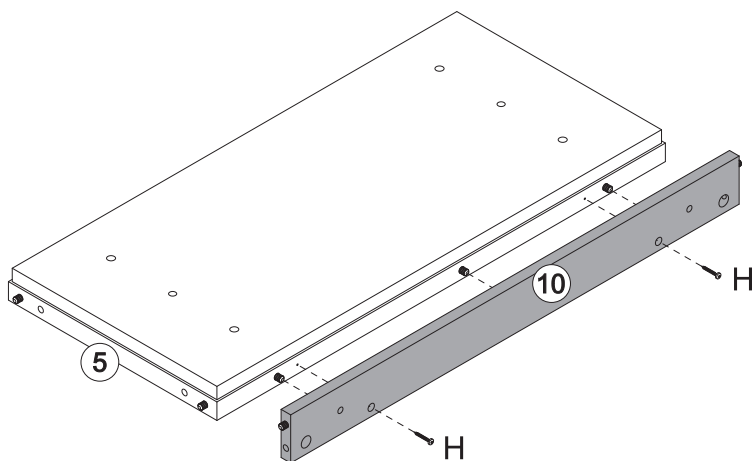


Secure part 10 to part 5 with screw (H) using a Phillips head screwdriver.

H		02
Screw 3,5x25mm		



Step 7

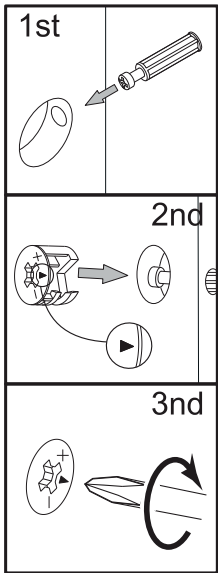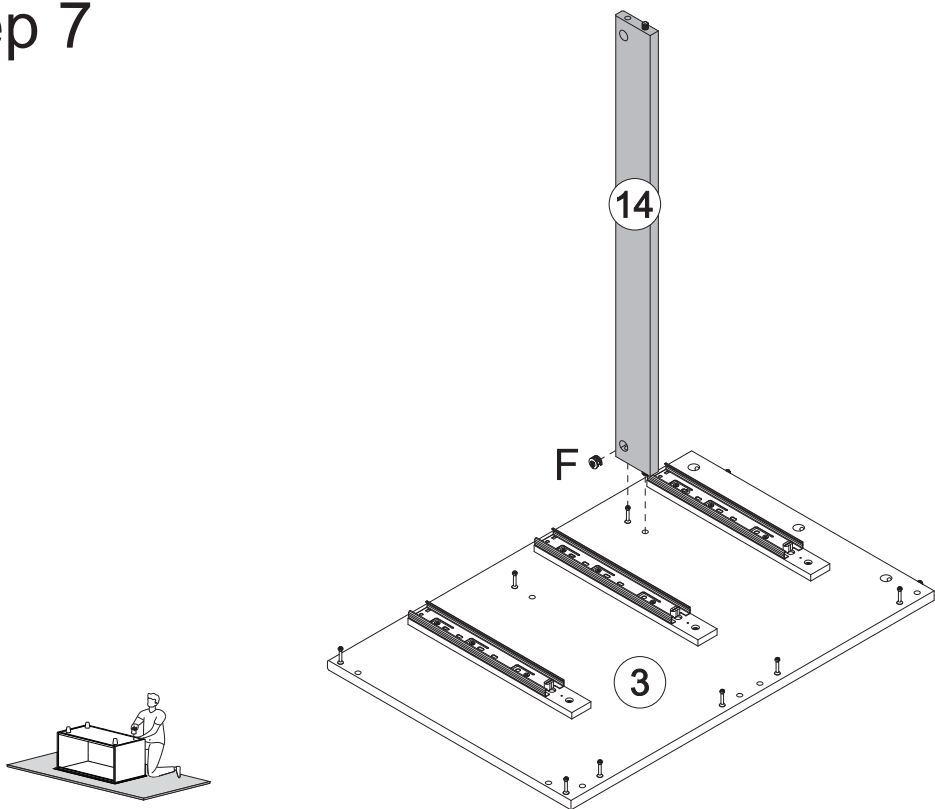


Secure part 14 to part 3 with Cam lock (F) using a Phillips head screwdriver.

F		01
Cam lock		



Step 8

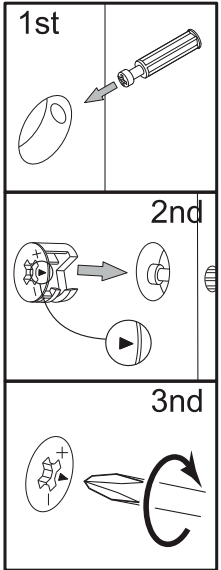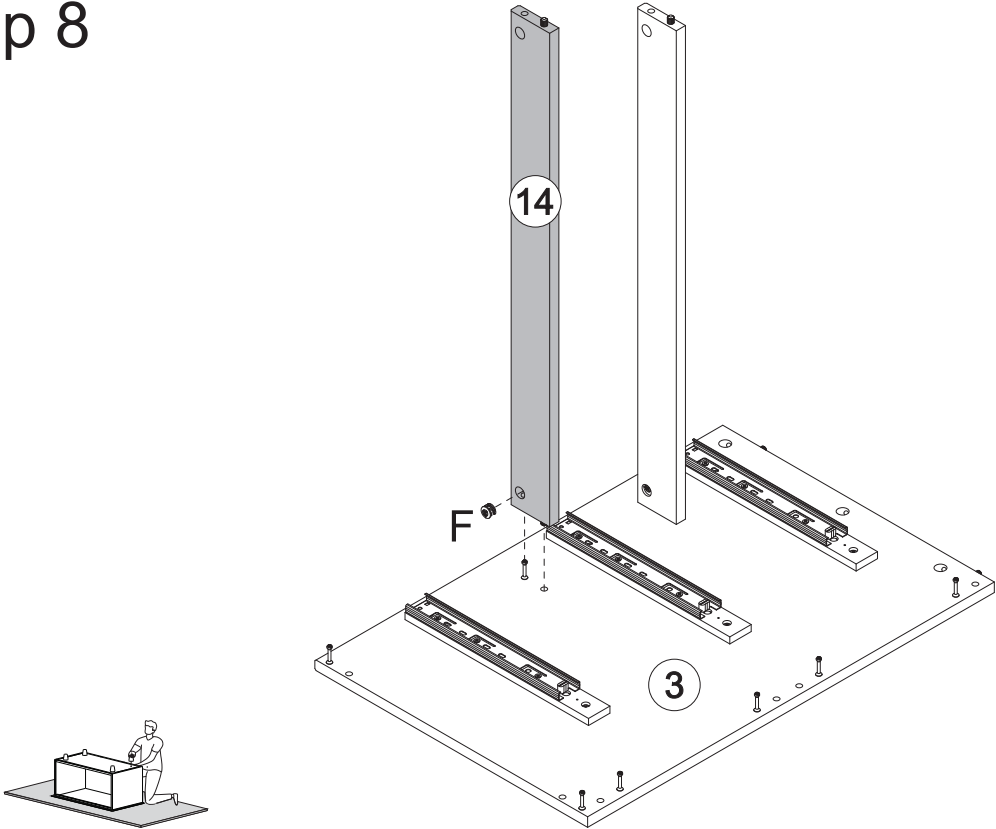


Secure part 14 to part 3 with Cam lock (F) using a Phillips head screwdriver.

F		Cam lock	01
---	--	----------	----



Step 9

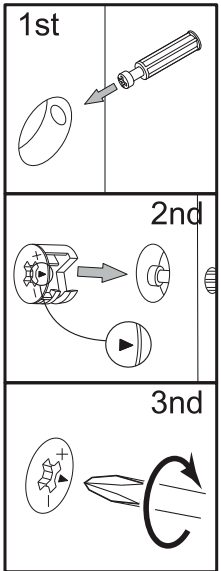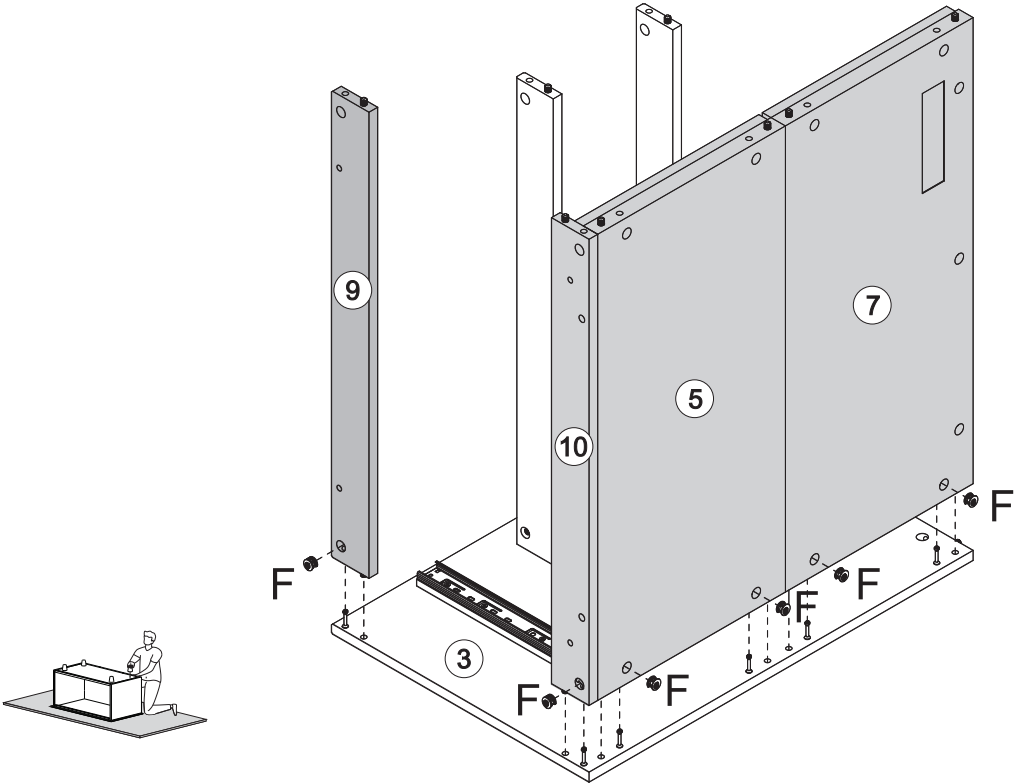

Secure parts 5,7,9 and 10 to part 3 with Cam lock (F) using a Phillips head screwdriver.

F		Cam bolt	06
---	---	----------	----



Step 10

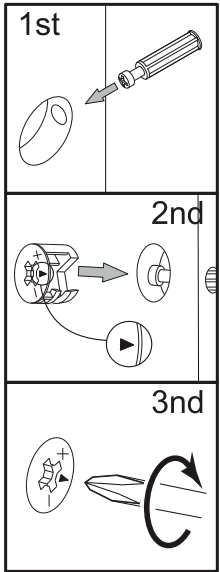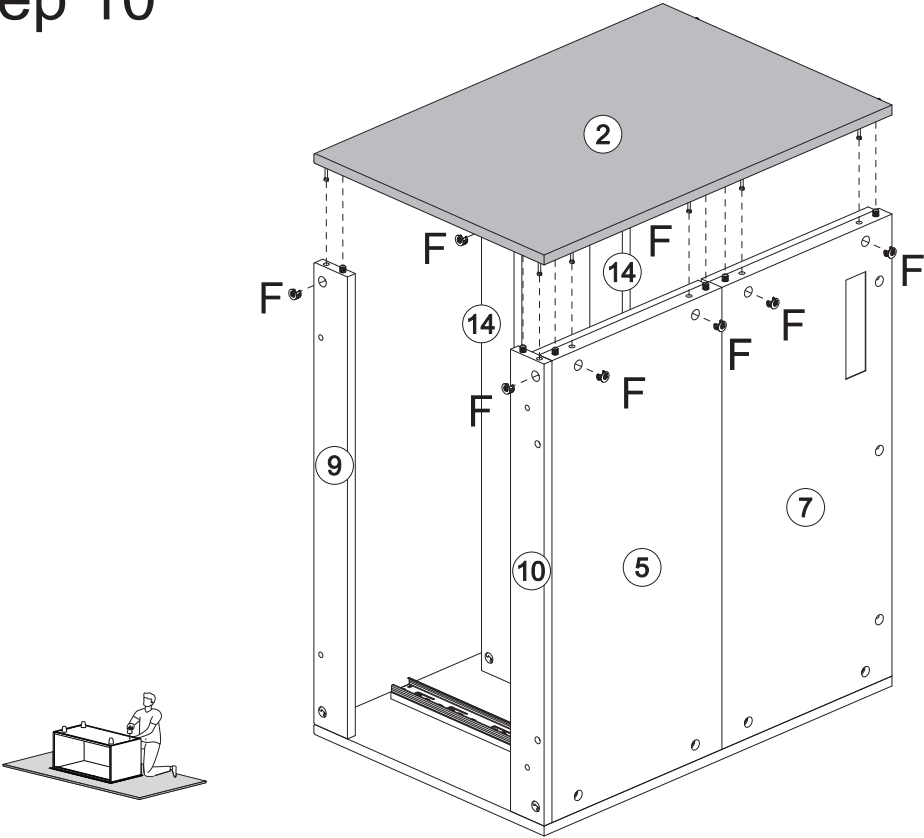



Secure part 2 to parts 5,7,9,10 and 14 with Cam lock (F) using a Phillips head screwdriver.

F		Cam lock	08
---	--	----------	----


Step 11

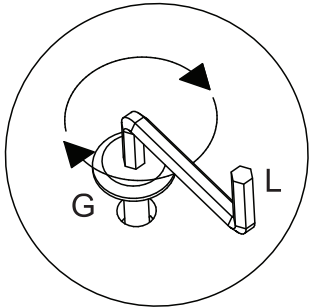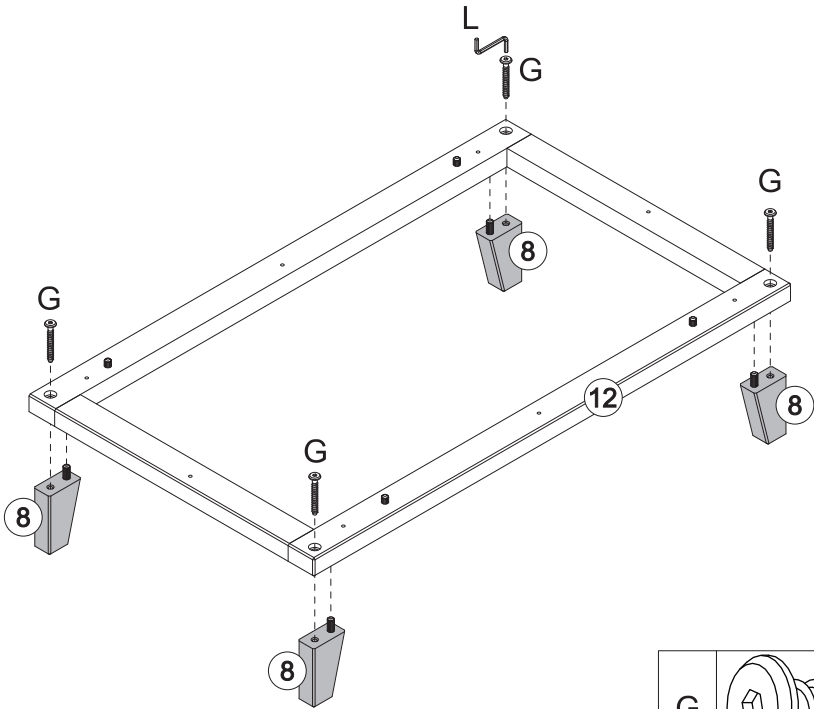


Secure parts 8 to part 12 with Bolt (G) using (L) hex key.

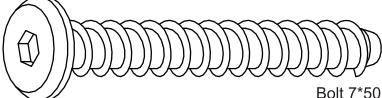G		Bolt 7*50mm	04
L		Hex key	01


Step 12

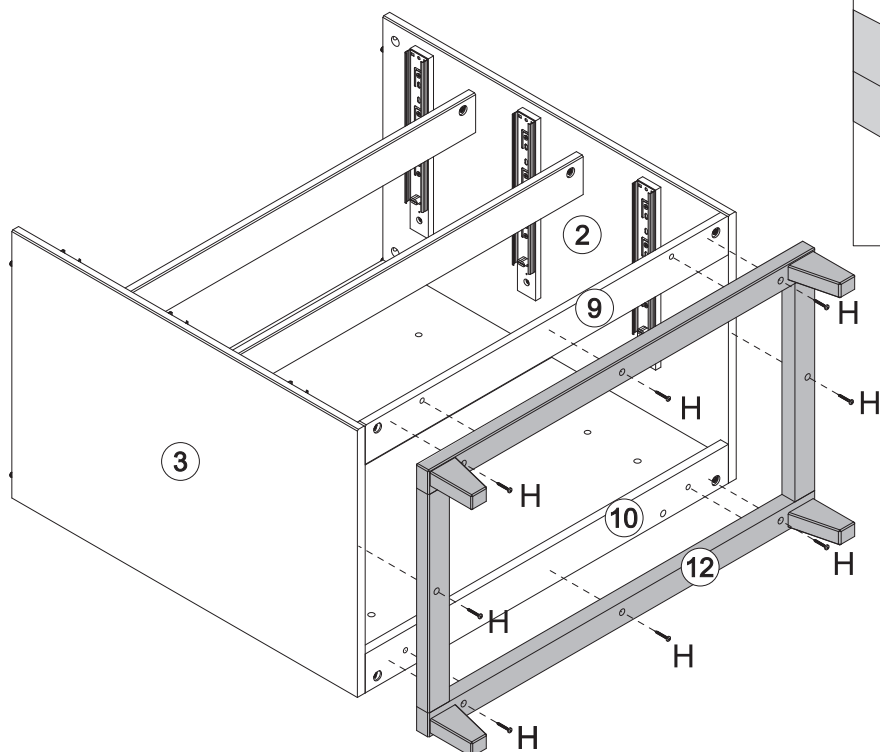


Secure part 12 to part 2,3,9 and 10 with screw (H) using a Phillips head screwdriver.





Step 13

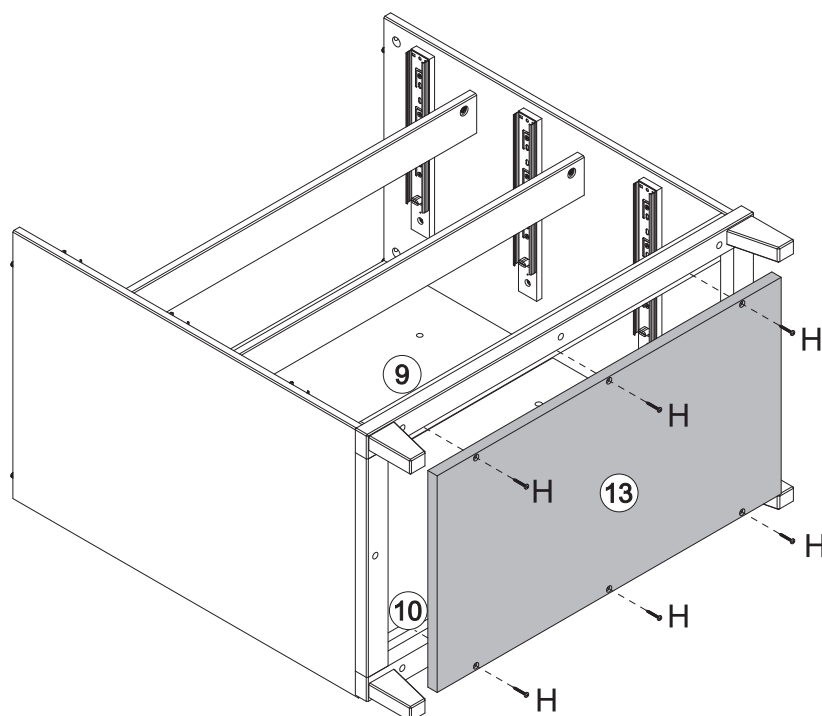

Secure part 13 to parts 9 and 10 with screw (H) using a Phillips head screwdriver.



Step 14

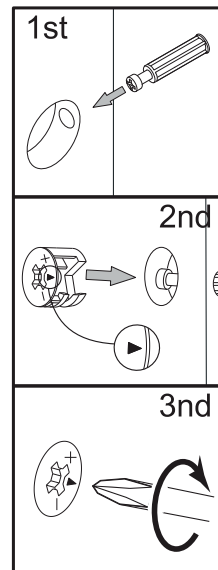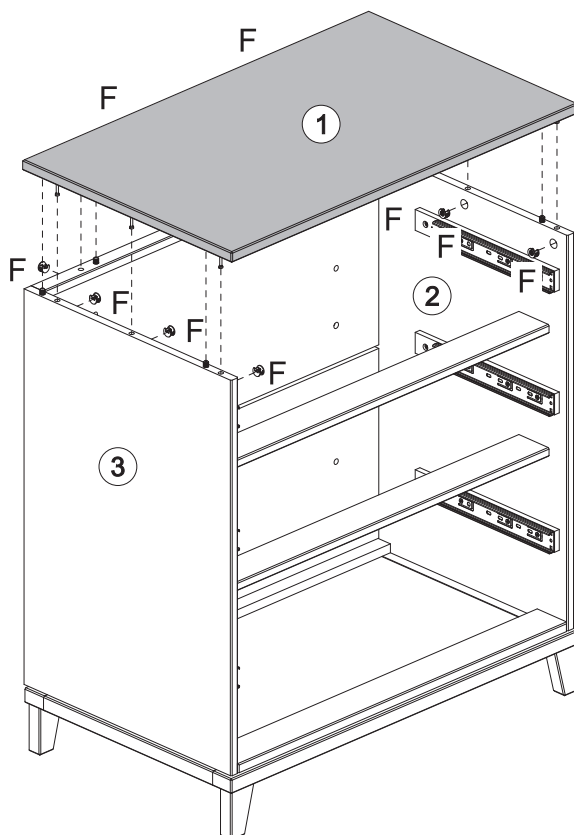

Secure part 1 to parts 2,3 and 7 with Cam lock (F) using a Phillips head screwdriver.


F		09
Cam lock		

Step 15





The side drawer with WARNING LABEL, should be mounted in highest drawer.

2.

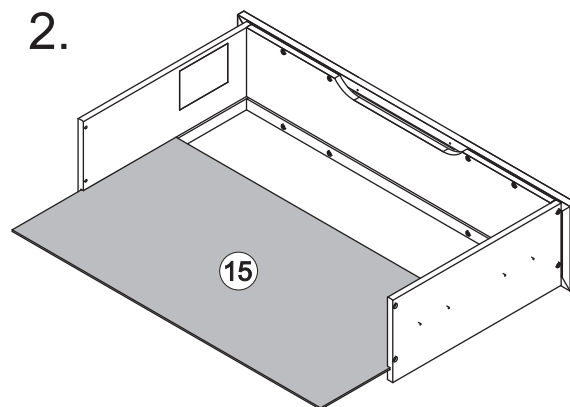


3.

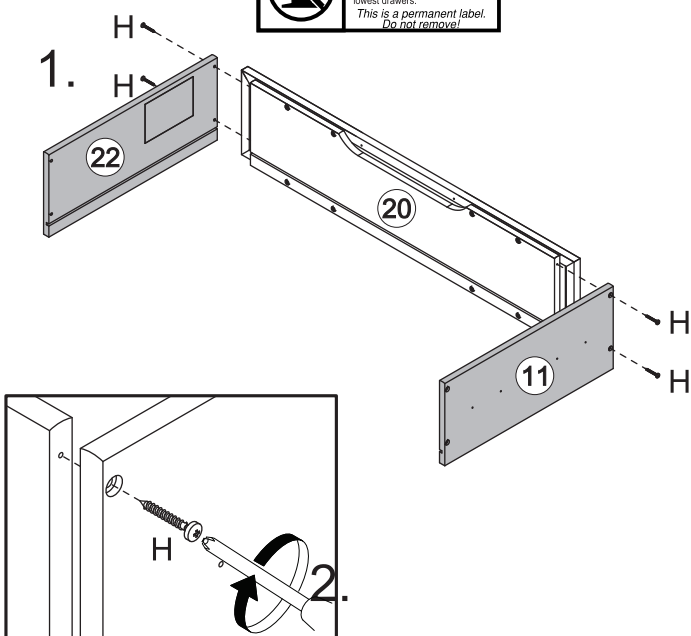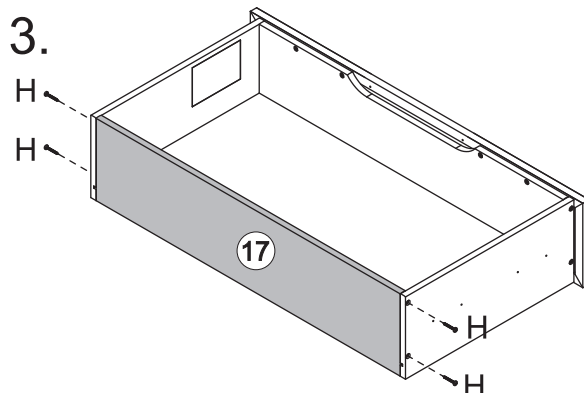


1. Secure Drawer side 11 and 22 to Drawer front 20 with screw (H) using Phillips screwdriver.
2. Slide part 15 into the grooves between parts 11 and 22.
3. Secure Drawer back 17 with screw (H) using Phillips screwdriver.

H		08
Screw 3,5x25mm		


Step 16

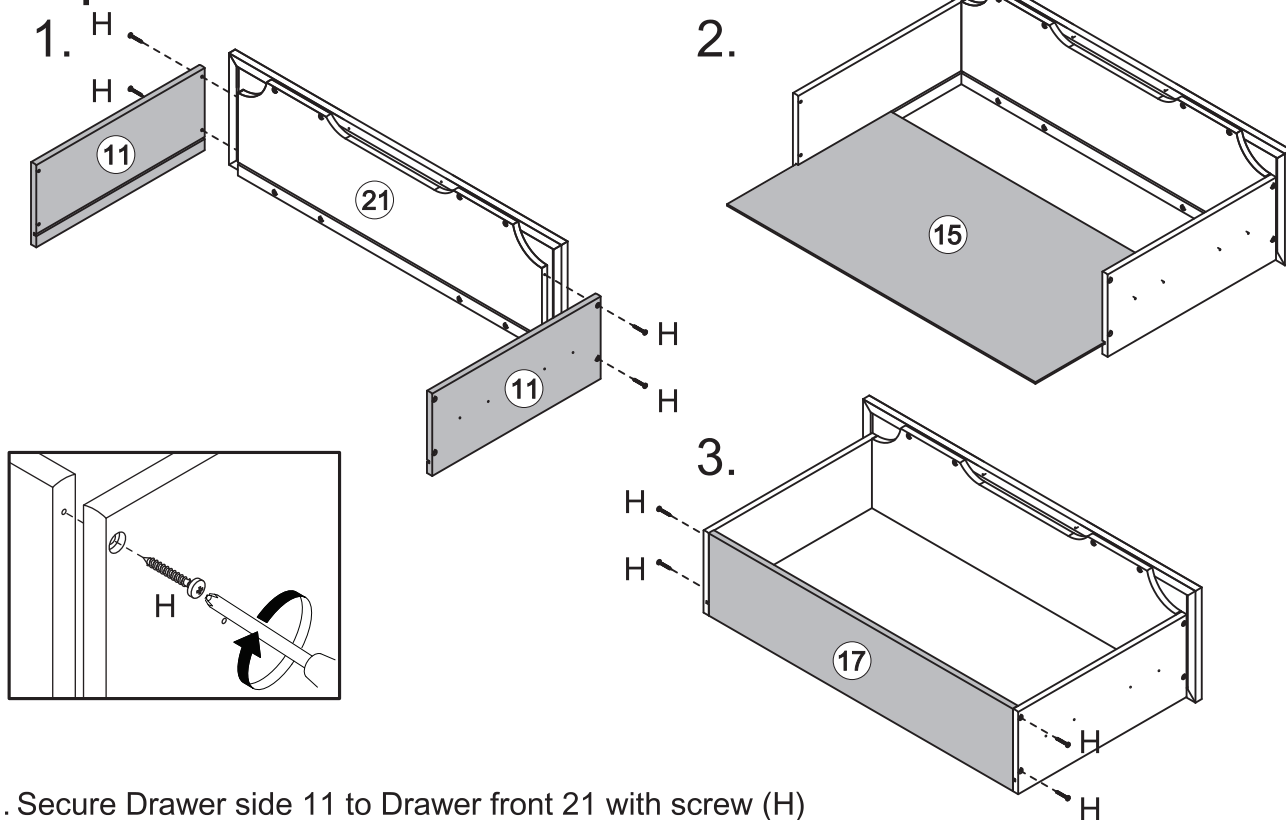


1. Secure Drawer side 11 to Drawer front 21 with screw (H) using Phillips head screwdriver.
2. Slide part 15 into the grooves between parts 11.
3. Secure Drawer back 17 with screw (H) used Phillips screwdriver.

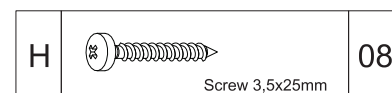

Step 17

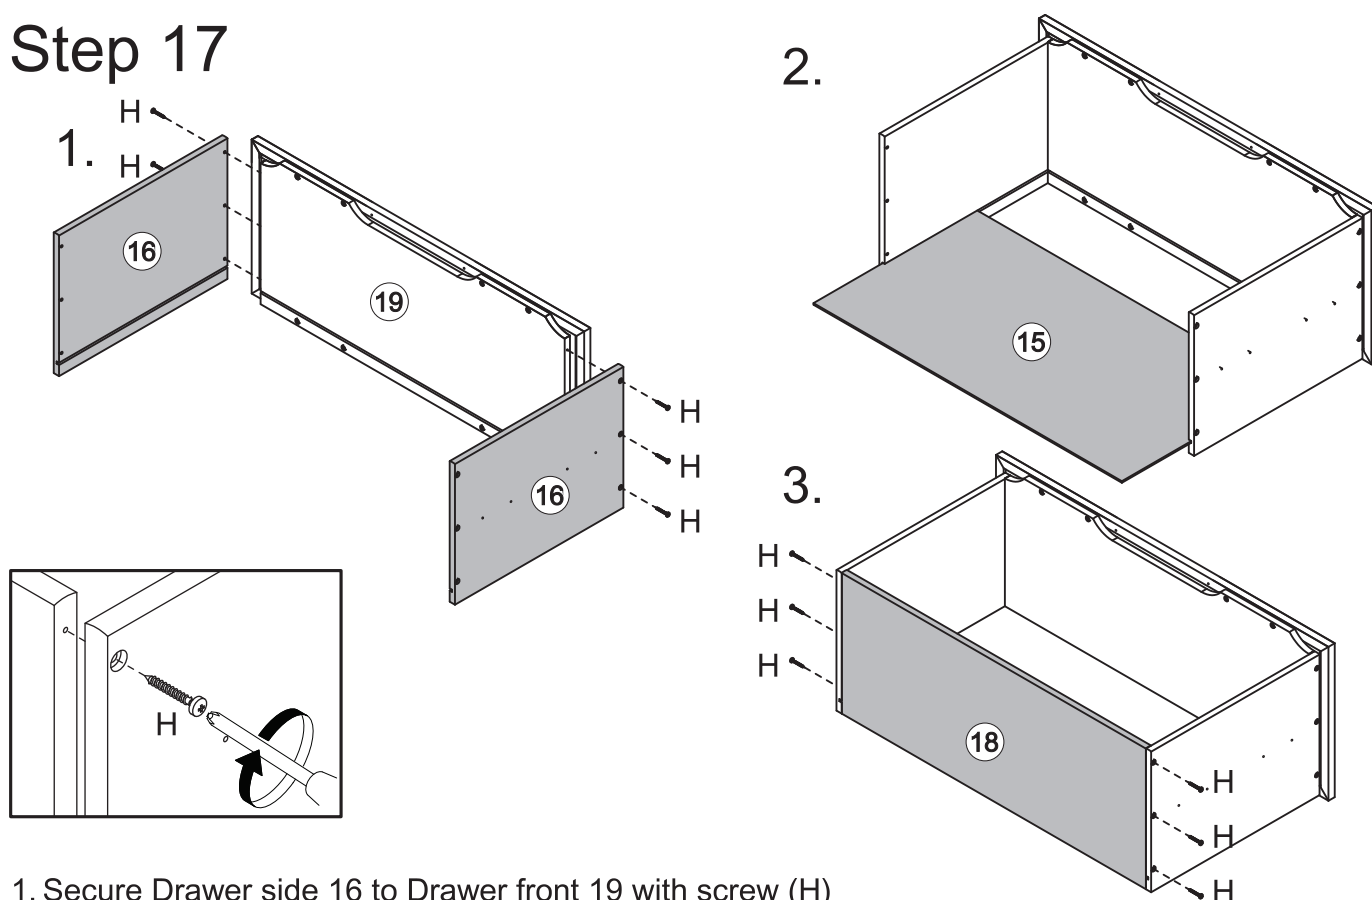






1. Secure Drawer side 16 to Drawer front 19 with screw (H) using Phillips screwdriver.
2. Slide part 15 into the grooves between parts 16.
3. Secure Drawer back 18 with screw (H) used Phillips screwdriver.






Step 18

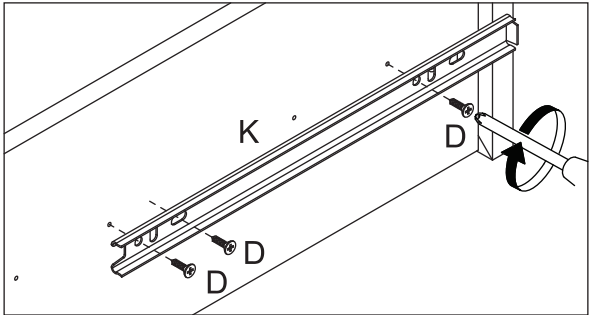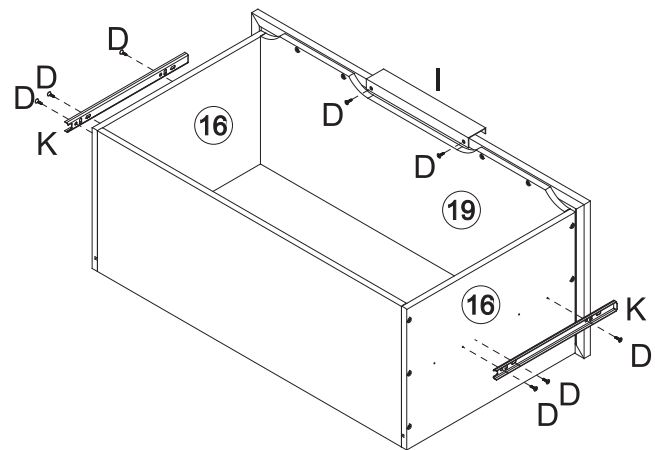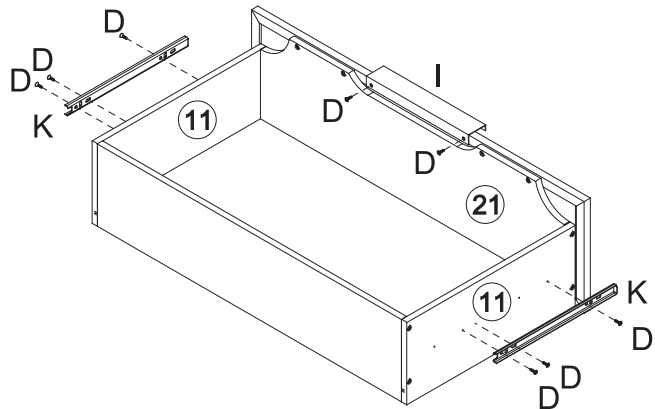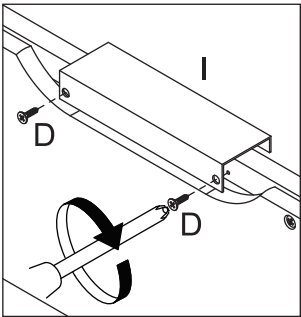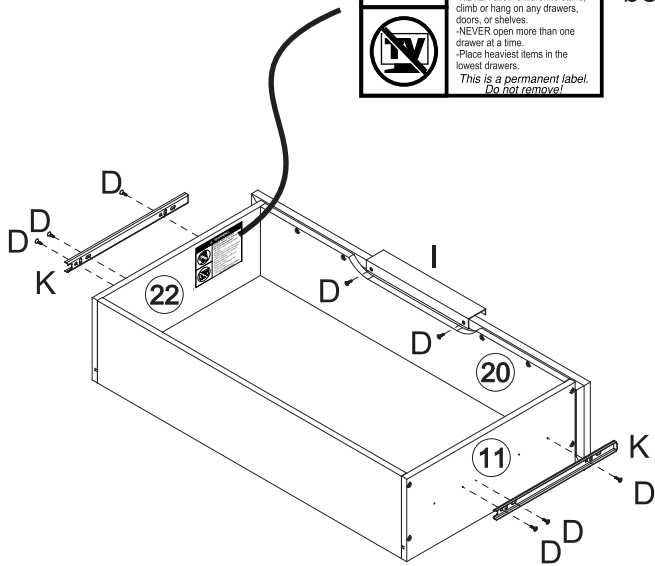

The side drawer with WARNING LABEL, should be mounted in highest drawer.



Secure Drawer handle (I) to drawer front 19,20 and 21 with screw (D) using Phillips head screwdriver.
Secure Inner slide (K) to drawers sides 11,22 and 16 with screw (D) using Phillips screwdriver.

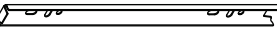D		24
I		03
K		06

Step 19




⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

The side drawer with **WARNING LABEL**, should be mounted in highest drawer.

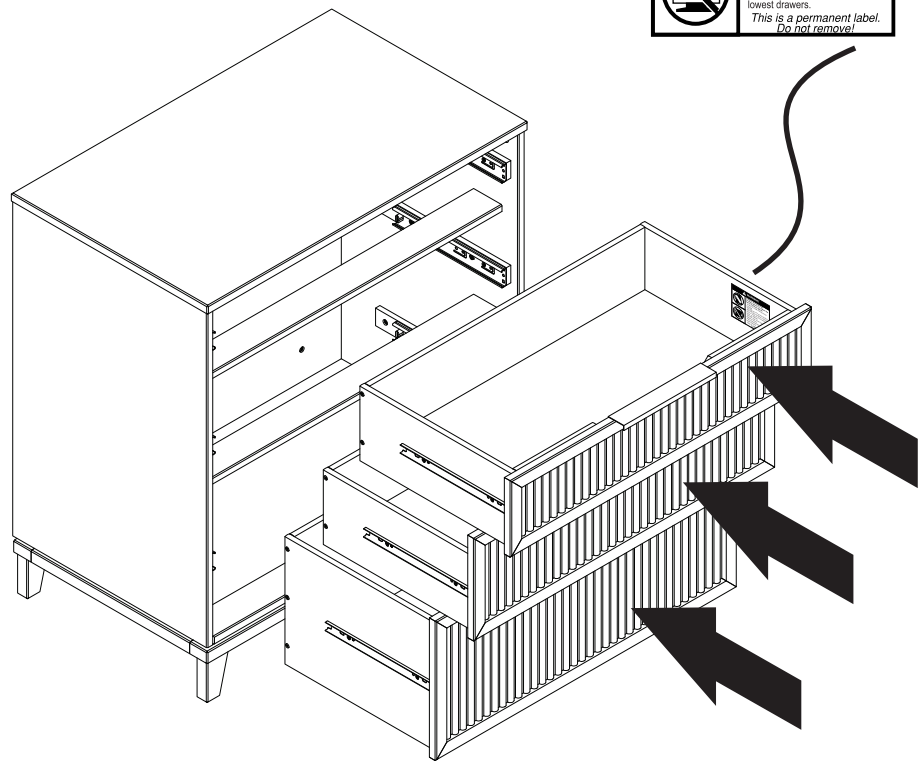

Step 20

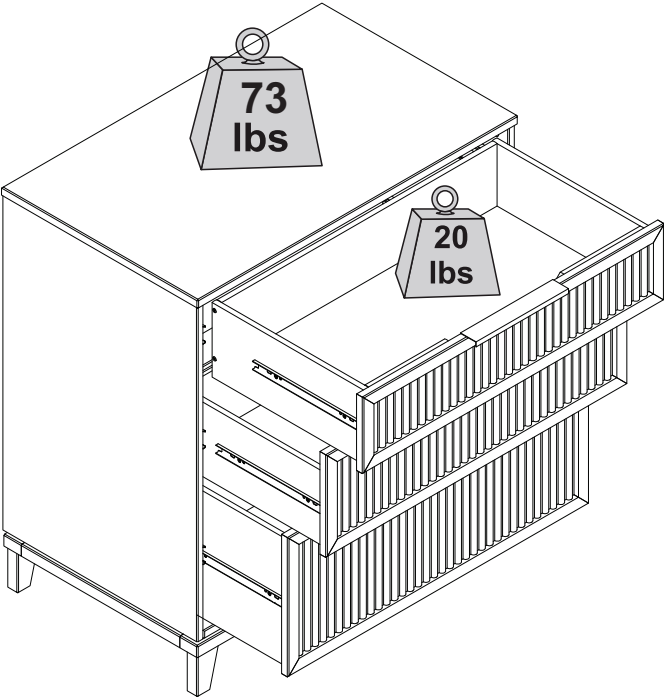


Step 21



WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

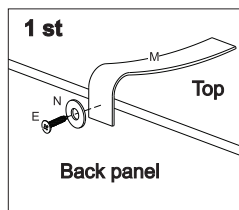


Attach part (M) with Screw (E) and Washer (N), in the frame of superior panel unit.

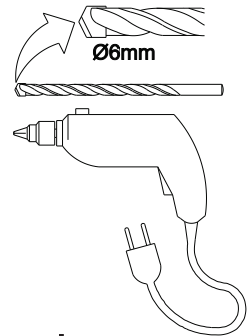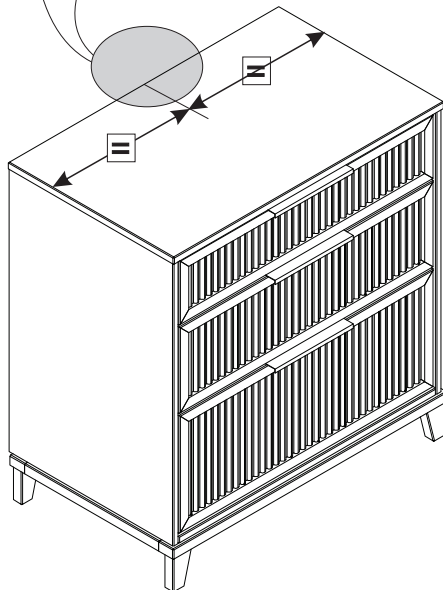


With drilling machine make one hole in the wall, Insert part (J) in the hole.

Secure part (M) with Screw (H), and Washer (N), in the wall.

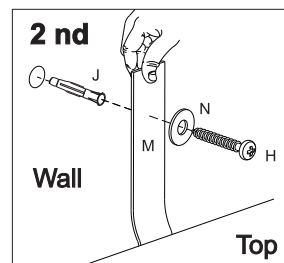

Wall

E		01
H		01
J		01
M		01
N		02

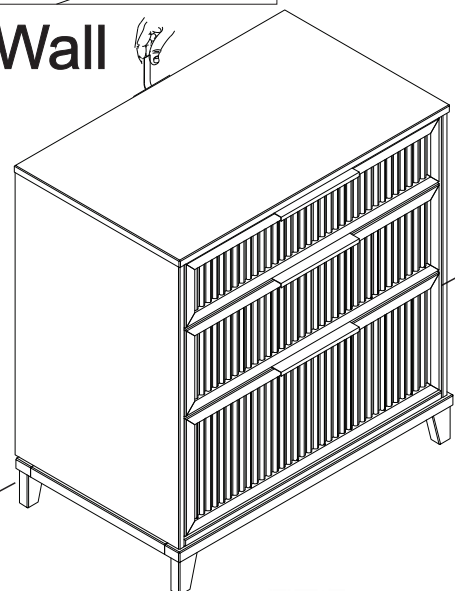

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.

Walker Edison®