

1. Locate Studs / Level Line

(recommended creating guidelines)

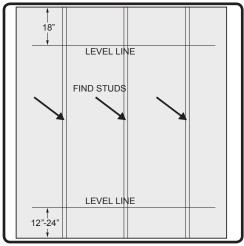


3. Mount Panel to Studs

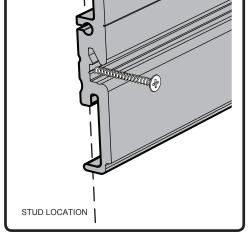

(recommended 12 - FLOW 2" Screws)


2. Align Panel to Studs and Level Line

(recommended 8-12 screws per 4' panel)

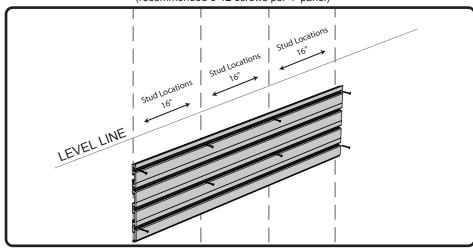


4. Horizontal Mounting

(use dowels to connect boards)

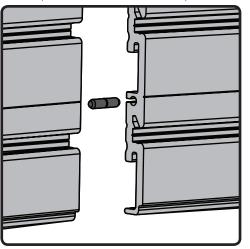


5. Vertical Mounting

(overlap panels)

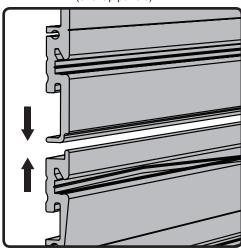

6. Attaching End Caps

(left edge start from bottom / right edge start from top)

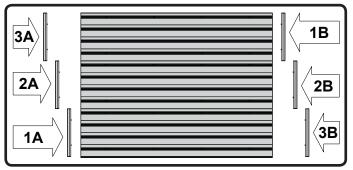


Orientation Options

(using 6 Panels)




7. Placing Hooks

(insert from top to bottom)







visit: www.flowwall.com

Thank you for your purchase from Flow Wall! 100% customer satisfaction is our goal. Please contact us between 9am-5pm MST, Monday through Friday, with any questions.

1775 W 2300 S Salt Lake City, UT 84119 (888) 353-0917 customerservice@flowwall.com