
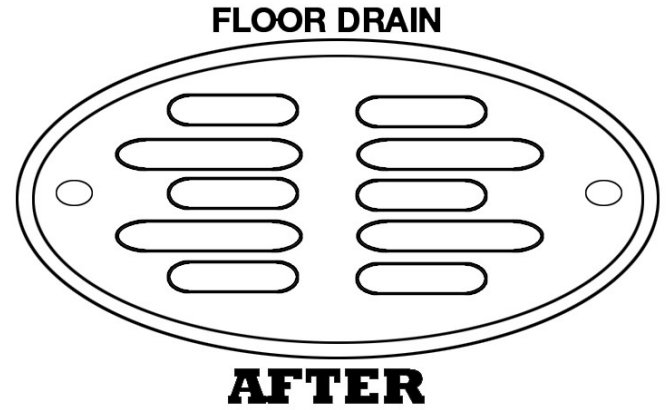


# Drain Height Extension Kit

---

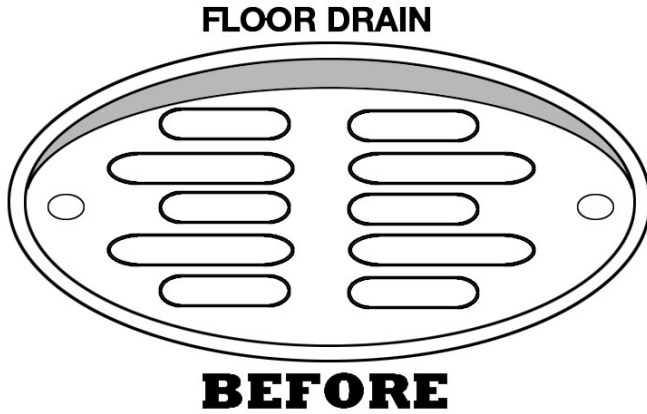

**Flush from drain to floor!**

## Sizing:

Measure distance between drain cover screw holes to ensure it matches the 3 3/8" dimension.

## DIRECTIONS

1. Remove drain cover plate.
2. Install rubber washers as needed.
3. Install drain height extension using the screws provided.
4. Reinstall drain cover plate.
5. RegROUT drain.

NOTE: If screws are too long use a 1/8" or 3/32" drill bit to lengthen screw holes.

## DIRECCIONES

1. Quite la place de cubierta de drenaje.
2. Instalar arandelas de goma según sea necesario.
3. Instale la extensión de la altura de drenaje con los tornillos suministrados
4. Vuelva a instalar la placa de drenaje
5. Drenaje de rebobinado

Nota: Si los tornillos son demasiado largos usamos una broca de 1/8 "o 3/32" para alargar los agujeros de los tornillos.

