


## Measurements for Replacing a Prehung Door

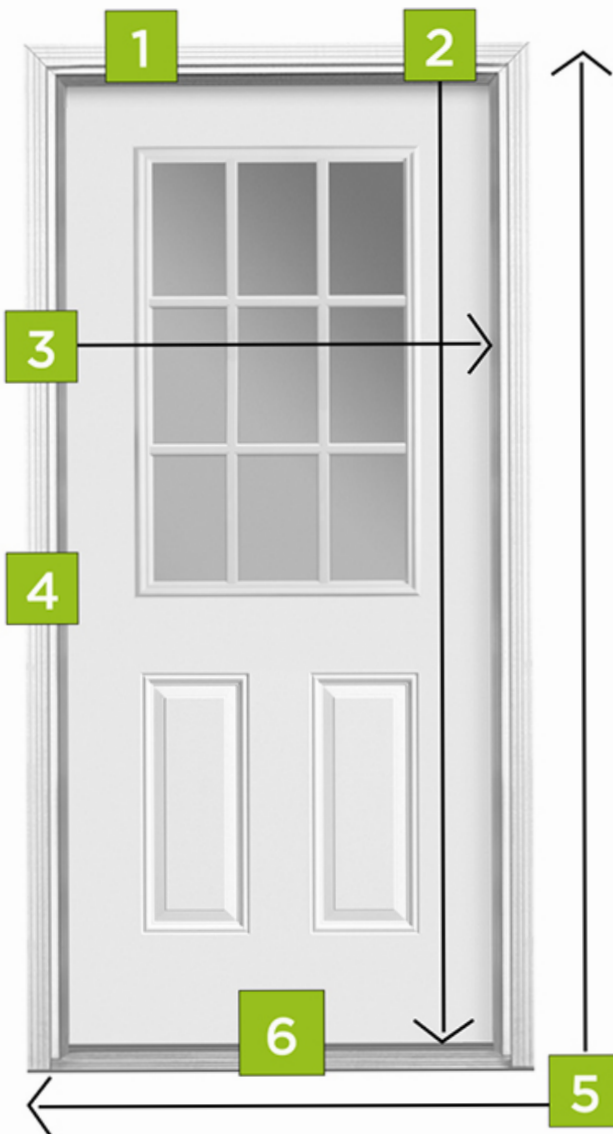

- 1 Brickmold:** remove aesthetic casing or trim
- 2 Height:** measure from top to bottom corner (do not include door sweep)
- 3 Width:** measure from corner to corner (do not include weatherstripping)
- 4 Jamb Depth:** measure the width of the edge of the door frame
- 5 Rough Opening:** measure the height and width of framed door space
- 6 Threshold:** measure width and height of trim on exterior side (for new brickmold)