

HOW TO INSTALL YOUR GoBidet™ 2003

Tools Needed:


Pliers, Slot Head Screwdriver, 5/64" Allen Wrench, Adjustable Wrench or 7/16", 1/2", 9/16", 5/8", 3/4" Combination Wrenches as required, Silicone Grease

Note: To avoid damaging finish during installation of this product, do not use Adjustable Pliers for assembly. Use Adjustable Wrench or a Combination Wrench as needed.

Remove Toilet Seat. Fig 1.

1. Turn off water supply to toilet at Shut-off Valve (A).
2. Flush toilet to empty all water.
3. Disconnect Water Supply Line (B) from the toilet tank.
Note: Water may leak from toilet when water supply line is removed.
4. Loosen Nuts holding Toilet Seat (C) in place on underside of bowl.
Remove Toilet Seat and clean top of toilet bowl. Save seat mounting parts for re-use.

FIG. 1

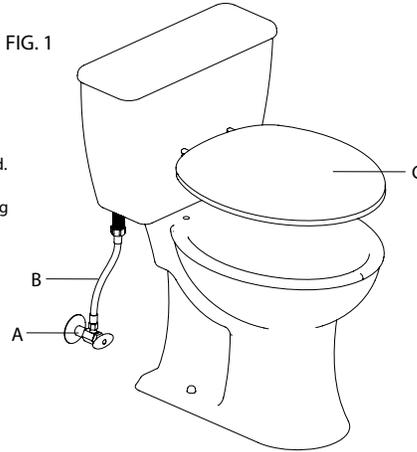


GoBidet Assembly


Note: If installing on a one-piece toilet, first swap the location of the Plastic Cap (D) and Mounting Bracket Bushing (E). Tighten Bushing with Pliers. If installing on a two-piece toilet, this step is not necessary.

5. Unthread Hex Nut (F) from Mounting Bracket Bushing and remove Plastic Washer (G) and Rubber Washer (H).
6. Loosen Hex Nut (I) securing Mounting Bracket (J) to Water Control Valve (K).
7. Place Mounting Bracket (J) on Toilet with Spray Arm Assembly (L) positioned over the bowl rim. Insert Mounting Bracket Bushing (E) into left hole. On the underside of bowl, install the Rubber Washer (H) first. Place the Plastic Washer (G) on next and secure with Hex Nut (F). Do not tighten completely.
8. Fully extend Spray Arm (M) by pulling Control Knob (N). Adjust placement of Mounting Bracket (J) and Water Control Valve (K) so Spray Head (O) is in center of bowl. Now retract Spray Arm (M) fully by pulling Control Knob (N) backward to ensure it rests just beneath left side of bowl rim. When positioned correctly, tighten Hex Nut (I) that secures the Mounting Bracket (J) to the Water Control Valve (K).
9. Fully tighten Hex Nut (F) on underside of Mounting Bracket (J). Do not overtighten.


Product Detail

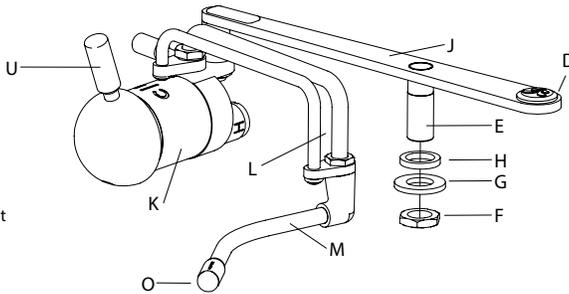


Placement on Toilet

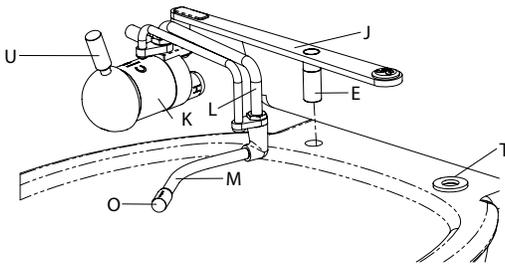

Side View

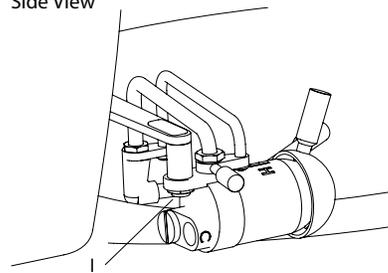


Spray Arm Operation

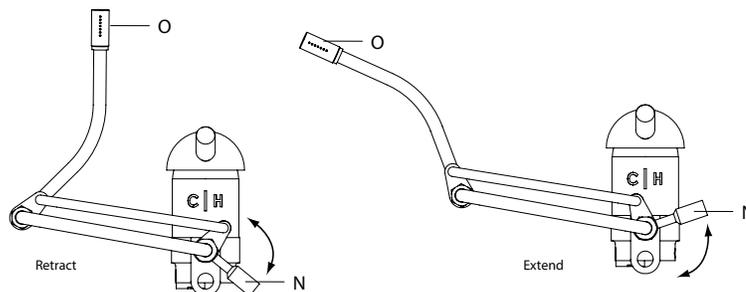

HOW TO INSTALL YOUR GoBidet™ 2003


Connect Water Supply

10. Install "T-valve" (P) to the toilet.
11. Connect one end of Bidet Supply Line (Q) to the Cold Water Inlet (R) on the Water Control Valve (K). Tighten with wrench. **Do not overtighten.**
12. Connect the other end of the Bidet Supply Line (Q) to the "T-valve" (P). Tighten with wrench. **Do not overtighten.**
13. Check to ensure Water Control Valve (K) is in off position.
14. Turn on water supply to toilet at Shut-off Valve (A). Inspect all connections for leaks.

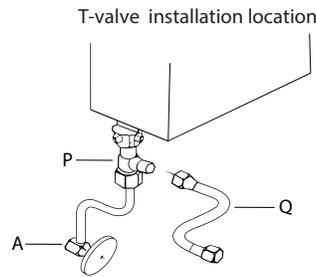

Reinstall Toilet Seat (See Placement on Toilet Image)


15. Place Plastic Spacer (T) over right hole on toilet bowl to level the seat. Insert seat bolts into holes, passing through the Mounting Bracket (J) and the Plastic Spacer (T).
16. Reinstall nuts on both bolts on underside of toilet. **Tighten firmly by hand.**
17. Ensure toilet seat or seat bumpers are not resting on the Spray Arm Assembly (L), as this will prevent proper operation.

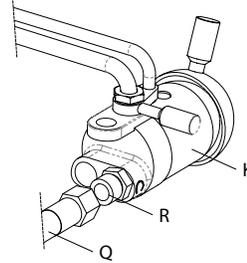


How to Use

1. Water Control:
 - a. Forward – On
 - b. Backward – Off
2. While sitting on toilet seat, use the Spray Arm Control Knob (N) to move Spray Head (O) to desired location for cleansing.
3. Gently turn on Spray Head by pushing forward on Water Control Lever (U). If water does not flow, move Water Control Lever to left.
4. If using with the optional Hot Water Kit, adjust water temperature by moving Water Control Lever : Left for regular water, right for hot water. Allow water to warm.
5. When cleansing is complete, push Water Control Lever (U) to off position and return Spray Arm (L) to resting position underneath seat. **Caution: To avoid scalding, do not use hot water only.**

Water Control Valve

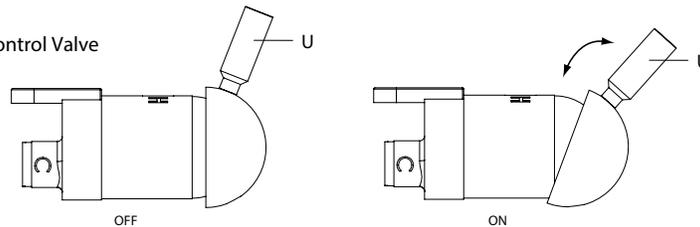

Swing Arm Operation

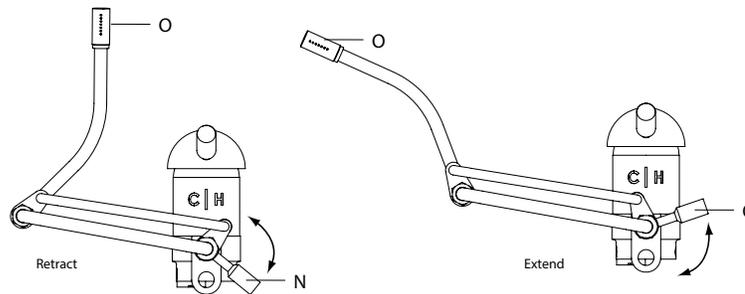

Care & Maintenance

Clean Mounting Bracket, Water Control Valve and complete Spray Arm Assembly every 2 weeks with a mild soap and water solution.

Note: Abrasive cleaners should not be used, as they will harm the finish. After cleaning, use a soft cloth to rub mineral oil on all exposed surfaces to protect finish. Failure to properly care for and maintain this product may void warranty.

Troubleshooting

1. **Water will not turn on**
 - a. Make sure water supply is connected and turned on.
 - b. Make sure Water Supply Lines are not kinked or twisted.
 - c. If Cold water only installation, ensure Water Control Lever is centered or to left of center. With Hot water not connected, water will not flow with lever in Hot water position.
2. **Water leaks where Spray Arm Assembly connects to Water Control Valve.**
 - a. Tighten Shower Arm Mounting Nut [recommend to remove]
3. **Shower head assembly will not move with someone sitting on toilet.**
 - a. Ensure Plastic Spacer installed under right Seat Hinge bolt flange.
 - b. Ensure Seat Bumpers are not resting on Spray Arm Assembly.
 - c. Ensure seat is not broken or contoured.